
ROCKER OUTER PANEL (CUT-P)

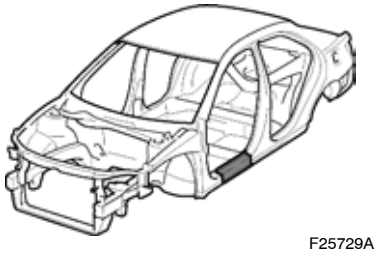

F25729A

Symbol meaning


: Remove Weld Points

: Cut and Join Location

: Cut Location for Supply Parts

F25729B

REMOVAL

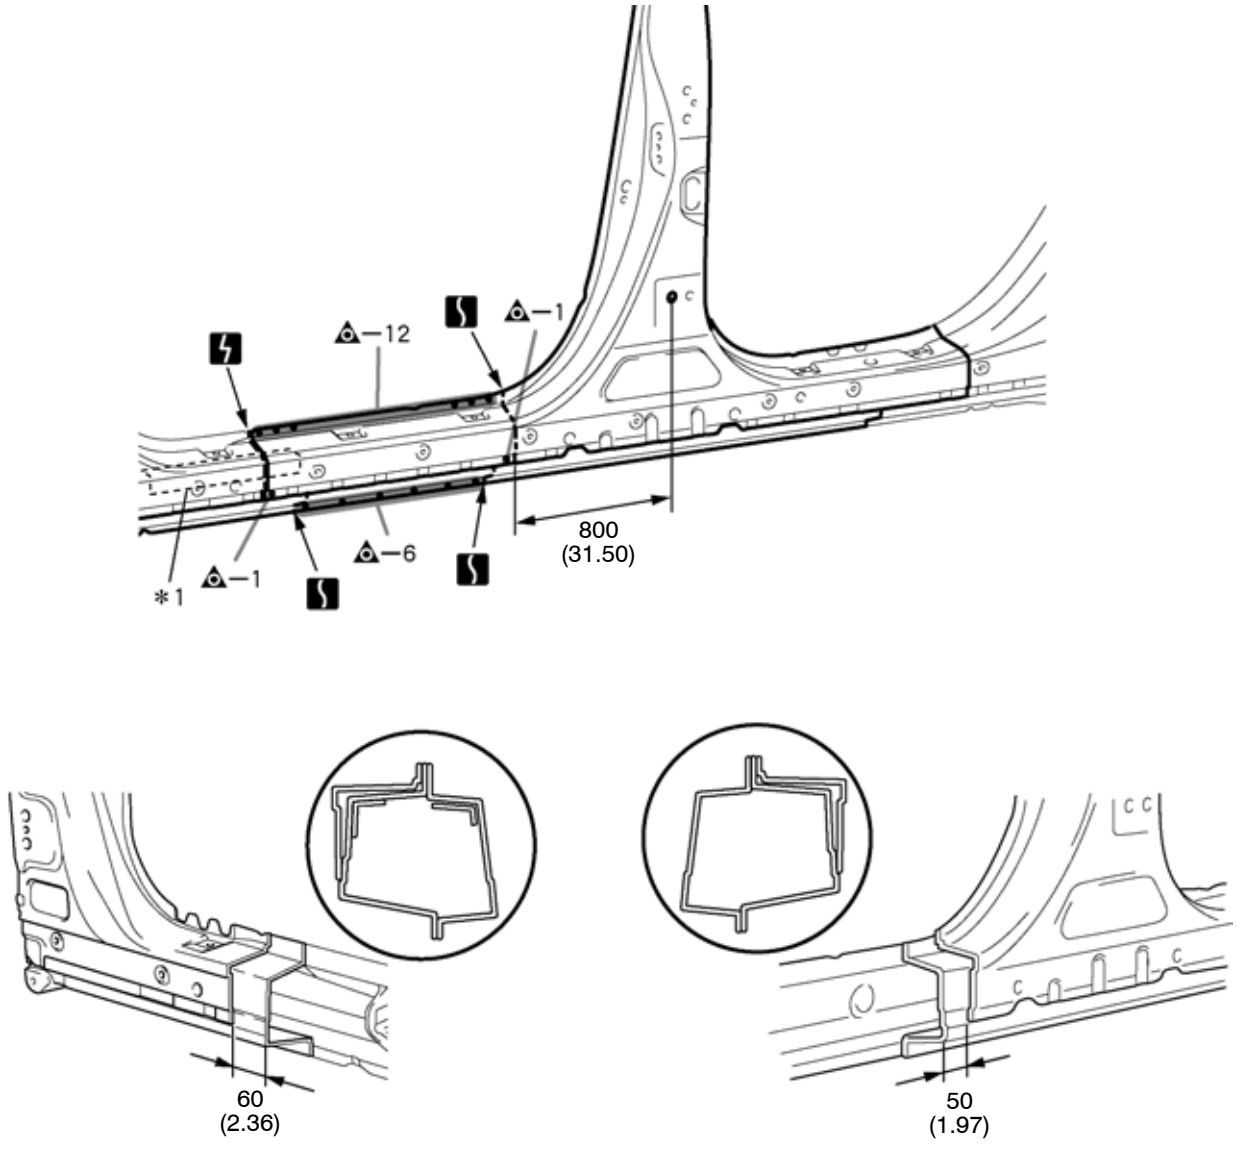

mm (in.)

F25729

REMOVAL POINT


1 *1: Take care not to damage the internal reinforcement.

Symbol meaning

: MIG Plug Weld : Cut and Join Location : Butt Weld

F25730B

INSTALLATION

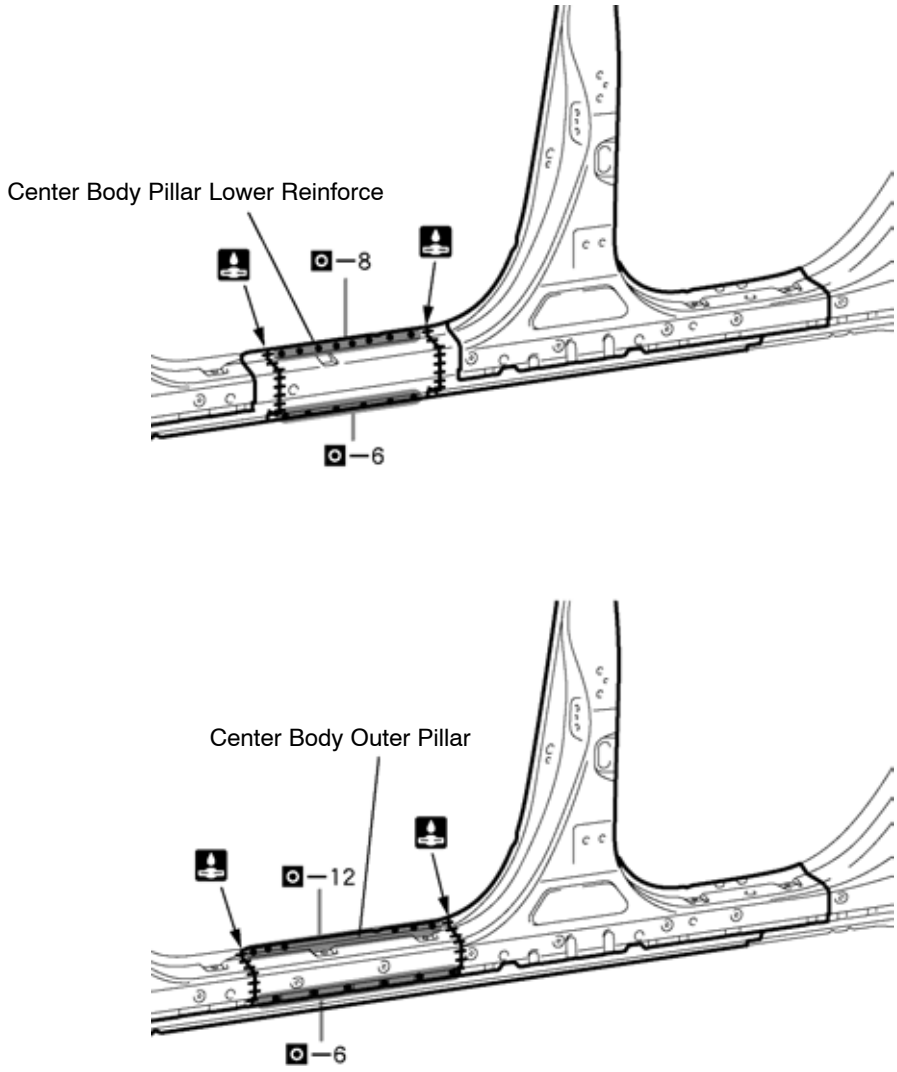

mm (in.)

F25730

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding the center body pillar lower reinforce to the vehicle side, install the center body outer pillar.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.