
DAMAGED VEHICLE DISPOSAL PRECAUTION (SRS AIRBAG SYSTEM)


For SRS airbag system service and repair procedures, refer to the TOYOTA Repair Manual.

(1) When using an electric welder, first remove all airbags and seat belt pretensioners.

(2) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear airbag sensors or seat position sensor, remove each sensor as necessary beforehand.

(3) Do not allow the front airbag sensors, side airbag sensors, rear airbag sensors or seat position sensor to become heated to high temperatures.

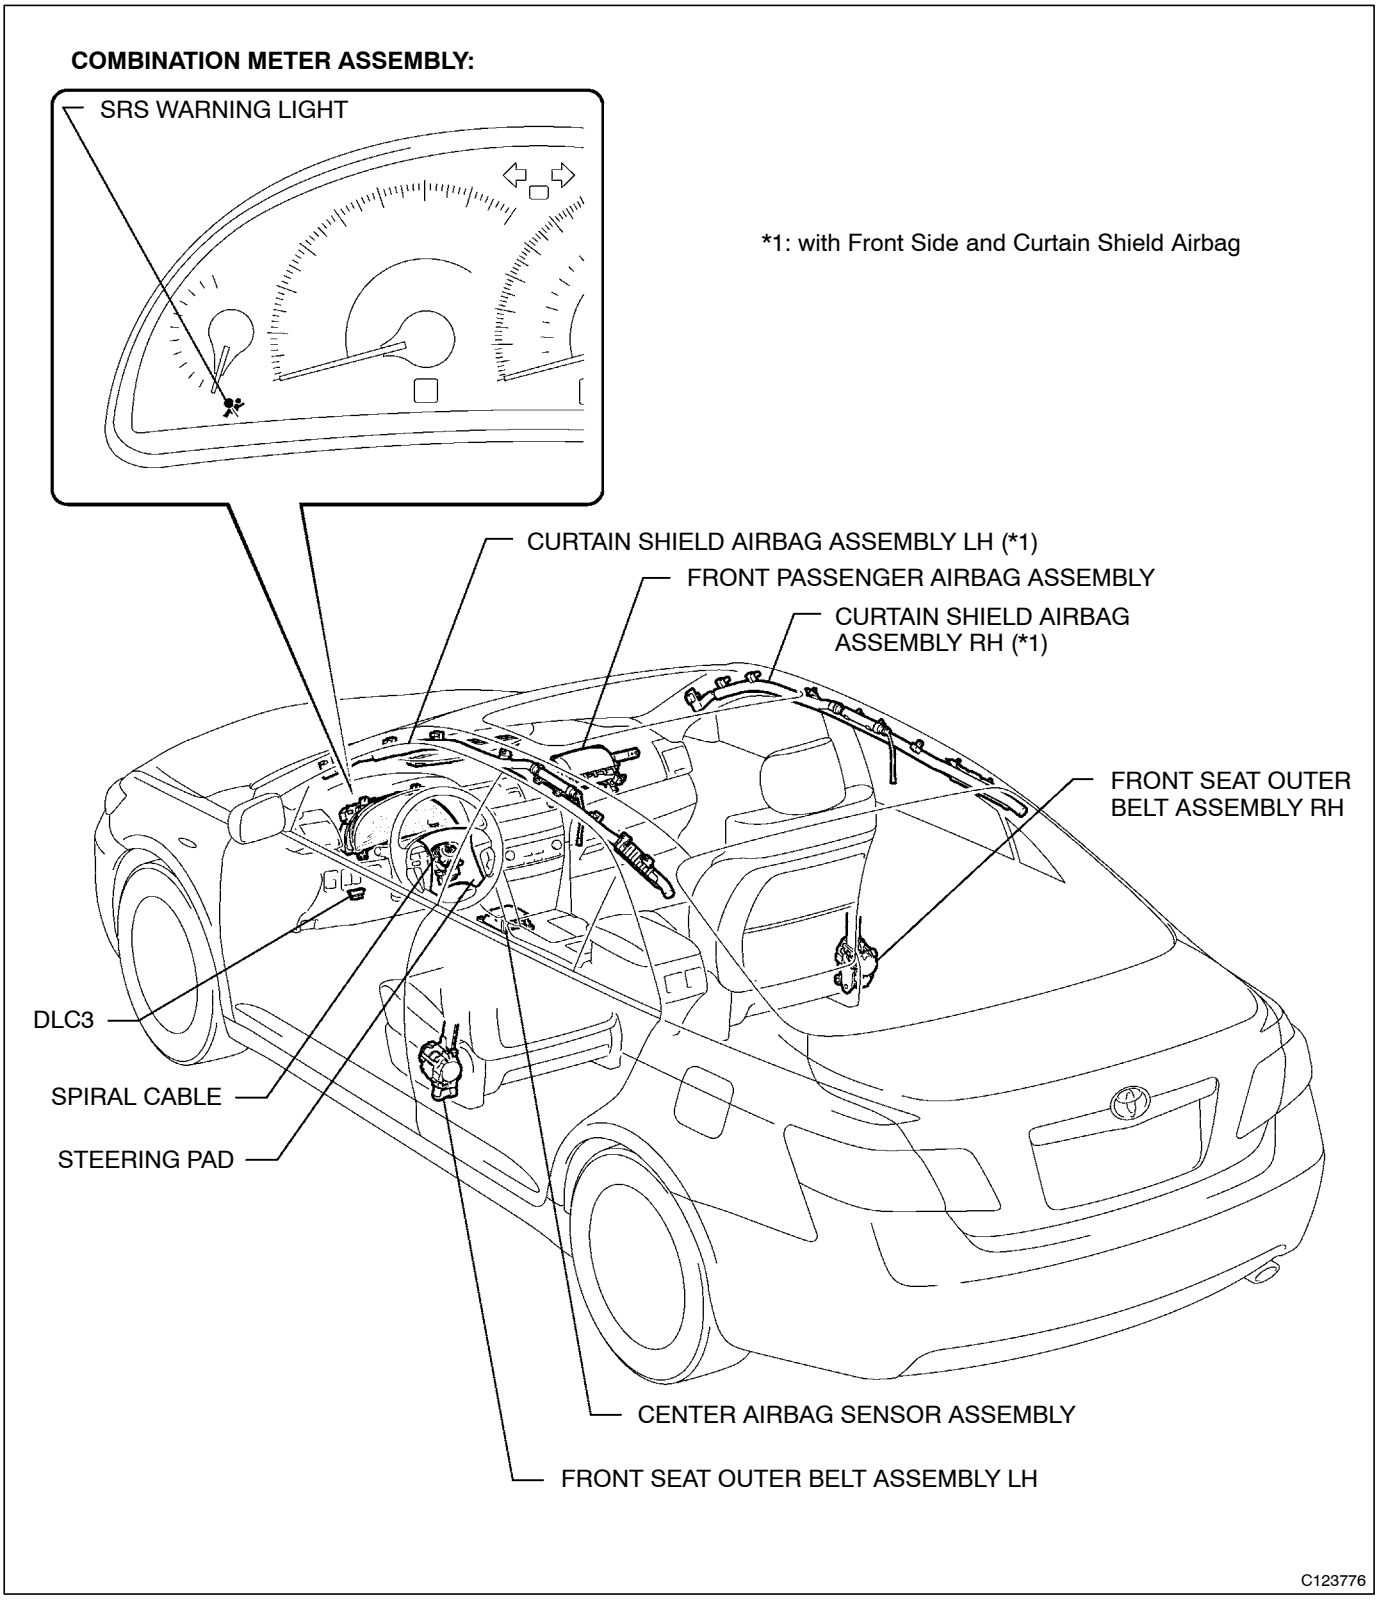

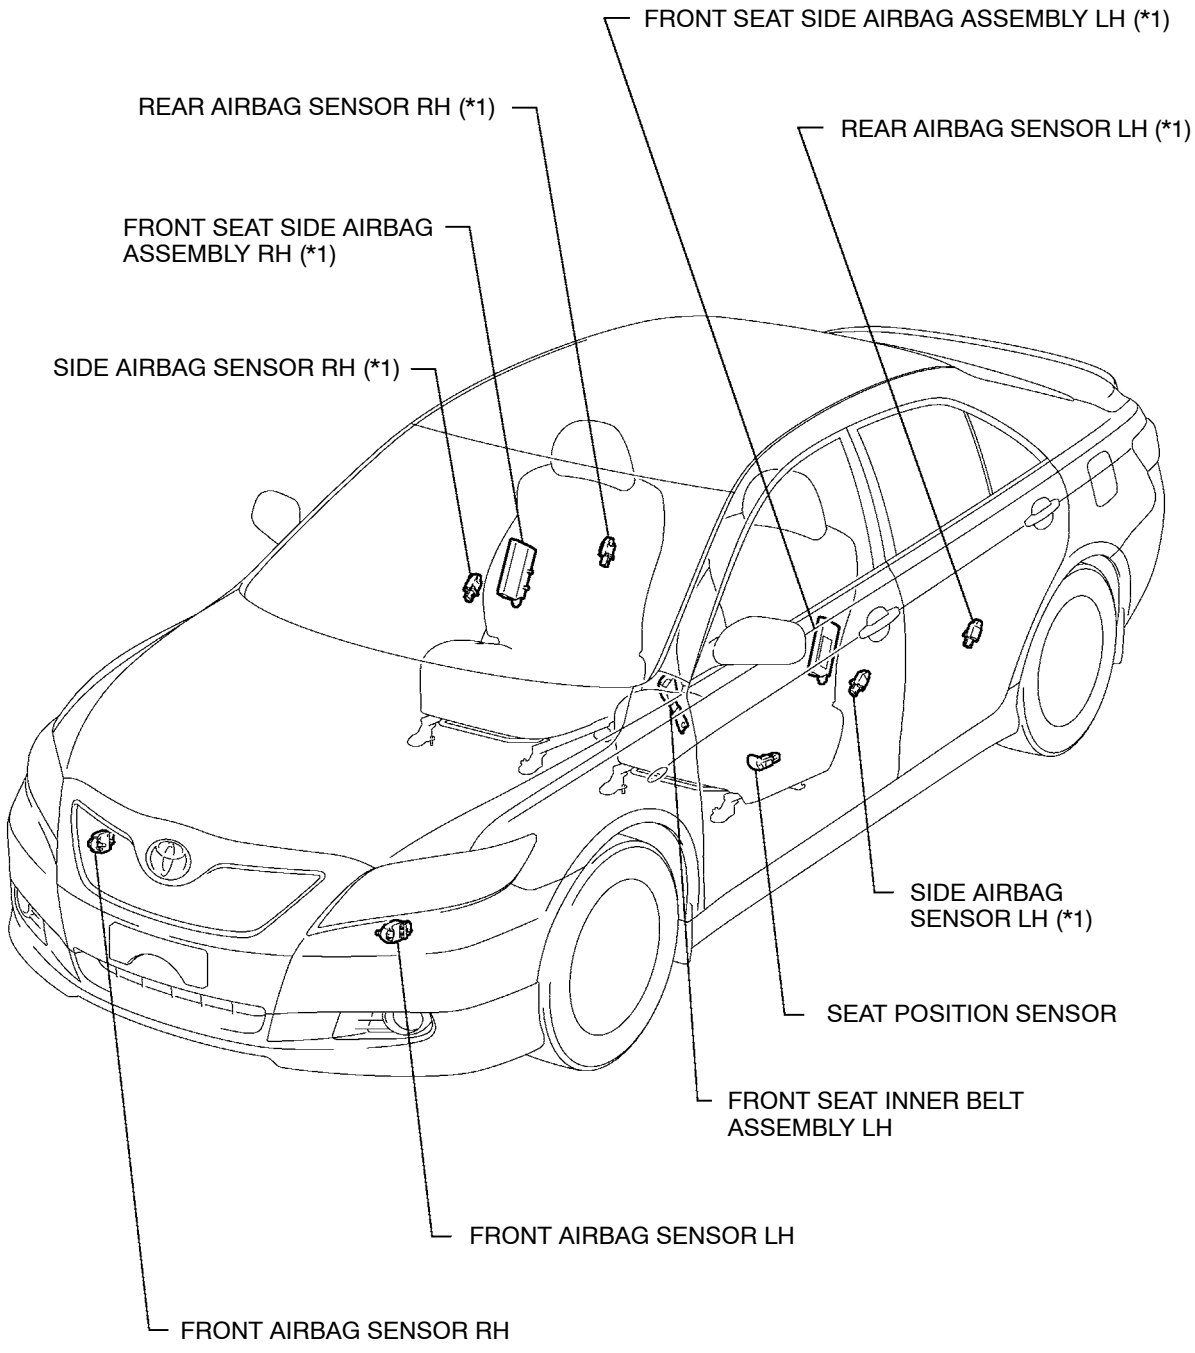

*1: with Front Side and Curtain Shield Airbag

C123775