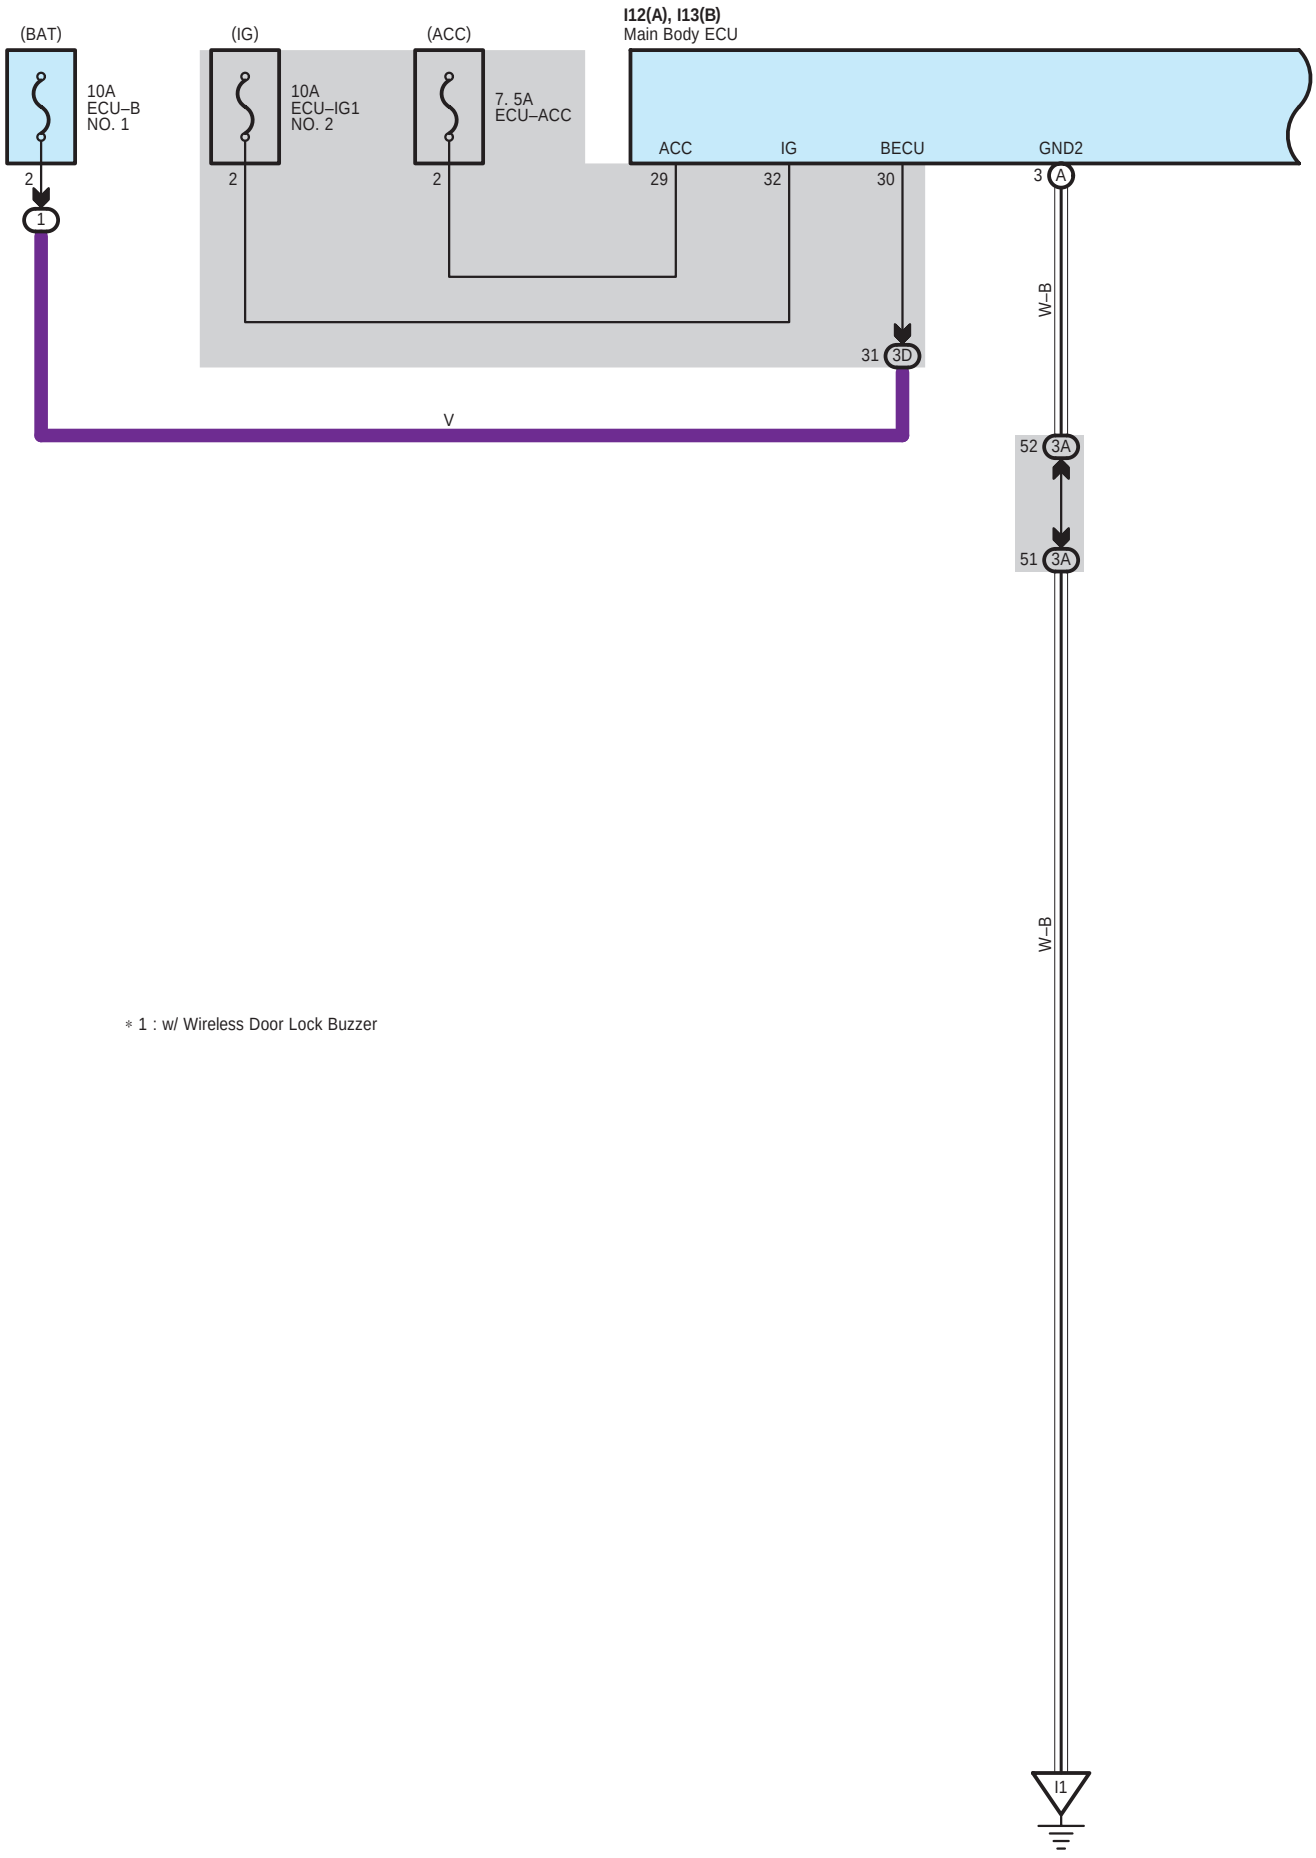
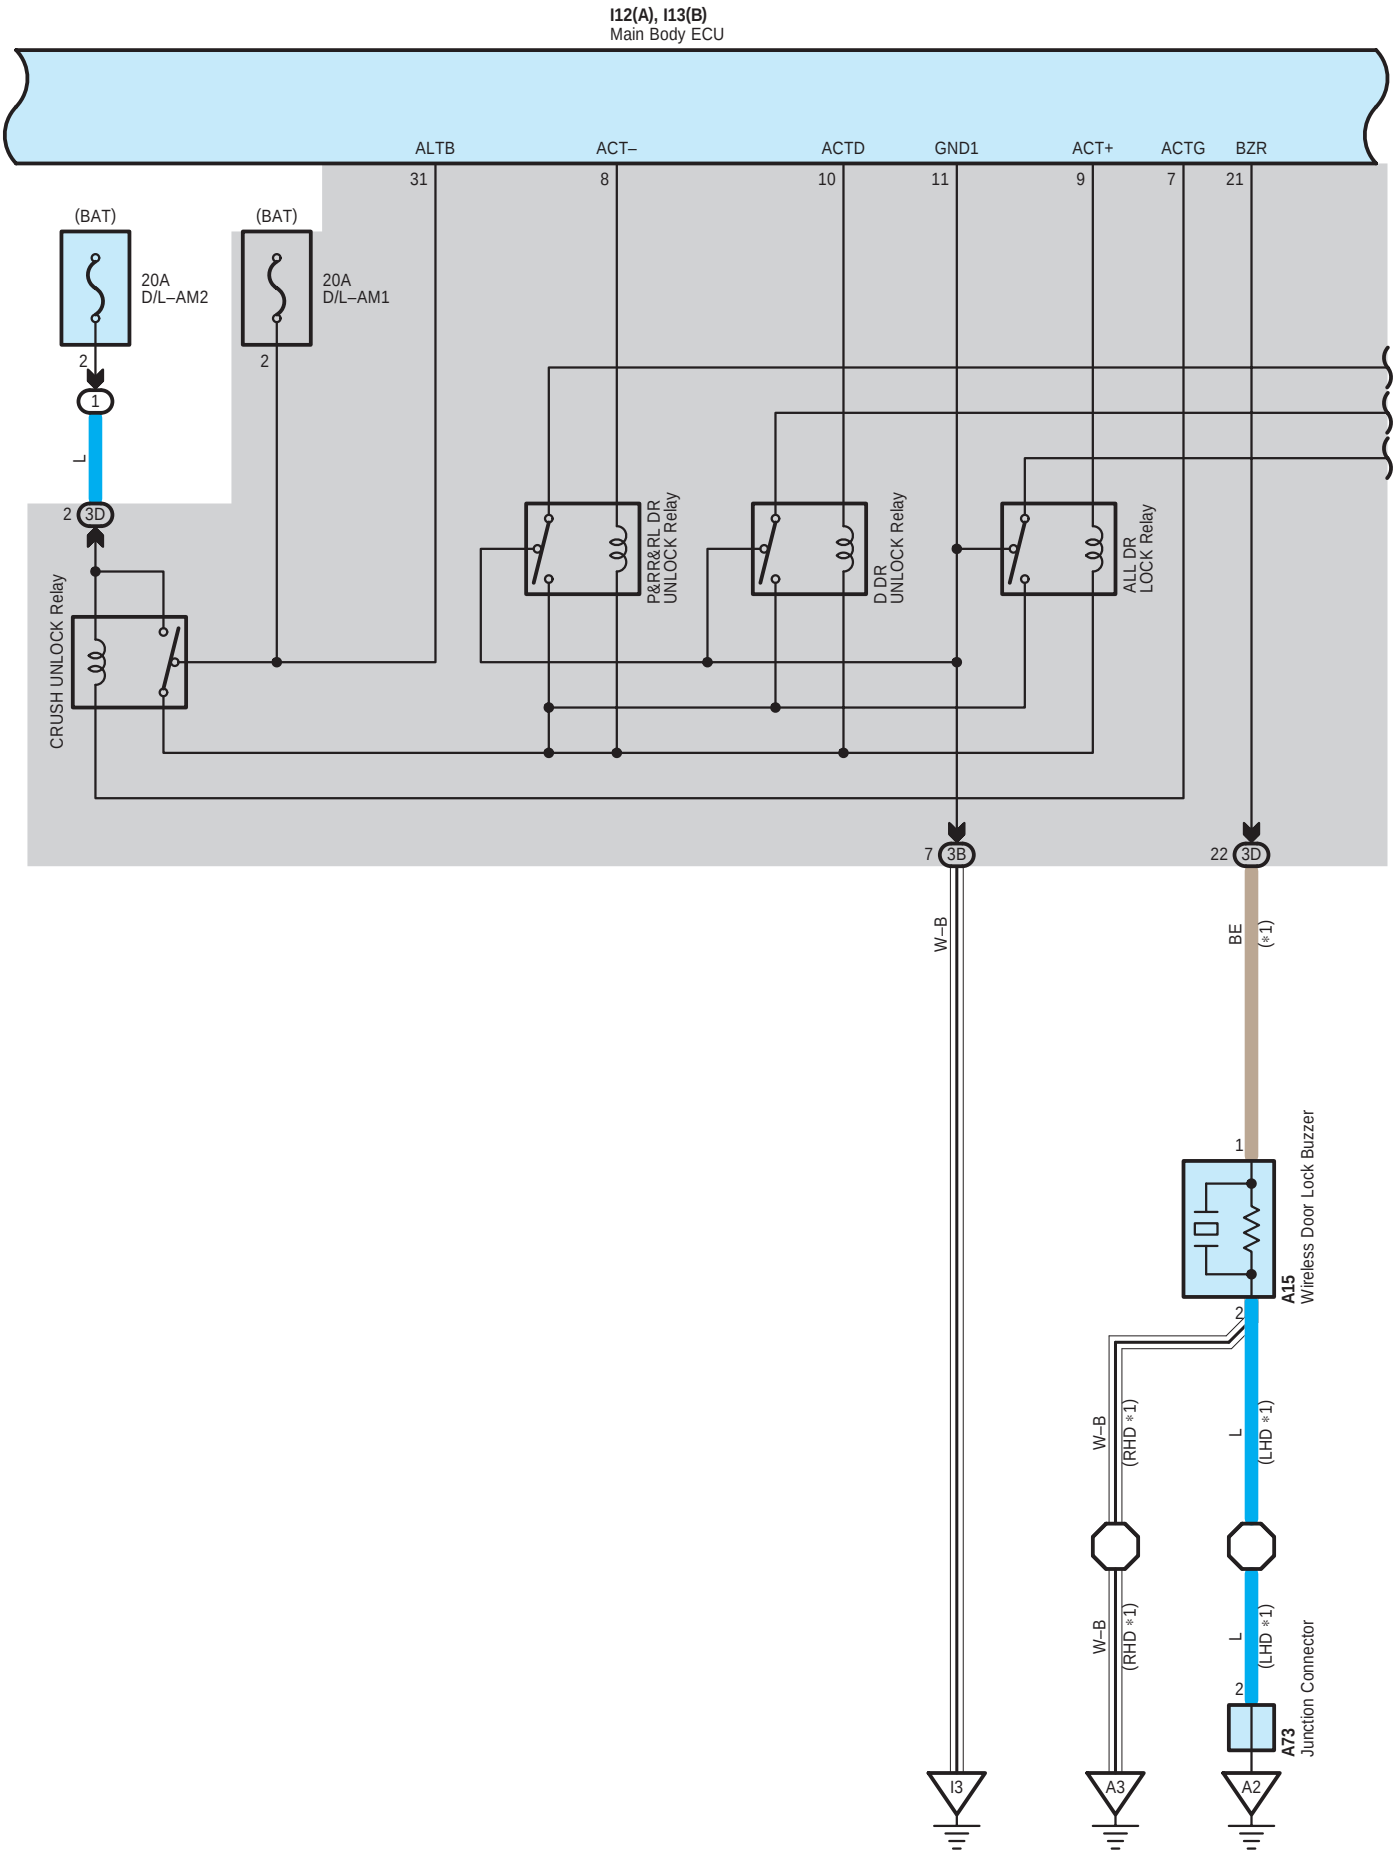
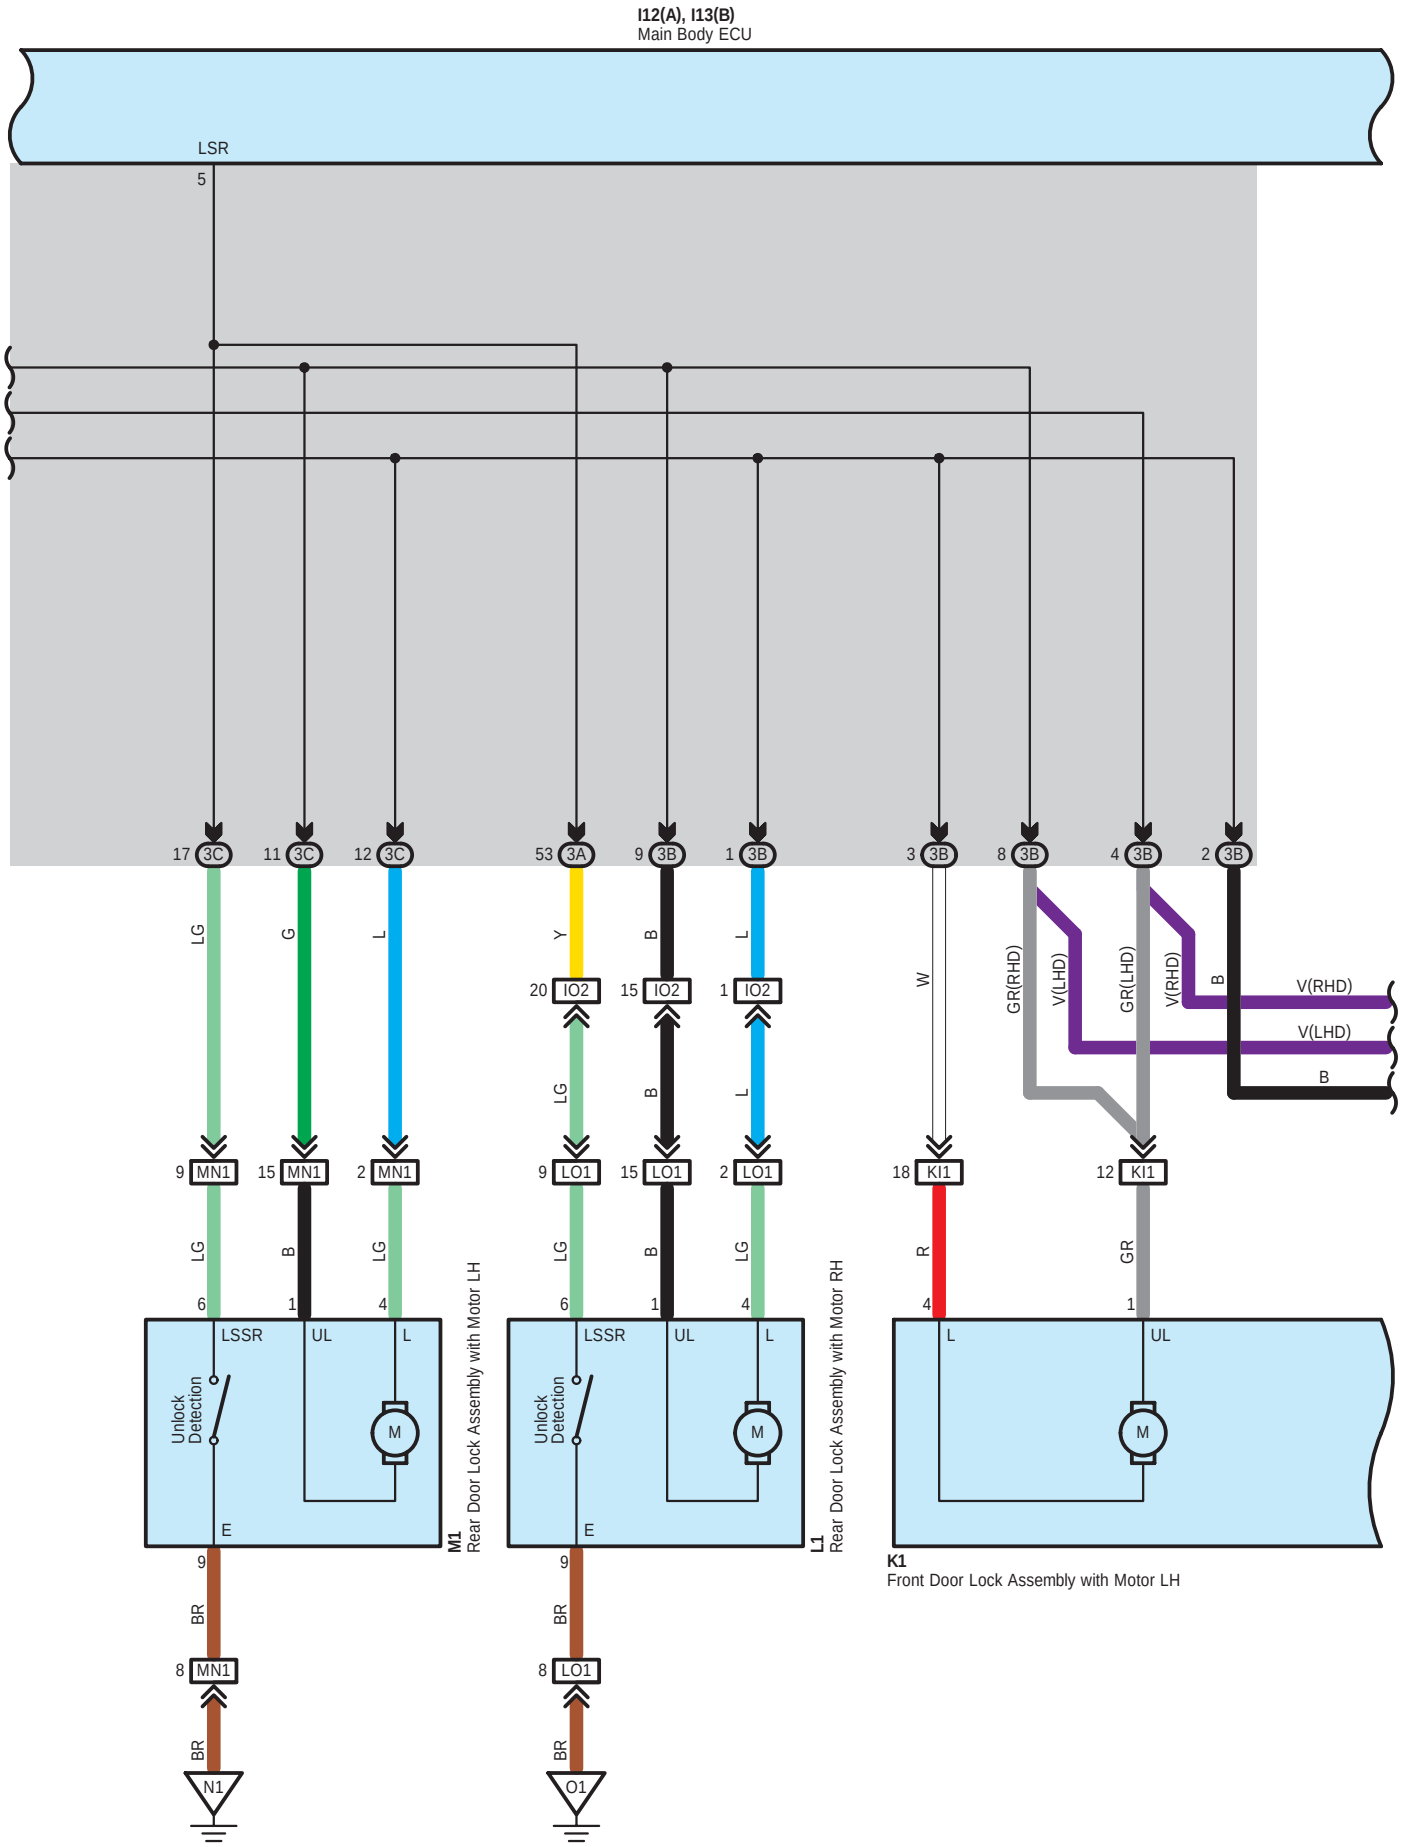
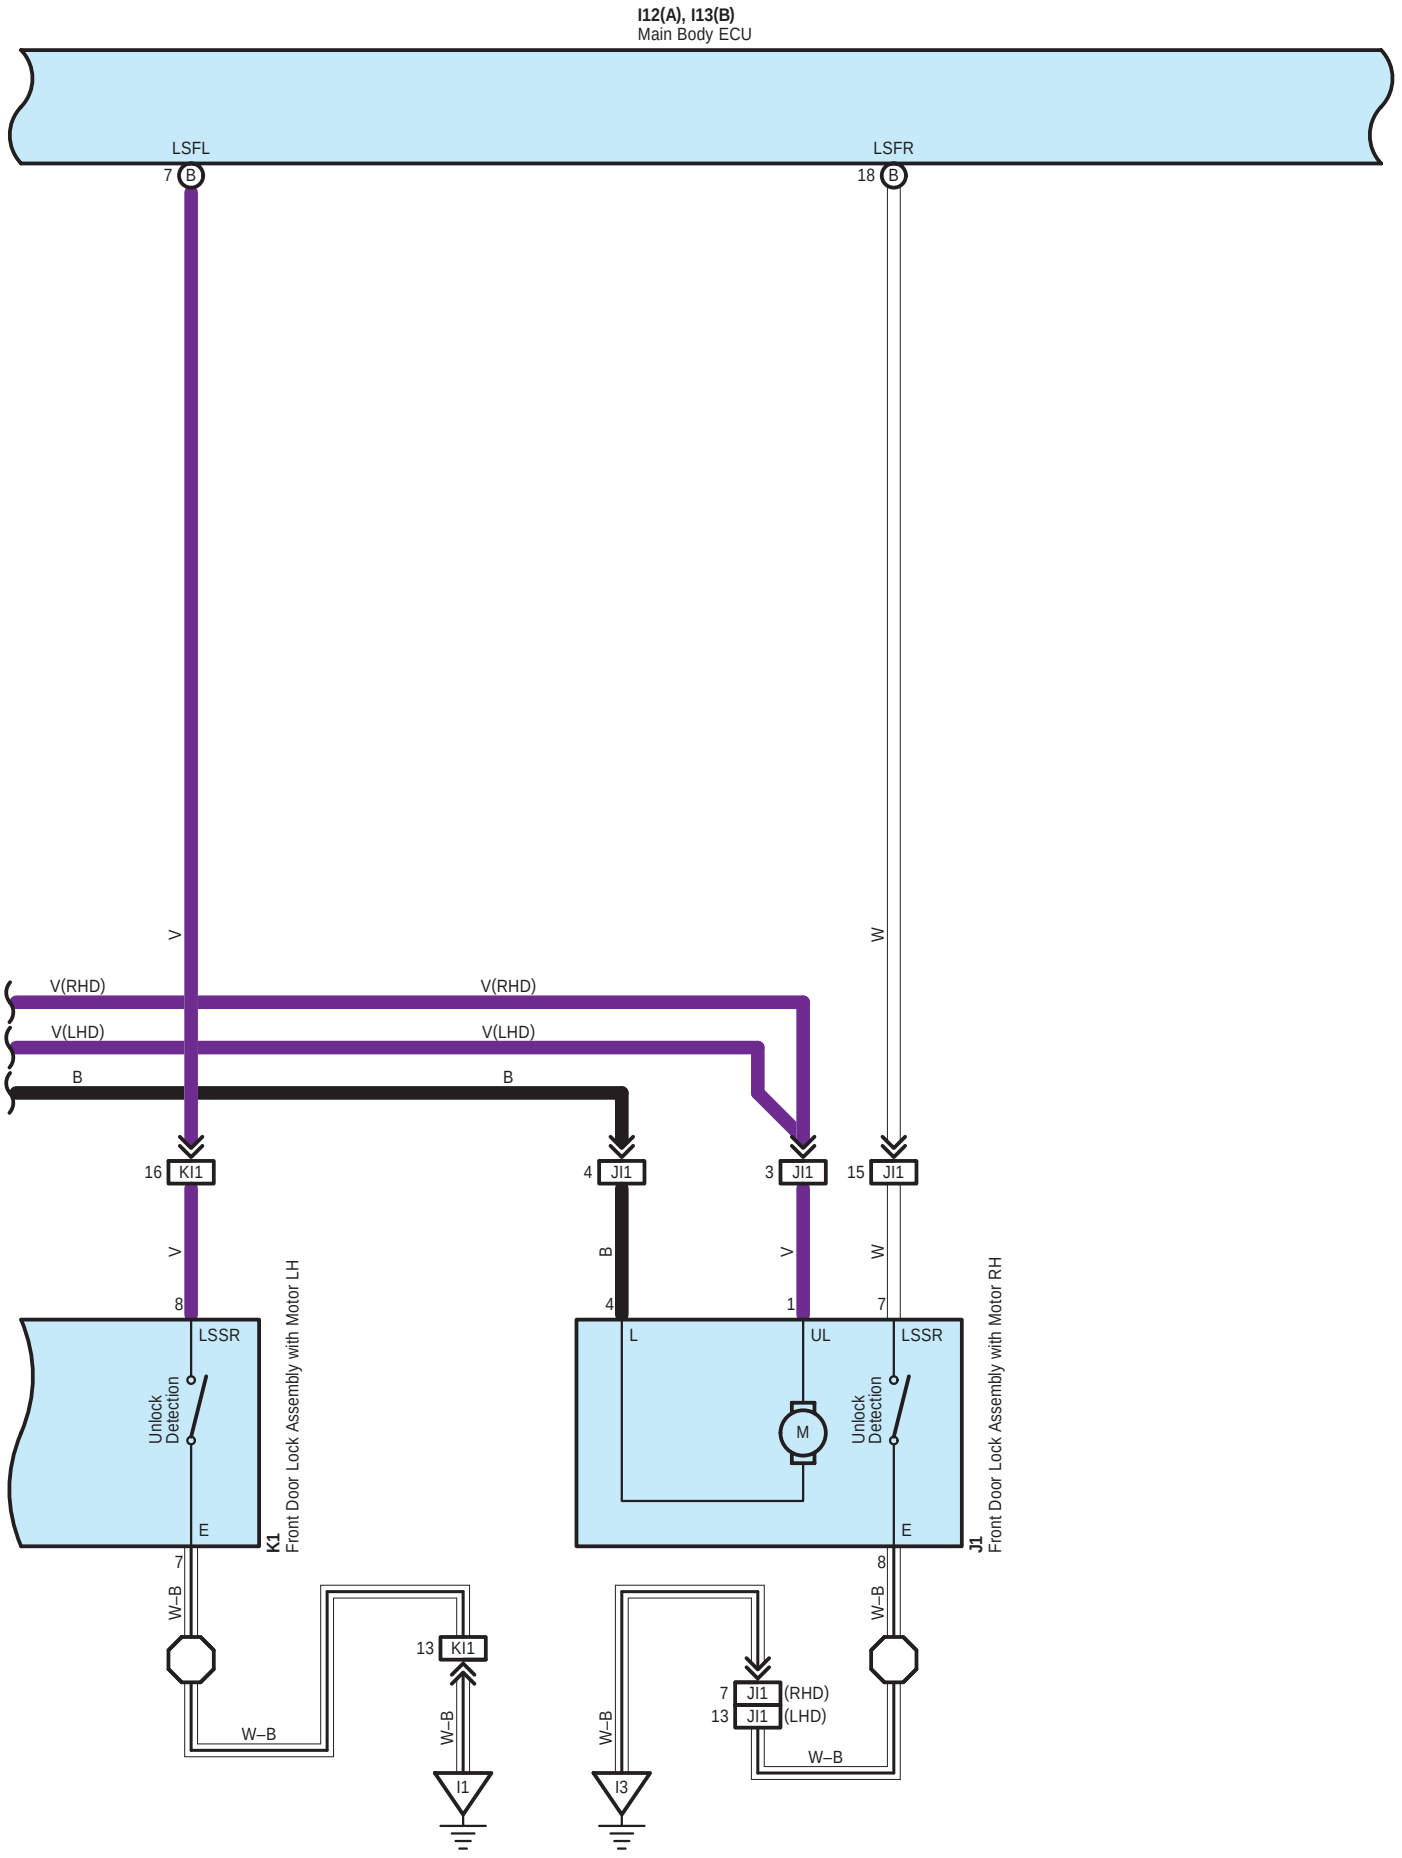
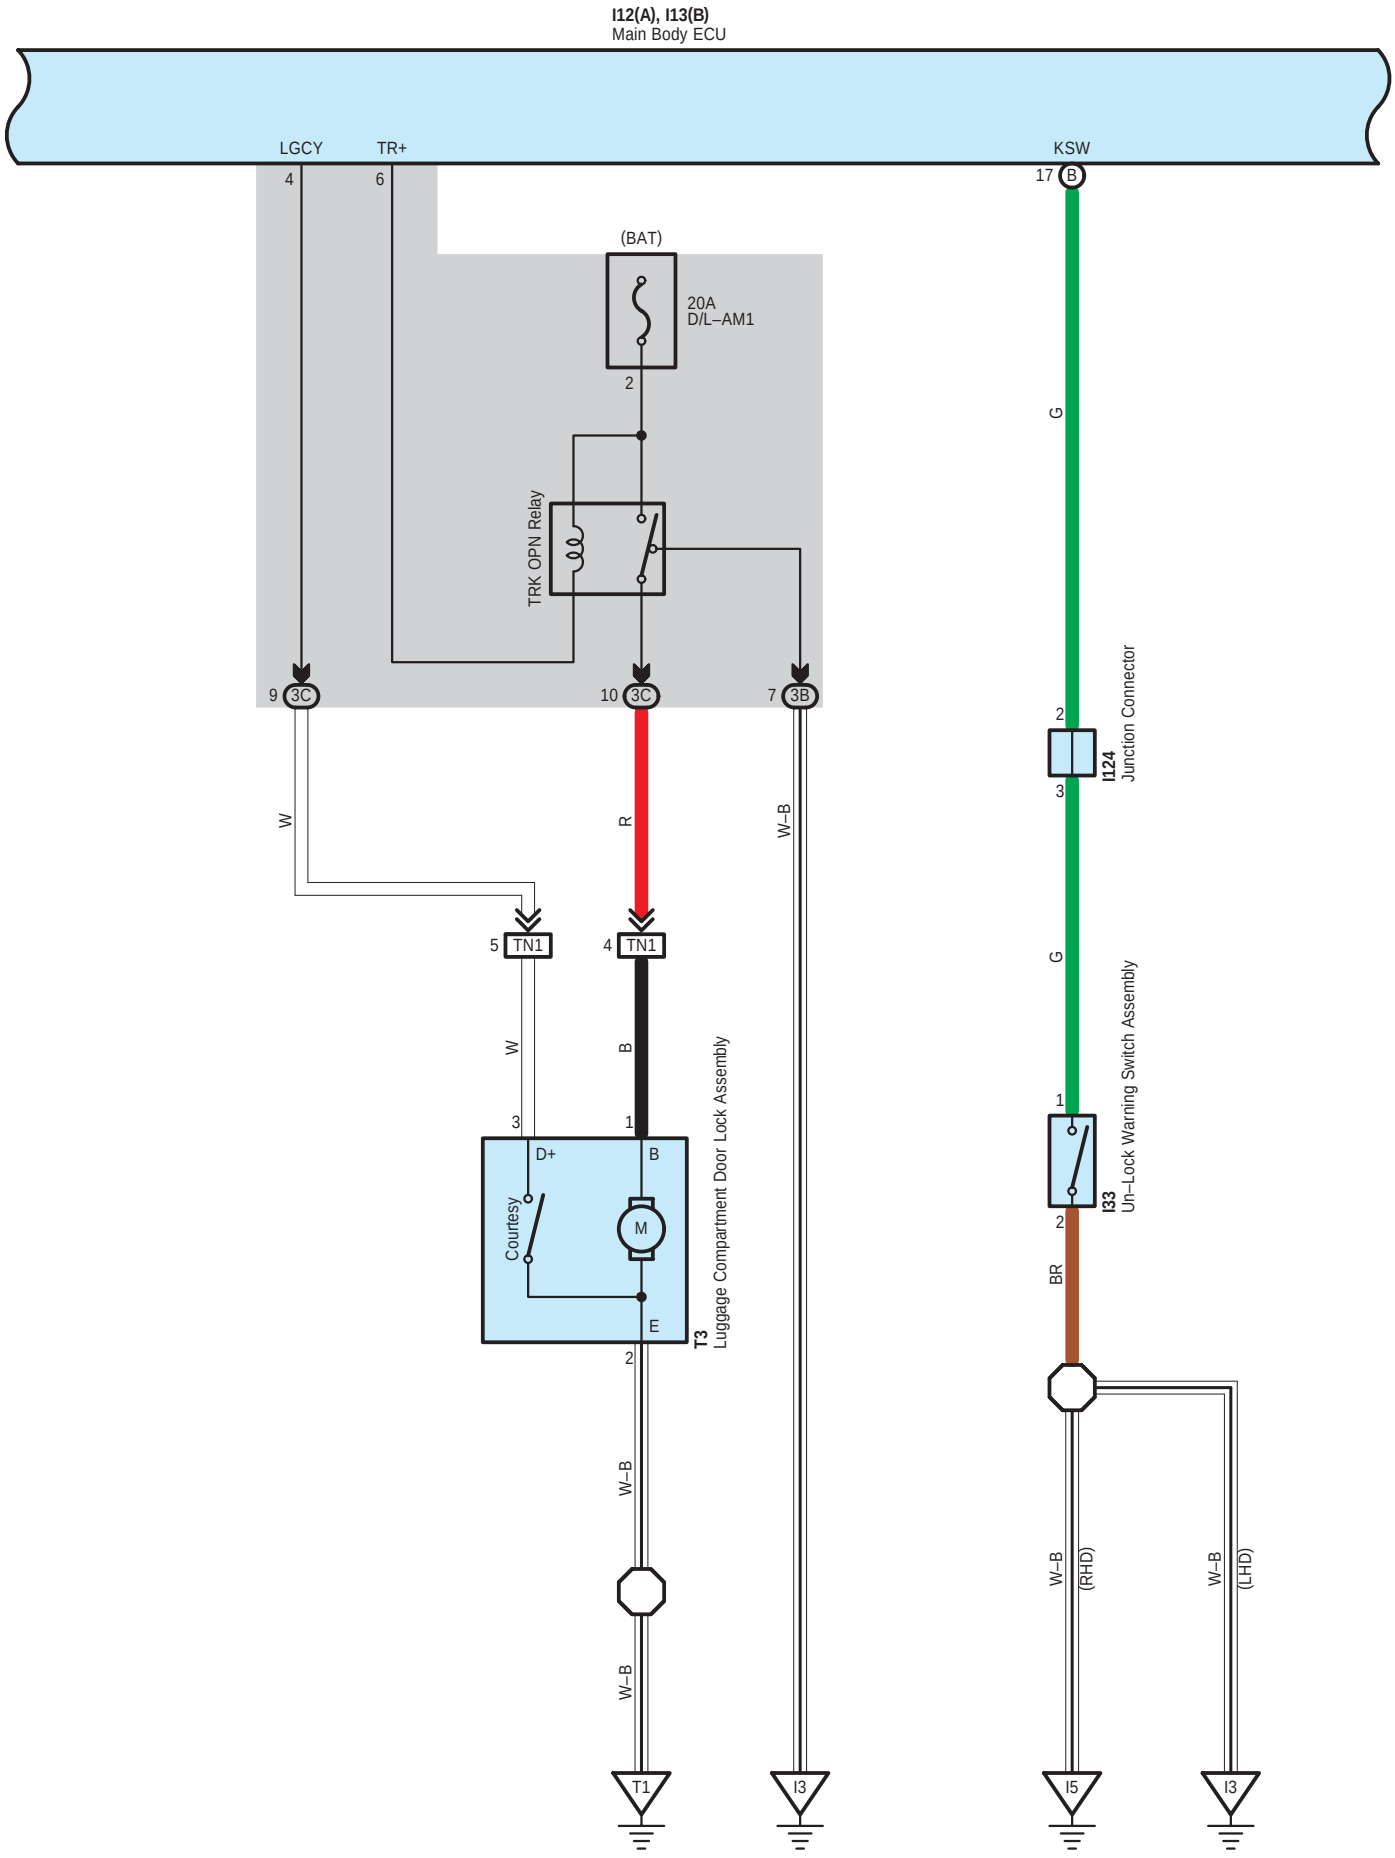



∗ 1 : w/ Wireless Door Lock Buzzer



I12(A), I13(B)
Main Body ECU
ALTB
ACT–
ACTD
GND1
ACT+
ACTG
BZR
31
8
10
11
9
7
21
(BAT)
(BAT)
20A
D/L–AM2
20A
D/L–AM1
2
1
L
2
3D
2
CRUSH UNLOCK Relay
P&RR&RL DR
UNLOCK Relay
D DR
UNLOCK Relay
ALL DR
LOCK Relay
7
3B
22
3D
W–B
BE
(*1)
1
A15
Wireless Door Lock Buzzer
2
W–B
(RHD *1)
L
(LHD *1)
W–B
(RHD *1)
L
(LHD *1)
2
A73
Junction Connector
I3
A3
A2


I12(A), I13(B)
Main Body ECU
LSR
5
17 3C
11 3C
12 3C
53 3A
9 3B
1 3B
3 3B
8 3B
4 3B
2 3B
LG
G
L
Y
B
L
W
GR(RHD)
V(LHD)
GR(LHD)
V(RHD)
B
V(RHD)
V(LHD)
B
20 IO2
15 IO2
1 IO2
LG
B
L
9 MN1
15 MN1
2 MN1
9 LO1
15 LO1
2 LO1
18 KI1
12 KI1
LG
B
LG
LG
B
LG
R
GR
6
1
4
6
1
4
4
1
LSSR
UL
L
LSSR
UL
L
L
UL
Unlock Detection
M
Unlock Detection
M
M
E
E
M1
Rear Door Lock Assembly with Motor LH
L1
Rear Door Lock Assembly with Motor RH
K1
Front Door Lock Assembly with Motor LH
9
BR
8 MN1
BR
N1
9
BR
8 LO1
BR
O1



I12(A), I13(B)
Main Body ECU
LSFL
7 B
LSFR
18 B
V
W
V(RHD)
V(RHD)
V(LHD)
V(LHD)
B
B
16 KI1
4 JI1
3 JI1
15 JI1
V
B
V
W
8
4
1
7
LSSR
Unlock Detection
E
K1
Front Door Lock Assembly with Motor LH
L
UL
M
LSSR
Unlock Detection
E
J1
Front Door Lock Assembly with Motor RH
7
W-B
8
W-B
13 KI1
W-B
W-B
I1
W-B
7 JI1 (RHD)
13 JI1 (LHD)
W-B
I3


I12(A), I13(B)
Main Body ECU
LGCY
TR+
KSW
4
6
17 B
(BAT)
20A
D/L–AM1
2
TRK OPN Relay
G
9 3C
10 3C
7 3B
2
I124
Junction Connector
3
W
R
W–B
5 TN1
4 TN1
G
W
B
3
1
D+
B
Courtesy
M
E
T3
Luggage Compartment Door Lock Assembly
1
I33
Un–Lock Warning Switch Assembly
2
BR
2
W–B
W–B
(RHD)
W–B
(LHD)
T1
I3
I5
I3

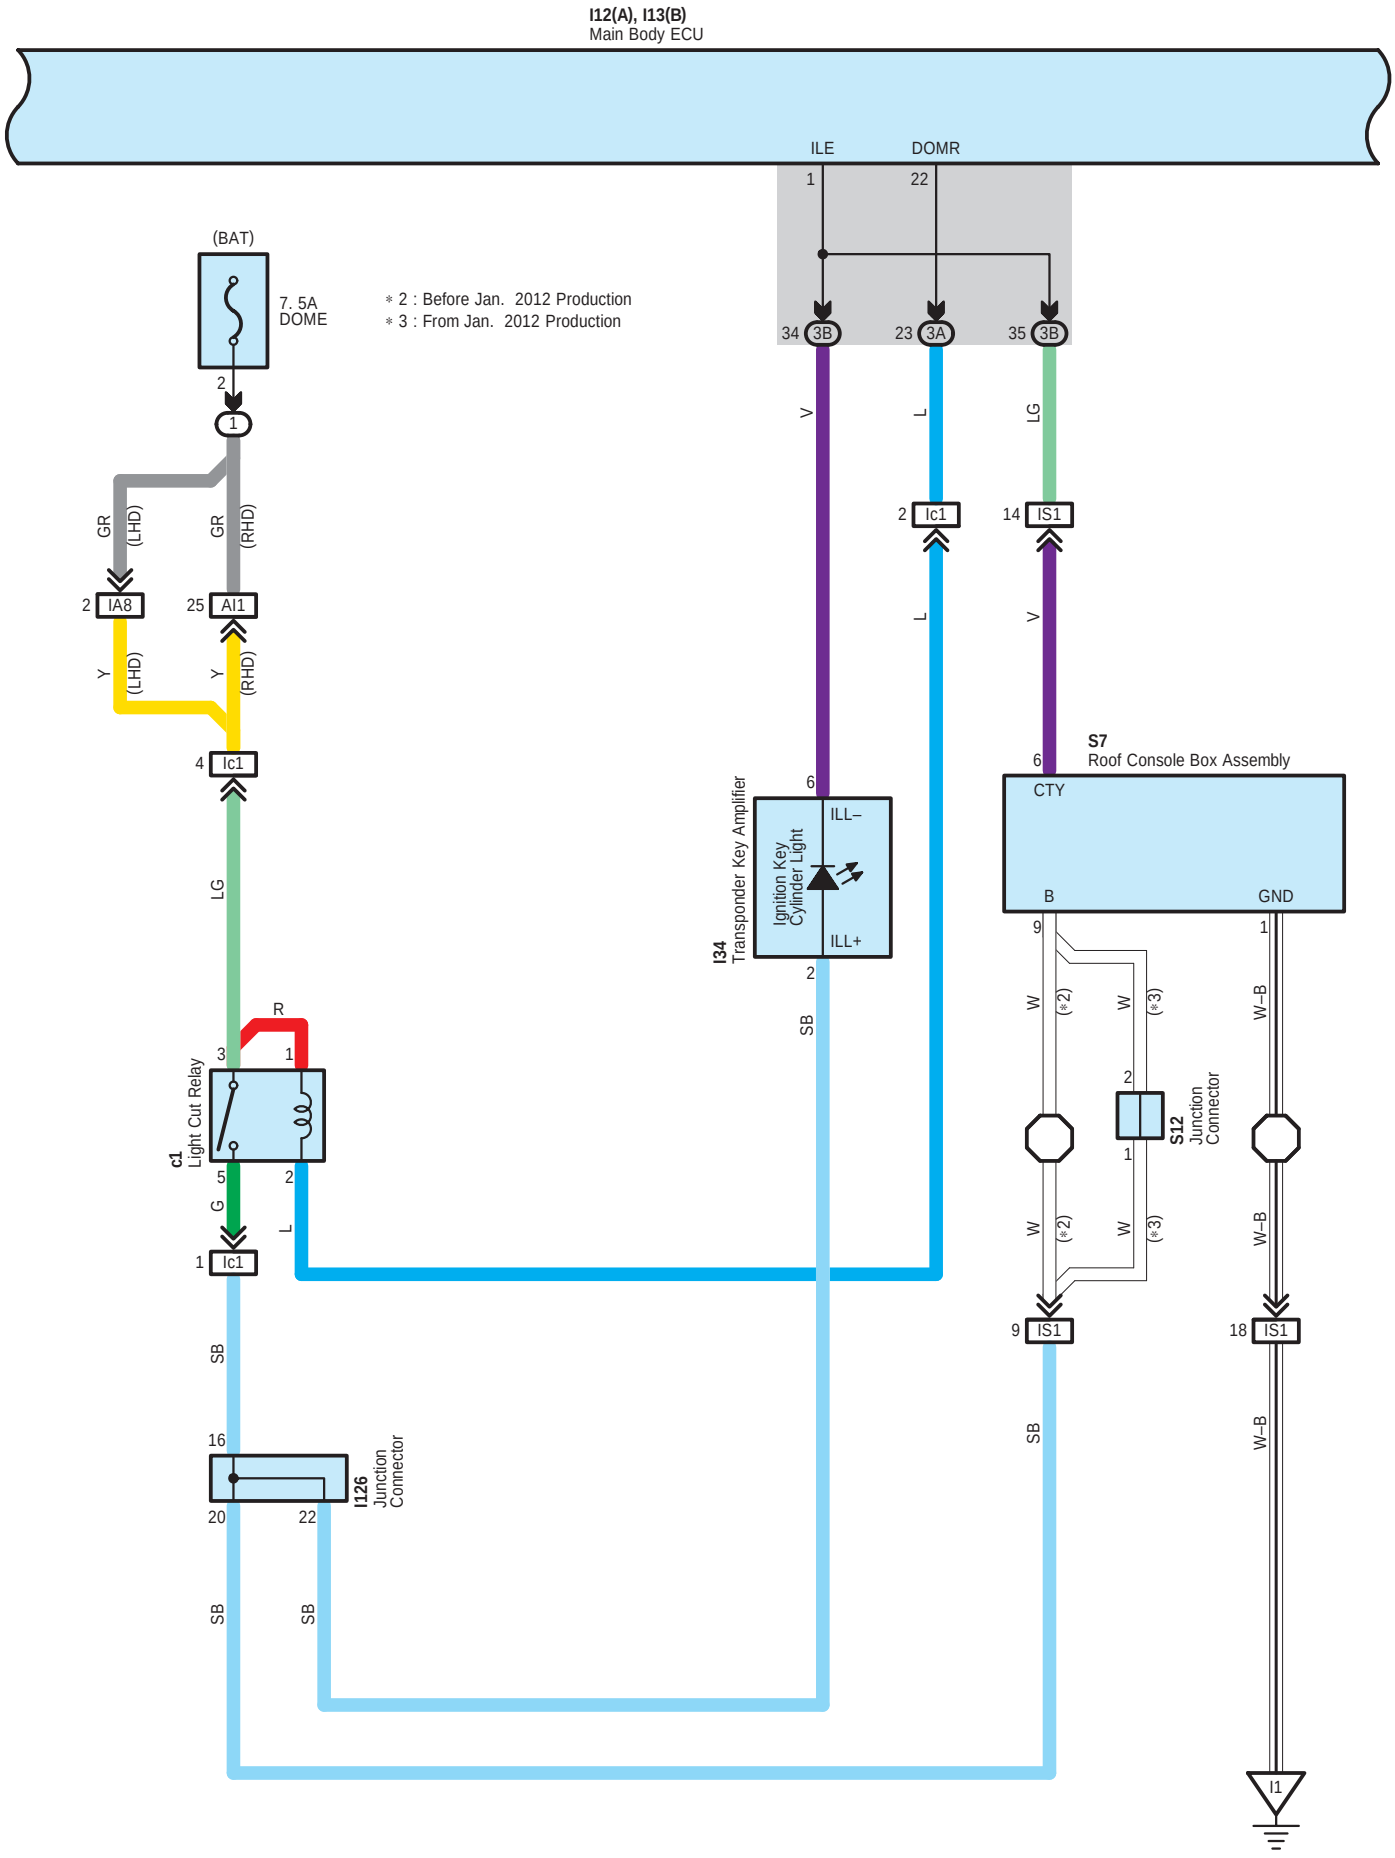

I12(A), I13(B)
Main Body ECU
ILE
DOMR
1
22
34 3B
23 3A
35 3B
(BAT)
7. 5A
DOME
2
1
GR
(LHD)
GR
(RHD)
2 IA8
25 AI1
Y
(LHD)
Y
(RHD)
4 Ic1
LG
R
3
1
c1
Light Cut Relay
5
2
G
L
1 Ic1
SB
16
I126
Junction
Connector
20
22
SB
SB
V
L
LG
2 Ic1
L
14 IS1
V
6
I34
Transponder Key Amplifier
Ignition Key
Cylinder Light
ILL–
ILL+
2
SB
S7
Roof Console Box Assembly
6
CTY
B
GND
9
1
W
(*2)
W
(*3)
2
1
S12
Junction
Connector
W
(*2)
W
(*3)
W–B
W–B
9 IS1
18 IS1
SB
W–B
I1
＊2 : Before Jan. 2012 Production
＊3 : From Jan. 2012 Production

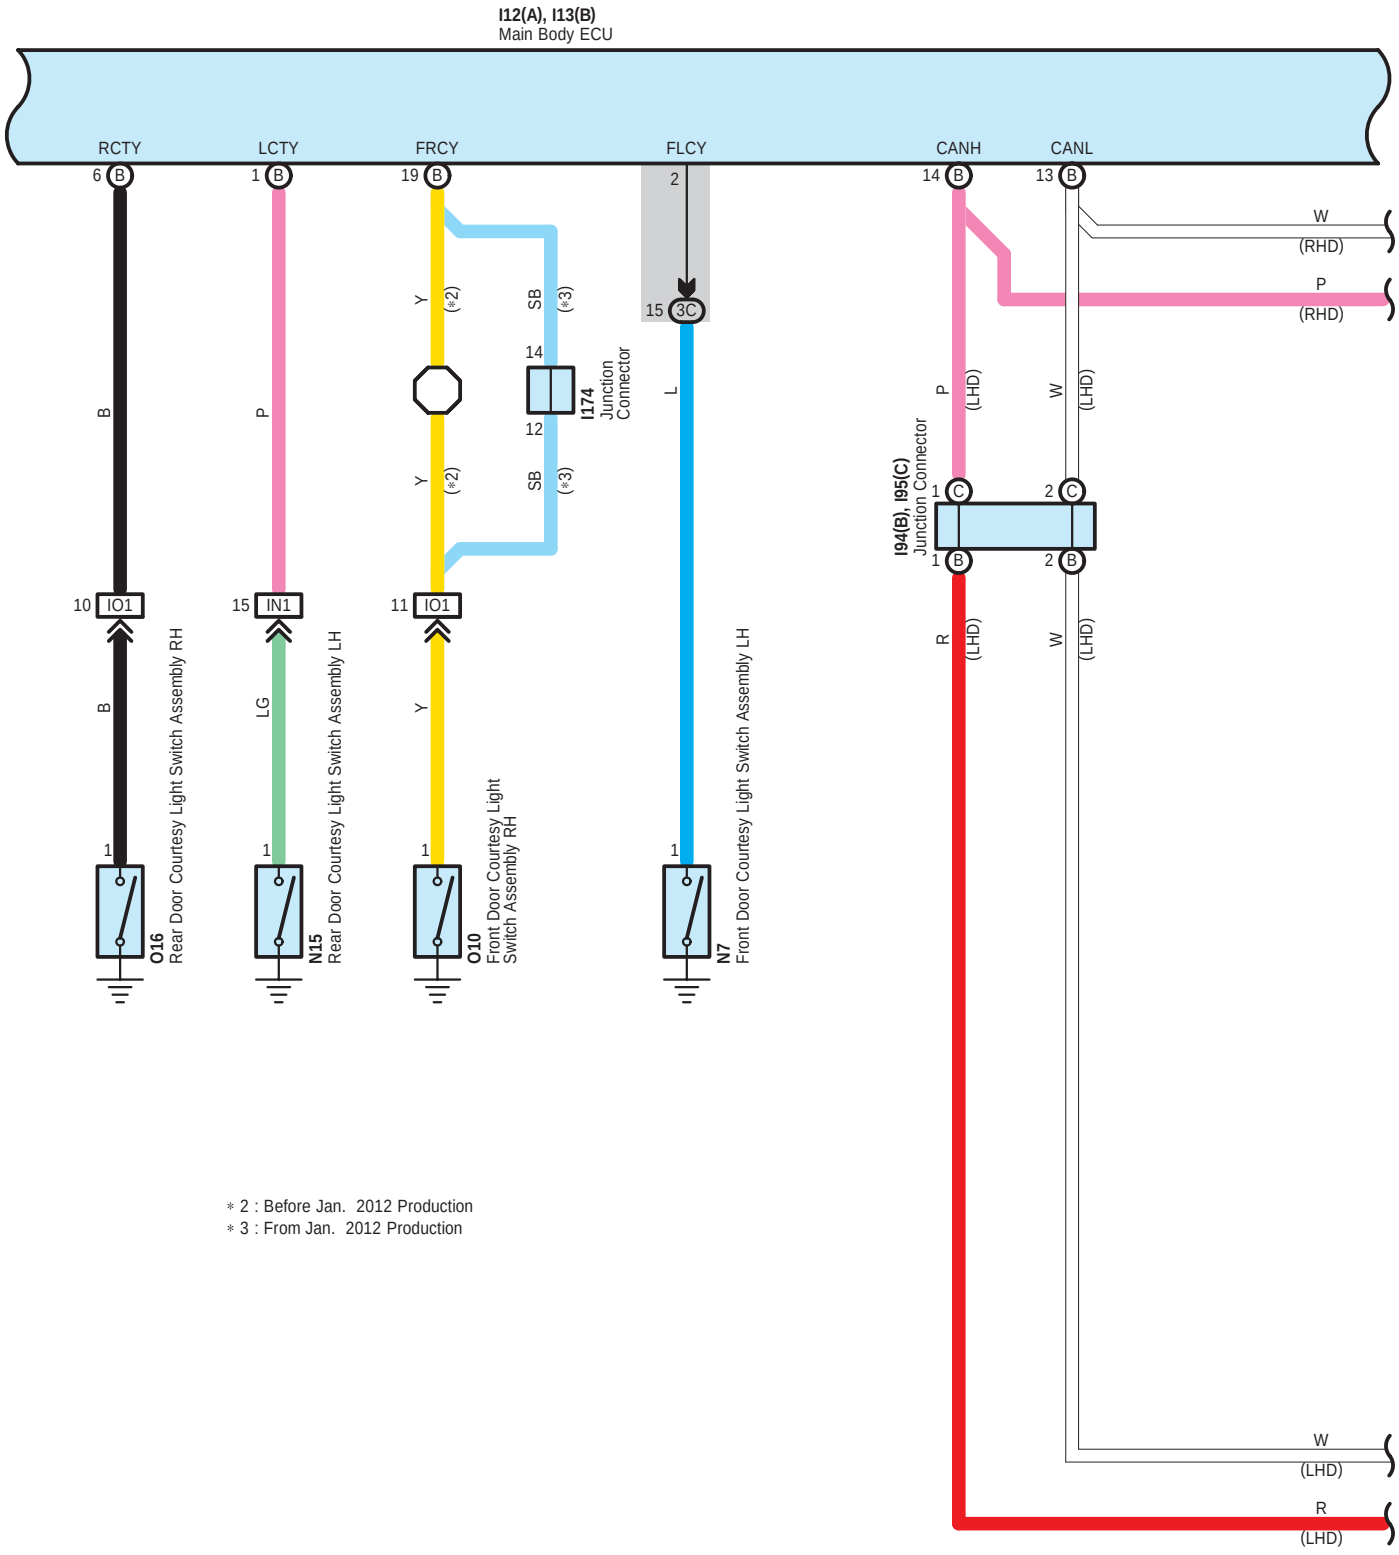

* 2 : Before Jan. 2012 Production
* 3 : From Jan. 2012 Production

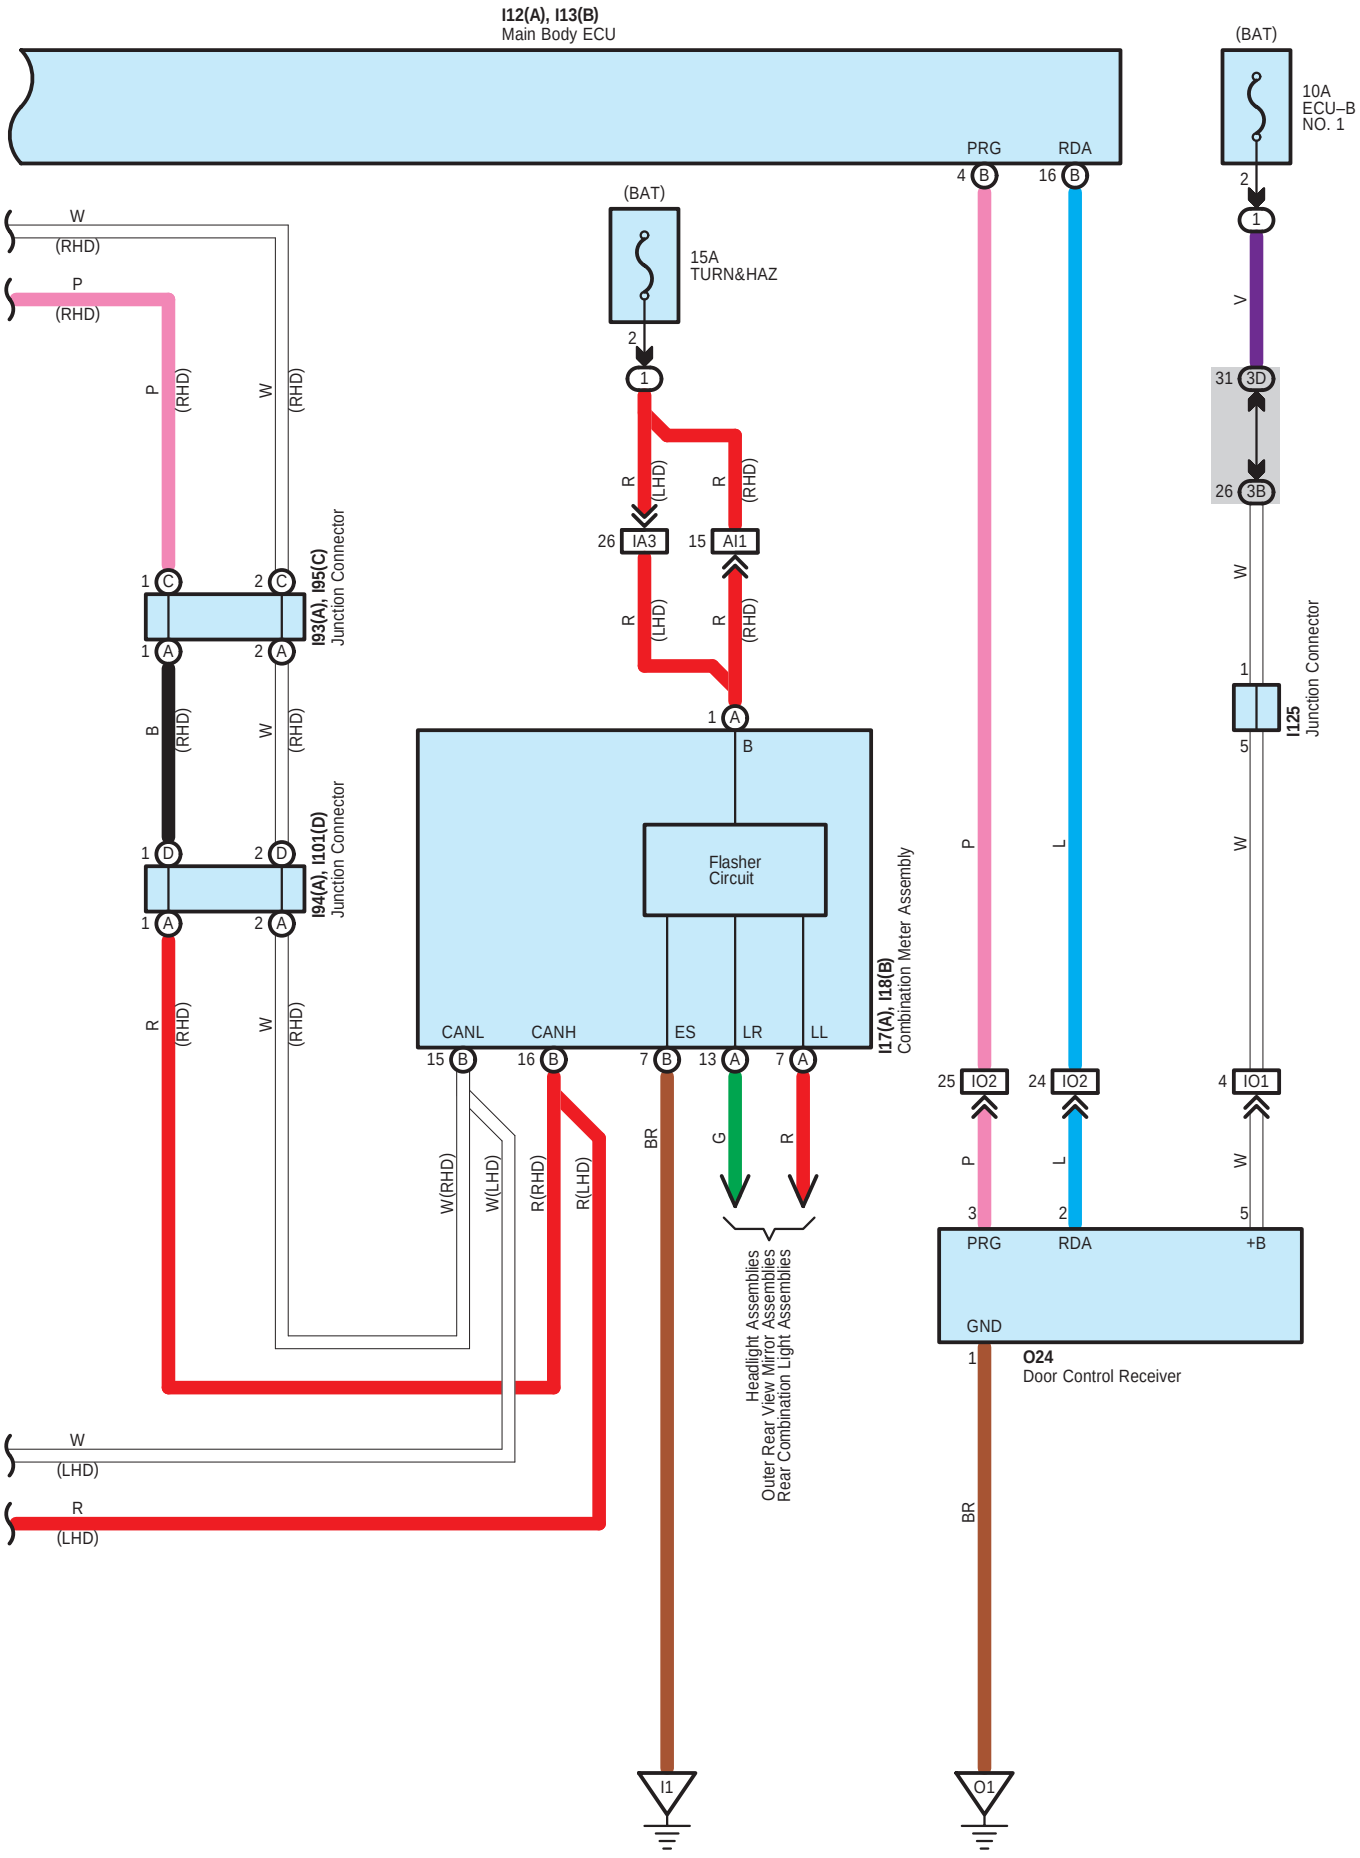
I12(A), I13(B)
Main Body ECU
PRG
RDA
(BAT)
10A
ECU–B
NO. 1
(BAT)
15A
TURN&HAZ
W
(RHD)
P
(RHD)
I93(A), I95(C)
Junction Connector
I94(A), I101(D)
Junction Connector
I125
Junction Connector
Flasher
Circuit
I17(A), I18(B)
Combination Meter Assembly
CANL
CANH
ES
LR
LL
W(RHD)
W(LHD)
R(RHD)
R(LHD)
BR
G
R
Headlight Assemblies
Outer Rear View Mirror Assemblies
Rear Combination Light Assemblies
W
(LHD)
R
(LHD)
O24
Door Control Receiver
PRG
RDA
+B
GND
I1
O1


A 15
Gray

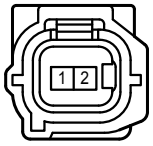


A 73
Gray




I 12
White

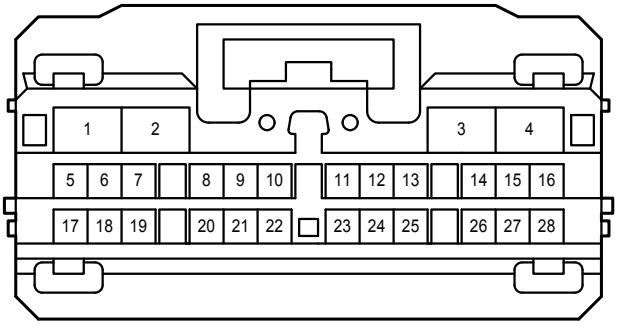


I 13
White

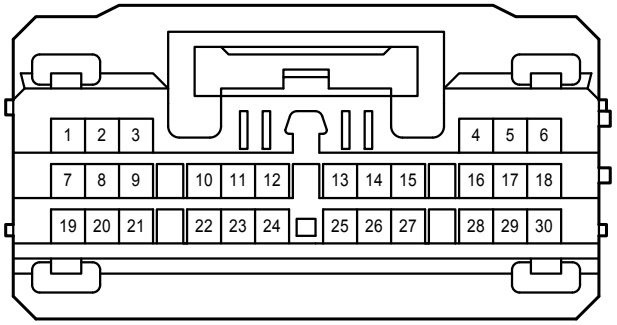

I 17
Black

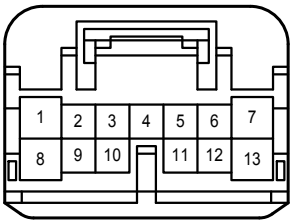


I 18
Black

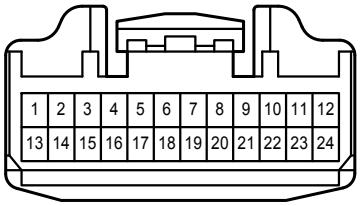


I 33
White




I 34
Black

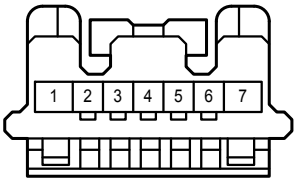


I 93
White




I 94
White




I 95
White




I101
White




I124
White

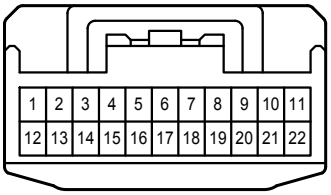


I125
Gray

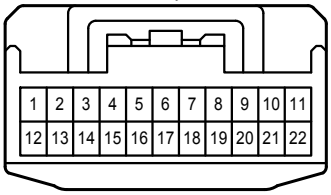


I126
White

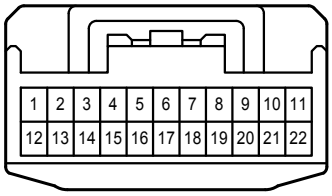


I174
White

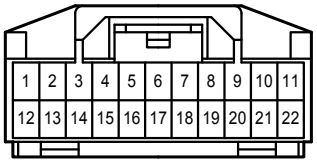


J 1
White

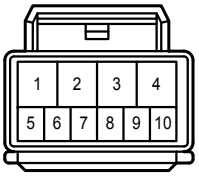


K 1
White

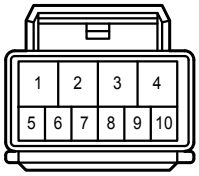

L 1
White

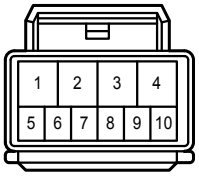

M 1
White

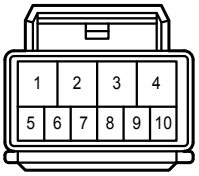

N 7
Black



N 15
Black




O 10
Black




O 16
Black




O 24
White

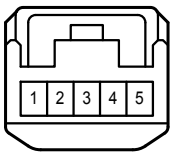


S 7
White

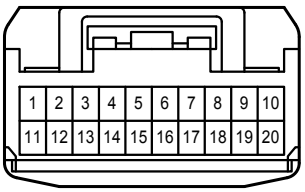


S 12
Black




T 3
Black

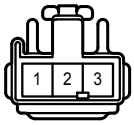


c 1
White

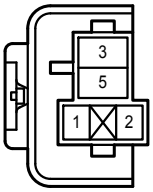


3A
White

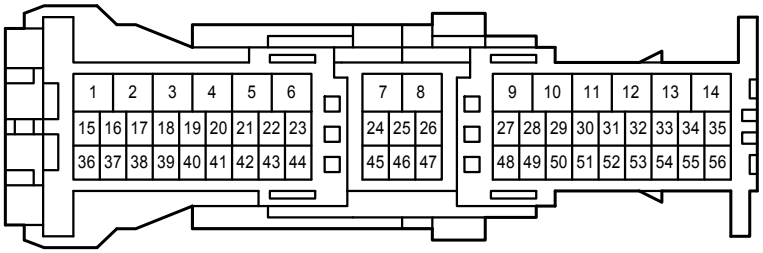


3B
White

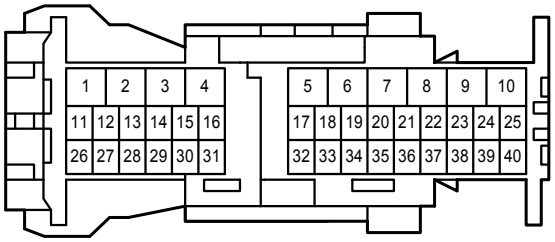


3C
White

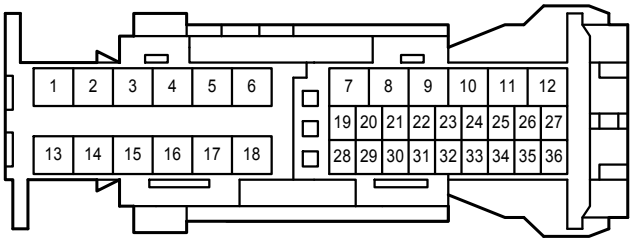


3D
White

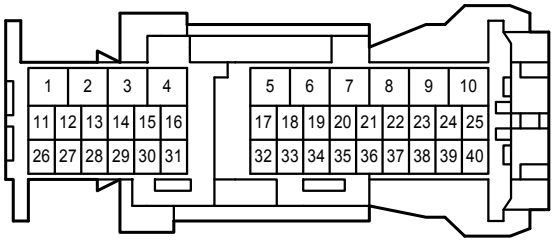


AI1
White

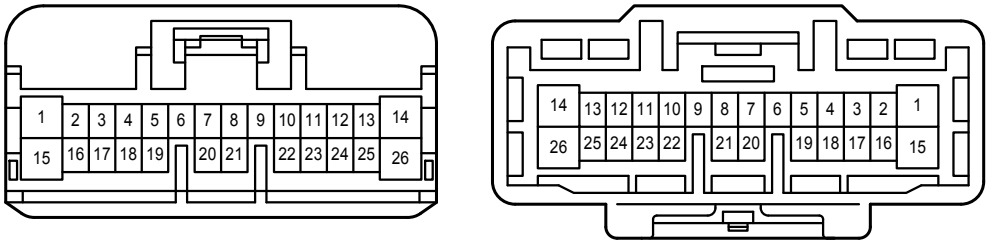


IA3
Blue

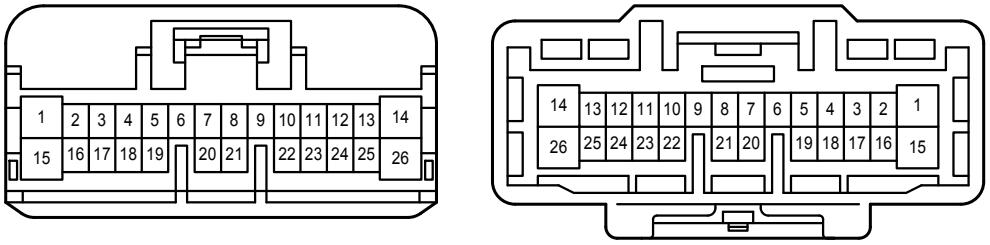


IA8
Gray

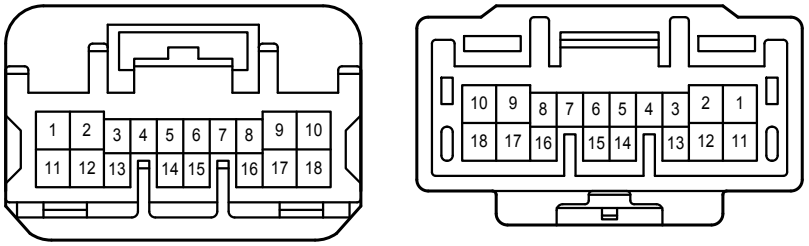


IN1
White

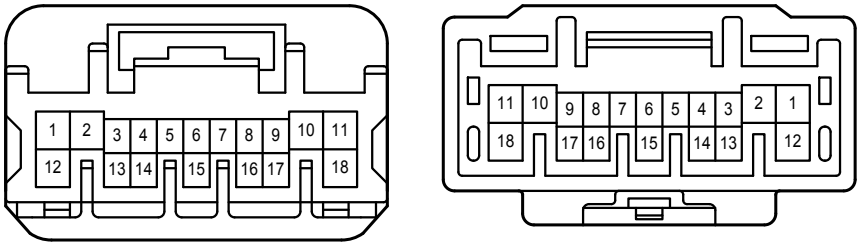


IO1
White

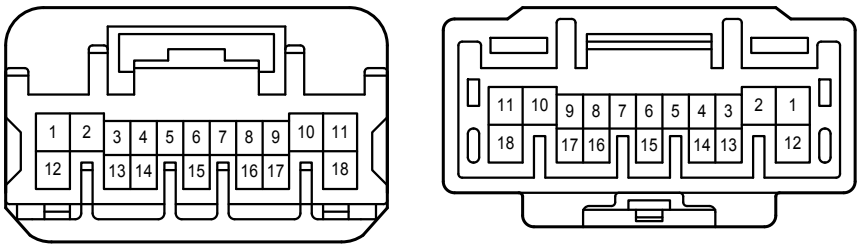


IO2
White

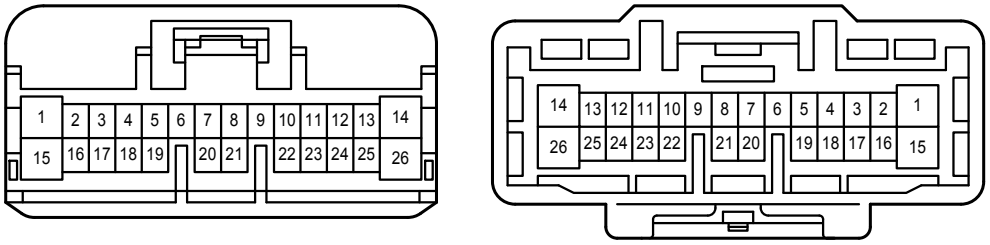


IS1
White

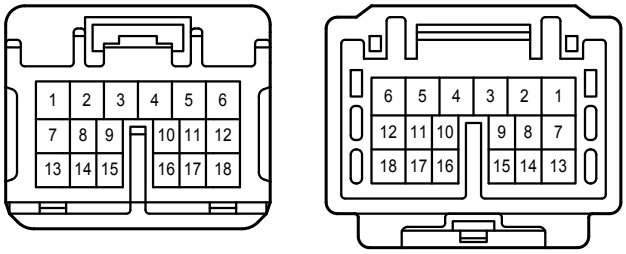


Ic1
White

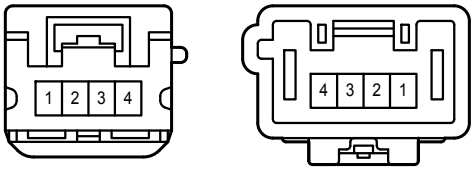


JI1
Gray

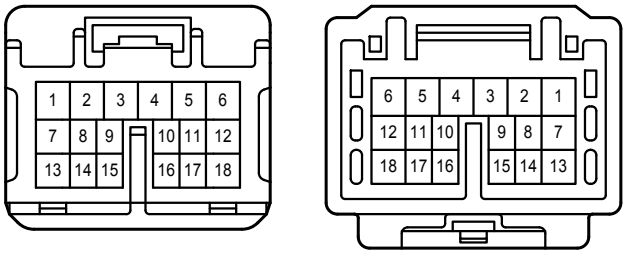


KI1
White

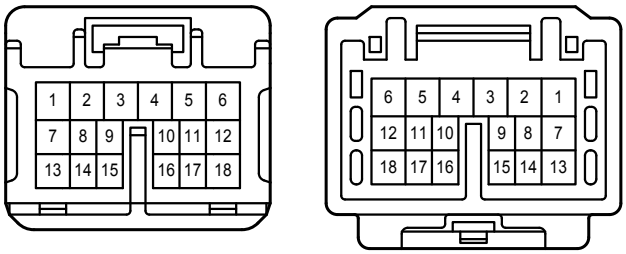

LO1
White

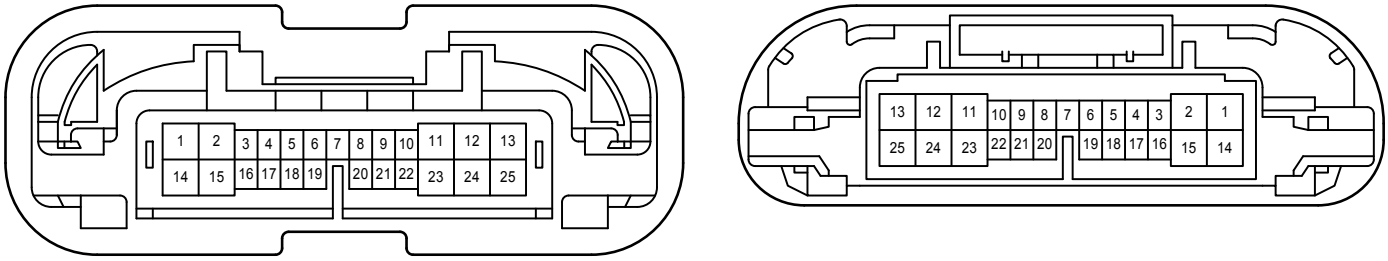

MN1
White

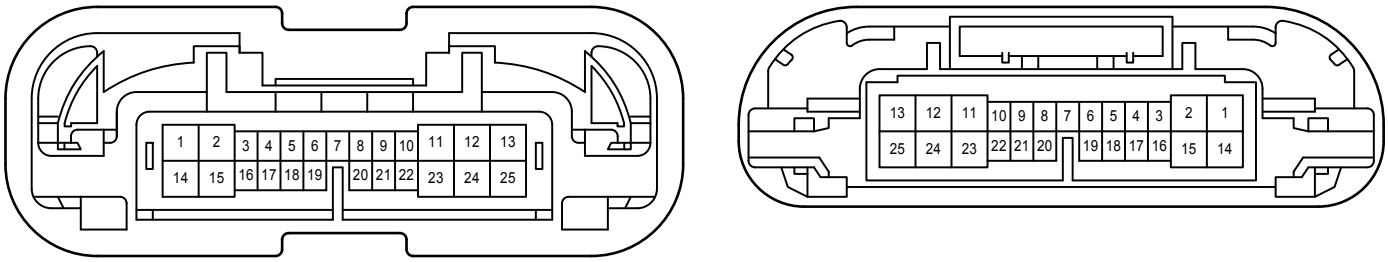

TN1
White

