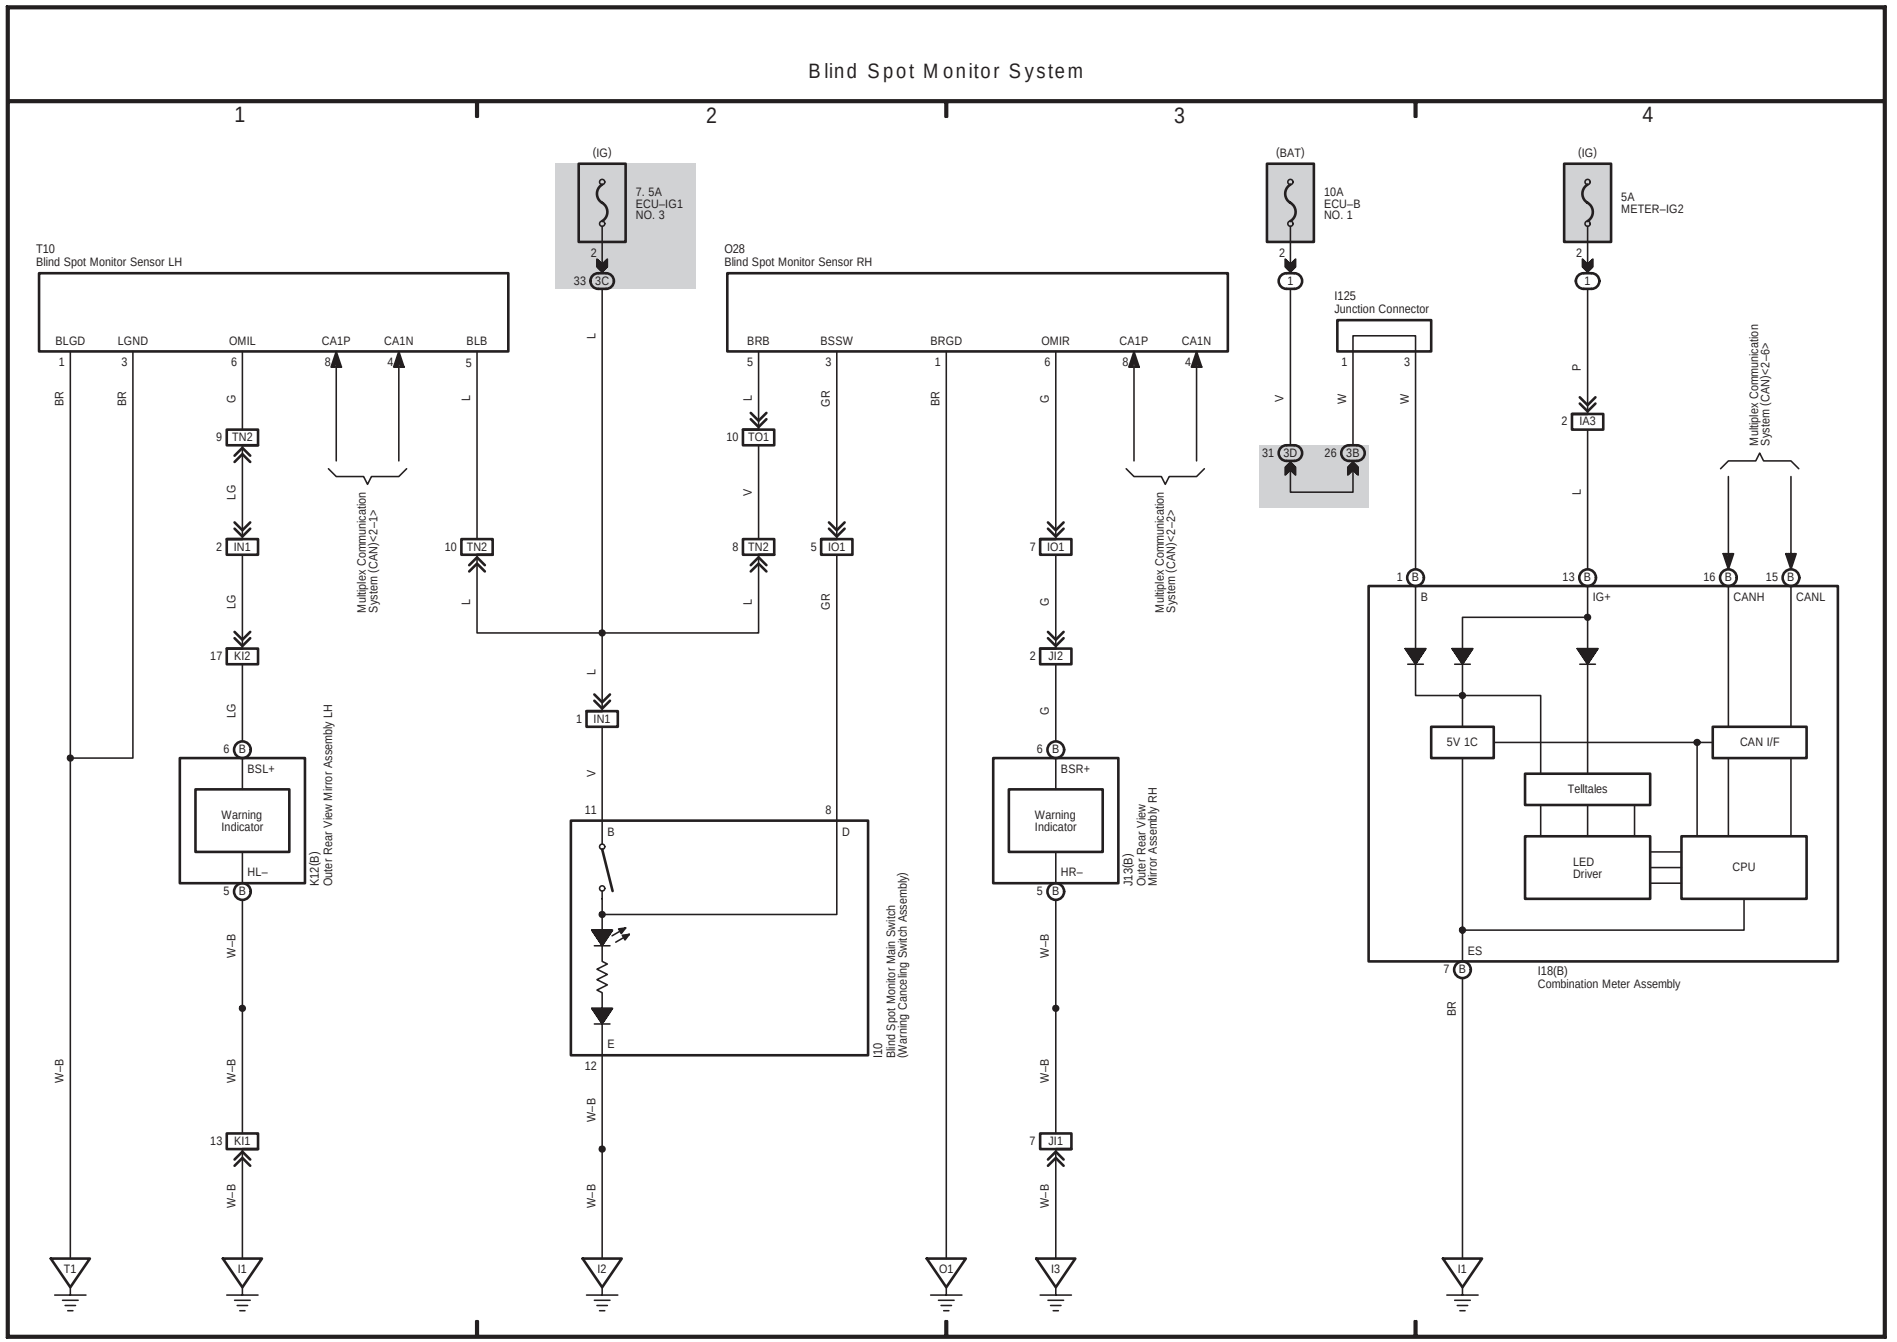

Blind Spot Monitor System
1
2
3
4
(IG)
7. 5A
ECU–IG1
NO. 3
(BAT)
10A
ECU–B
NO. 1
(IG)
5A
METER–IG2
T10
Blind Spot Monitor Sensor LH
O28
Blind Spot Monitor Sensor RH
I125
Junction Connector
BLGD
LGND
OMIL
CA1P
CA1N
BLB
BRB
BSSW
BRGD
OMIR
CA1P
CA1N
Multiplex Communication System (CAN)<2–1>
Multiplex Communication System (CAN)<2–2>
Multiplex Communication System (CAN)<2–6>
TN2
IN1
KI2
KI1
TO1
IO1
JI2
JI1
IA3
BSL+
Warning Indicator
HL–
K12(B)
Outer Rear View Mirror Assembly LH
BSR+
Warning Indicator
HR–
J13(B)
Outer Rear View Mirror Assembly RH
I10
Blind Spot Monitor Main Switch (Warning Cancelling Switch Assembly)
B
IG+
CANH
CANL
5V 1C
CAN I/F
Telltales
LED Driver
CPU
ES
I18(B)
Combination Meter Assembly
T1
I1
I2
O1
I3
I1