Position of Parts in Body

[LHD]

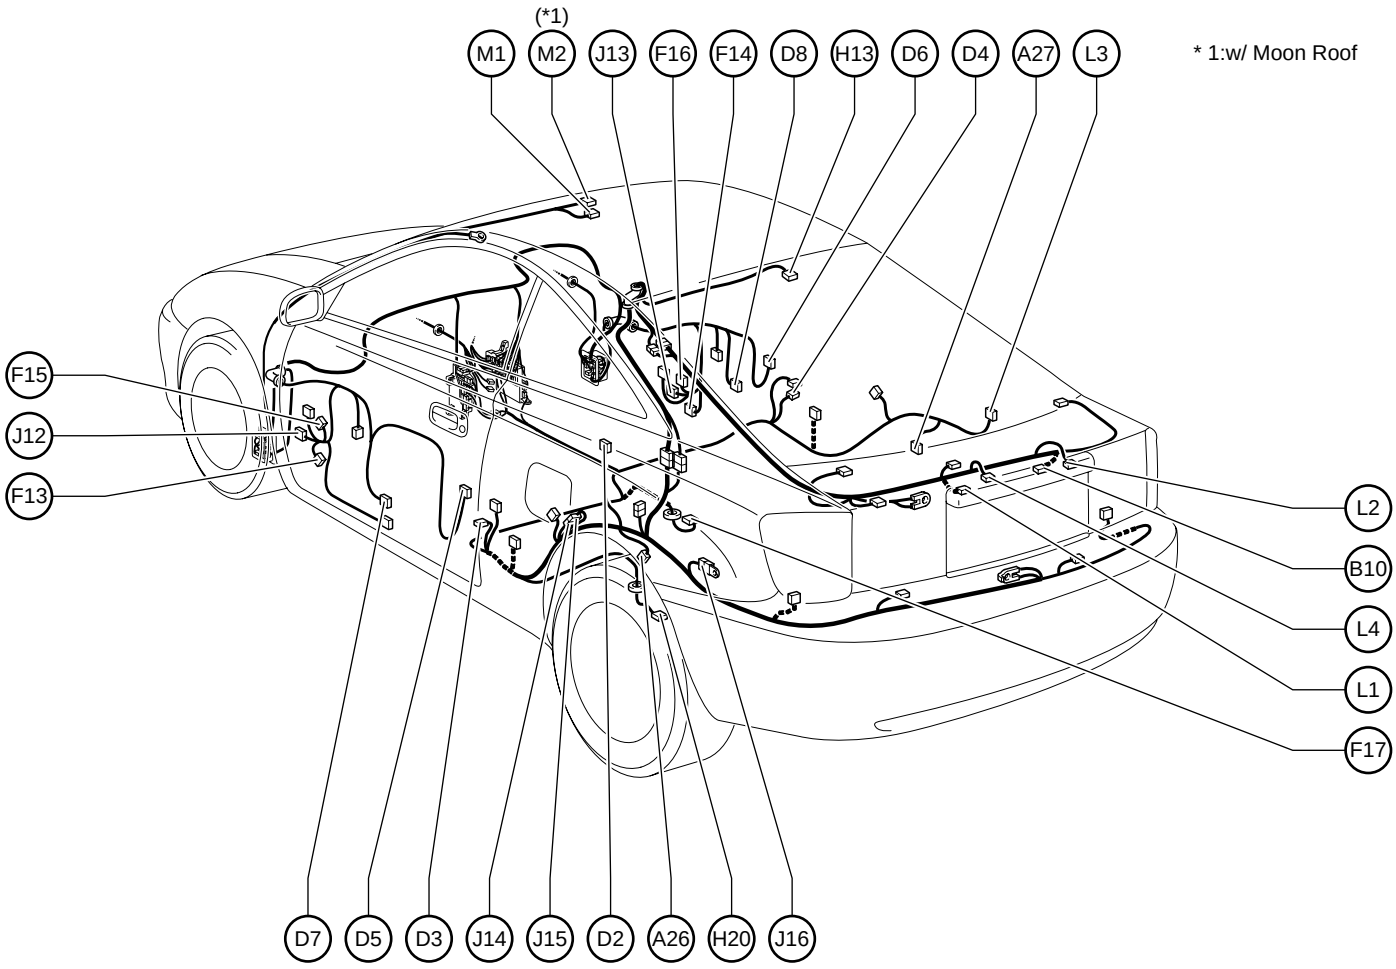

A26 ABS Speed Sensor Rear LH
A27 ABS Speed Sensor Rear RH

B10 Back Door Lock Motor

D 2 Door Control Receiver
D 3 Door Courtesy SW LH
D 4 Door Courtesy SW RH
D 5 Door Key Lock and Unlock SW LH
Door Lock Detection SW LH
Door Lock Motor LH
D 6 Door Key Lock and Unlock SW RH
Door Lock Detection SW RH
Door Lock Motor RH
D 7 Door Side Airbag Sensor LH
D 8 Door Side Airbag Sensor RH

F 13 Front Door Speaker LH
F 14 Front Door Speaker RH
F 15 Front Door Tweeter Speaker LH
F 16 Front Door Tweeter Speaker RH
F 17 Fuel Pump
Fuel Sender

H13 High Mounted Stop Light
H20 Height Control Sensor

J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector

L 1 License Plate Light LH
L 2 License Plate Light RH
L 3 Luggage Compartment Light
L 4 Luggage Compartment Light SW

M 1 Moon Roof Control Relay and Motor
M 2 Moon Roof Control SW
Personal Light