
(Cont. next page)

Engine Stop System (1BZ–FPE)

∗1 : Before Jul. 2017 Production
∗45 : From Jul. 2017 Production until Jul. 2018 Production
∗46 : Before Aug. 2019 Production
∗47 : From Aug. 2019 Production
∗48 : From Jul. 2018 Production until Aug. 2019 Production

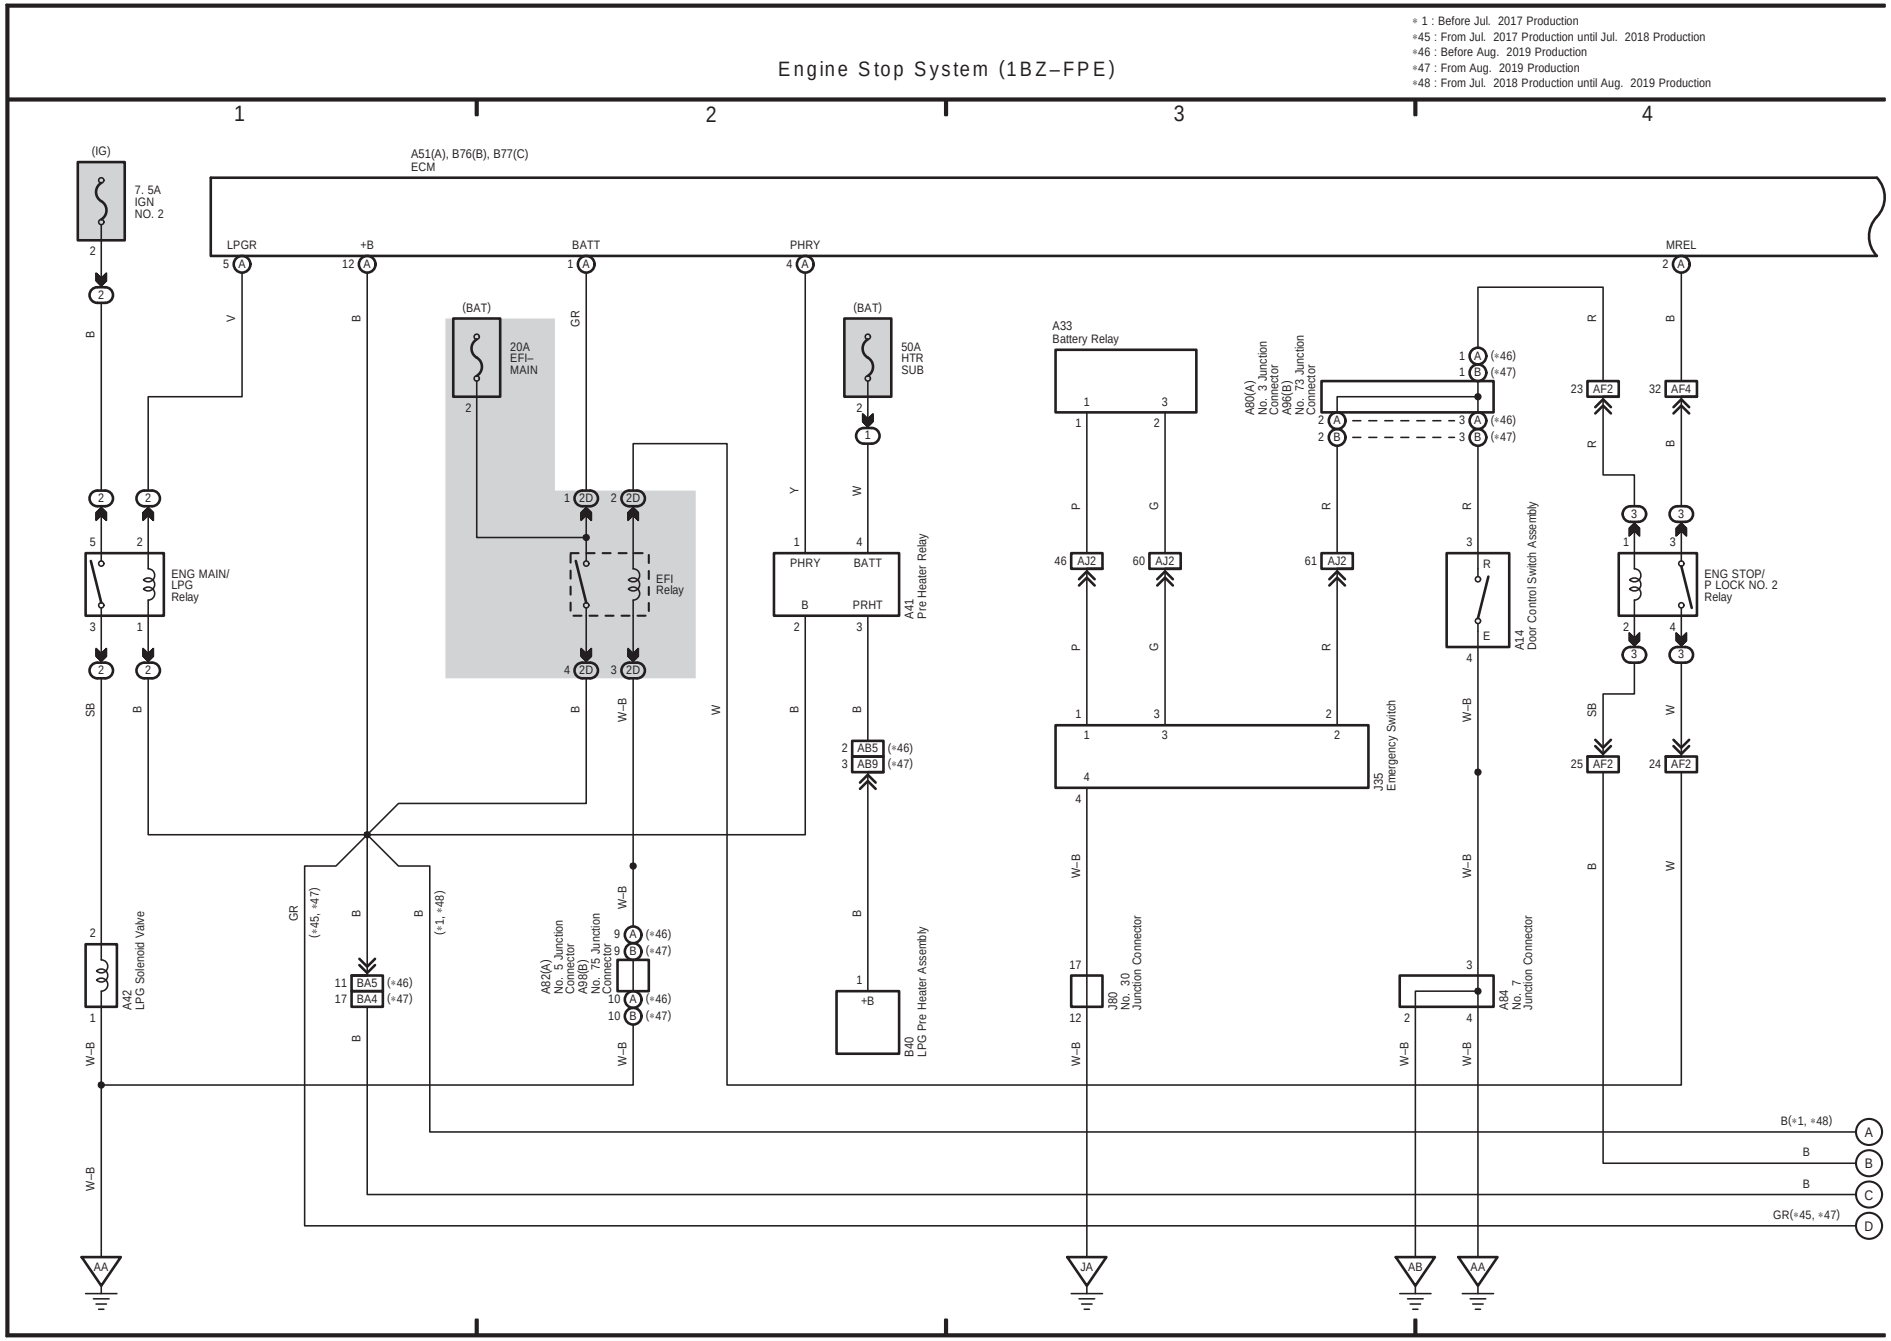


(Cont. next page)

Ignition (1BZ–FPE)


Engine Control (1BZ–FPE)

5 6 7 8

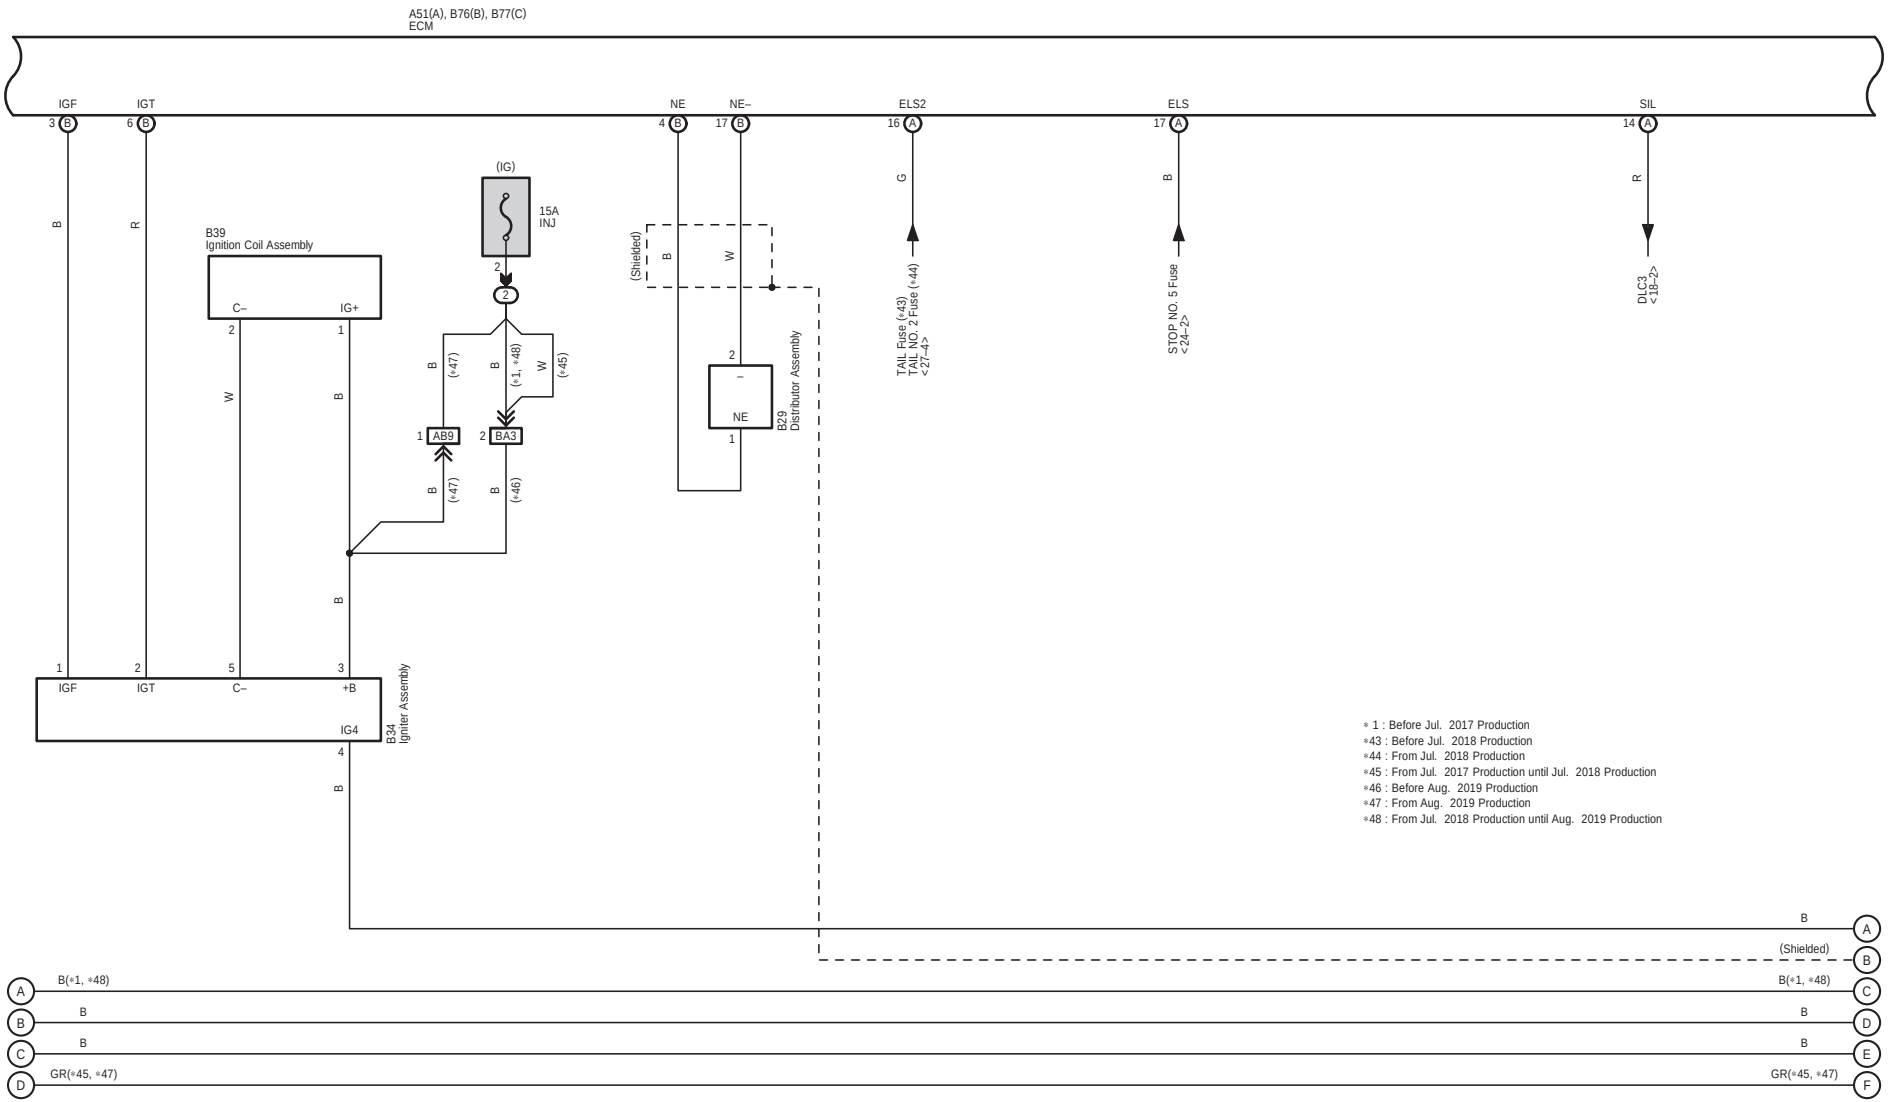

(Cont. next page)


Engine Control (1BZ–FPE)

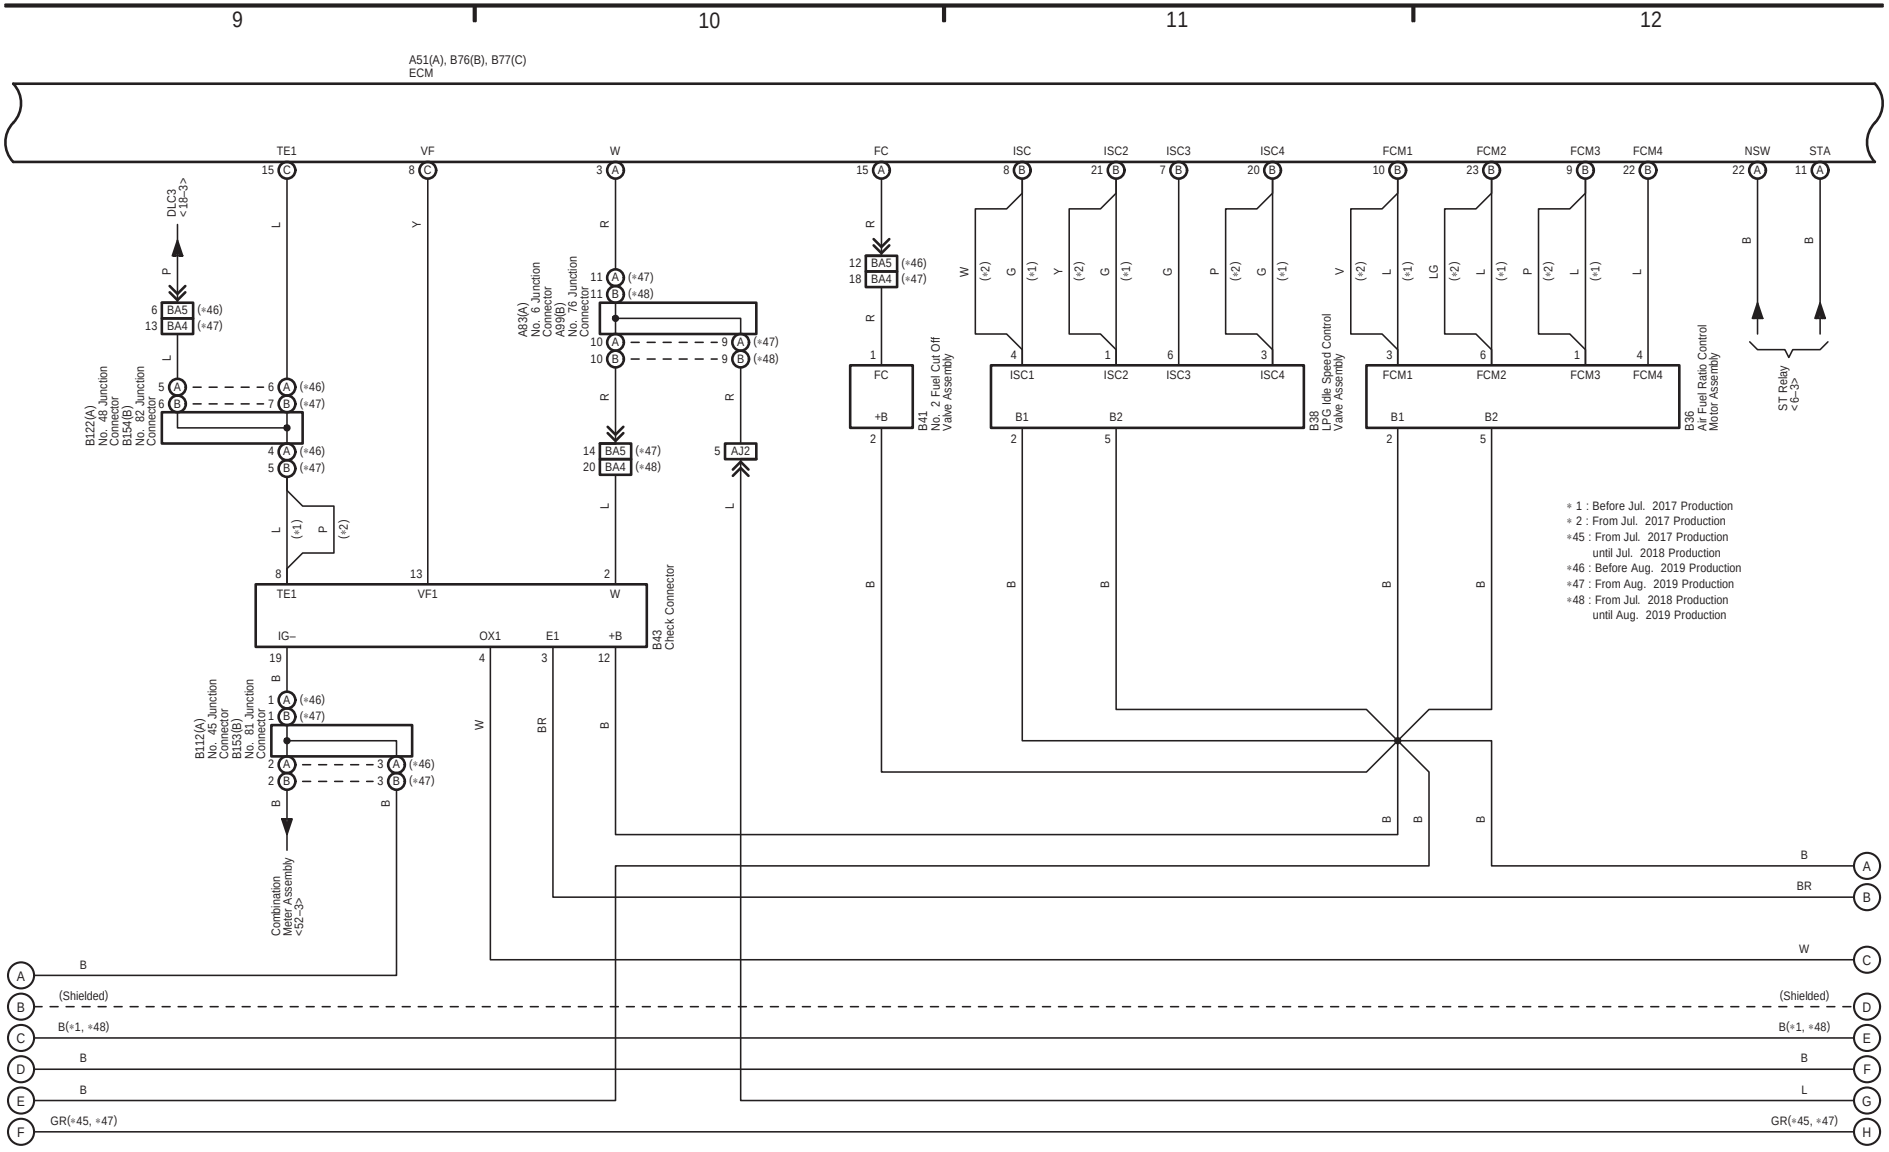

(Cont. next page)

∗1 : Before Jul. 2017 Production
∗45 : From Jul. 2017 Production until Jul. 2018 Production
∗46 : Before Aug. 2019 Production
∗47 : From Aug. 2019 Production
∗48 : From Jul. 2018 Production until Aug. 2019 Production


Engine Control (1BZ–FPE)

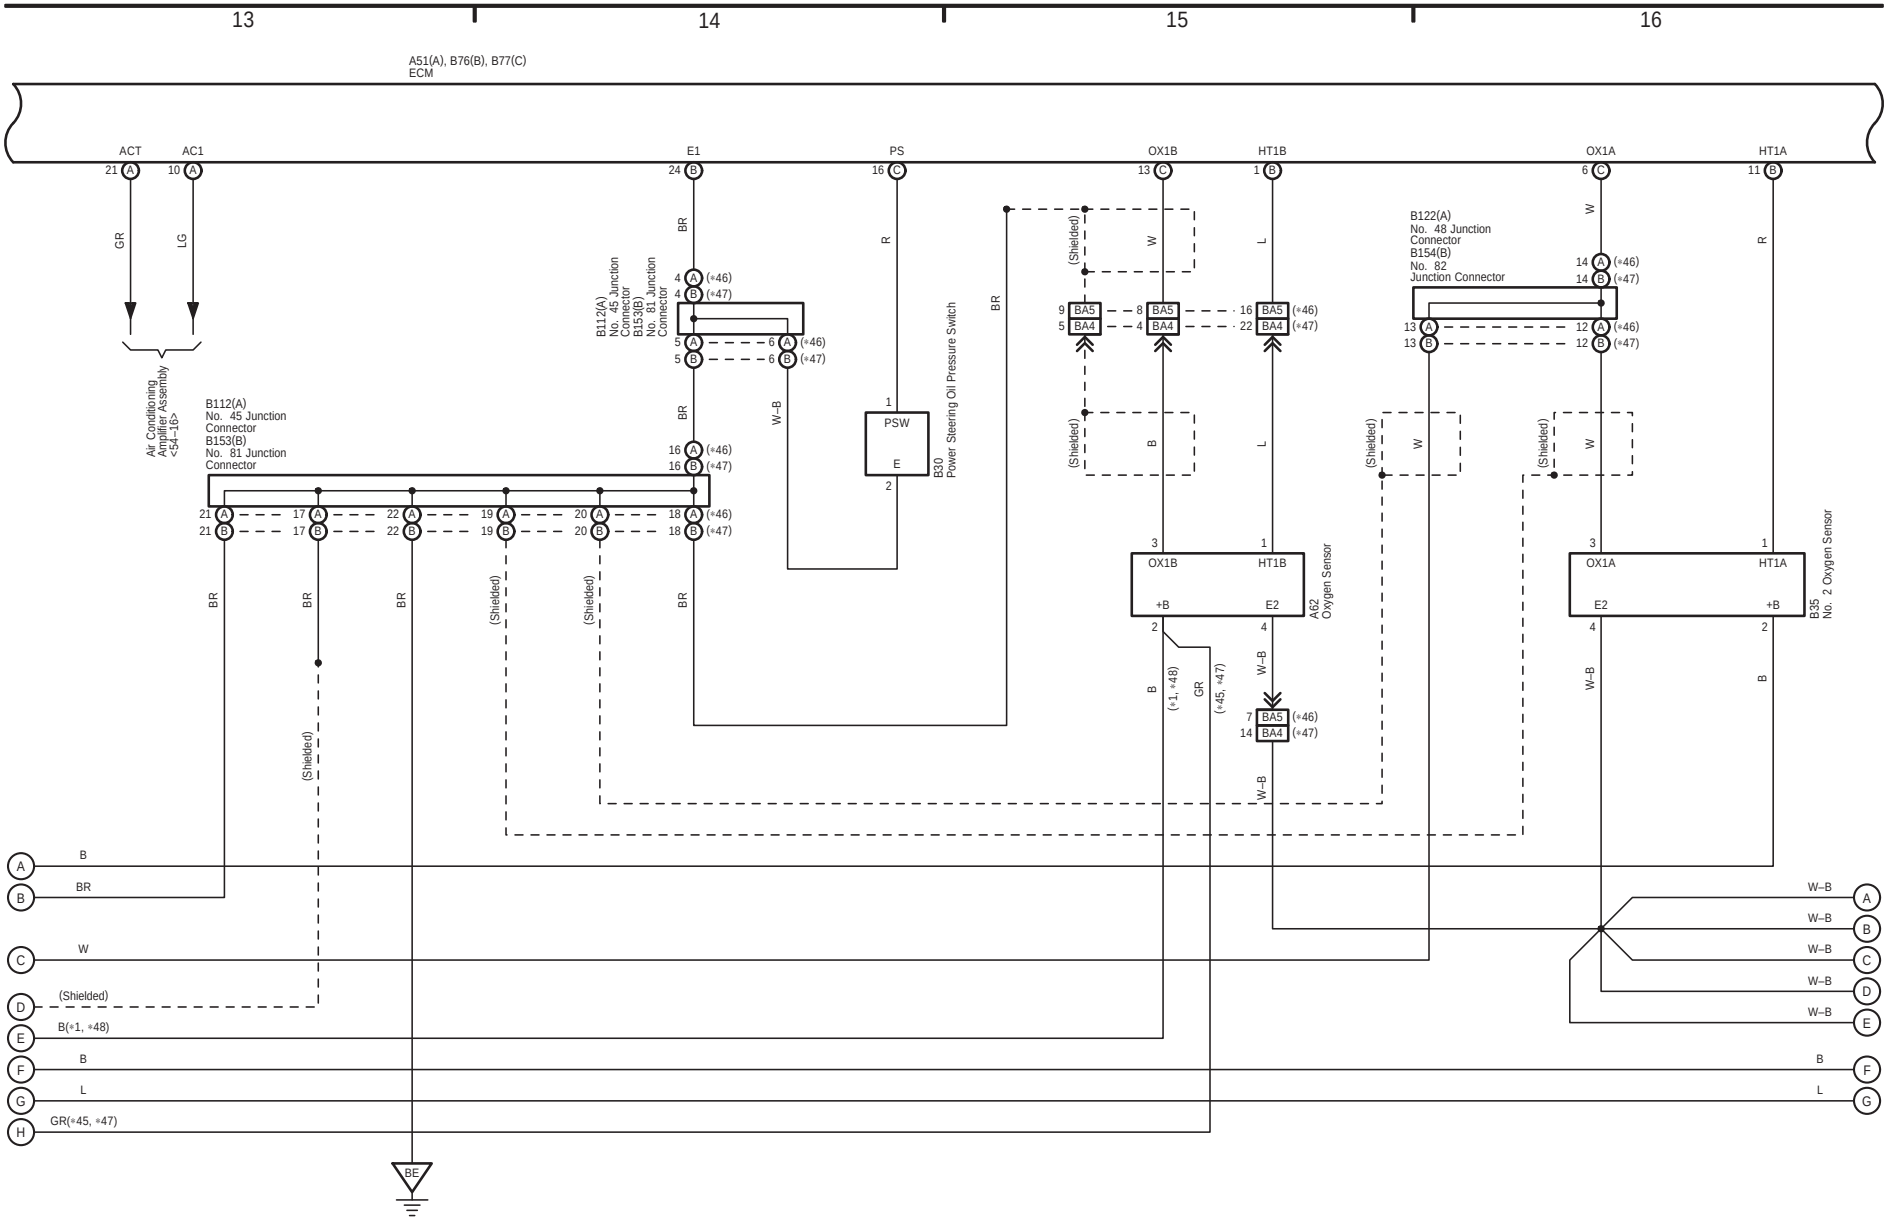


(Cont. next page)

Engine Control (1BZ–FPE)

*46 : Before Aug. 2019 Production
*47 : From Aug. 2019 Production

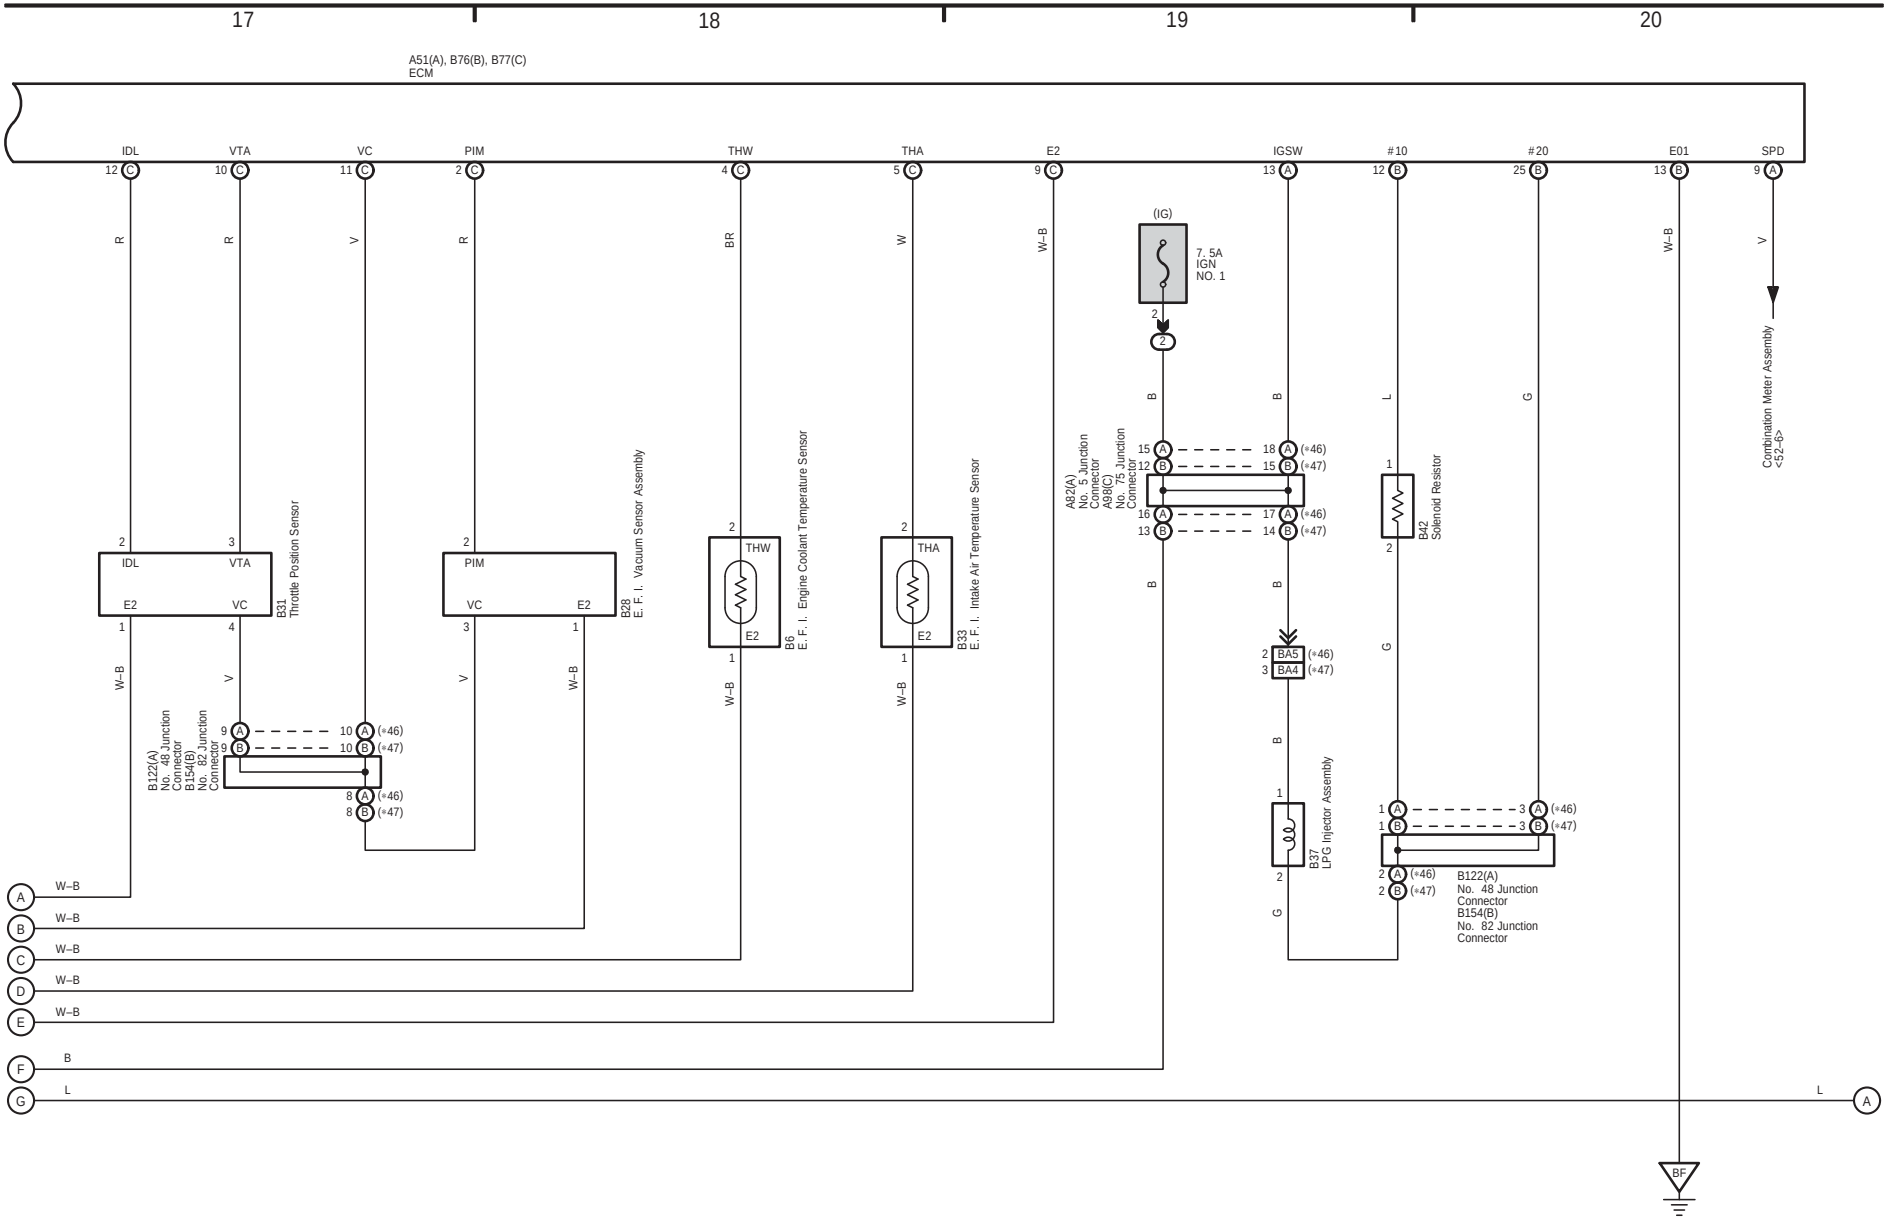

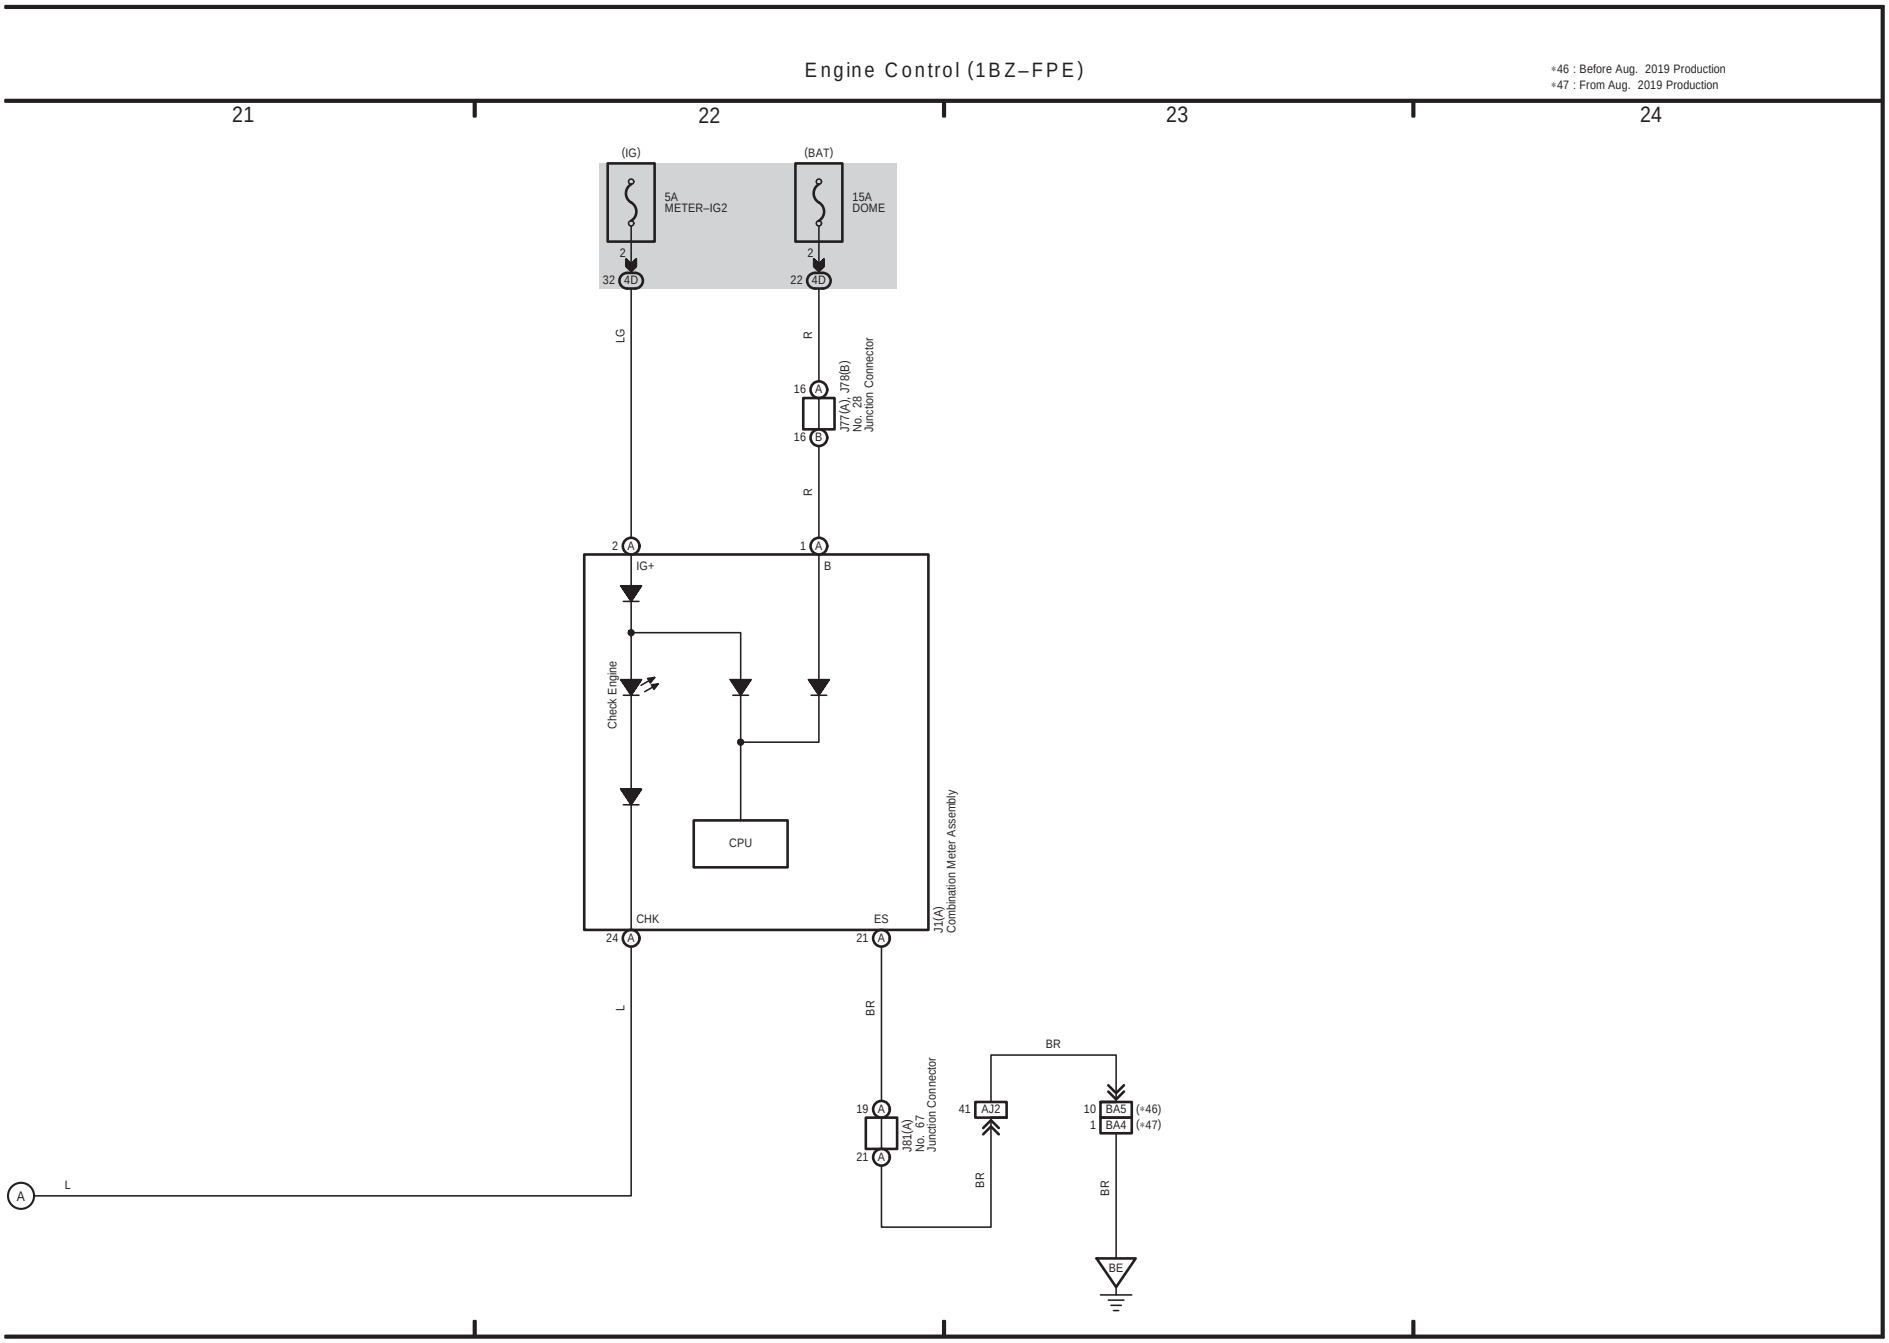
Engine Control (1BZ–FPE)
*46 : Before Aug. 2019 Production
*47 : From Aug. 2019 Production
21
22
23
24
(IG)
(BAT)
5A
METER–IG2
15A
DOME
2
32 4D
22 4D
LG
R
16 A
16 B
J77(A), J78(B)
No. 28
Junction Connector
2 A
1 A
IG+
B
Check Engine
CPU
CHK
ES
24 A
21 A
J1(A)
Combination Meter Assembly
L
BR
19 A
21 A
J81(A)
No. 67
Junction Connector
41 AJ2
10 BA5 (*46)
1 BA4 (*47)
BE
A