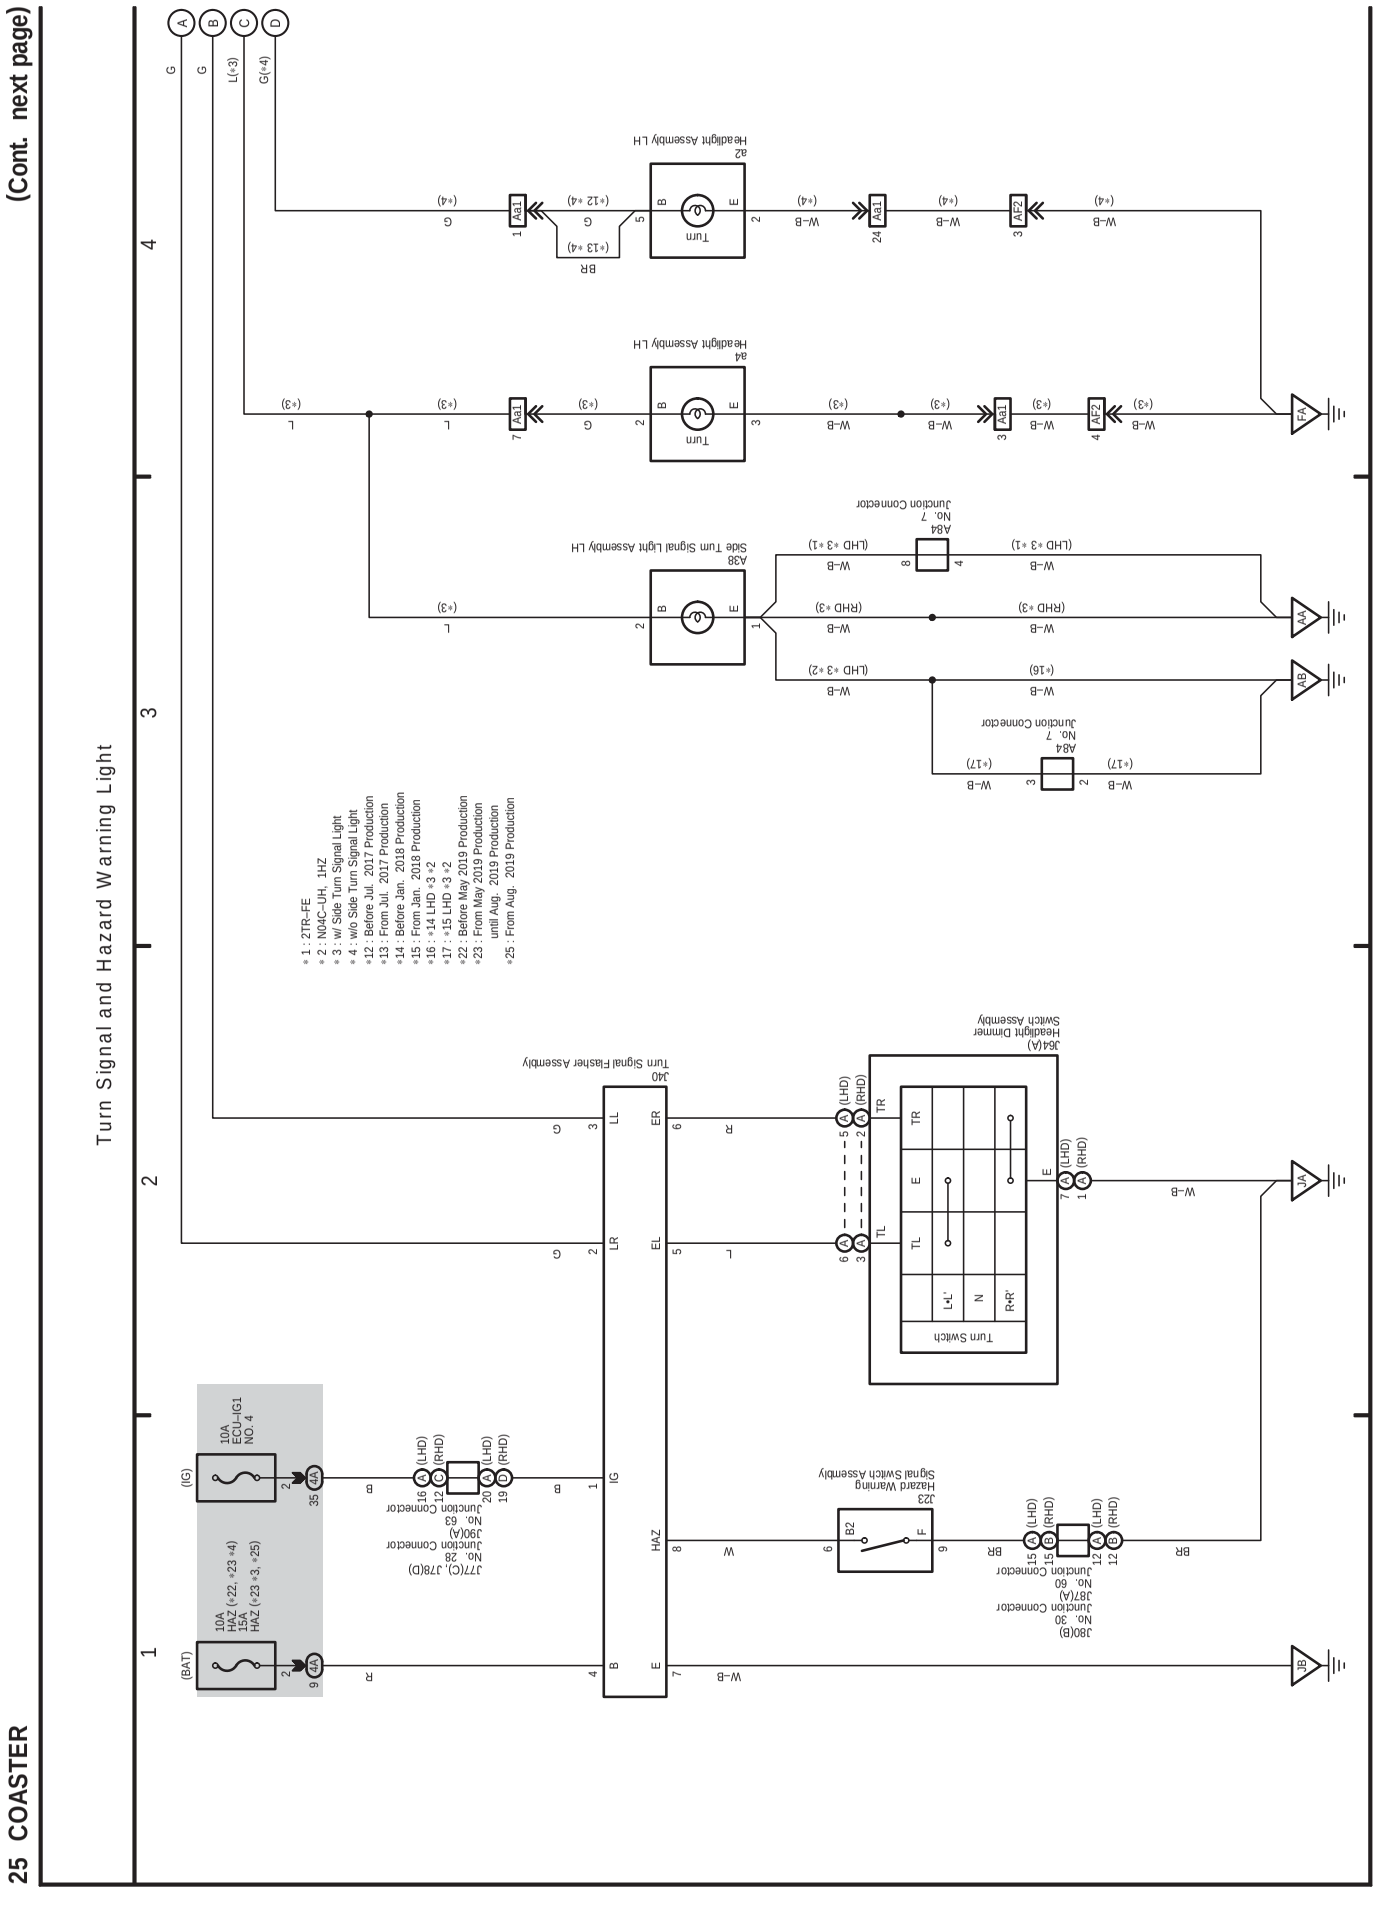
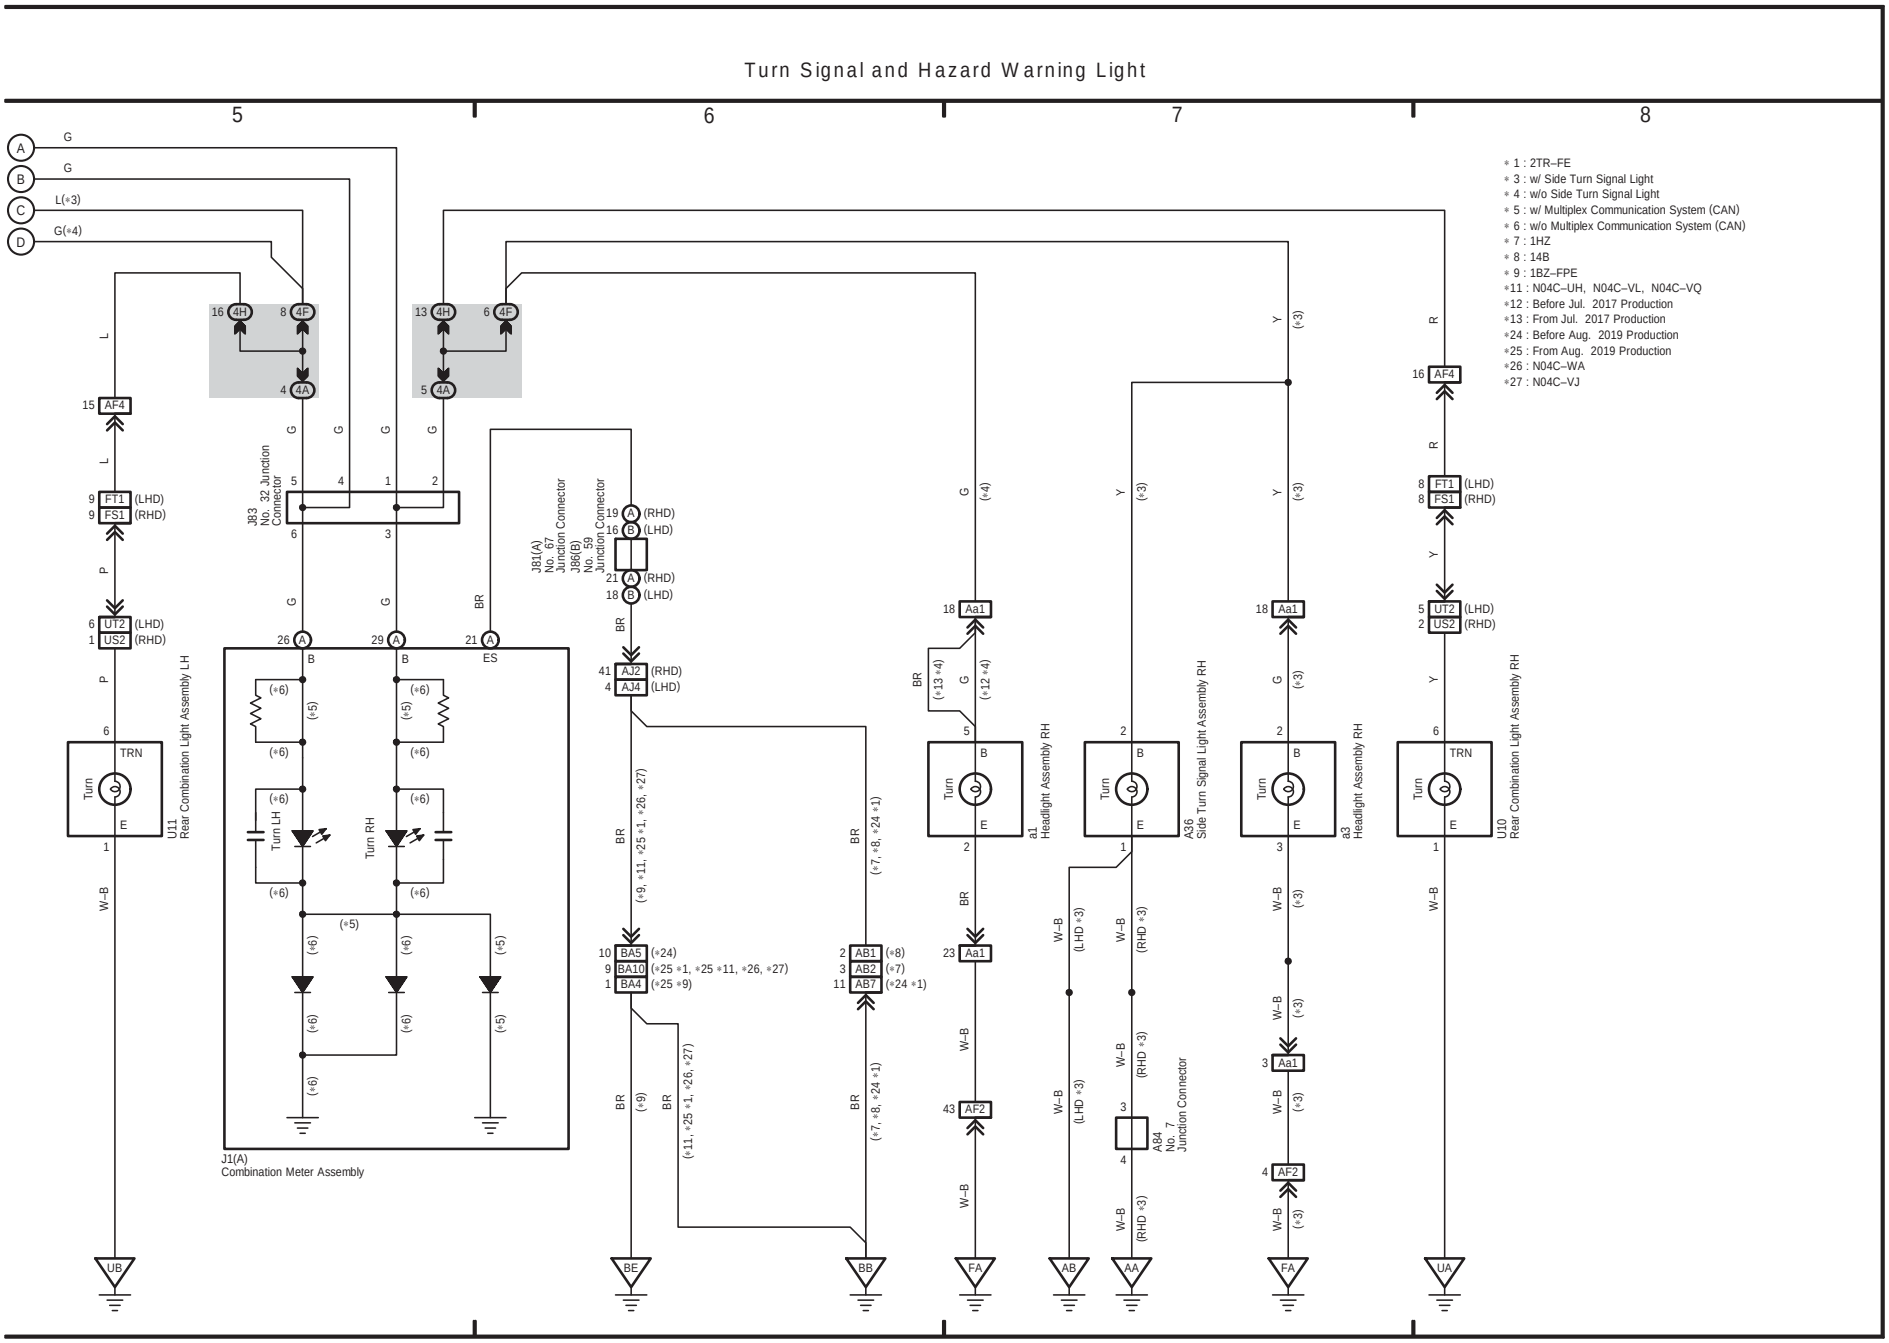

(Cont. next page)
Turn Signal and Hazard Warning Light
25 COASTER
1 2 3 4
A B C D
G G L(*3) G(*4)
Headlight Assembly LH
a2
Turn
Aa1 AF2
BR
Headlight Assembly LH
a4
Turn
Aa1 AF2
FA
Side Turn Signal Light Assembly LH
A38
AA
AB
Junction Connector
No. 7
AB4
Junction Connector
No. 7
AB4
* 1 : 2TR–FE
* 2 : N04C–UH, 1HZ
* 3 : w/ Side Turn Signal Light
* 4 : w/o Side Turn Signal Light
*12 : Before Jul. 2017 Production
*13 : From Jul. 2017 Production
*14 : Before Jan. 2018 Production
*15 : From Jan. 2018 Production
*16 : *14 LHD *3 *2
*17 : *15 LHD *3 *2
*22 : Before May 2019 Production
*23 : From May 2019 Production
until Aug. 2019 Production
*25 : From Aug. 2019 Production
Turn Signal Flasher Assembly
J40
LL ER LR EL IG HAZ
Headlight Dimmer Switch Assembly
J64(A)
Turn Switch
TR TL E L N R
JA
JB
10A ECU–IG1 NO. 4
10A HAZ (*22, *23 *4) 15A HAZ (*23 *3, *25)
(IG) (BAT)
Junction Connector
No. 63
J90(A)
Junction Connector
No. 28
J77(C), J78(D)
Hazard Warning Signal Switch Assembly
J23
B2 F
Junction Connector
No. 30
J80(B)
Junction Connector
No. 60
J87(A)


Turn Signal and Hazard Warning Light
5
6
7
8
∗ 1 : 2TR–FE
∗ 3 : w/ Side Turn Signal Light
∗ 4 : w/o Side Turn Signal Light
∗ 5 : w/ Multiplex Communication System (CAN)
∗ 6 : w/o Multiplex Communication System (CAN)
∗ 7 : 1HZ
∗ 8 : 14B
∗ 9 : 1BZ–FPE
∗11 : N04C–UH, N04C–VL, N04C–VQ
∗12 : Before Jul. 2017 Production
∗13 : From Jul. 2017 Production
∗24 : Before Aug. 2019 Production
∗25 : From Aug. 2019 Production
∗26 : N04C–WA
∗27 : N04C–VJ
J1(A) Combination Meter Assembly
J3 No. 32 Junction Connector
J81(A) No. 67 Junction Connector
J86(B) No. 59 Junction Connector
U11 Rear Combination Light Assembly LH
U10 Rear Combination Light Assembly RH
a1 Headlight Assembly RH
a3 Headlight Assembly RH
A36 Side Turn Signal Light Assembly RH
A84 No. 7 Junction Connector
Turn LH
Turn RH
Turn
TRN
(LHD)
(RHD)
UB
BE
BB
FA
AB
AA
UA