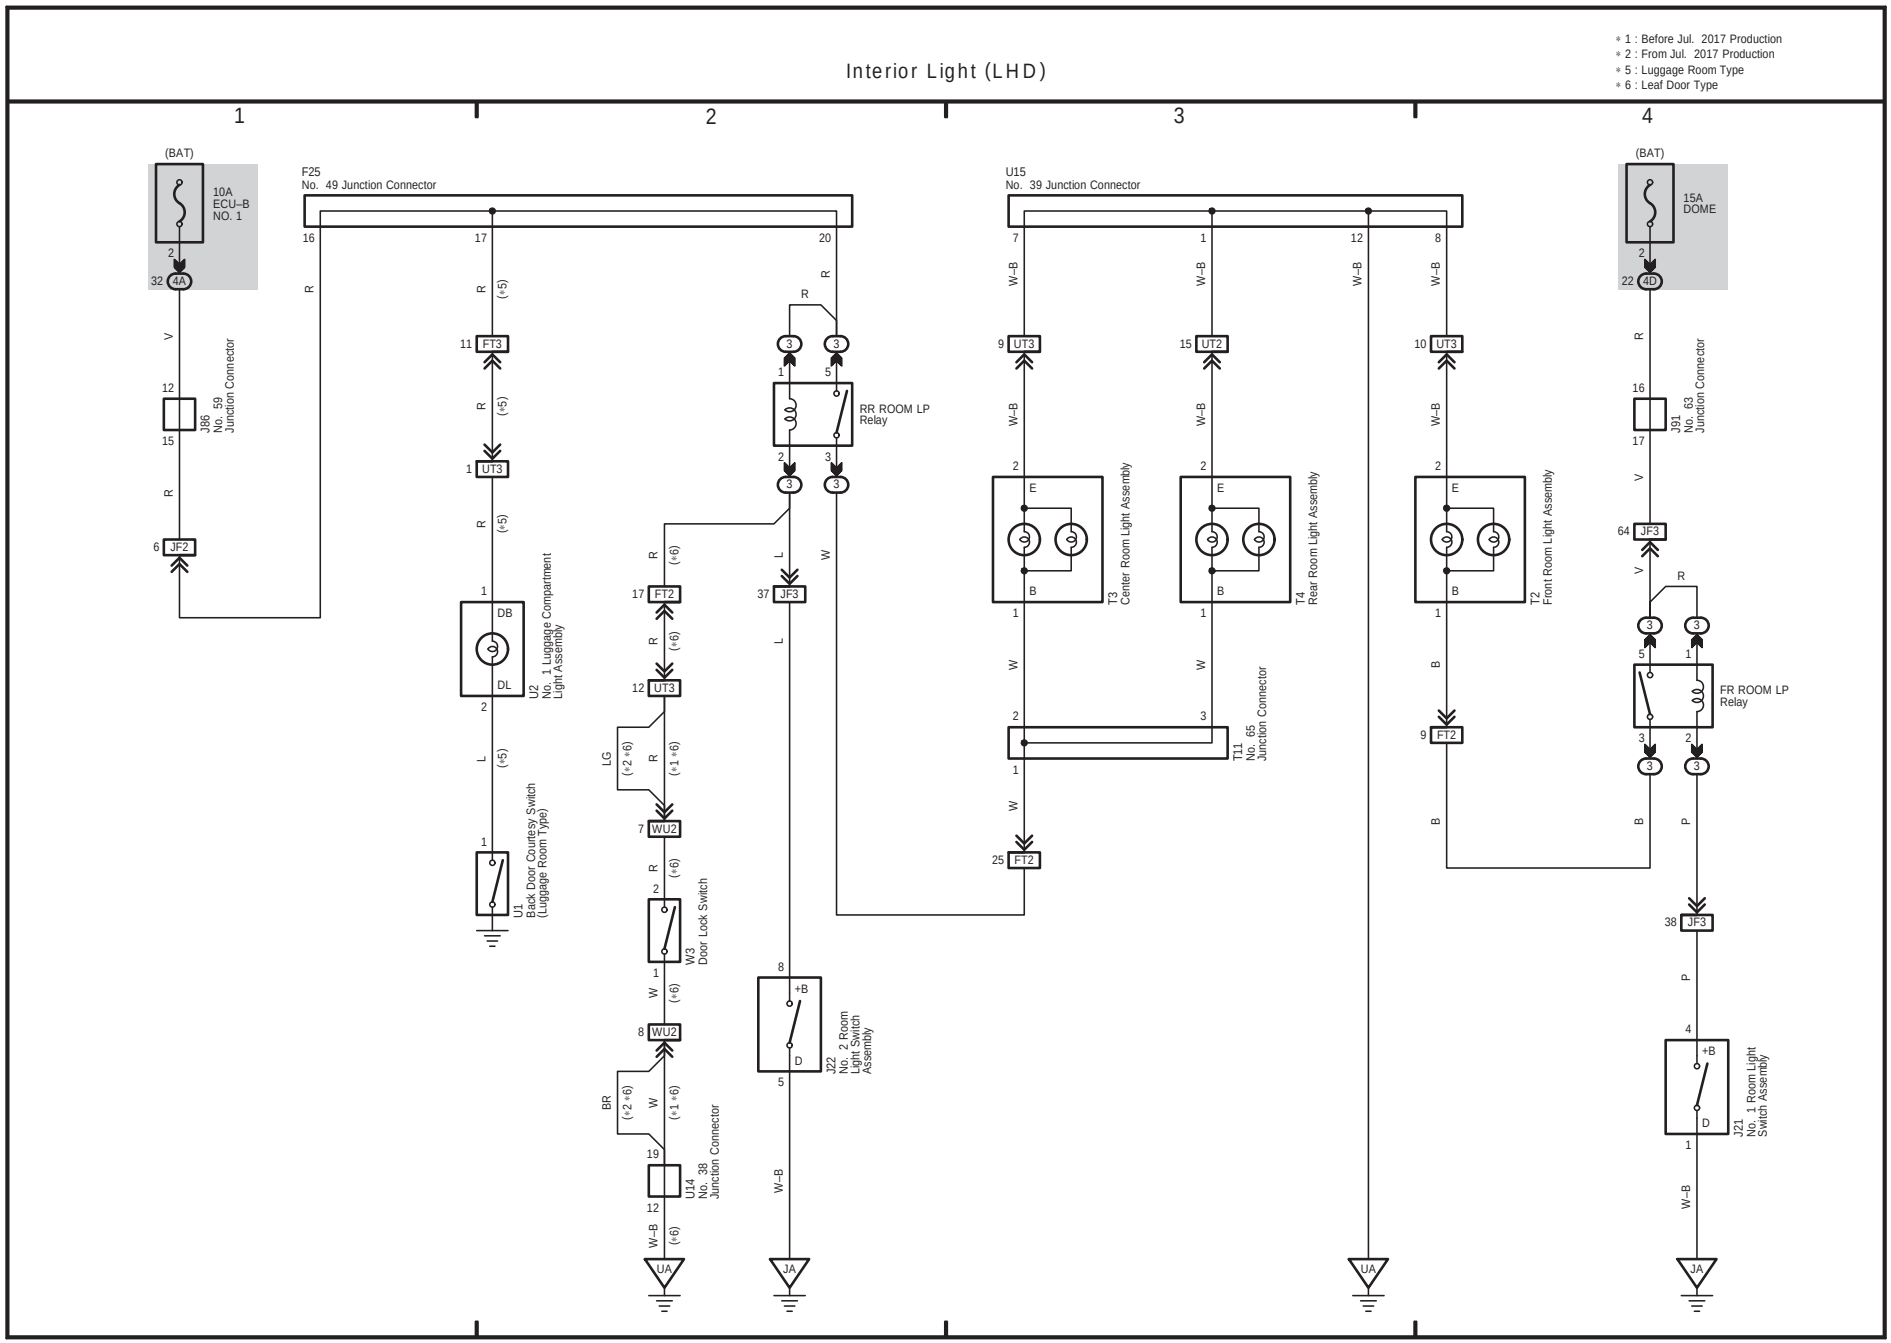

Interior Light (LHD)
* 1 : Before Jul. 2017 Production
* 2 : From Jul. 2017 Production
* 5 : Luggage Room Type
* 6 : Leaf Door Type
1
2
3
4
(BAT)
10A ECU–B NO. 1
F25 No. 49 Junction Connector
U15 No. 39 Junction Connector
(BAT)
15A DOME
RR ROOM LP Relay
FR ROOM LP Relay
J86 No. 59 Junction Connector
U2 No. 1 Luggage Compartment Light Assembly
U1 Back Door Courtesy Switch (Luggage Room Type)
W3 Door Lock Switch
U14 No. 38 Junction Connector
J22 No. 2 Room Light Switch Assembly
T3 Center Room Light Assembly
T4 Rear Room Light Assembly
T2 Front Room Light Assembly
T11 No. 65 Junction Connector
J91 No. 63 Junction Connector
J21 No. 1 Room Light Switch Assembly