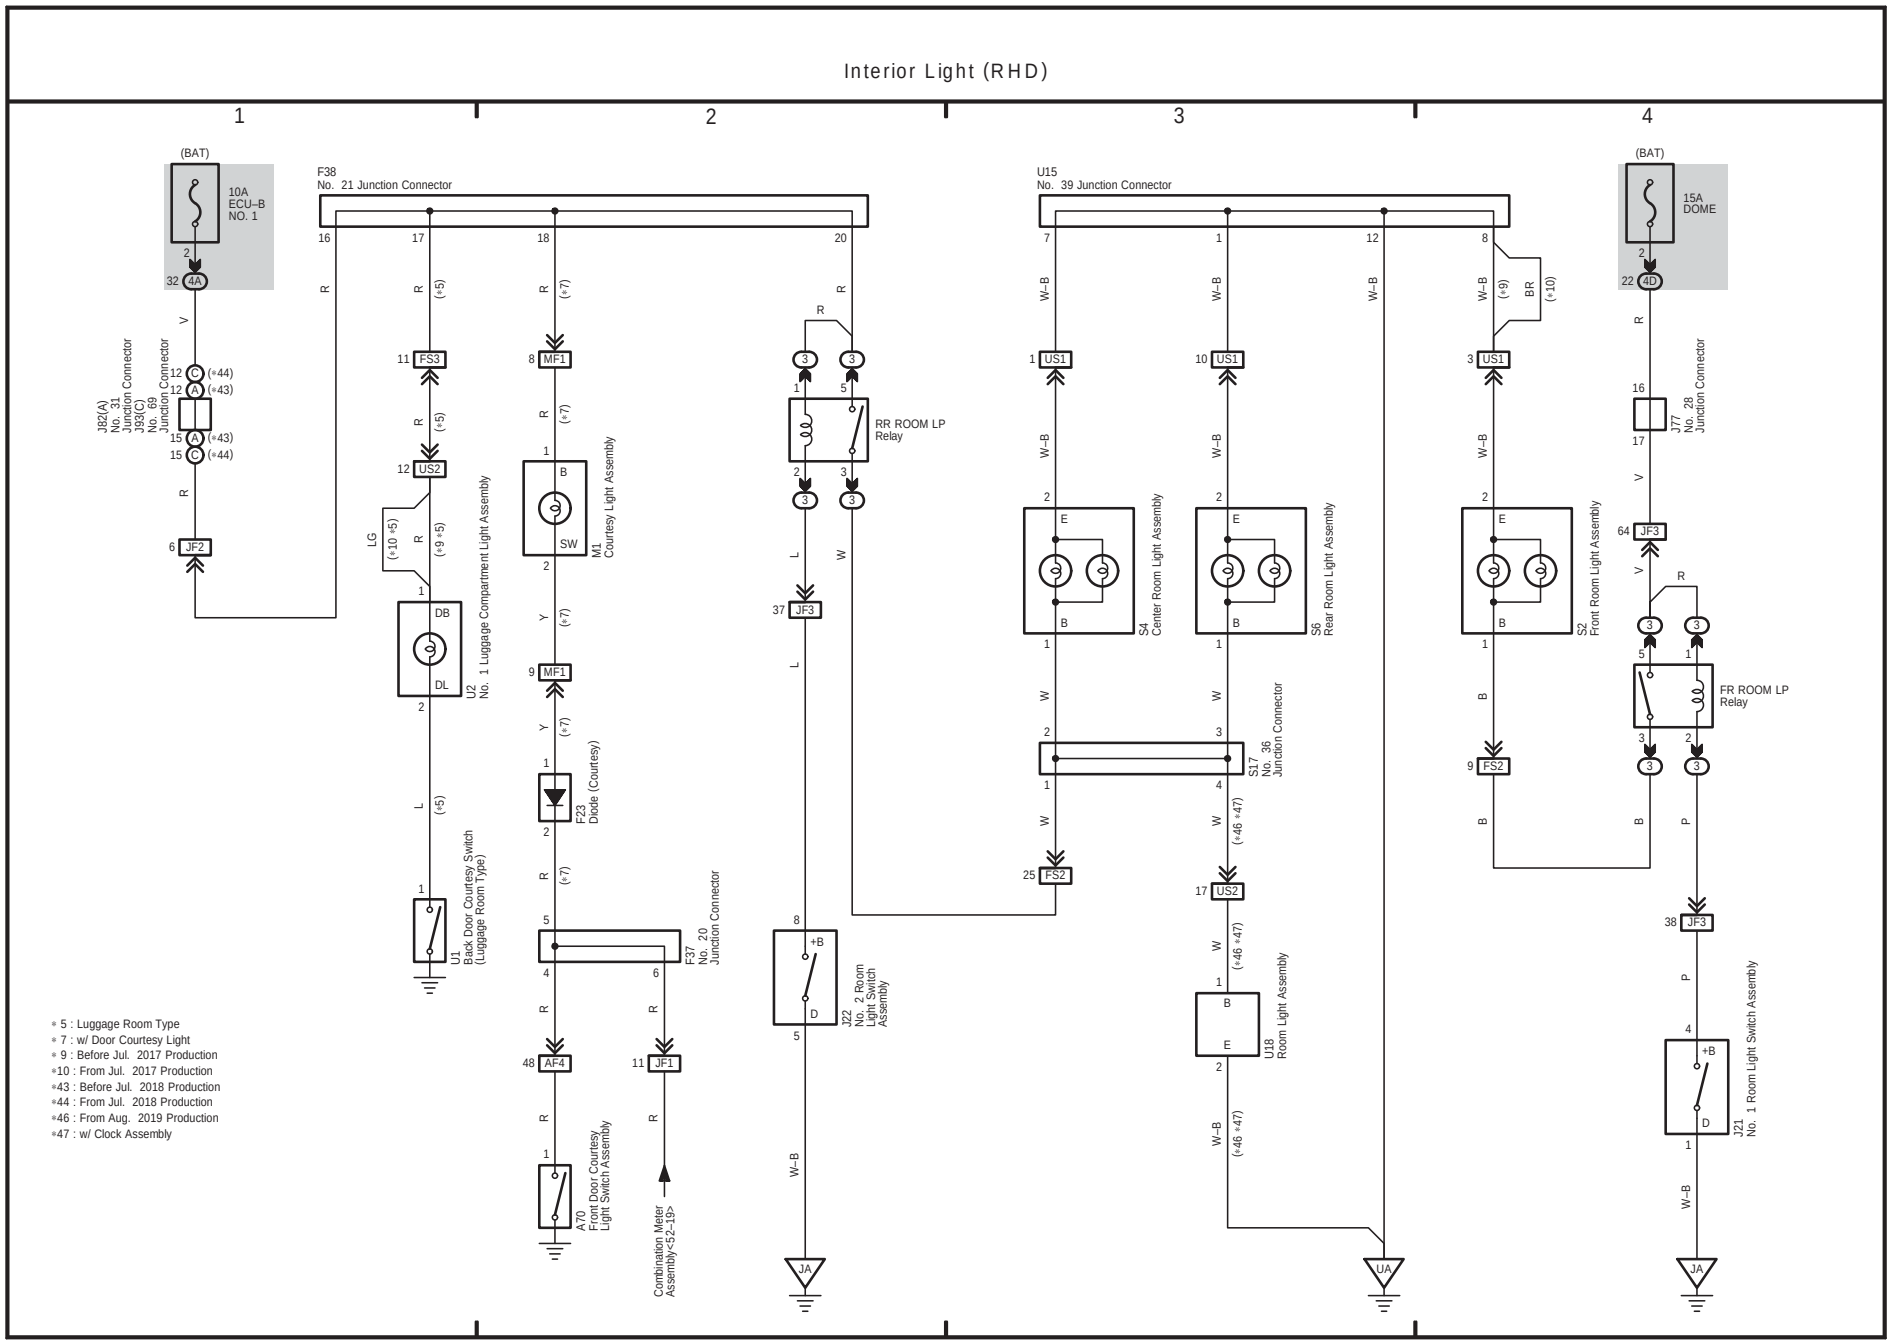

Interior Light (RHD)
1
2
3
4
(BAT)
10A ECU–B NO. 1
F38 No. 21 Junction Connector
U15 No. 39 Junction Connector
(BAT)
15A DOME
J82(A) No. 31 Junction Connector
J82(C) No. 69 Junction Connector
JF2
FS3
US2
MF1
RR ROOM LP Relay
JF3
US1
FS2
J77 No. 28 Junction Connector
FR ROOM LP Relay
LG
DB
DL
U2 No. 1 Luggage Compartment Light Assembly
U1 Back Door Courtesy Switch (Luggage Room Type)
M1 Courtesy Light Assembly
SW
F23 Diode (Courtesy)
F37 No. 20 Junction Connector
AF4
JF1
A70 Front Door Courtesy Light Switch Assembly
Combination Meter Assembly<52–19>
J22 No. 2 Room Light Switch Assembly
+B
D
S4 Center Room Light Assembly
S6 Rear Room Light Assembly
S2 Front Room Light Assembly
S17 No. 36 Junction Connector
US2
U18 Room Light Assembly
J21 No. 1 Room Light Switch Assembly
JA
UA
∗5 : Luggage Room Type
∗7 : w/ Door Courtesy Light
∗9 : Before Jul. 2017 Production
∗10 : From Jul. 2017 Production
∗43 : Before Jul. 2018 Production
∗44 : From Jul. 2018 Production
∗46 : From Aug. 2019 Production
∗47 : w/ Clock Assembly