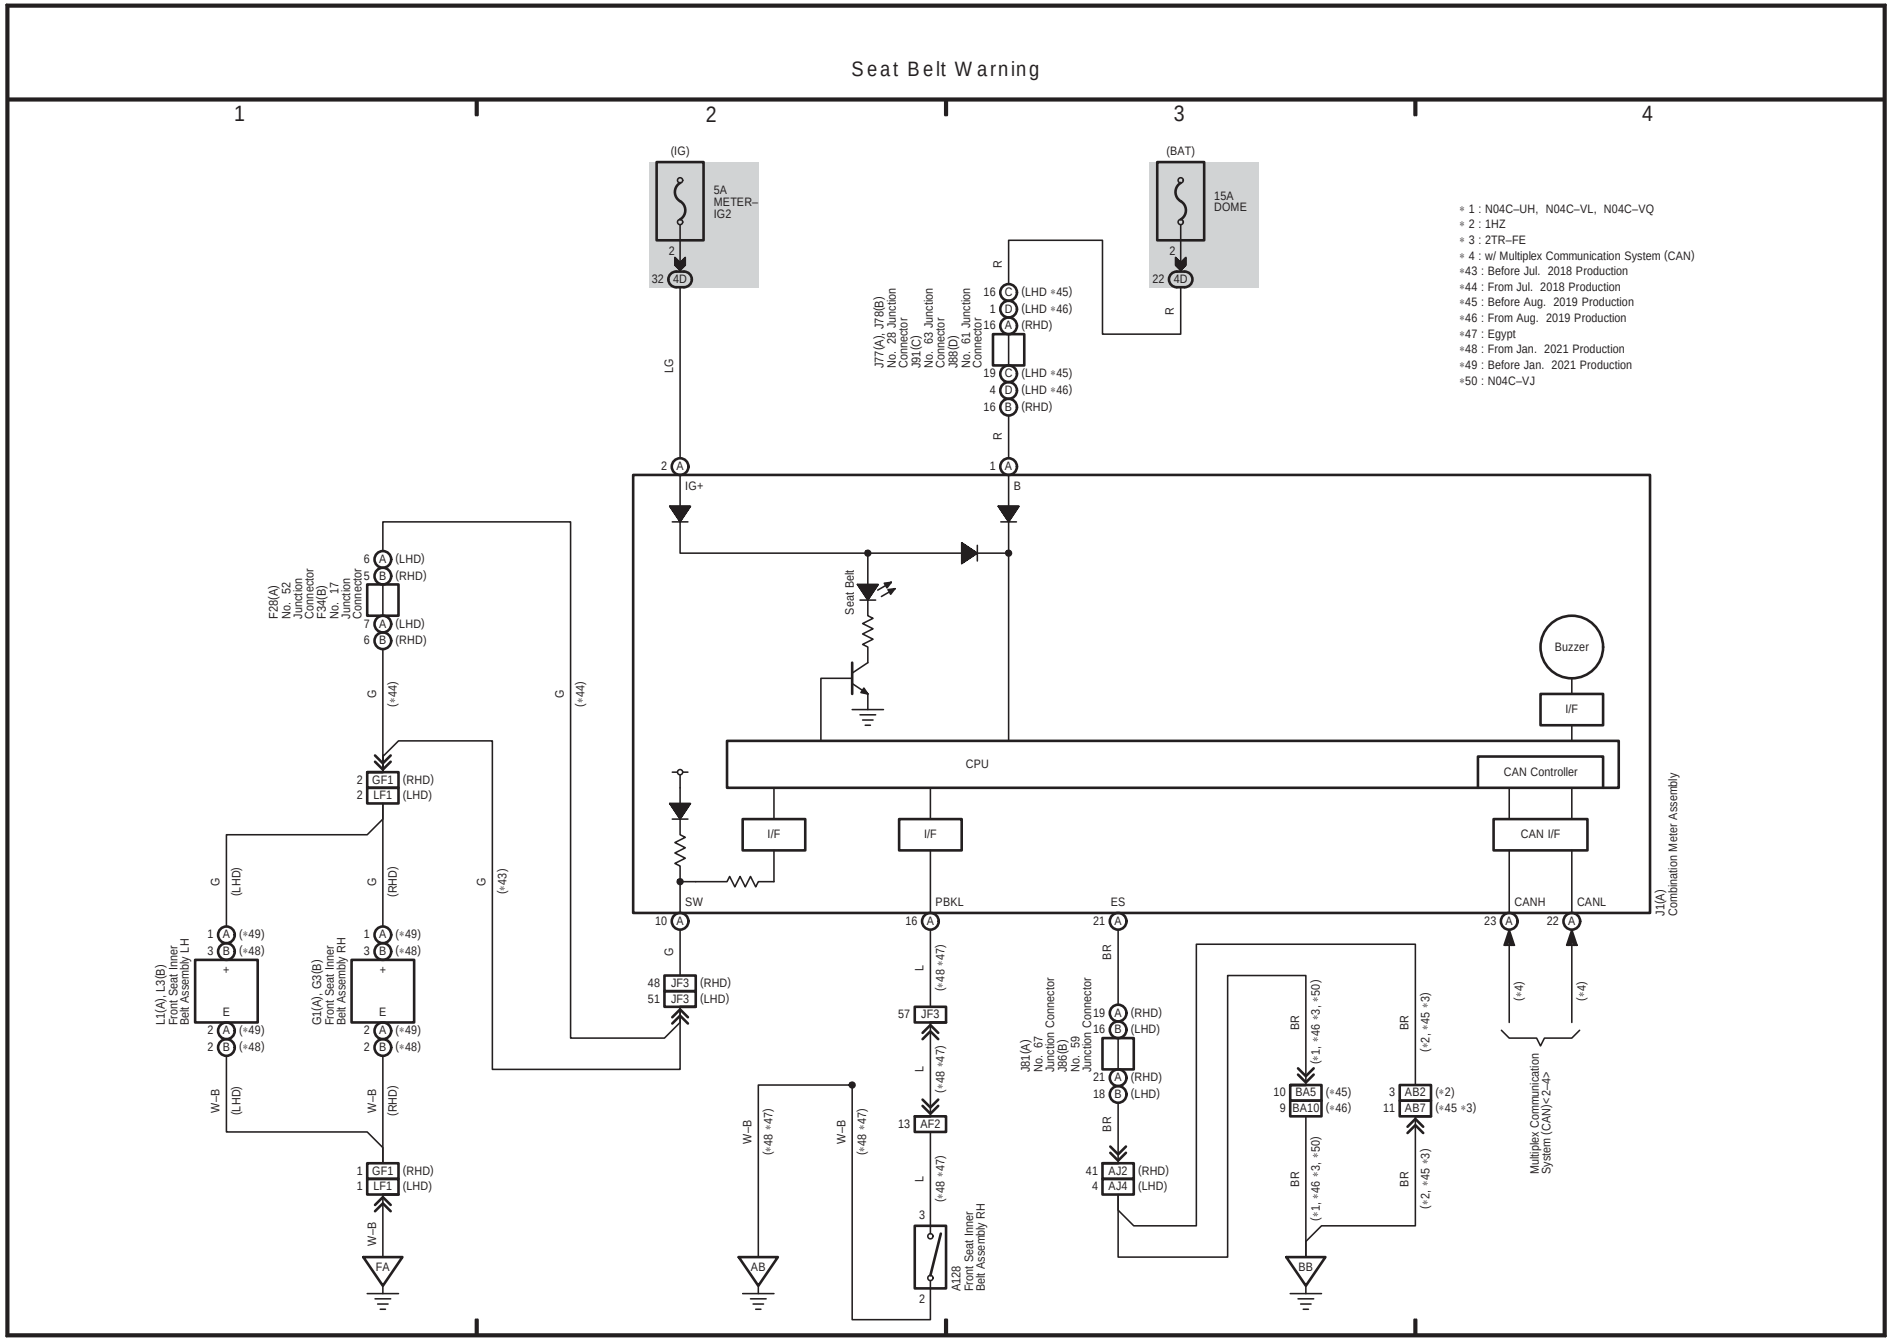

Seat Belt Warning
1
2
3
4
(IG)
5A METER–IG2
(BAT)
15A DOME
∗ 1 : N04C–UH, N04C–VL, N04C–VQ
∗ 2 : 1HZ
∗ 3 : 2TR–FE
∗ 4 : w/ Multiplex Communication System (CAN)
∗43 : Before Jul. 2018 Production
∗44 : From Jul. 2018 Production
∗45 : Before Aug. 2019 Production
∗46 : From Aug. 2019 Production
∗47 : Egypt
∗48 : From Jan. 2021 Production
∗49 : Before Jan. 2021 Production
∗50 : N04C–VJ
J77(A), J78(B) No. 28 Junction Connector J91(C) No. 63 Junction Connector J88(D) No. 61 Junction Connector
F28(A) No. 52 Junction Connector F34(B) No. 17 Junction Connector
L1(A), L3(B) Front Seat Inner Belt Assembly LH
G1(A), G3(B) Front Seat Inner Belt Assembly RH
A128 Front Seat Inner Belt Assembly RH
J61(A) No. 67 Junction Connector J86(B) No. 59 Junction Connector
IG+
B
SW
PBKL
ES
CANH
CANL
Seat Belt
CPU
I/F
CAN Controller
CAN I/F
Buzzer
J1(A) Combination Meter Assembly
Multiplex Communication System (CAN)<2–4>
FA
AB
BB