

(Cont. next page)

Door Lock Control (Emergency Door)

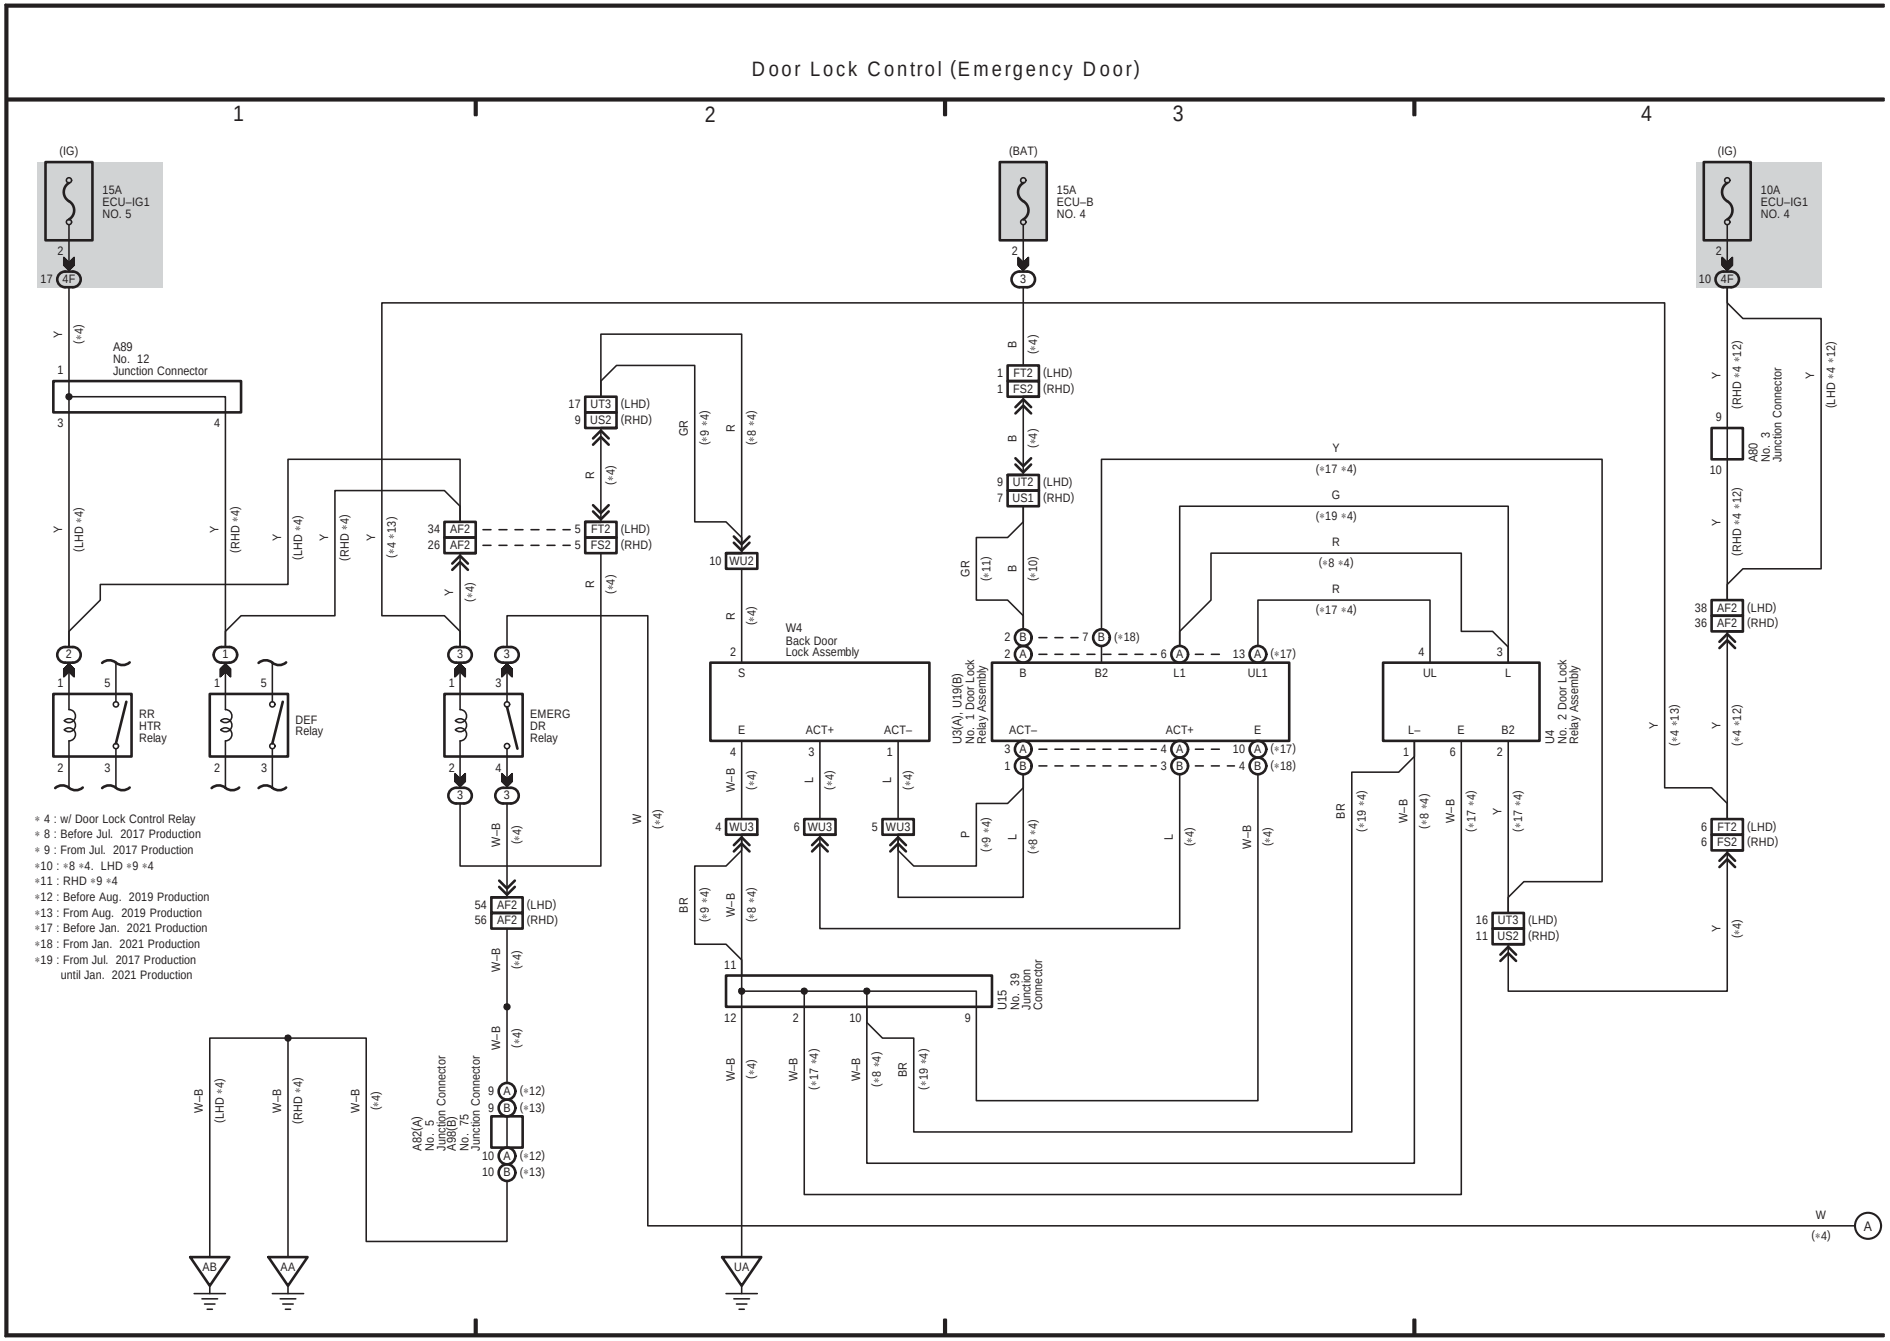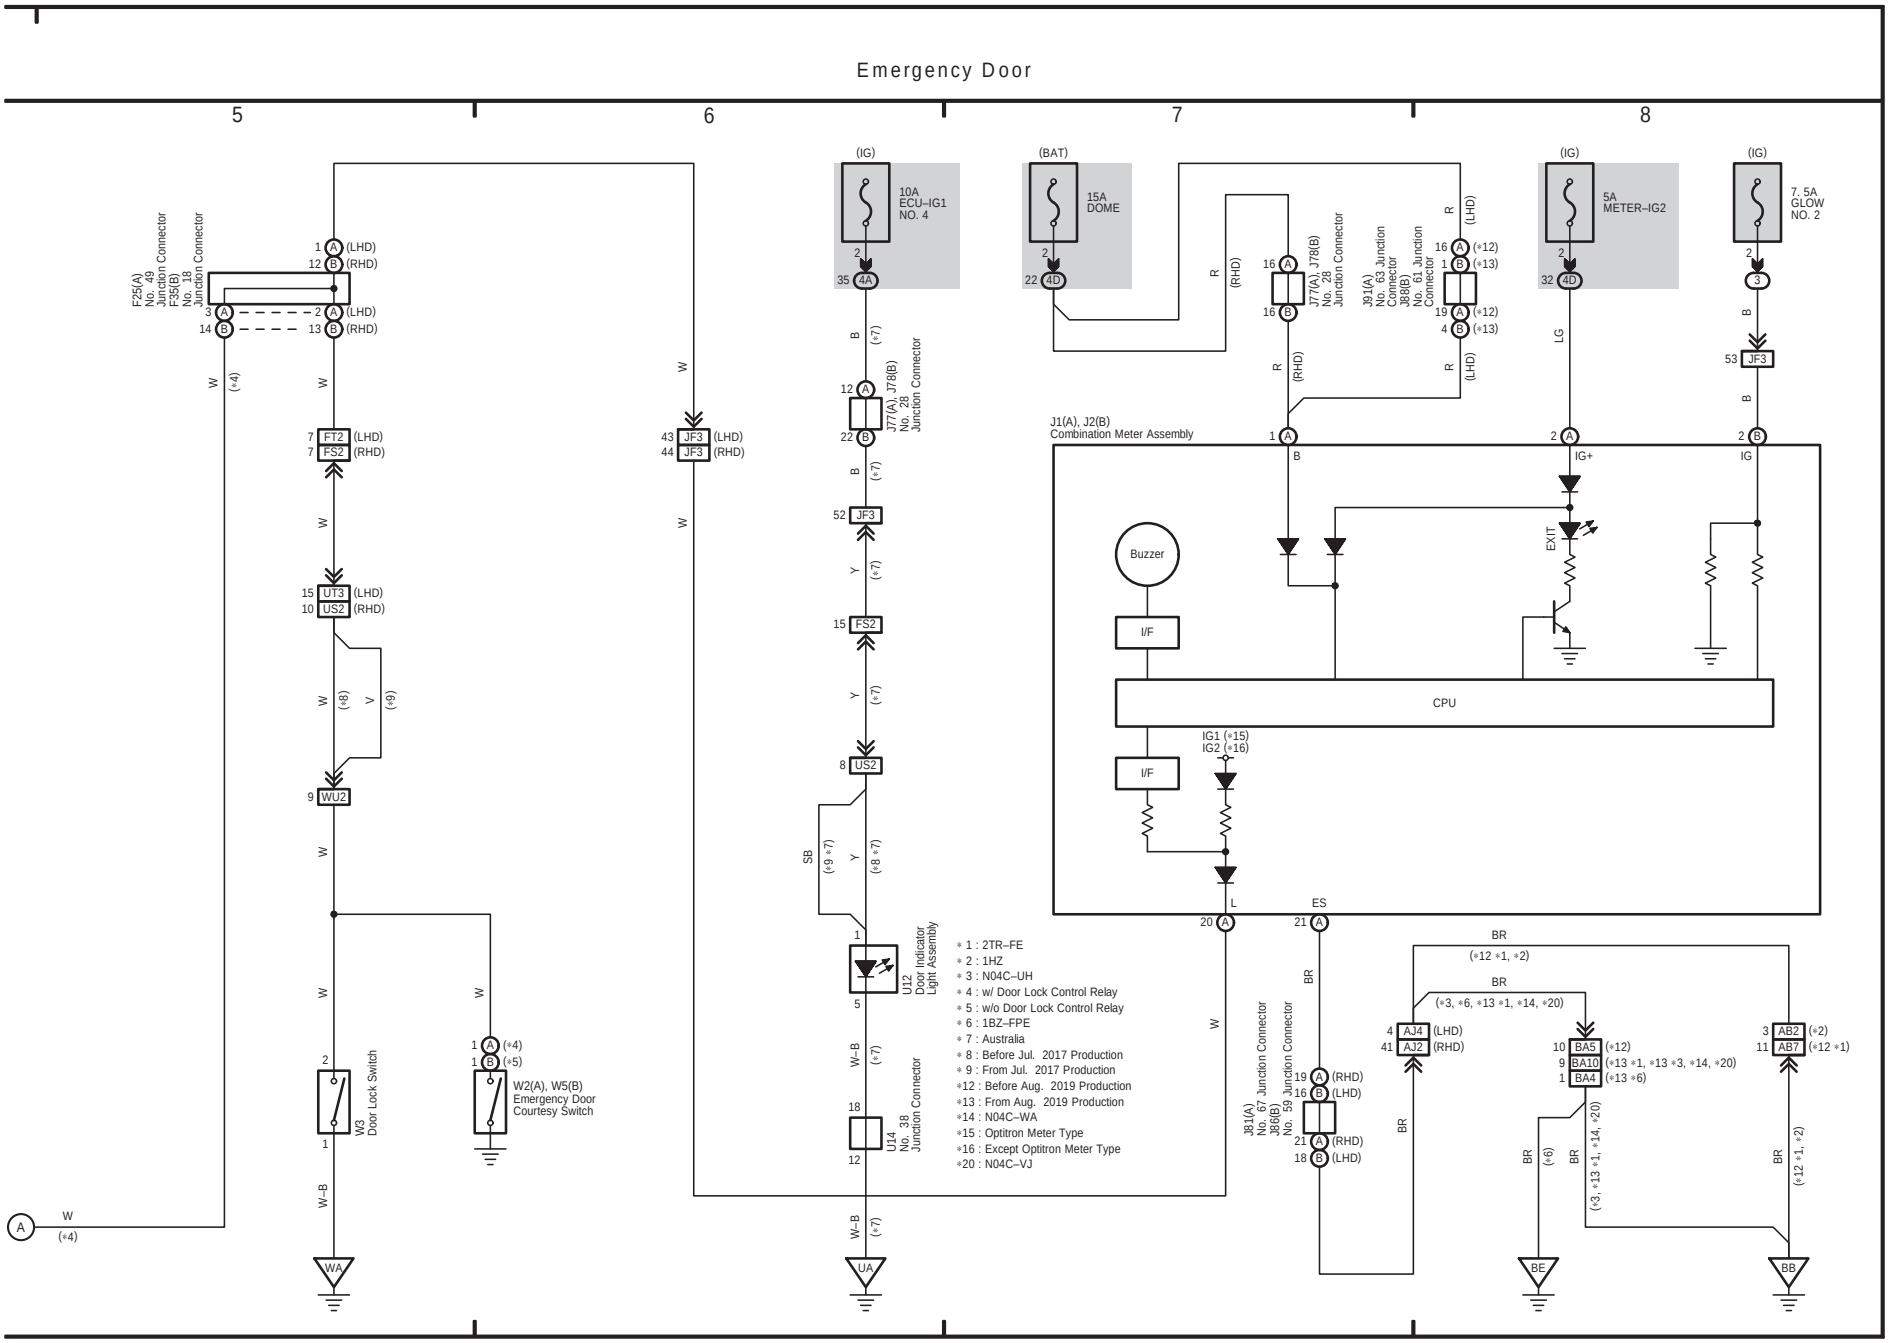


Emergency Door
5
6
7
8
(IG)
10A
ECU–IG1
NO. 4
(BAT)
15A
DOME
(IG)
5A
METER–IG2
(IG)
7. 5A
GLOW
NO. 2
F25(A)
No. 49
Junction Connector
F35(B)
No. 18
Junction Connector
J77(A), J78(B)
No. 28
Junction Connector
J91(A)
No. 63 Junction
Connector
J88(B)
No. 61 Junction
Connector
J1(A), J2(B)
Combination Meter Assembly
Buzzer
I/F
CPU
EXIT
IG+
IG
IG1 (*15)
IG2 (*16)
W2(A), W5(B)
Emergency Door
Courtesy Switch
W3
Door Lock Switch
U12
Door Indicator
Light Assembly
U14
No. 38
Junction Connector
J61(A)
No. 67 Junction Connector
J86(B)
No. 59 Junction Connector
WA
UA
BE
BB
* 1 : 2TR–FE
* 2 : 1HZ
* 3 : N04C–UH
* 4 : w/ Door Lock Control Relay
* 5 : w/o Door Lock Control Relay
* 6 : 1BZ–FPE
* 7 : Australia
* 8 : Before Jul. 2017 Production
* 9 : From Jul. 2017 Production
*12 : Before Aug. 2019 Production
*13 : From Aug. 2019 Production
*14 : N04C–WA
*15 : Optitron Meter Type
*16 : Except Optitron Meter Type
*20 : N04C–VJ