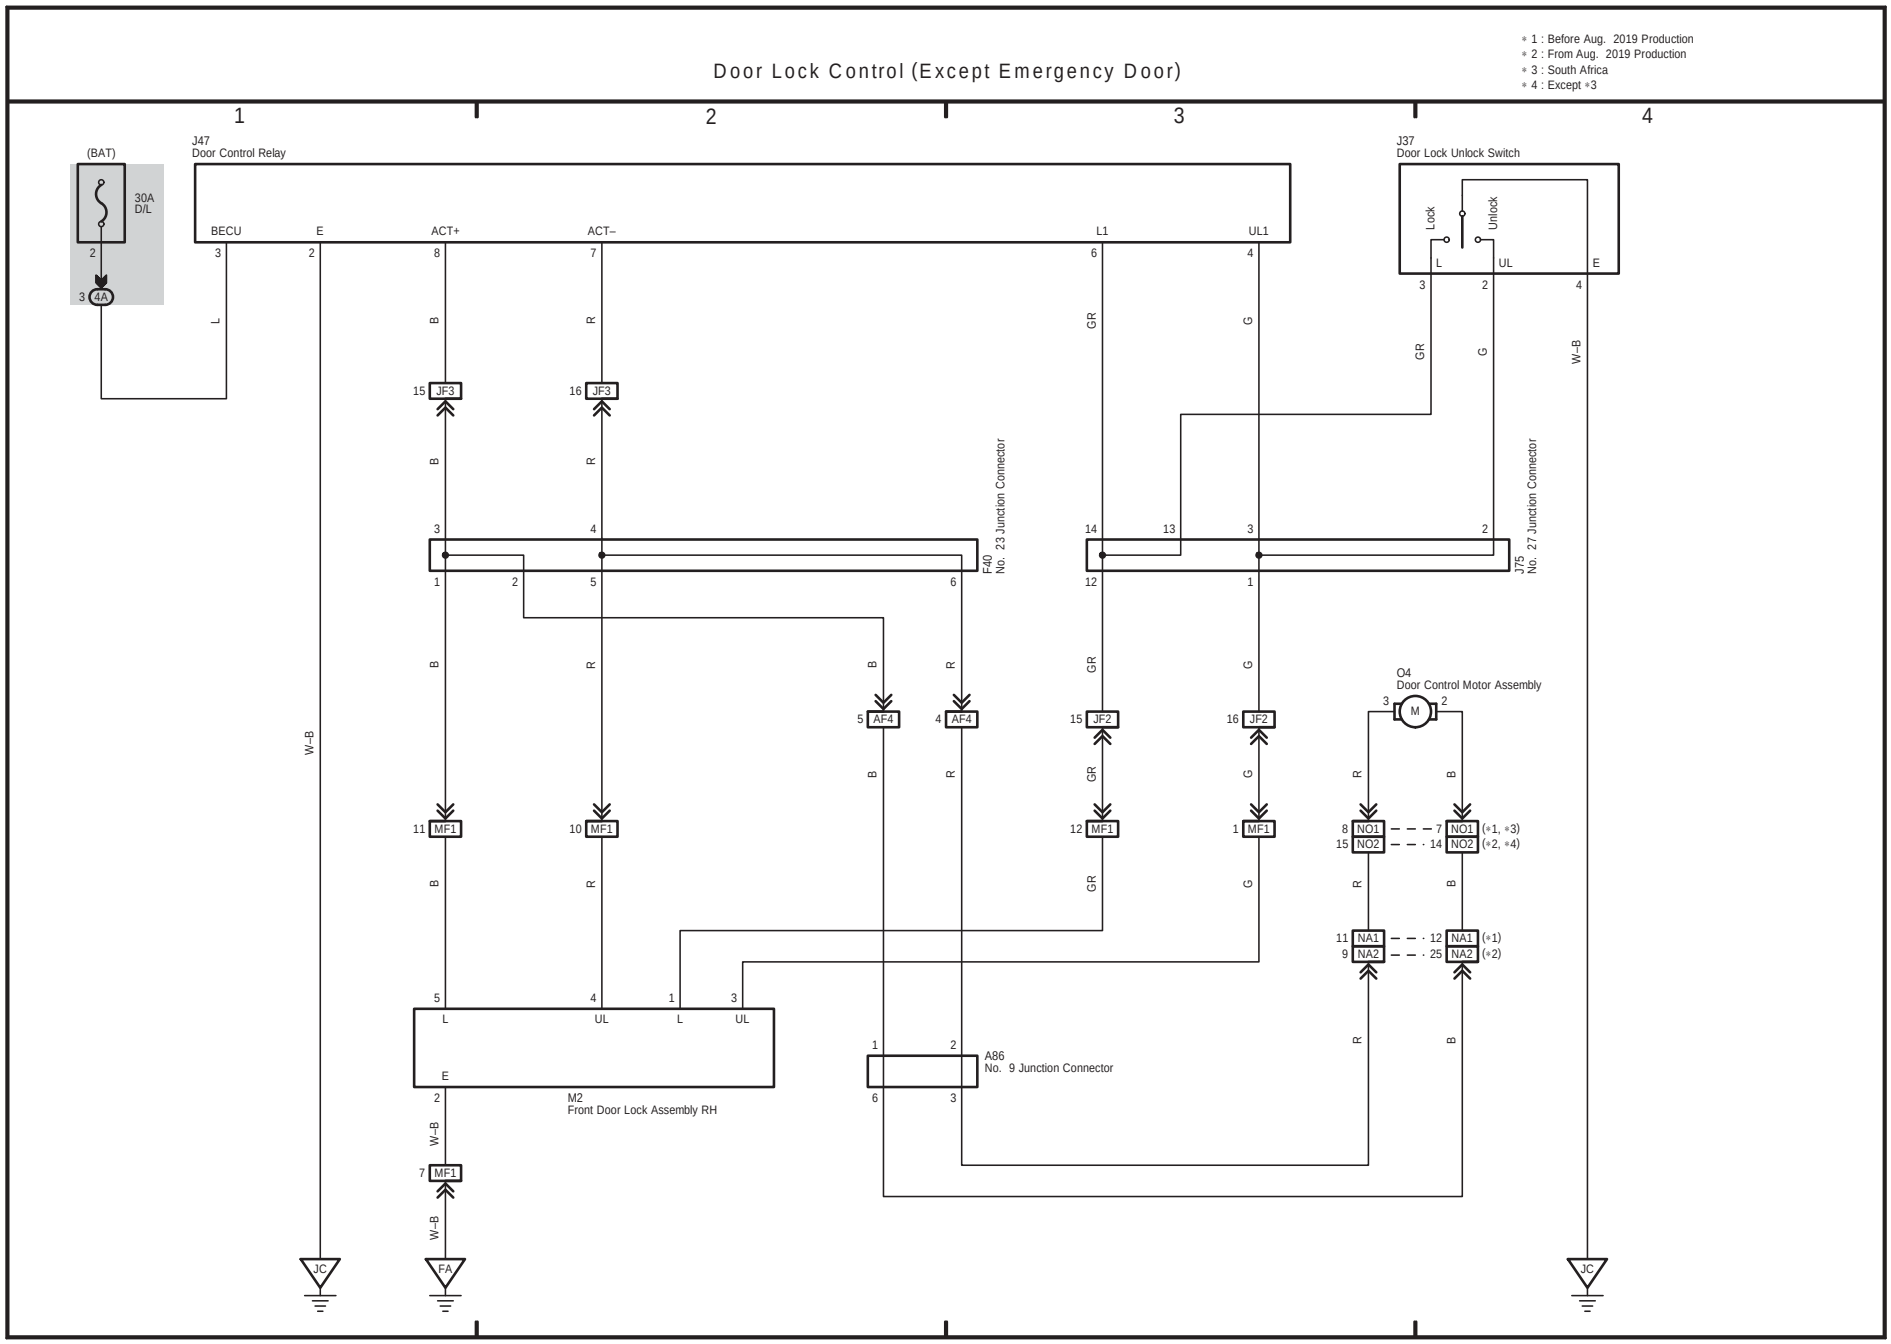

Door Lock Control (Except Emergency Door)
∗ 1 : Before Aug. 2019 Production
∗ 2 : From Aug. 2019 Production
∗ 3 : South Africa
∗ 4 : Except ∗3
1
2
3
4
(BAT)
30A D/L
4A
J47
Door Control Relay
BECU
E
ACT+
ACT–
L1
UL1
J37
Door Lock Unlock Switch
Lock
Unlock
L
UL
E
JF3
JF2
AF4
MF1
F40
No. 23 Junction Connector
J75
No. 27 Junction Connector
O4
Door Control Motor Assembly
M
NO1
NO2
NA1
NA2
(∗1, ∗3)
(∗2, ∗4)
(∗1)
(∗2)
M2
Front Door Lock Assembly RH
A86
No. 9 Junction Connector
JC
FA
W–B
L
B
R
GR
G