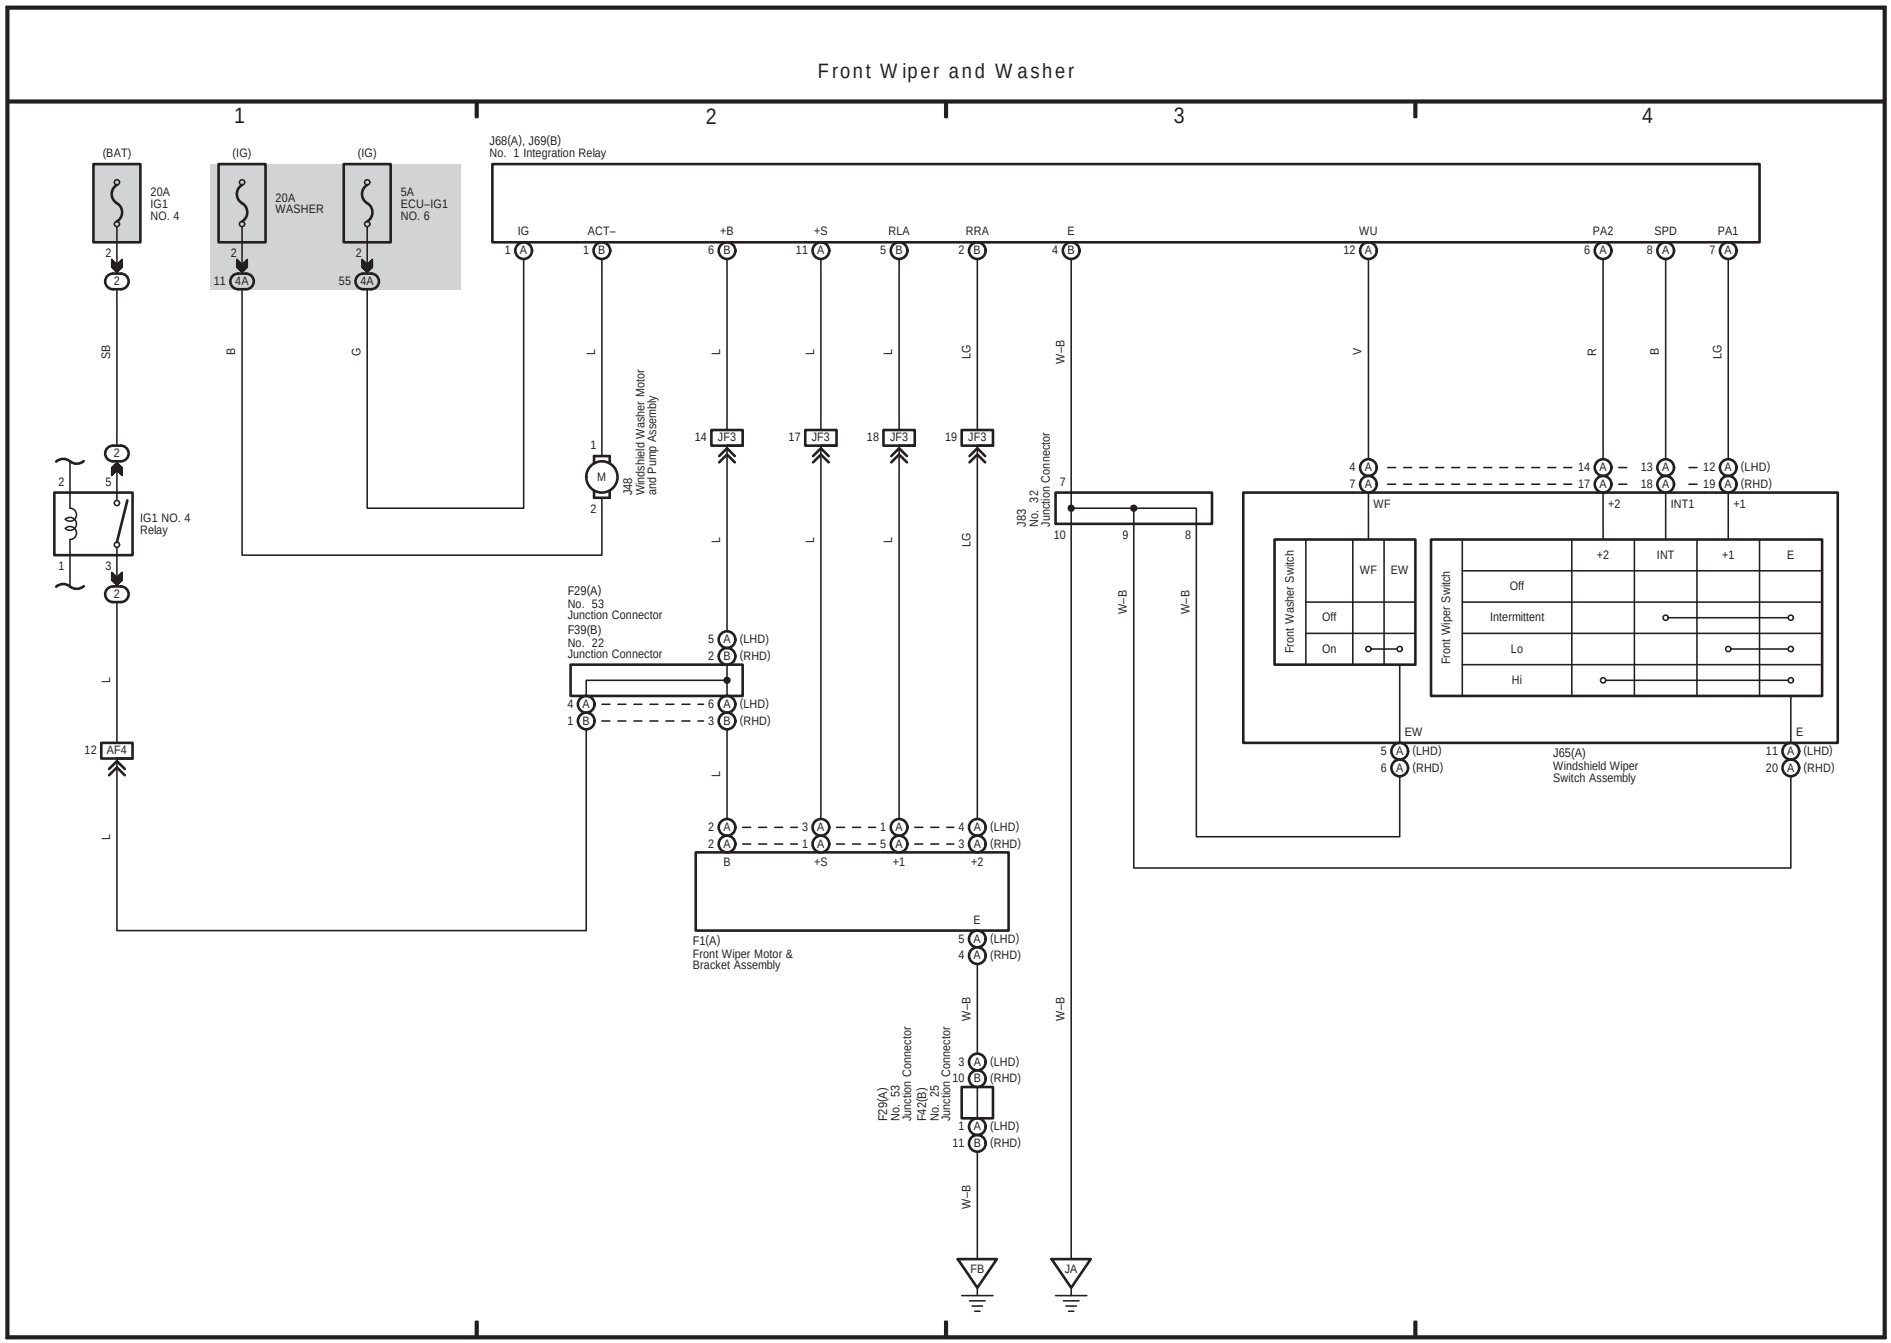

Front Wiper and Wash
1
2
3
4
(BAT)
20A
IG1
NO. 4
(IG)
20A
WASHER
(IG)
5A
ECU–IG1
NO. 6
J68(A), J69(B)
No. 1 Integration Relay
IG
ACT–
+B
+S
RLA
RRA
E
WU
PA2
SPD
PA1
IG1 NO. 4
Relay
J48
Windshield Washer Motor
and Pump Assembly
JF3
F29(A)
No. 53
Junction Connector
F39(B)
No. 22
Junction Connector
AF4
F1(A)
Front Wiper Motor &
Bracket Assembly
F29(A)
No. 53
Junction Connector
F42(B)
No. 25
Junction Connector
J83
No. 32
Junction Connector
WF
+2
INT1
+1
EW
E
Front Washer Switch
Off
On
Front Wiper Switch
Off
Intermittent
Lo
Hi
INT
J65(A)
Windshield Wiper
Switch Assembly
(LHD)
(RHD)
FB
JA