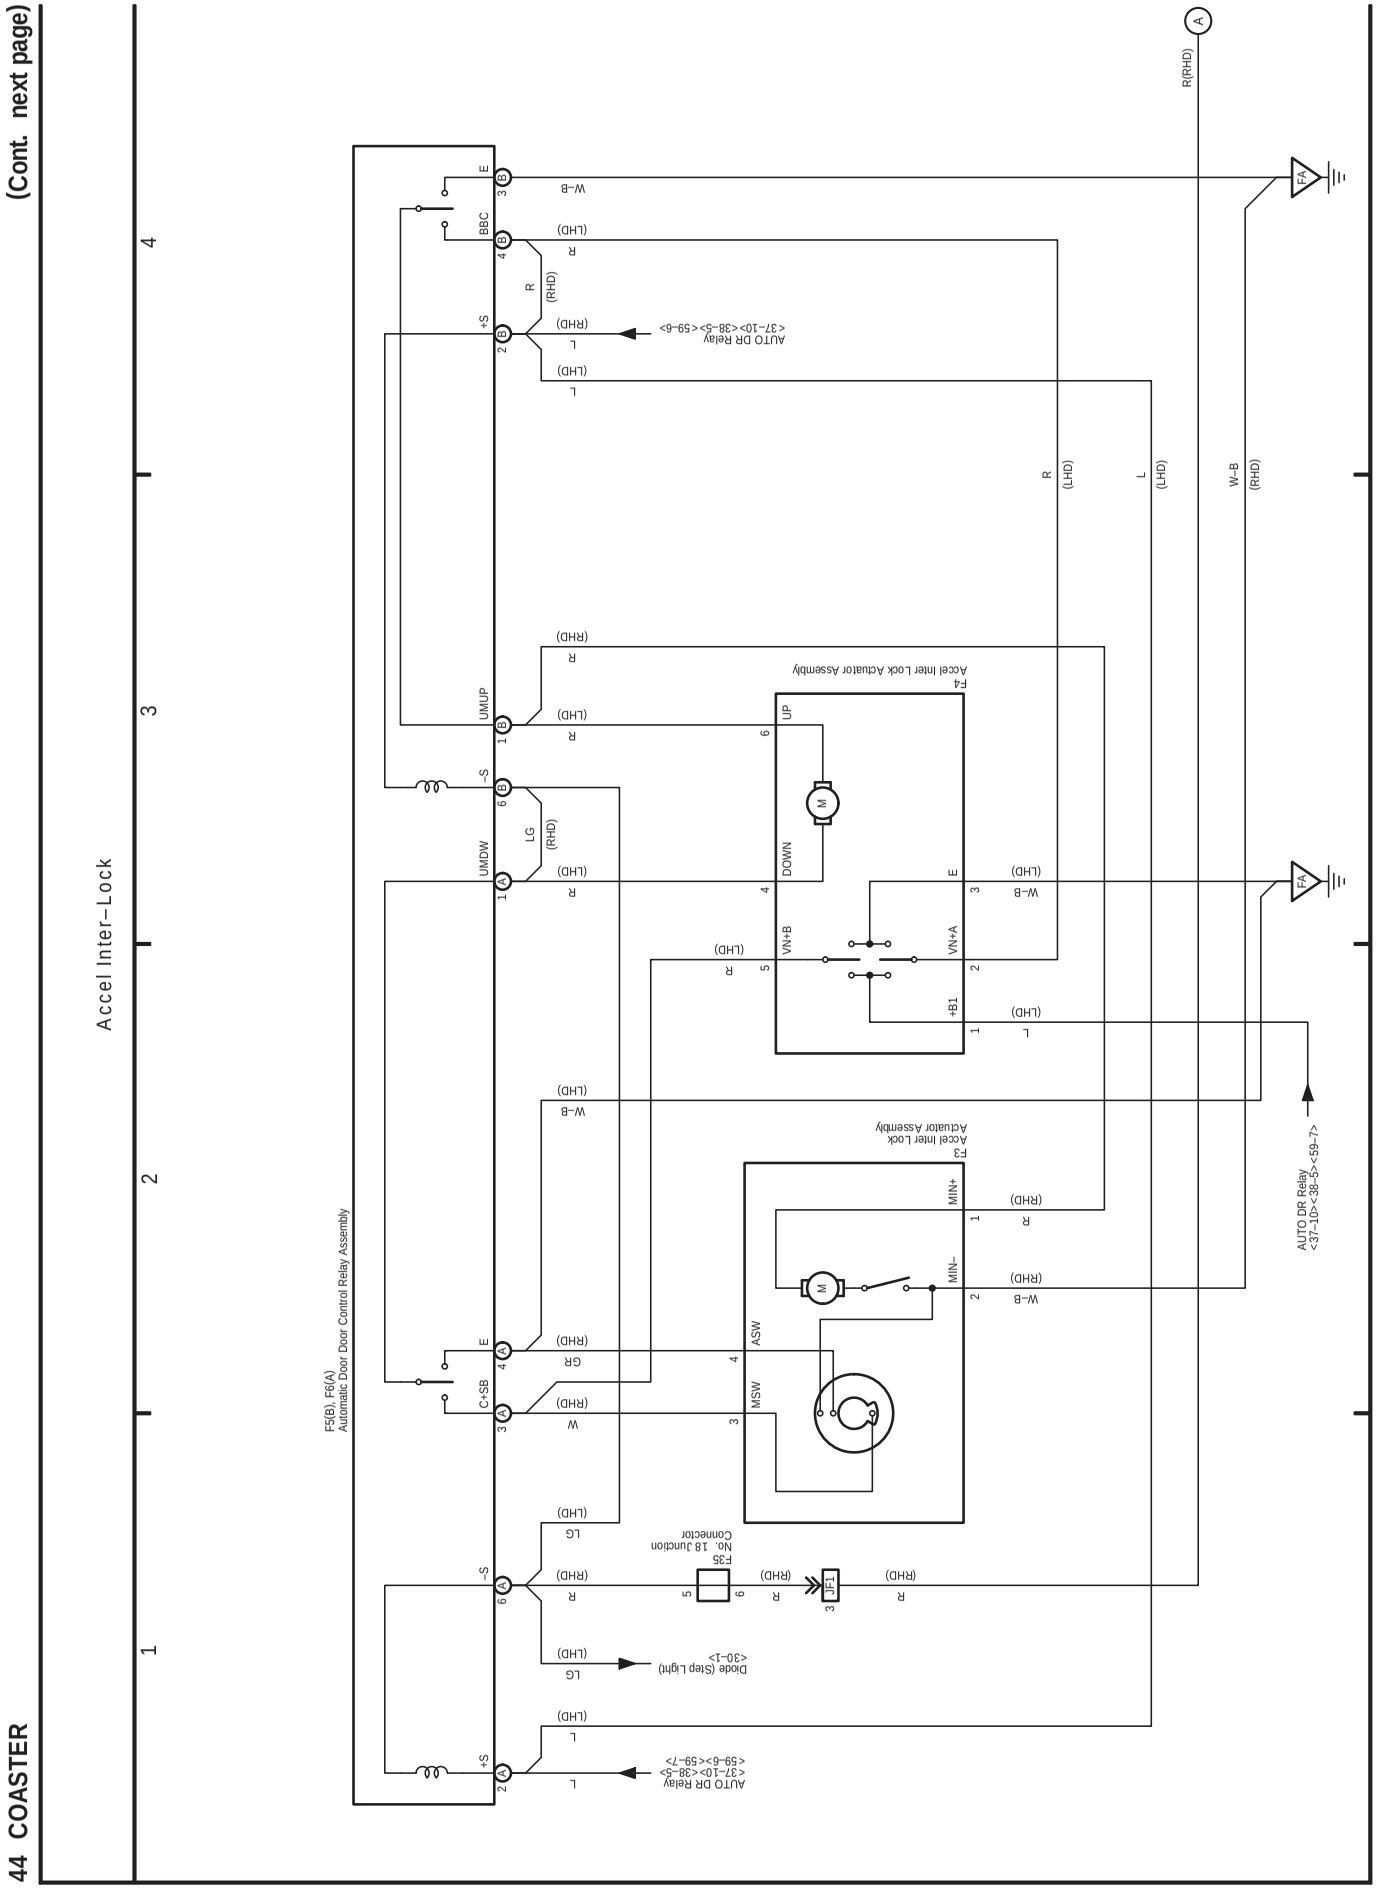
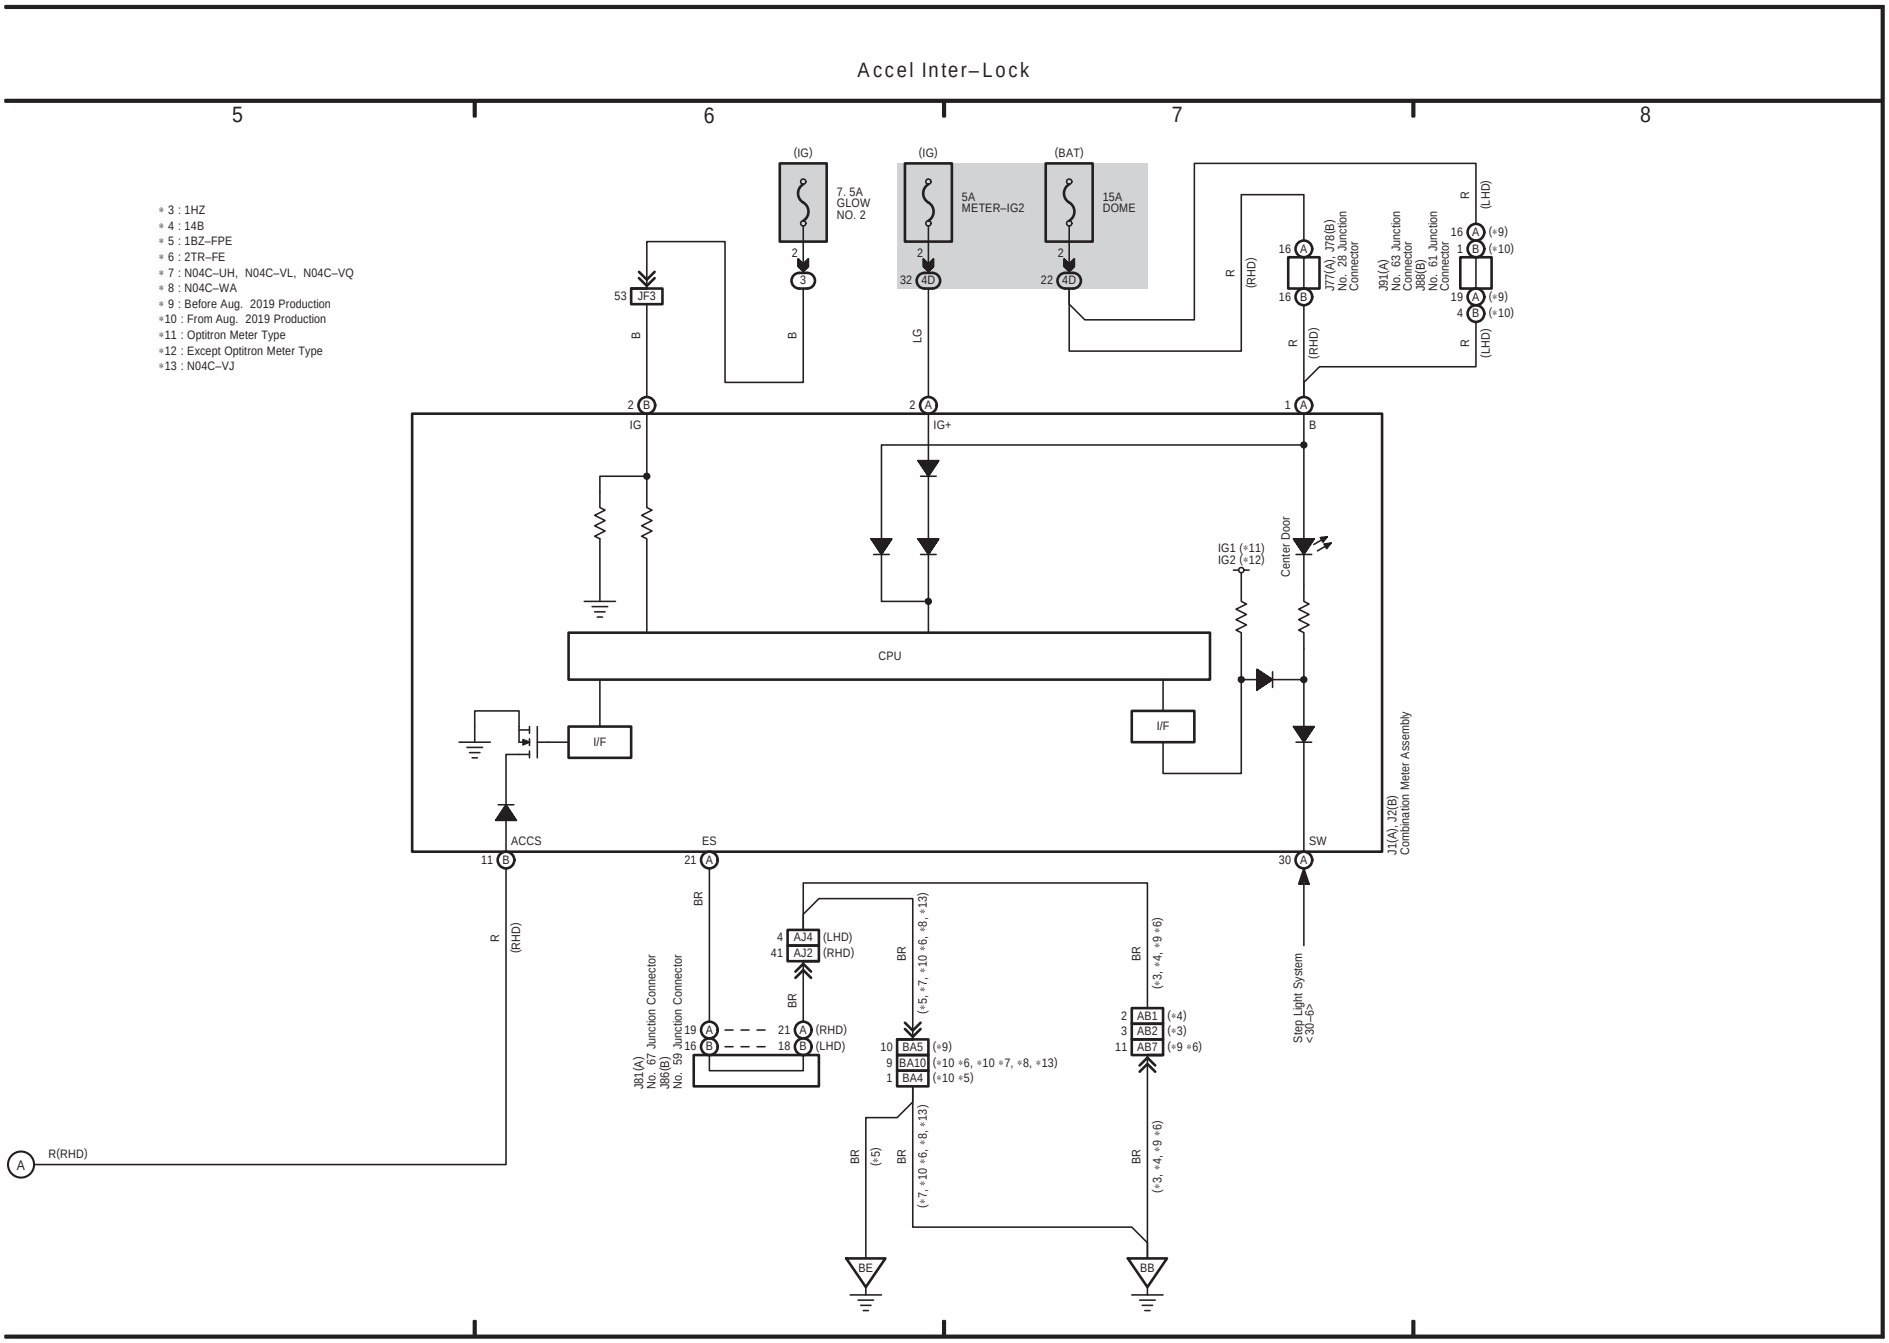

(Cont. next page)
Accel Inter–Lock
1
2
3
4
44 COASTER
F5(B), F6(A)
Automatic Door Door Control Relay Assembly
AUTO DR Relay
<37–10><38–5>
<59–6><59–7>
Diode (Step Light)
<30–1>
F35
No. 18 Junction
Connector
JF1
AUTO DR Relay
<37–10><38–5><59–6>
F3
Accel Inter Lock
Actuator Assembly
F4
Accel Inter Lock Actuator Assembly
AUTO DR Relay
<37–10><38–5><59–7>
R(RHD)
R (LHD)
L (LHD)
W–B (RHD)
FA
A



COASTER (EM2854E)

M