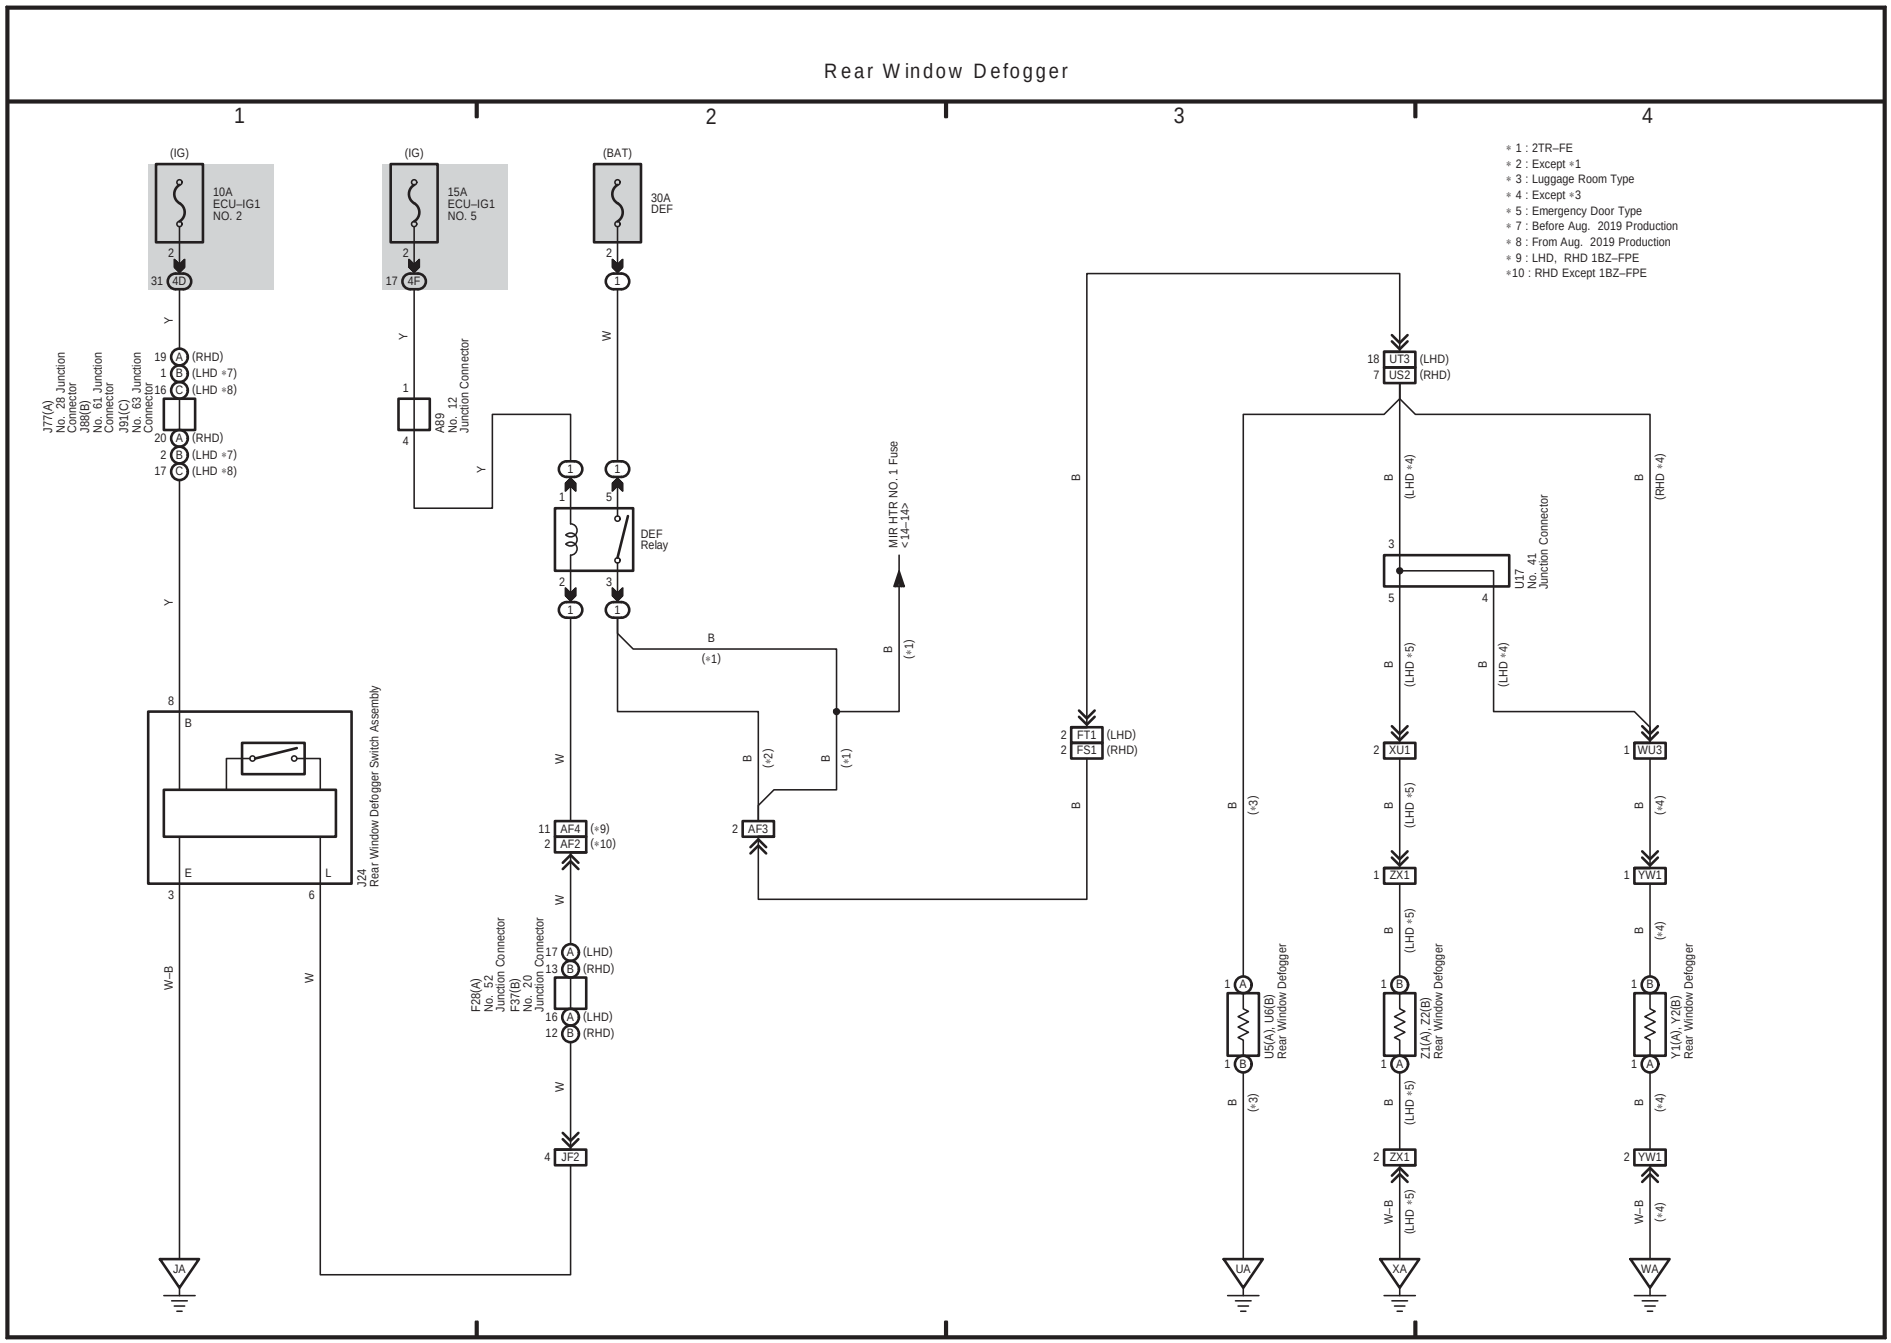

Rear Window Defogger
1
2
3
4
(IG)
10A
ECU–IG1
NO. 2
(IG)
15A
ECU–IG1
NO. 5
(BAT)
30A
DEF
* 1 : 2TR–FE
* 2 : Except *1
* 3 : Luggage Room Type
* 4 : Except *3
* 5 : Emergency Door Type
* 7 : Before Aug. 2019 Production
* 8 : From Aug. 2019 Production
* 9 : LHD, RHD 1BZ–FPE
*10 : RHD Except 1BZ–FPE
J77(A)
No. 28 Junction
Connector
J88(B)
No. 61 Junction
Connector
J91(C)
No. 63 Junction
Connector
A89
No. 12
Junction Connector
DEF
Relay
MIR HTR NO. 1 Fuse
<14–14>
J24
Rear Window Defogger Switch Assembly
F28(A)
No. 52
Junction Connector
F37(B)
No. 20
Junction Connector
U17
No. 41
Junction Connector
U5(A), U6(B)
Rear Window Defogger
Z1(A), Z2(B)
Rear Window Defogger
Y1(A), Y2(B)
Rear Window Defogger
JA
UA
XA
WA