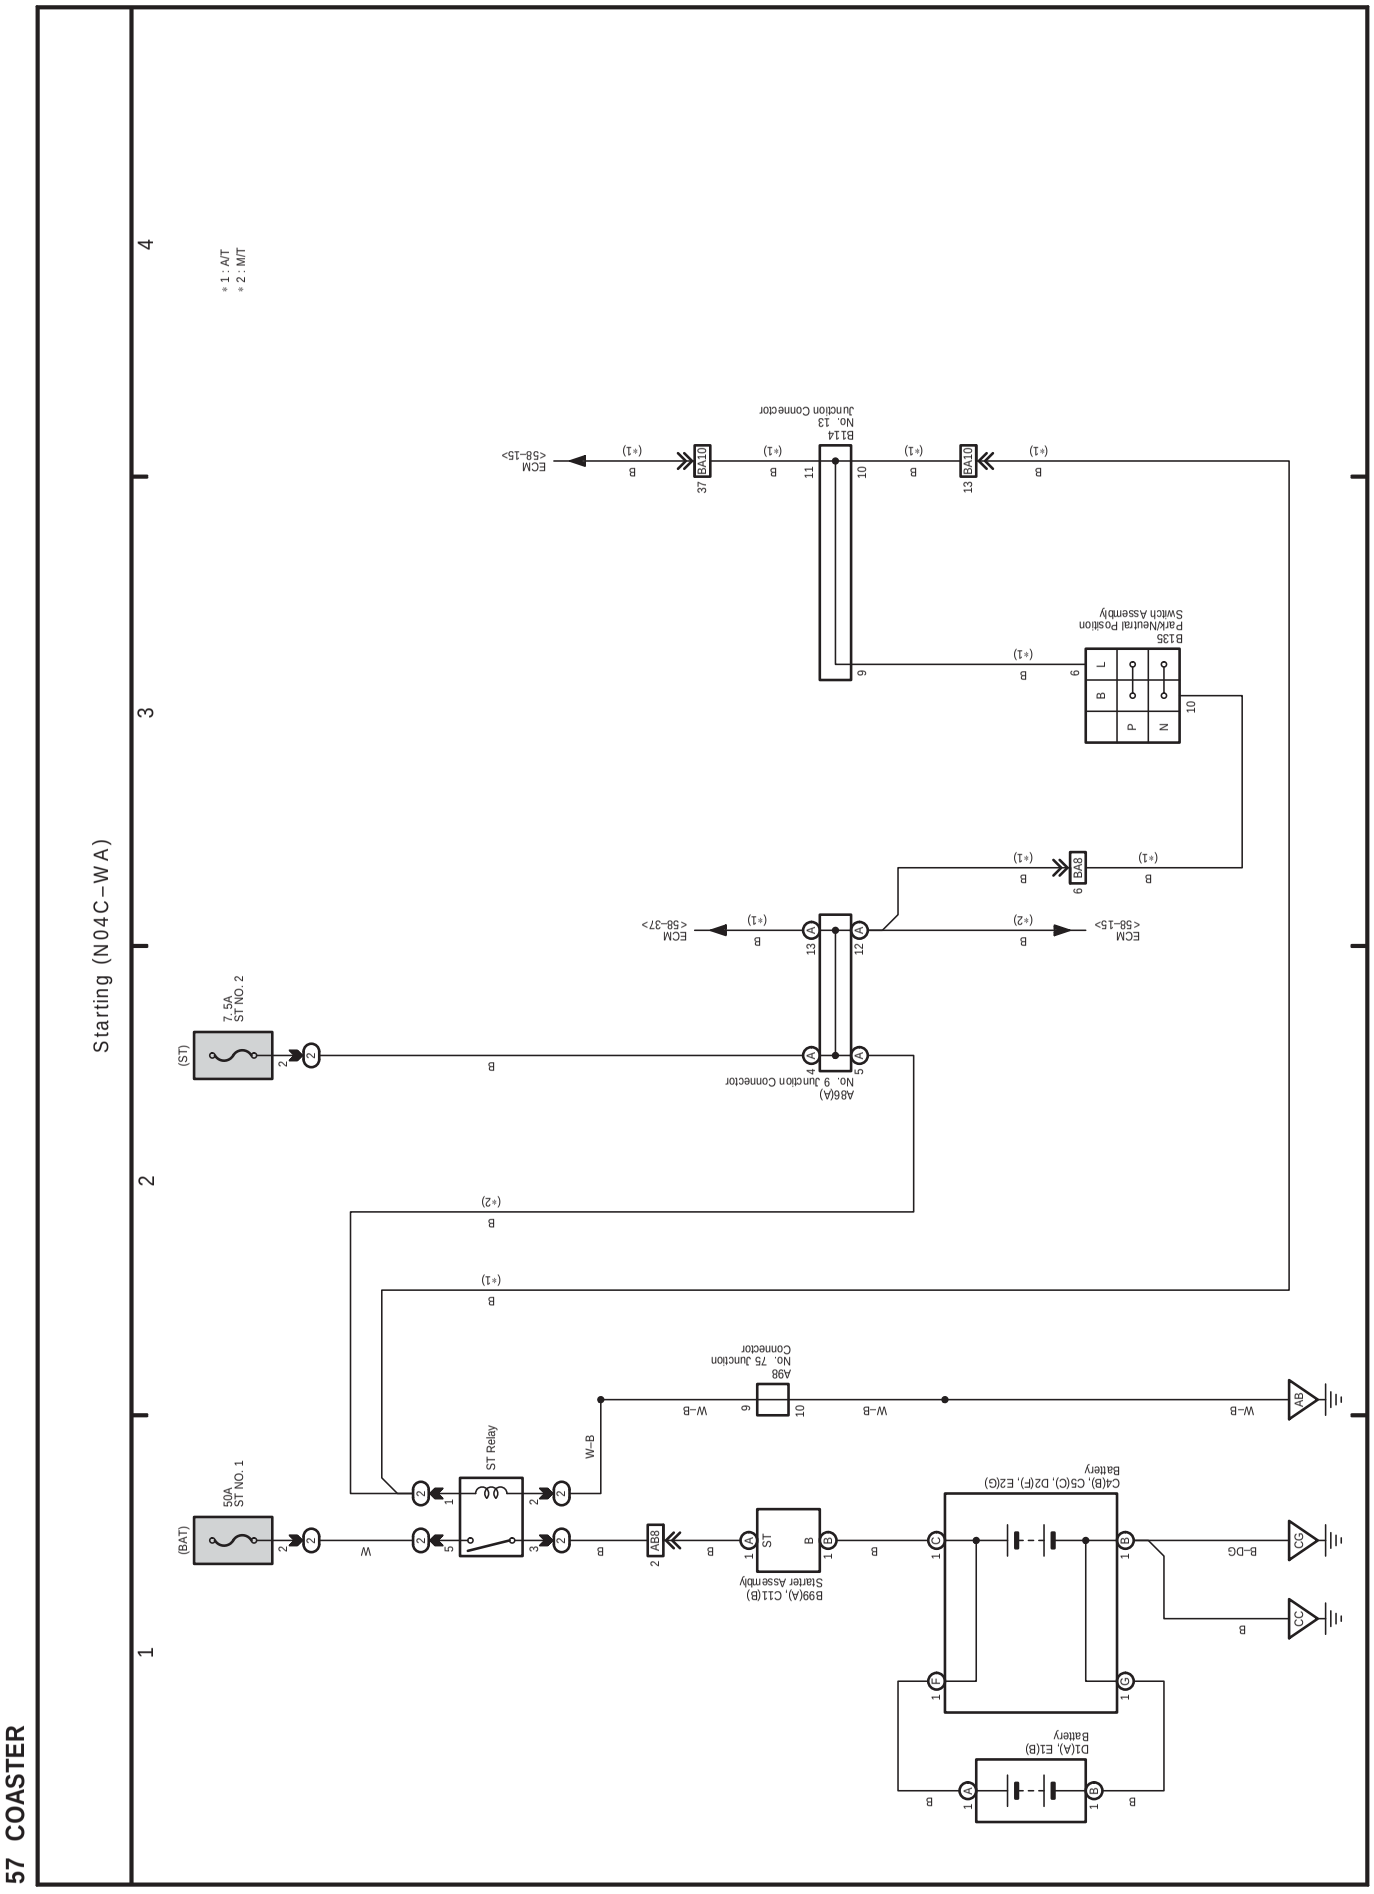

Starting (N04C–WA)
* 1 : A/T
* 2 : M/T
ECM <58–15>
B114 No. 13 Junction Connector
B135 Park/Neutral Position Switch Assembly
ECM <58–37>
A86(A) No. 9 Junction Connector
7.5A ST NO. 2
50A ST NO. 1
ST Relay
A98 No. 75 Junction Connector
B99(A), C11(B) Starter Assembly
C4(B), C5(C), D2(F), E2(G) Battery
D1(A), E1(B) Battery
W–B
B–DG
CG
CC
AB