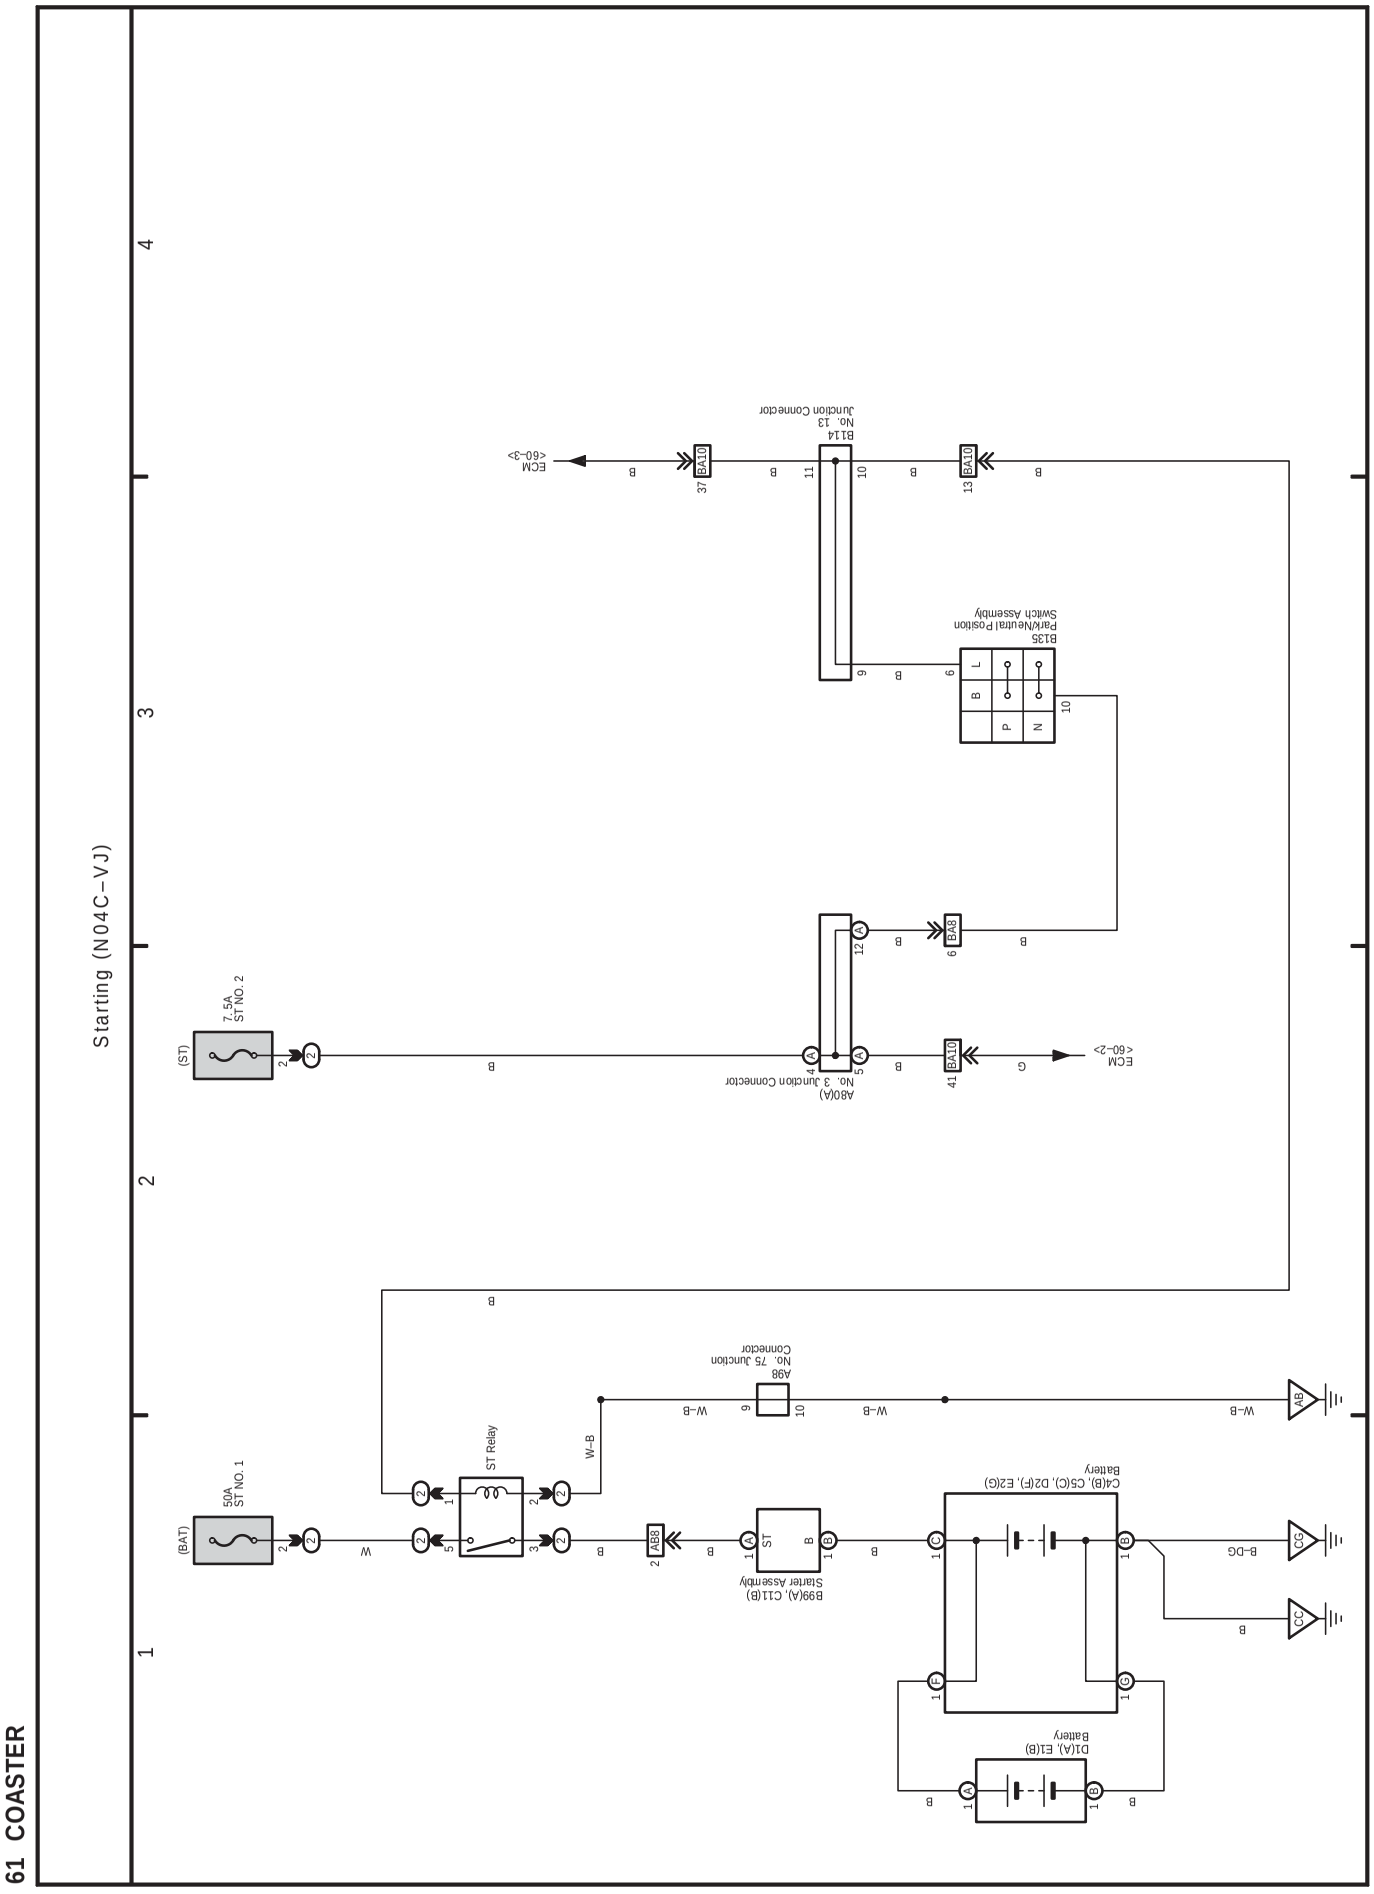

61 COASTER
Starting (N04C–VJ)
1
2
3
4
(BAT)
50A
ST NO. 1
(ST)
7.5A
ST NO. 2
ST Relay
W–B
B99(A), C11(B)
Starter Assembly
ST
C4(B), C5(C), D2(F), E2(G)
Battery
D1(A), E1(B)
Battery
B–DG
A98
No. 75 Junction
Connector
A80(A)
No. 3 Junction Connector
B114
No. 13
Junction Connector
B135
Park/Neutral Position
Switch Assembly
ECM
<60–2>
ECM
<60–3>
AB
CG
CC