



A4
A84
A67
A26
A35
A12
A11
A10
A13
A30
A31
A9
A3
A69
A7
A6

A 3 Air Control Valve Assembly
A 4 Exhaust Brake Solenoid with Bracket Assembly
A 6 Vacuum Warning Switch Assembly
A 7 Vacuum Warning Switch Assembly
A 9 Water Temperature Sender Gage Assembly
A 10 Engine Oil Pressure Switch Assembly
A 11 Generator Assembly
A 12 Generator Assembly
A 13 Air Conditioning Compressor Relay
A 26 Step Light Assembly
A 30 Level Warning Switch
A 31 Fuel Heater Assembly
A 35 Battery
A 67 Automatic Door Buzzer (Wireless Door Lock Buzzer)
A 69 Front Seat Outer Belt Assembly LH
A 84 No. 7 Junction Connector

A 3
Gray

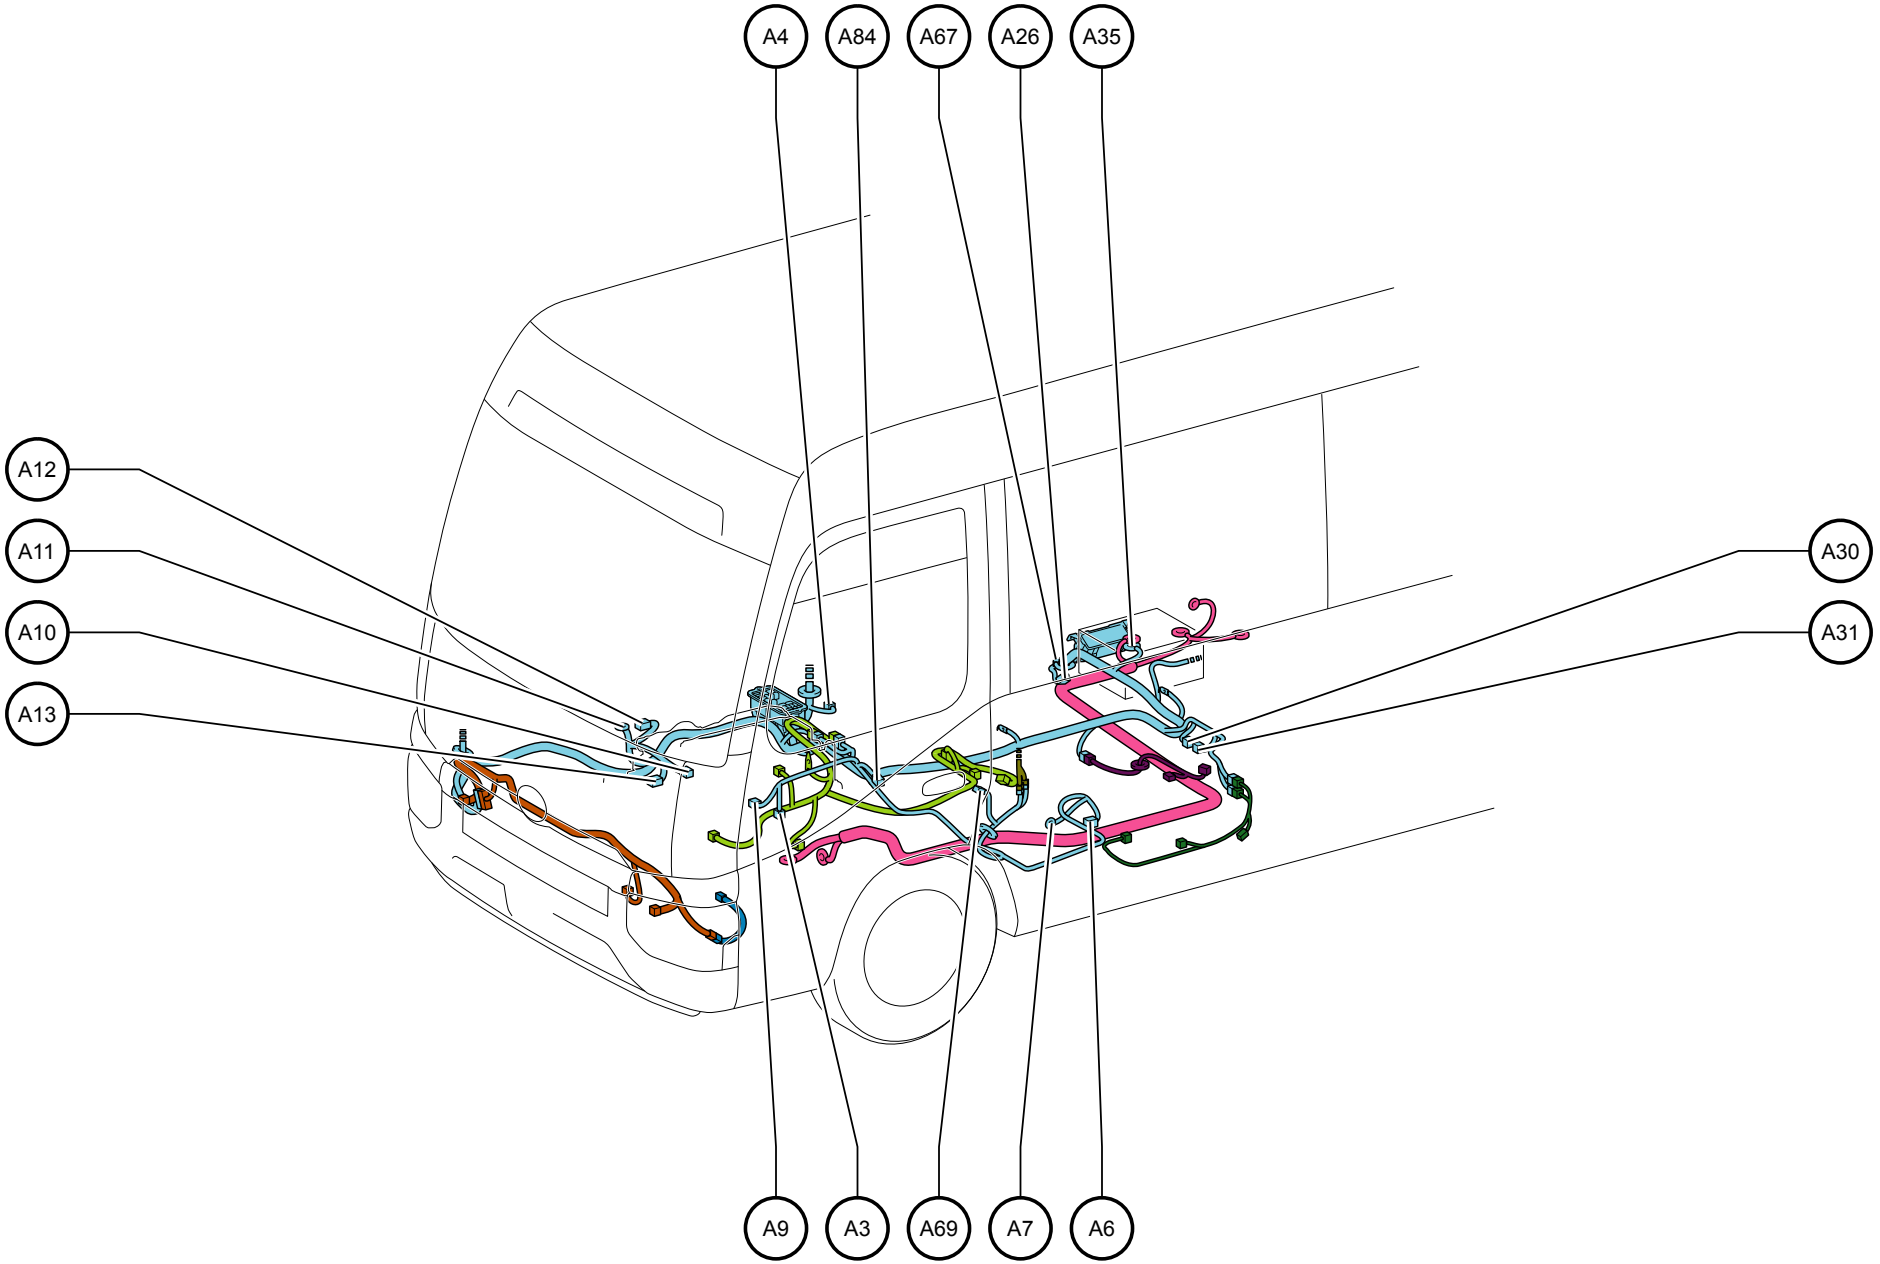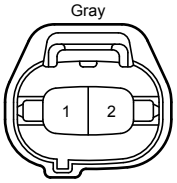


A 4
Gray

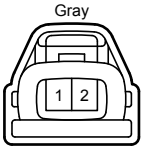

A 6
Gray



A 7




A 9
Black




A 10
Gray



A 11



A 12
Black

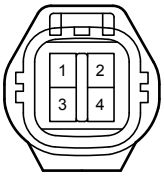

A 13
Gray




A 26
White




A 30
Gray




A 31
Gray

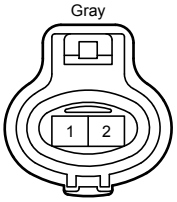


A 35



A 67
Gray

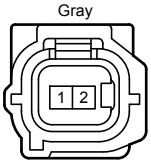

A 69
Black



A 84
Gray

