


A4
r3
r6
r7
s7
s6
A70
A68
A12
A11
A10
A13
A88
A35
A30
A9
A3
A84
A7
A6
A31
A26
A67

A 3 Air Control Valve Assembly
A 4 Exhaust Brake Solenoid with Bracket Assembly
A 6 Vacuum Warning Switch Assembly
A 7 Vacuum Warning Switch Assembly
A 9 Water Temperature Sender Gage Assembly
A 10 Engine Oil Pressure Switch Assembly
A 11 Generator Assembly
A 12 Generator Assembly
A 13 Air Conditioning Compressor Relay
A 26 Step Light Assembly
A 30 Level Warning Switch
A 31 Fuel Heater Assembly
A 35 Battery
A 67 Automatic Door Buzzer (Wireless Door Lock Buzzer)
A 68 Front Seat Outer Belt Assembly RH
A 70 Front Door Courtesy Light Switch Assembly
A 84 No. 7 Junction Connector
A 88 No. 11 Junction Connector


r 3 Condenser Blower Motor Assembly
r 6 Condenser Blower Motor Assembly
r 7 No. 1 Pressure Switch

s 6 Rear Heater Blower Resistor
s 7 Blower Motor with Fan Sub-Assembly

A 3
Gray

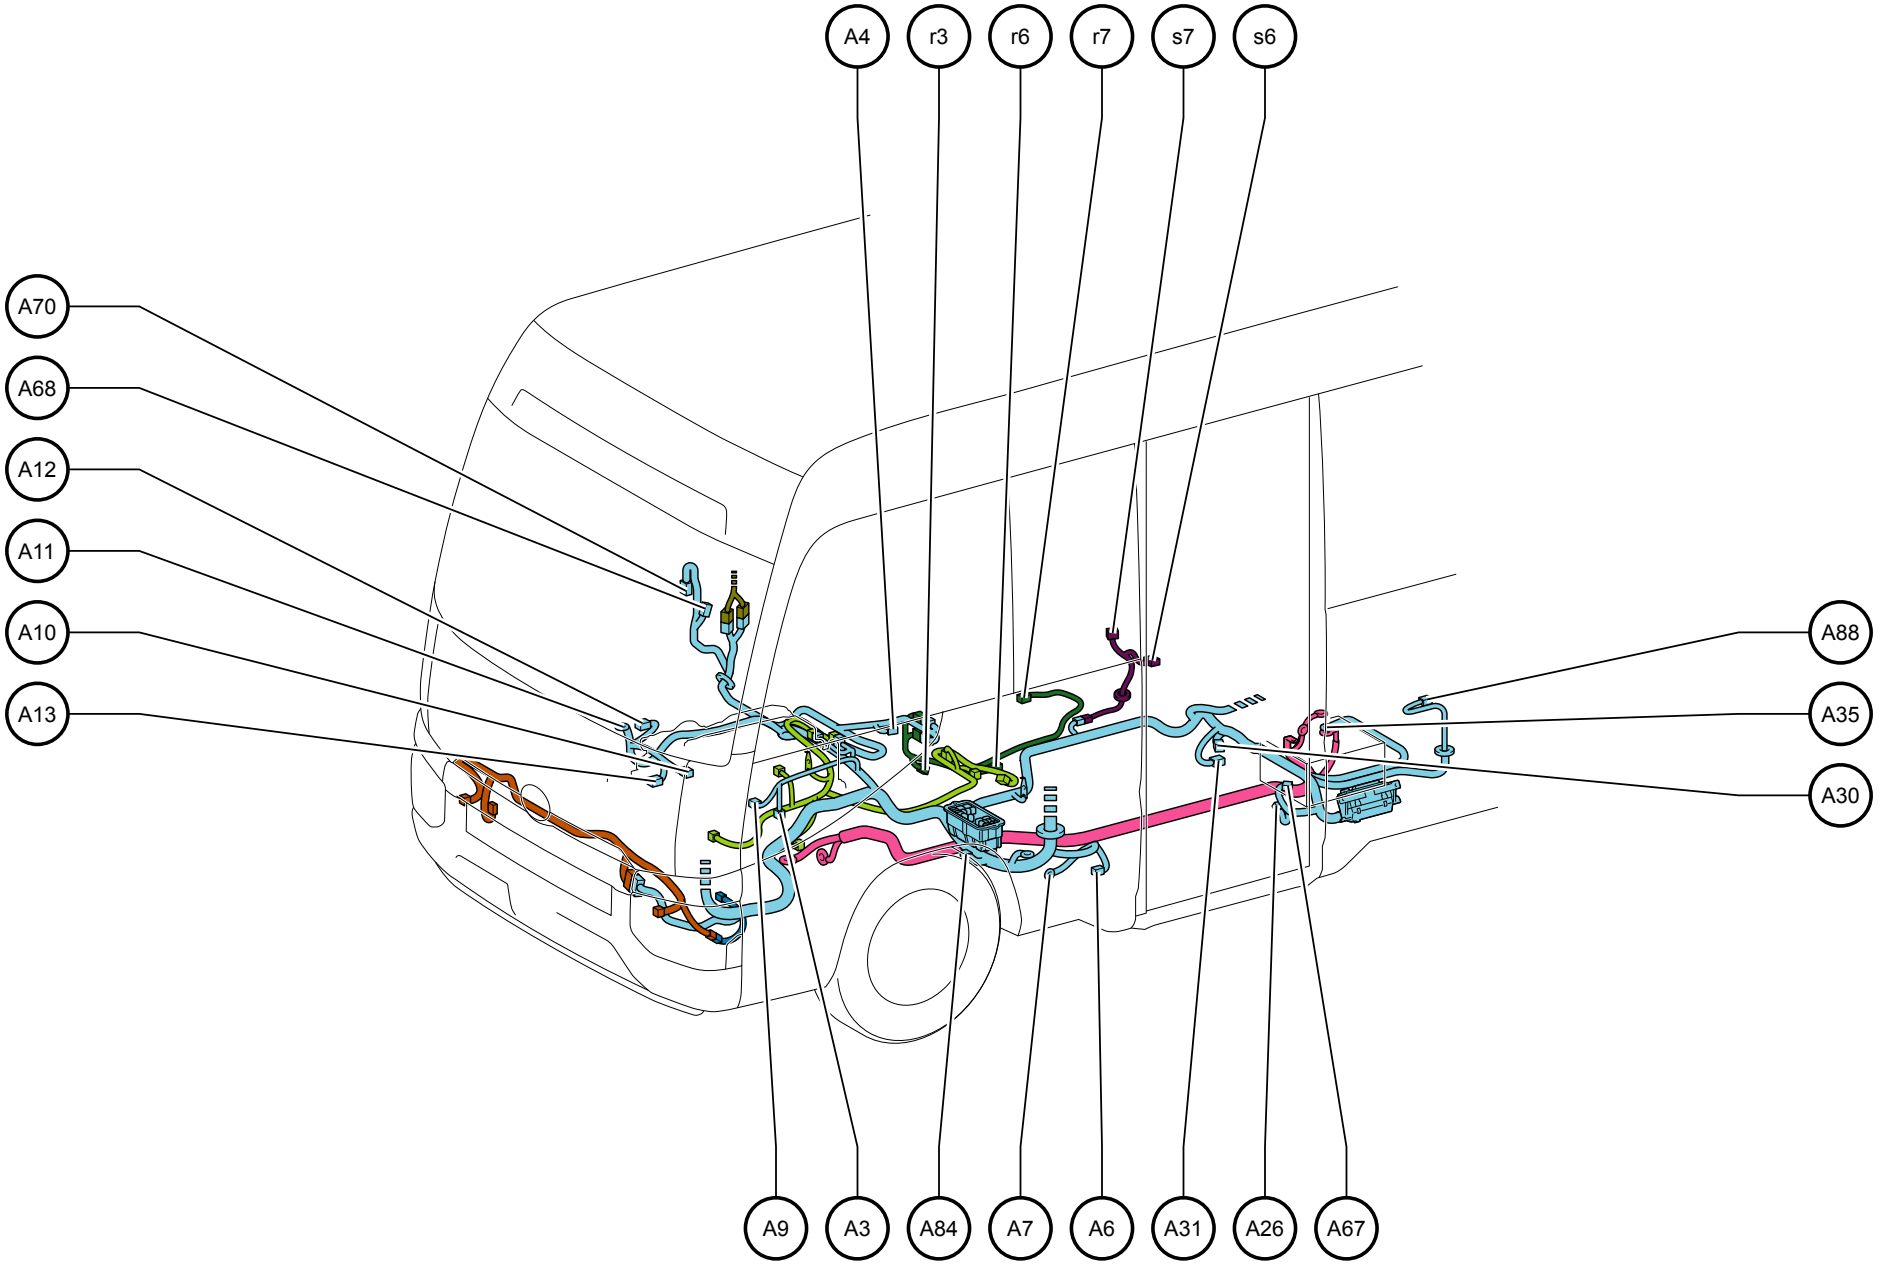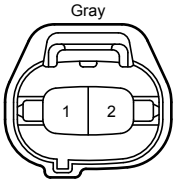


A 4
Gray

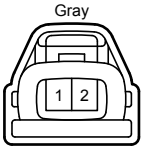

A 6
Gray



A 7




A 9
Black




A 10
Gray



A 11



A 12
Black

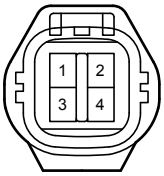

A 13
Gray




A 26
White




A 30
Gray




A 31
Gray

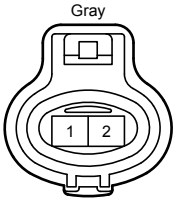


A 35



A 67
Gray

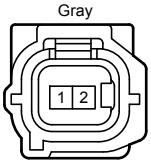


A 68
Black




A 70
White




A 84
Gray

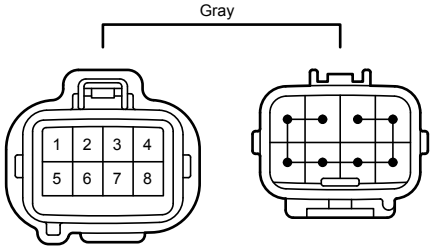


A 88
White

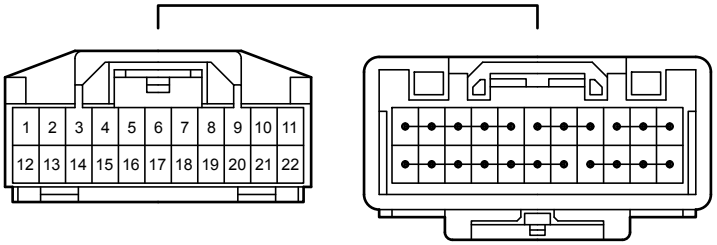


r 3
Black

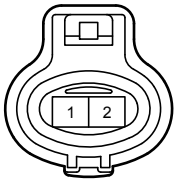


r 6
Black

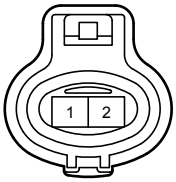

r 7
Black

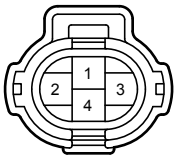

s 6
Black

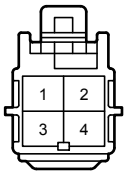

s 7
White

