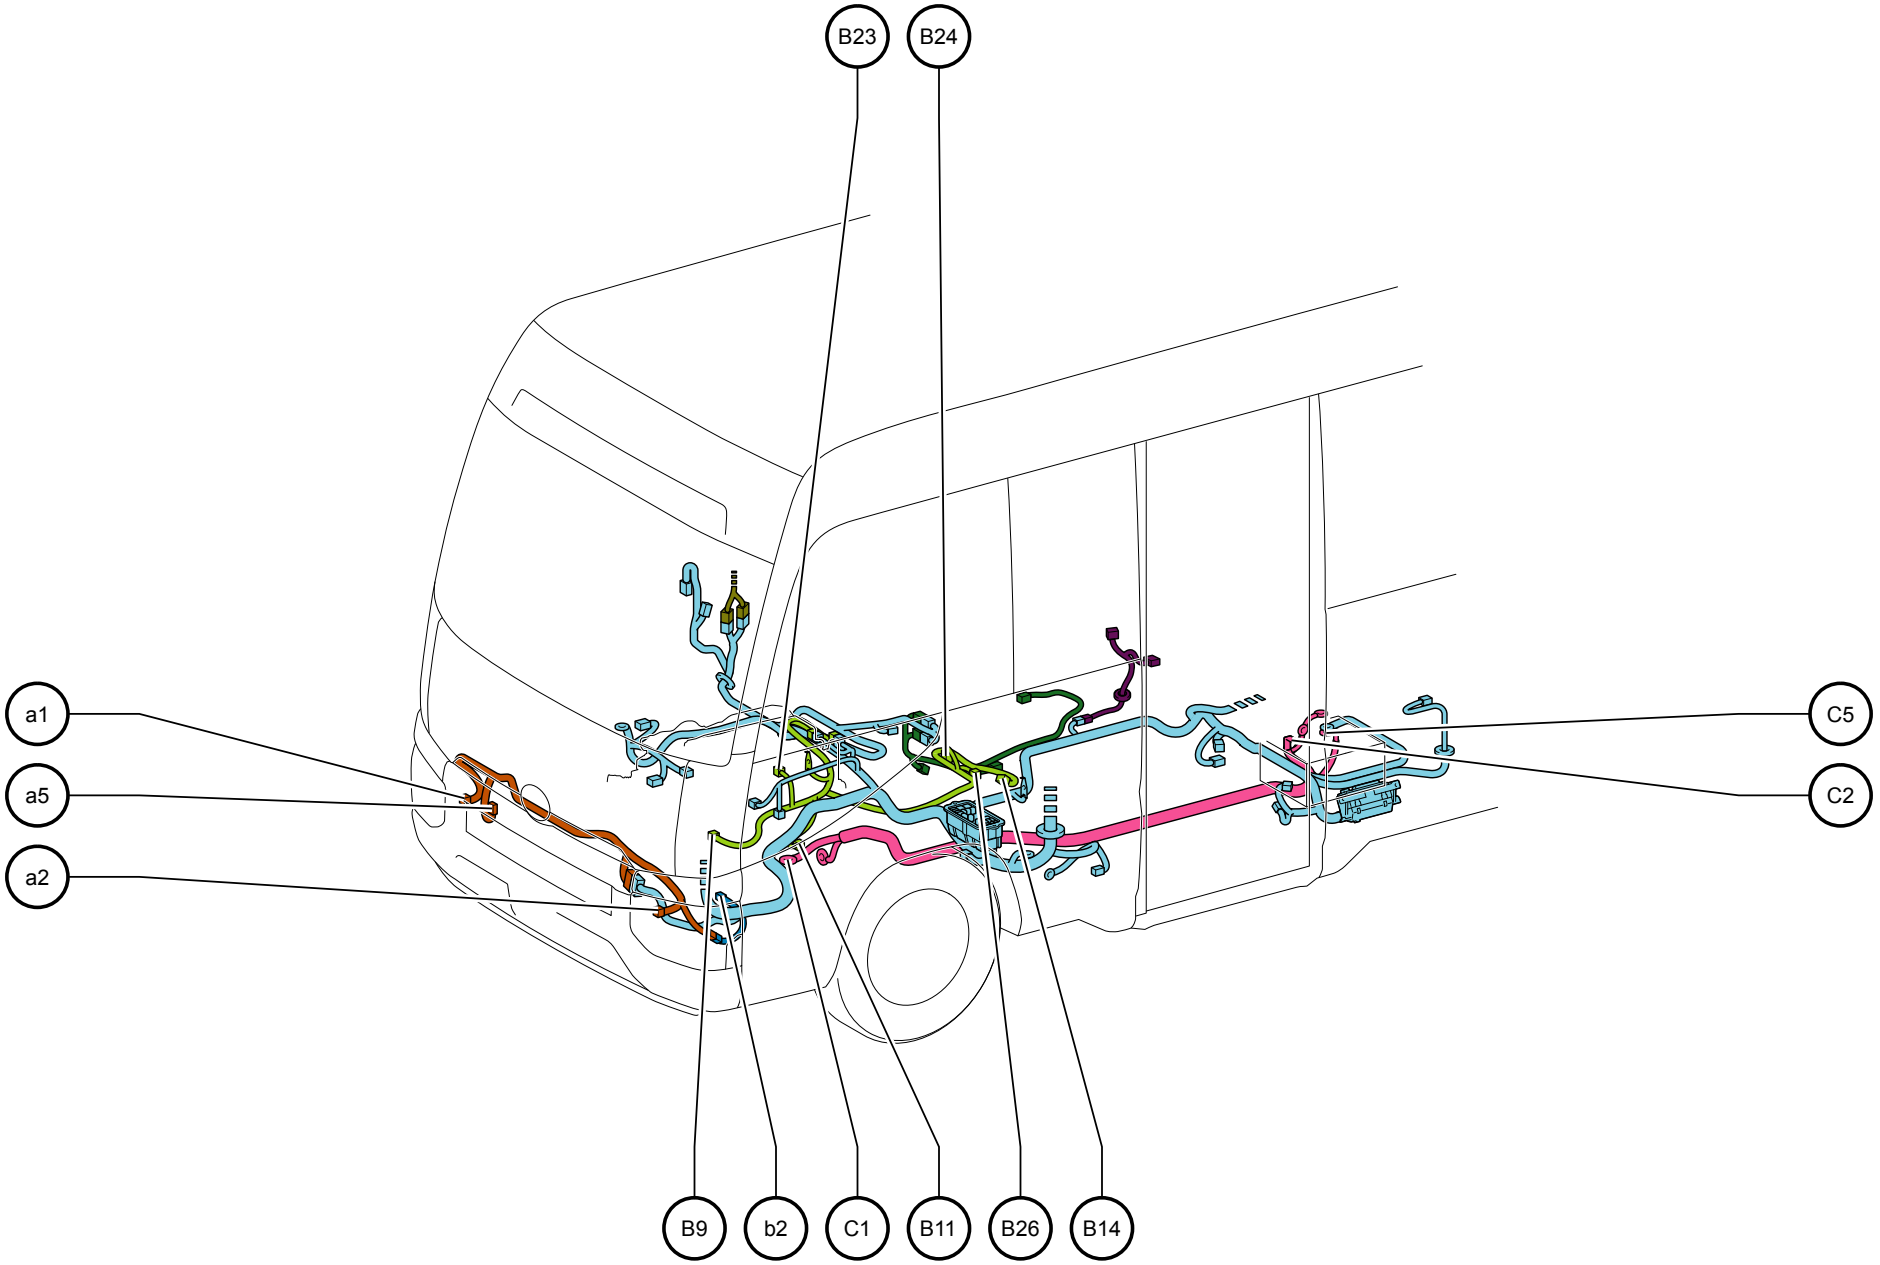

B23
B24
a1
a5
a2
C5
C2
B9
b2
C1
B11
B26
B14

B 9 Engine Oil Level Sensor
B 11 Starter Assembly
B 14 Speed Meter Sensor
B 23 Injection or Supply Pump Assembly
B 24 Back-Up Light Switch Assembly
B 26 Exhaust Brake Neutral Switch Assembly

C 1 Starter Assembly
C 2 Battery
C 5 Battery

a 1 Headlight Assembly RH
a 2 Headlight Assembly LH
a 5 Low Pitched Horn Assembly

b 2 Air Cleaner Warning Sensor

B 9
White



(Except 14B 1HZ)

B 9
Gray



(14B, 1HZ)

B 11
Black



(Except 14B)

B 11
Gray



(14B)


B 14
Black




B 23
Gray




B 24
Gray

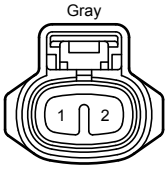


B 26
Gray




C 1



C 2



C 5



a 1
Gray



a 2
Gray



a 5
Black



b 2
Gray

