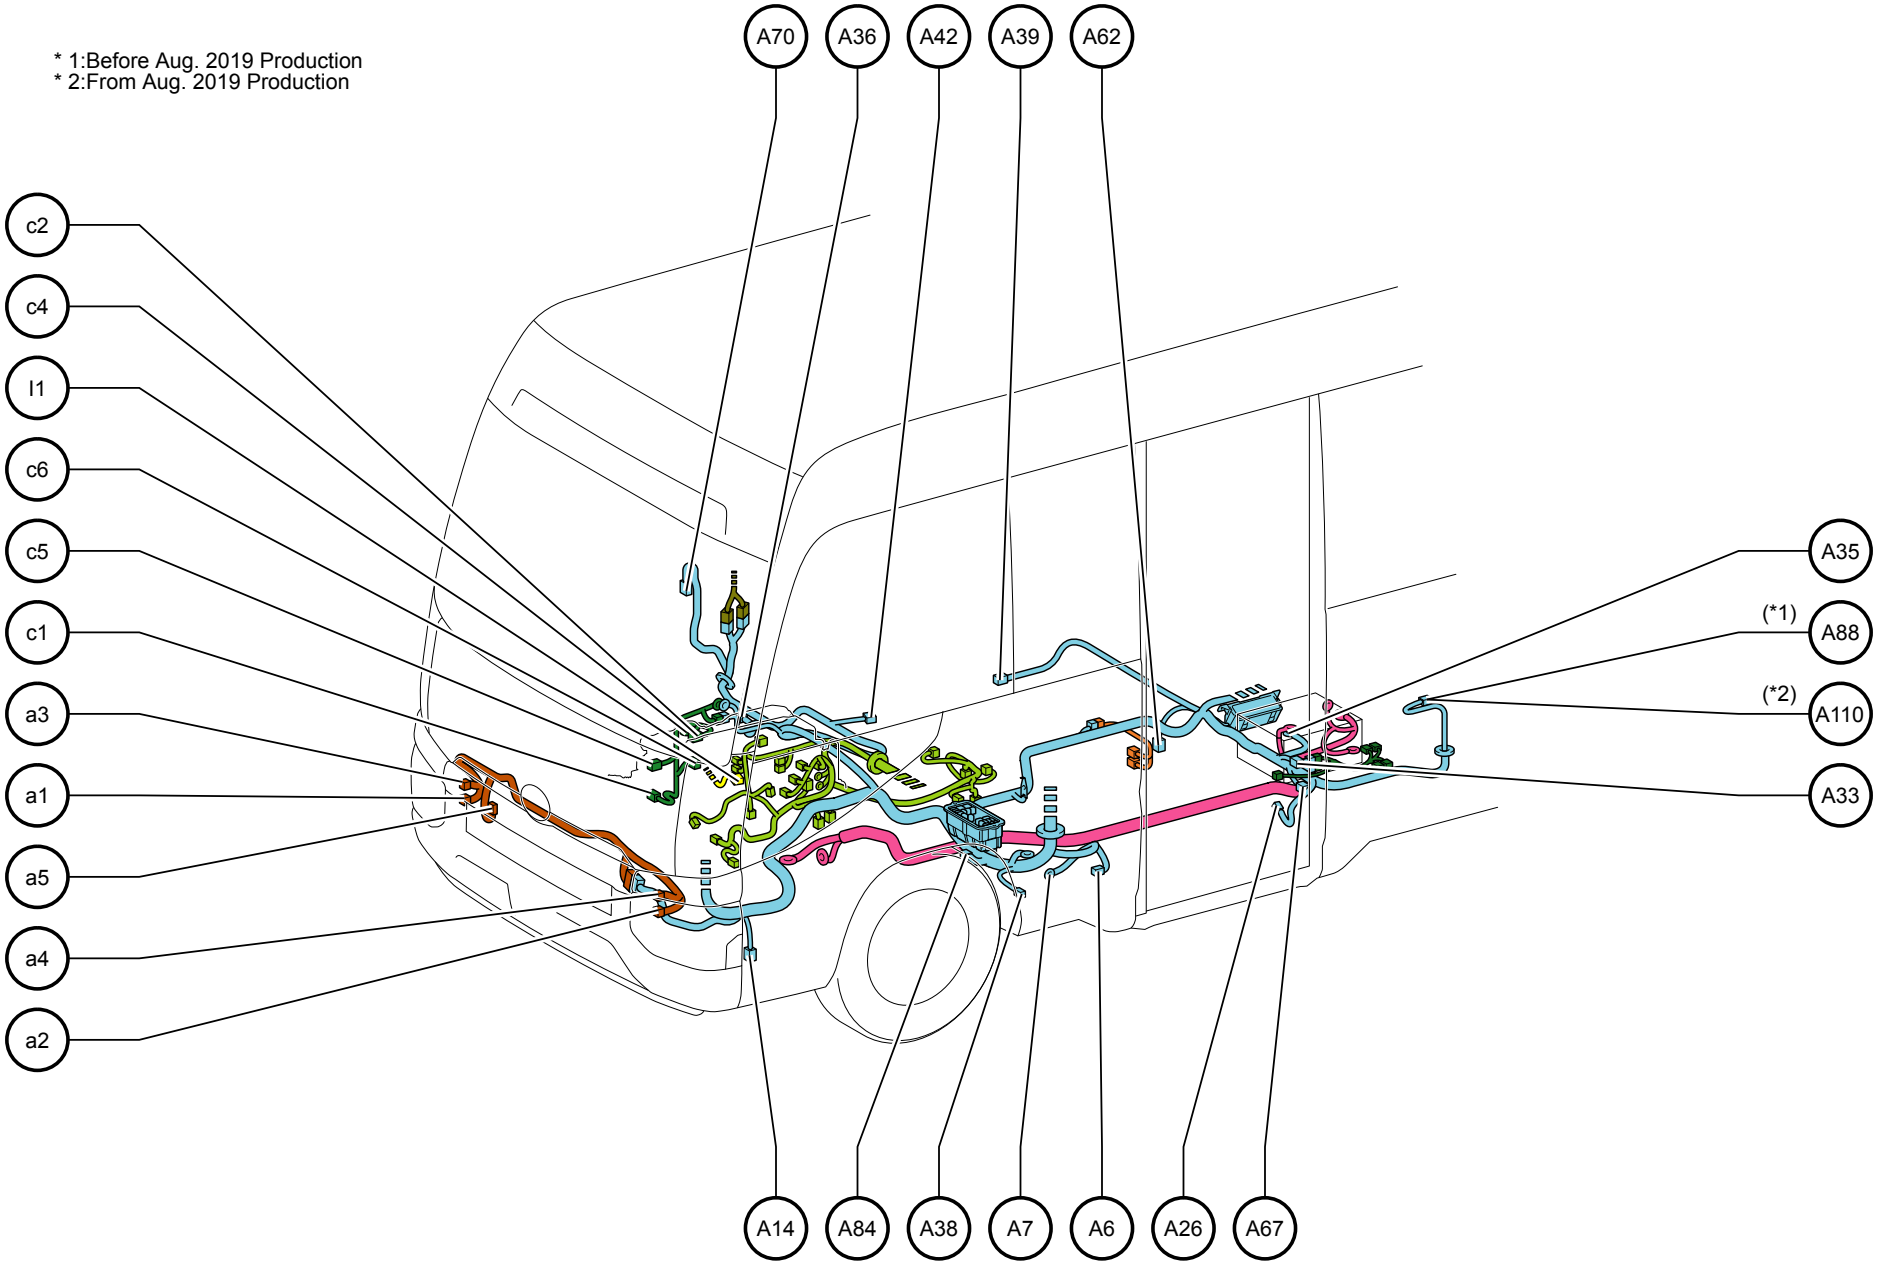

* 1:Before Aug. 2019 Production
* 2:From Aug. 2019 Production
A70
A36
A42
A39
A62
c2
c4
I1
c6
c5
c1
a3
a1
a5
a4
a2
A35
(*1)
A88
(*2)
A110
A33
A14
A84
A38
A7
A6
A26
A67

A 6 Vacuum Warning Switch Assembly
A 7 Vacuum Warning Switch Assembly
A 14 Door Control Switch Assembly
A 26 Step Light Assembly
A 33 Battery Relay
A 35 Battery
A 36 Side Turn Signal Light Assembly RH
A 38 Side Turn Signal Light Assembly LH
A 39 Fuel Sender Gage Assembly
A 42 LPG Solenoid Valve
A 62 Oxygen Sensor
A 67 Automatic Door Buzzer (Wireless Door Lock Buzzer)
A 70 Front Door Courtesy Light Switch Assembly
A 84 No. 7 Junction Connector
A 88 No. 11 Junction Connector
A 110 No. 4 Exhaust Gas Temperature Sensor

l 1 Outer Rear View Mirror Assembly LH


a 1 Headlight Assembly RH
a 2 Headlight Assembly LH
a 3 Headlight Assembly RH
a 4 Headlight Assembly LH
a 5 Low Pitched Horn Assembly

c 1 Front Speed Sensor RH
c 2 Generator Assembly
c 4 Generator Assembly
c 5 Air Conditioning Compressor Relay
c 6 Engine Oil Pressure Switch Assembly

A 6
Gray




A 7




A 14
Gray




A 26
White




A 33
Black

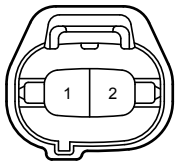


A 35



A 36
Gray

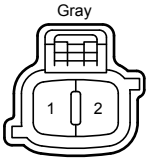


A 38
Gray

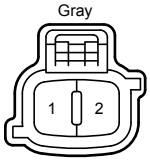

A 39
Gray




A 42
Gray

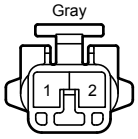

A 62
Dark Gray




A 67
Gray

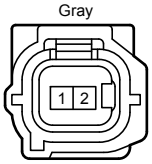


A 70
White



A 84
Gray

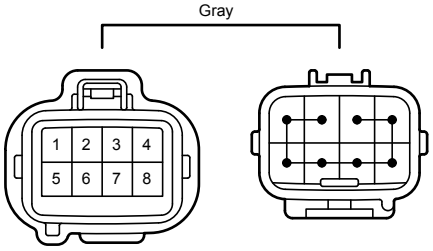


A 88
White

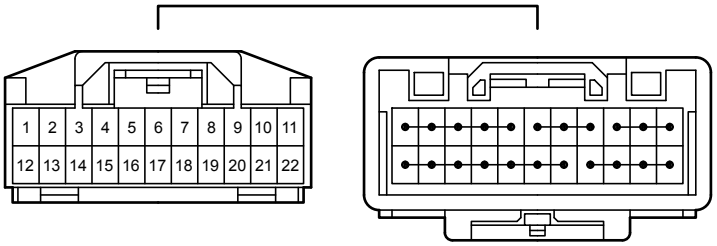


A110
Black




I 1
White

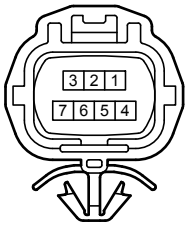

a 1
Gray

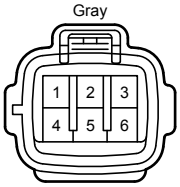

a 2
Gray

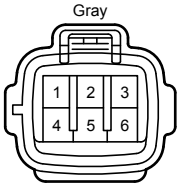


a 3
Gray



a 4
Gray




a 5
Black




c 1
Gray



c 2
Black

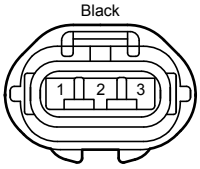

c 4



c 5
Gray



c 6
Gray

