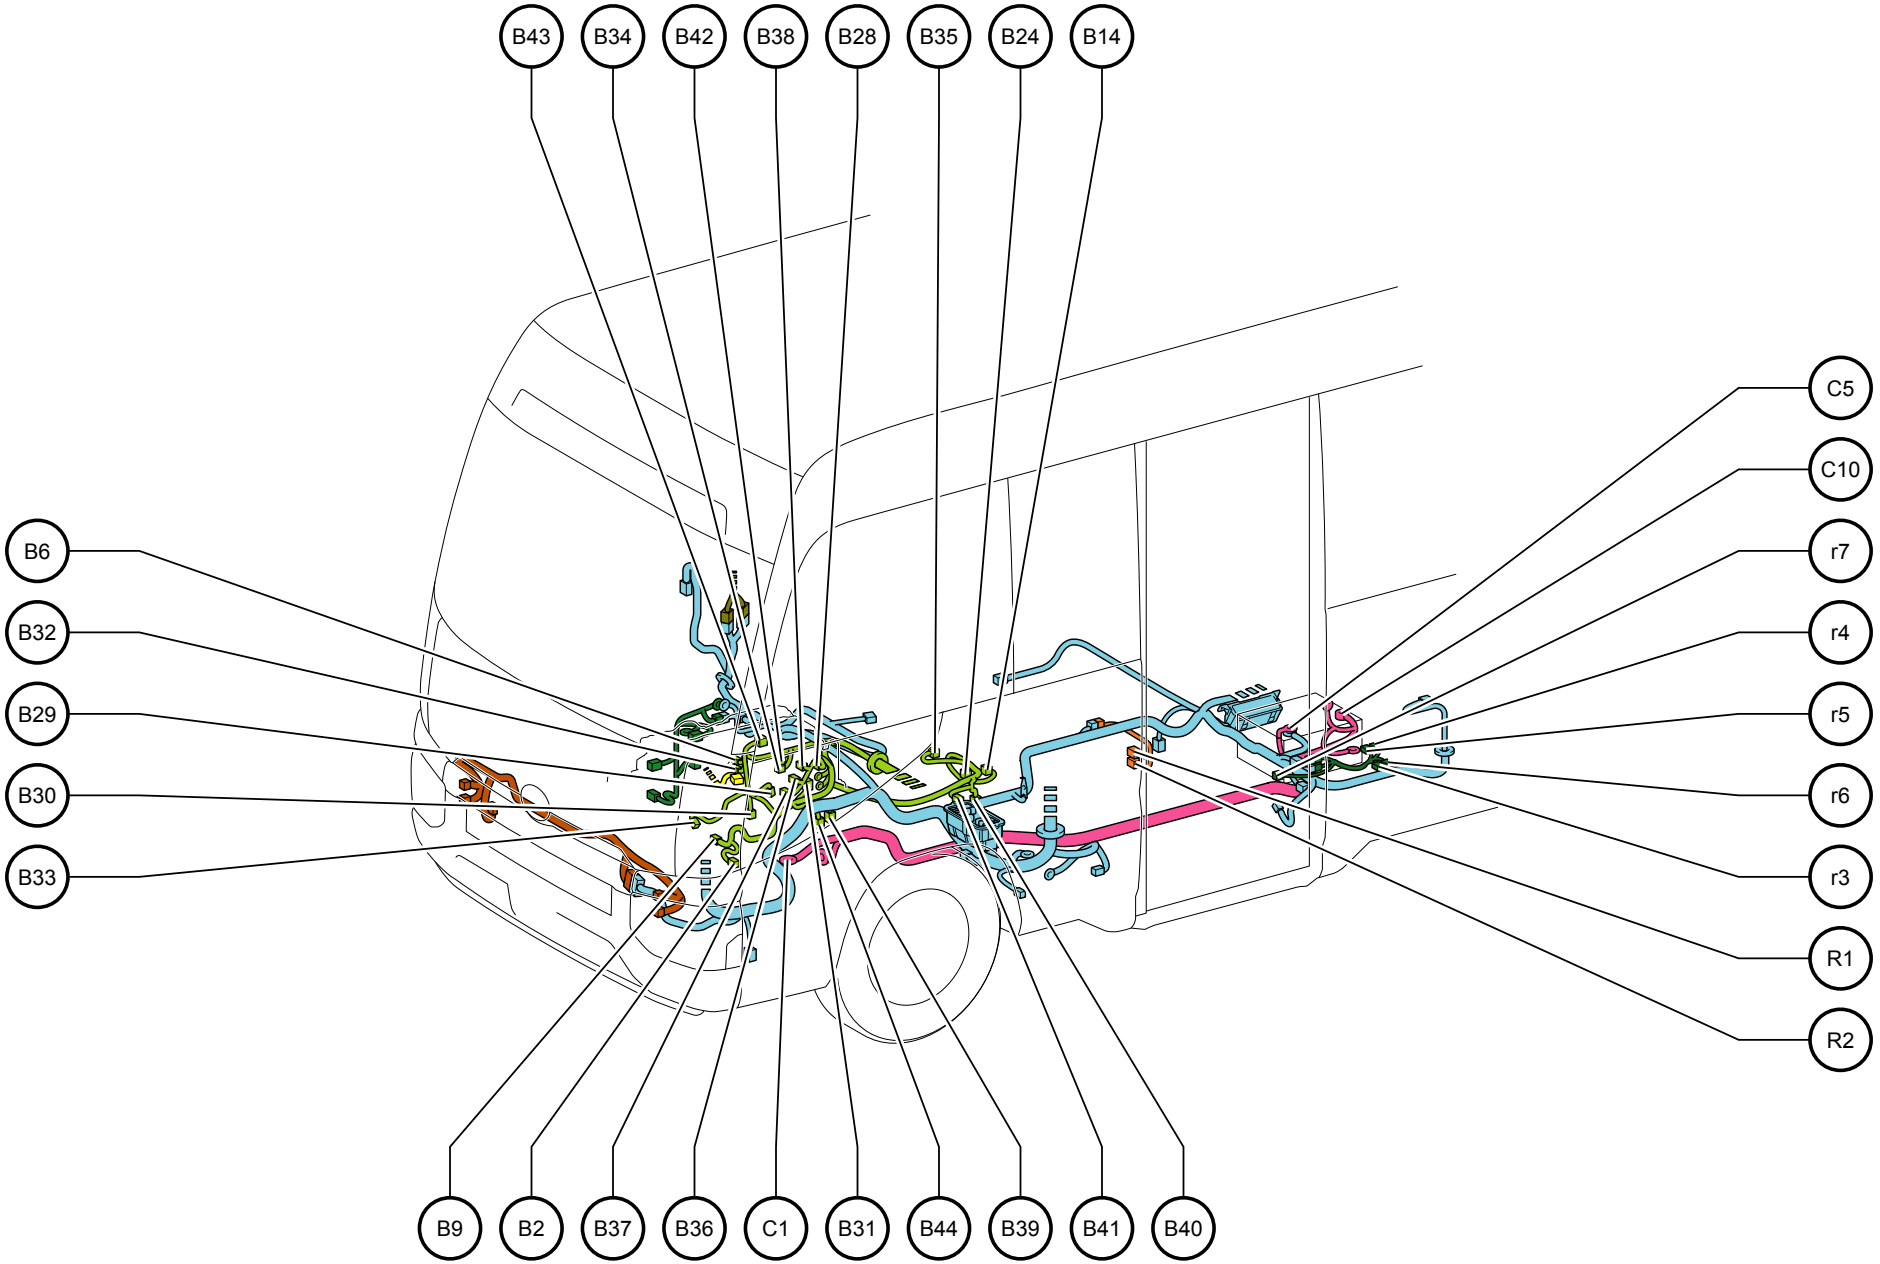

B43
B34
B42
B38
B28
B35
B24
B14
C5
C10
B6
r7
B32
r4
B29
r5
B30
r6
B33
r3
R1
R2
B9
B2
B37
B36
C1
B31
B44
B39
B41
B40

B 2 Front Speed Sensor LH
B 6 E.F.I. Engine Coolant Temperature Sensor
B 9 Engine Oil Level Sensor
B 14 Speed Meter Sensor
B 24 Back-Up Light Switch Assembly
B 28 E.F.I. Vacuum Sensor Assembly
B 29 Distributor Assembly
B 30 Power Steering Oil Pressure Switch
B 31 Throttle Position Sensor
B 32 Water Temperature Sender Gage Assembly
B 33 E.F.I. Intake Air Temperature Sensor
B 34 Igniter Assembly
B 35 No. 2 Oxygen Sensor
B 36 Air Fuel Ratio Control Motor Assembly
B 37 LPG Injector Assembly
B 38 LPG Idle Speed Control Valve Assembly
B 39 Ignition Coil Assembly
B 40 LPG Pre Heater Assembly
B 41 No. 2 Fuel Cut Off Valve Assembly
B 42 Solenoid Resistor
B 43 Check Connector
B 44 Starter Assembly

C 1 Starter Assembly
C 5 Battery
C 10 Battery

R 1 Brake Actuator Assembly
R 2 Brake Actuator Assembly

r 3 Condenser Blower Motor Assembly
r 4 Cooler Condenser Fan Relay Assembly
r 5 Cooler Condenser Fan Relay Assembly
r 6 Condenser Blower Motor Assembly
r 7 No. 1 Pressure Switch

B 2
Gray



B 6
Dark Gray



B 9
White



(Except 14B 1HZ)

B 9
Gray




(14B, 1HZ)


B 14
Black




B 24
Gray

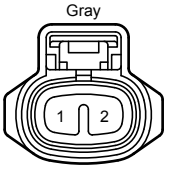

B 28
Black

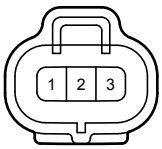


B 29
Black

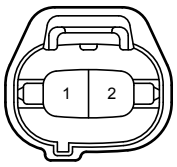

B 30
Dark Gray



B 31
Black




B 32
Gray



B 33
Black



B 34
Black

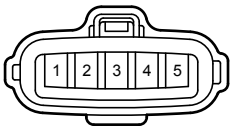

B 35
Dark Gray



B 36
Dark Gray



B 37
Black



B 38
Black



B 39
Dark Gray



B 40
Black




B 41
Dark Gray



B 42
Dark Gray




B 43
Black

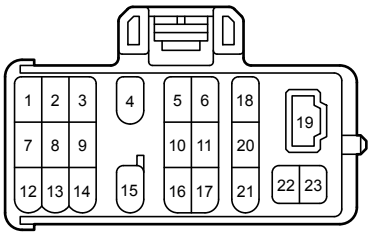


B 44
Gray




C 1




C 5




C 10




R 1
Black

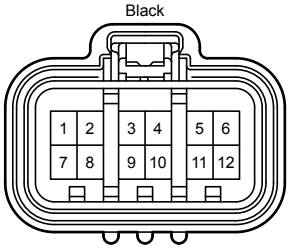

R 2
Black

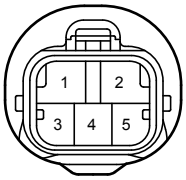

r 3
Black

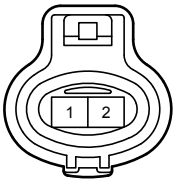


r 4
Gray



r 5
Gray



r 6
Black

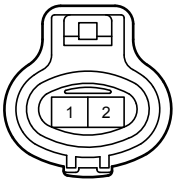

r 7

Black

