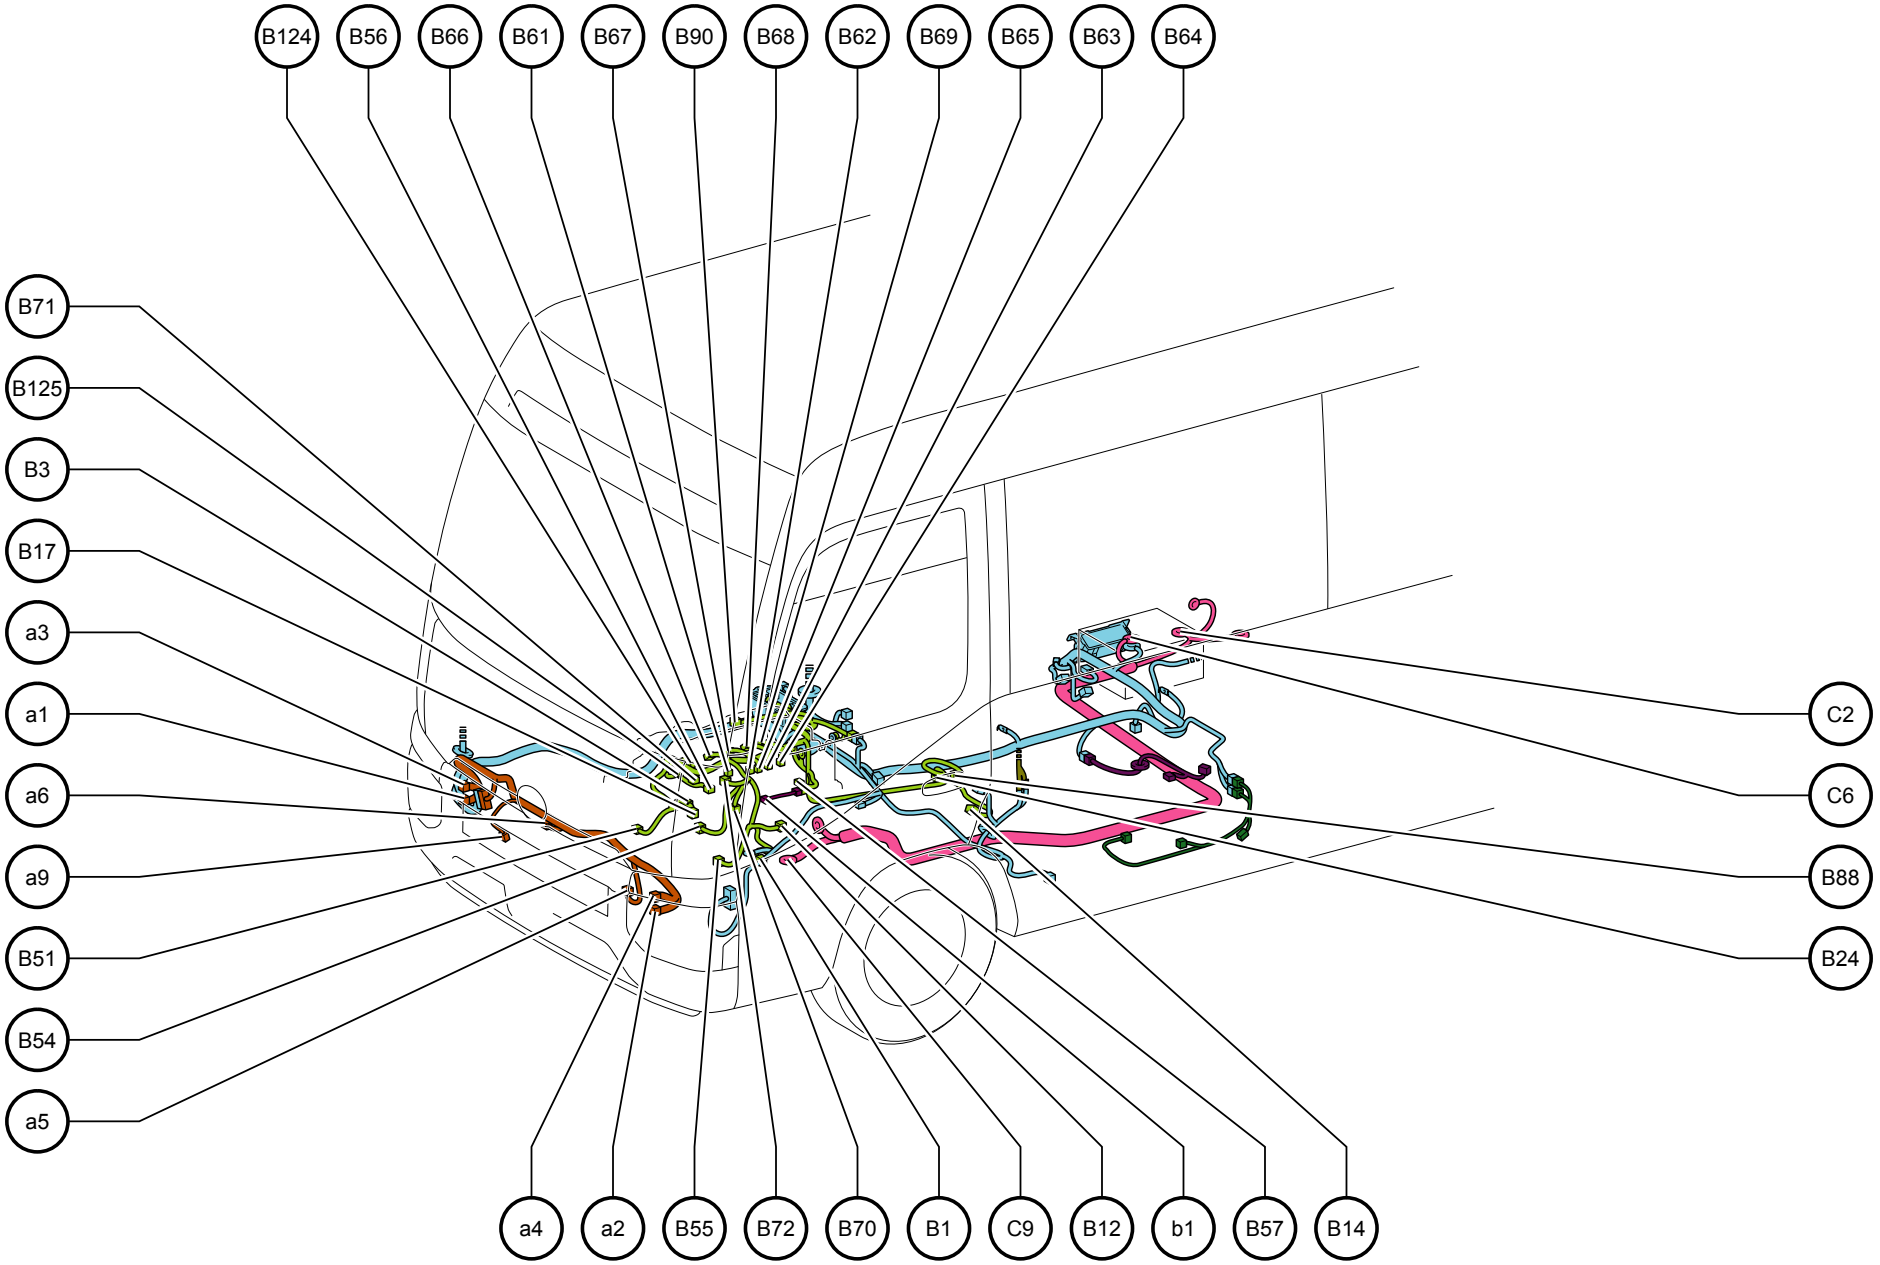

B124
B56
B66
B61
B67
B90
B68
B62
B69
B65
B63
B64
B71
B125
B3
B17
a3
a1
a6
a9
B51
B54
a5
C2
C6
B88
B24
a4
a2
B55
B72
B70
B1
C9
B12
b1
B57
B14


B 1 Front Speed Sensor LH
B 3 Front Speed Sensor RH
B 12 Starter Assembly
B 14 Speed Meter Sensor
B 17 Air Conditioning Compressor Relay
B 24 Back-Up Light Switch Assembly
B 51 Intake Mass Air Flow Meter Sub-Assembly
B 54 Power Steering Oil Pressure Switch
B 55 Engine Oil Level Sensor
B 56 Engine Oil Pressure Switch Assembly
B 57 E.F.I. Engine Coolant Temperature Sensor
B 61 Injector Assembly No. 1
B 62 Injector Assembly No. 2
B 63 Injector Assembly No. 3
B 64 Injector Assembly No. 4
B 65 Throttle Position Sensor
B 66 Ignition Coil Assembly No. 1
B 67 Ignition Coil Assembly No. 2
B 68 Ignition Coil Assembly No. 3
B 69 Ignition Coil Assembly No. 4
B 70 Crank Position Sensor
B 71 Cam Position Sensor
B 72 Camshaft Timing Oil Control Valve Assembly
B 88 Air Fuel Ratio Sensor
B 90 Variable Resistor Assembly
B 124 Generator Assembly
B 125 Generator Assembly

C 2 Battery
C 6 Battery
C 9 Starter Assembly


a 1 Headlight Assembly RH
a 2 Headlight Assembly LH
a 3 Headlight Assembly RH
a 4 Headlight Assembly LH
a 5 Low Pitched Horn Assembly
a 6 Cooler (Ambient Temperature Sensor) Thermistor
a 9 Cooler (Ambient Temperature Sensor) Thermistor

b 1 Knock Control Sensor

B 1
Black

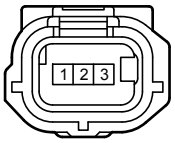

B 3
Black

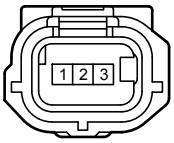

B 12
Black




B 14
Black




B 17
Gray



B 24
Gray

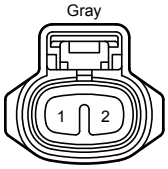


B 51
Black

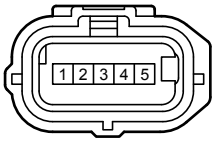

B 54
Black




B 55
Gray

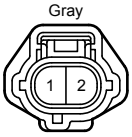


B 56
Gray




B 57
Dark Gray

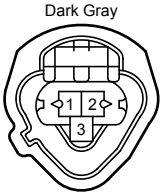


B 61
Brown




B 62
Gray

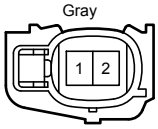


B 63
Brown




B 64
Gray

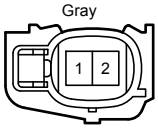


B 65
Black

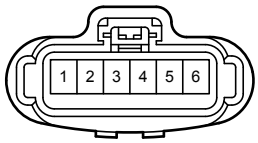


B 66
Black




B 67
Black



B 68
Black




B 69
Black



B 70
Dark Gray



B 71
Black

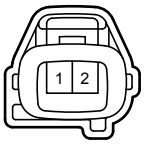

B 72
Black



B 88
Dark Gray




B 90
Black




B124
Gray




B125




C 2




C 6



C 9



a 1
Gray

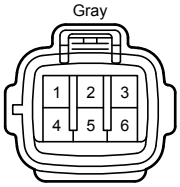

a 2
Gray



a 3
Gray



a 4
Gray




a 5
Black



a 6
Black



a 9
Black

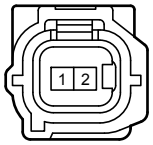

b 1
Black

