



J14
J46
J35
J38
J39
J40
J17
J13
J16
J23
J1
J2
J15
J12
J26
J37
J20
J21
J22
J42
J41
J103
J24
J27
J45
J30
J31

J 1 Combination Meter Assembly
J 2 Combination Meter Assembly
J 12 Air Conditioning Amplifier Assembly
J 13 Cooler Control Switch Assembly
J 14 Front Heater Blower Case Sub-Assembly
J 15 Blower Resistor
J 16 Heater Blower Switch
J 17 Rear Heater Blower Switch
J 20 No. 1 Power Outlet Socket Assembly
J 21 No. 1 Room Light Switch Assembly
J 22 No. 2 Room Light Switch Assembly
J 23 Hazard Warning Signal Switch Assembly
J 24 Rear Window Defogger Switch Assembly
J 26 Door Control Switch
J 27 Outer Mirror Switch Assembly
J 30 DPF Switch Assembly
J 31 Headlight Leveling Switch
J 35 Emergency Switch
J 37 Door Lock Unlock Switch
J 38 Option Connector (Door Relay)
J 39 Option Connector (Door Relay)
J 40 Turn Signal Flasher Assembly
J 41 Transmission Control Switch
J 42 Shift Lock Control ECU
J 45 DLC3
J 46 Tachograph Assembly
J 103 Shift Lock Control ECU

J 1
White

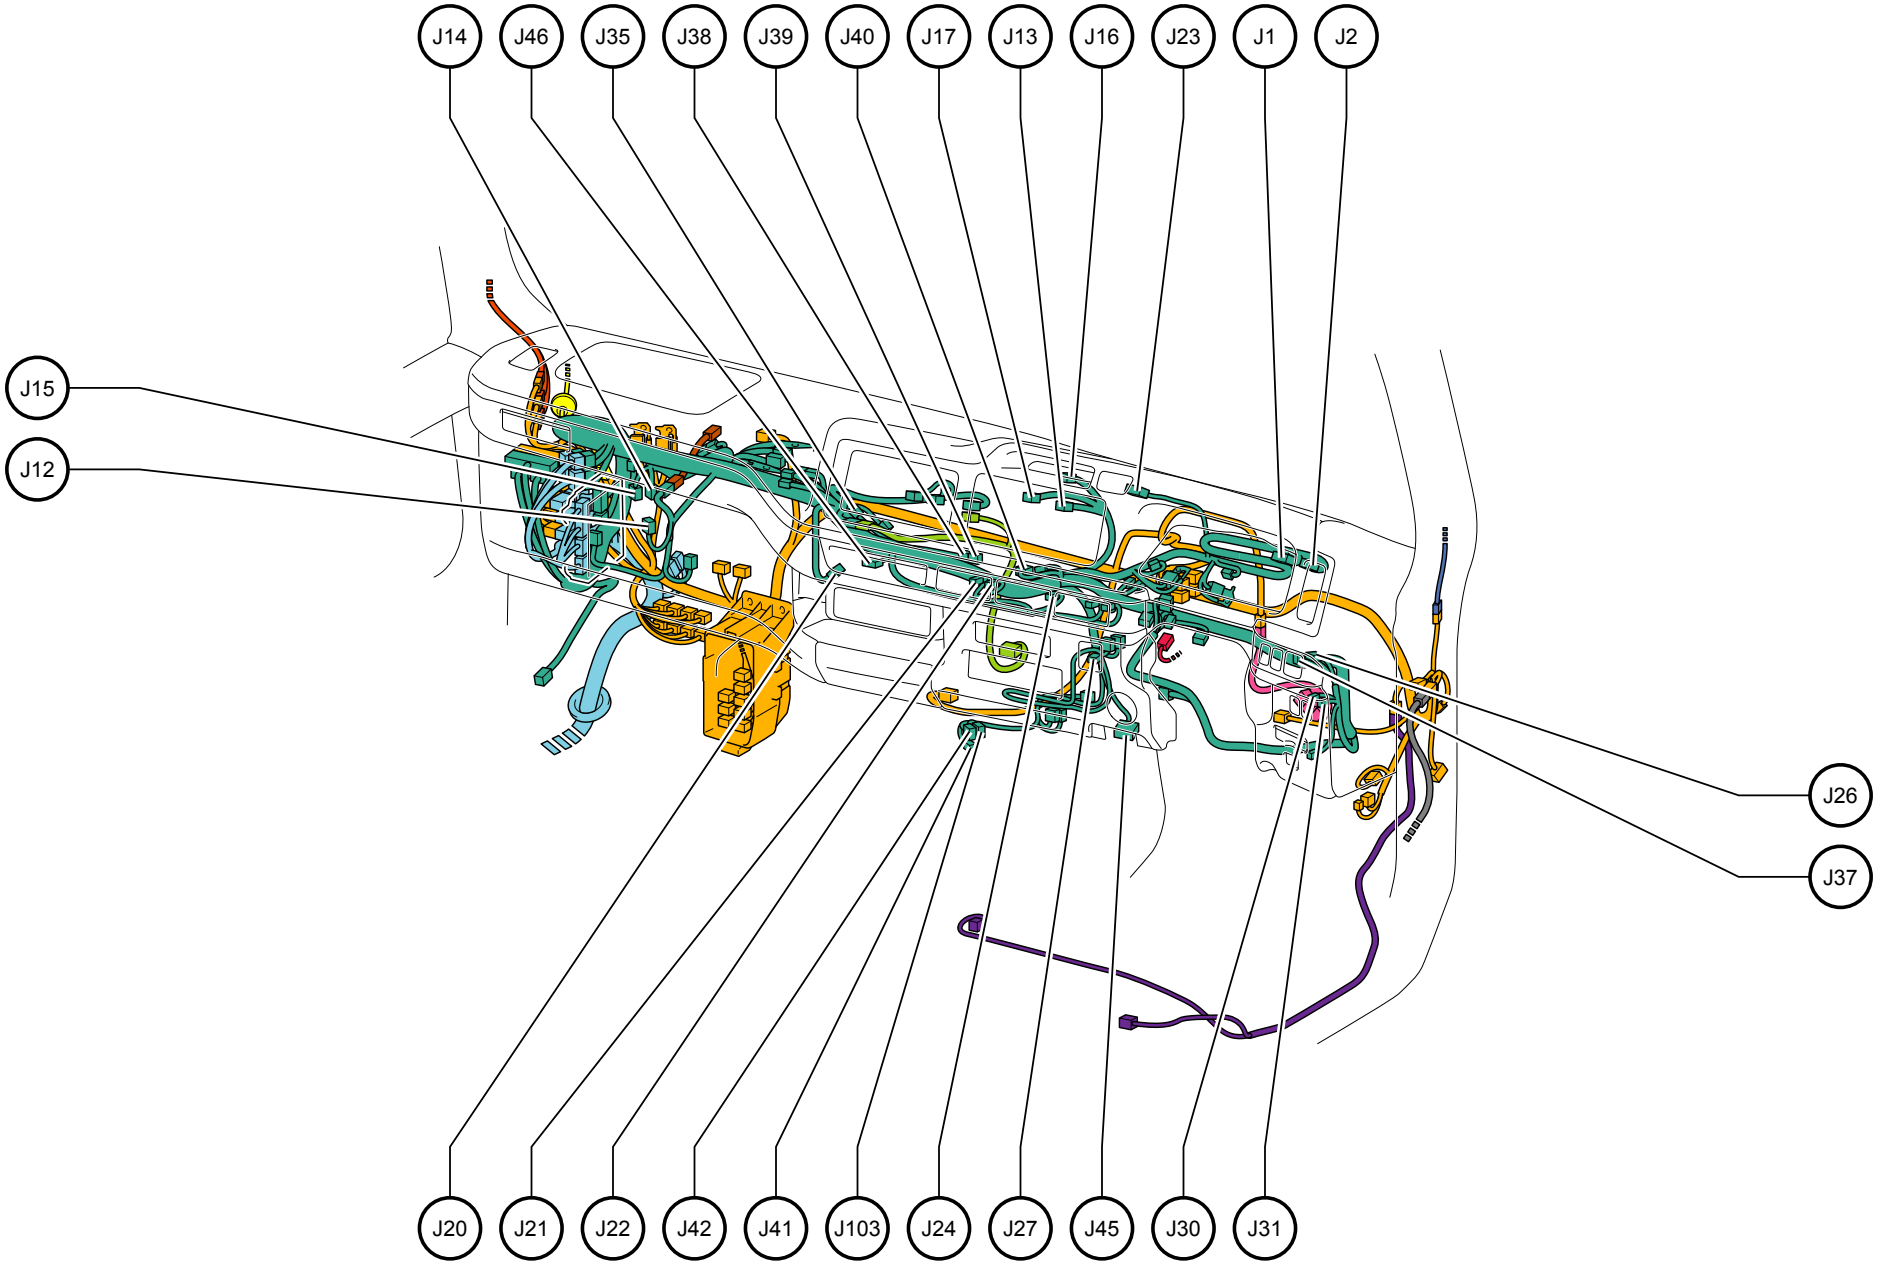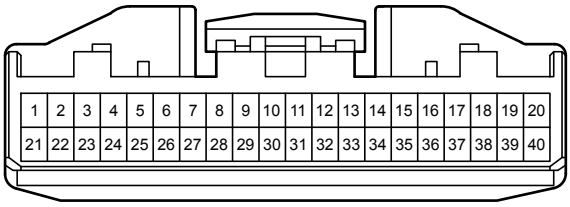


J 2
White

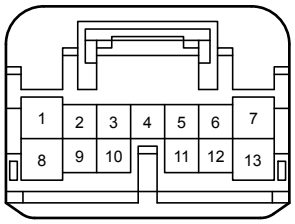


J 12
Black




J 13
Gray




J 14
White




J 15
White

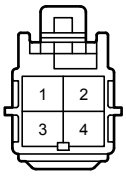


J 16
White

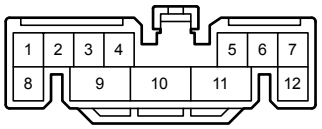


J 17
Black

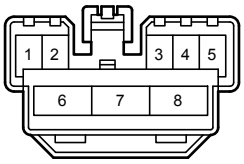


J 20
White




J 21
Gray

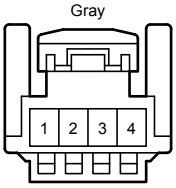


J 22
Black

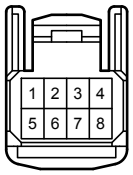


J 23
Black

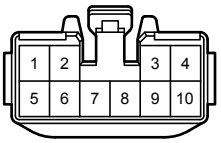


J 24
Black

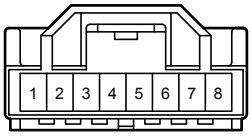


J 26
White

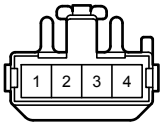


J 27
White

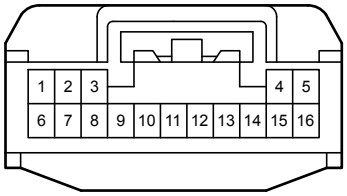


J 30
Gray

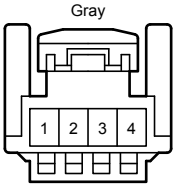


J 31
Black




J 35
White




J 37
Gray

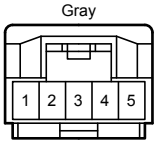


J 38
White

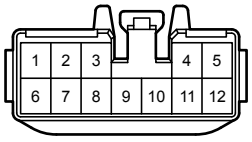


J 39
White

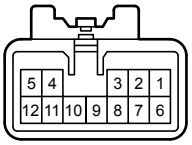


J 40
Black

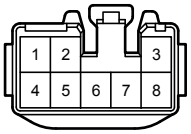


J 41
Blue




J 42
White

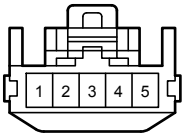

J 45
Black

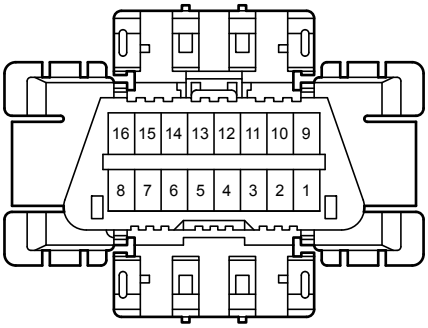

J 46
White

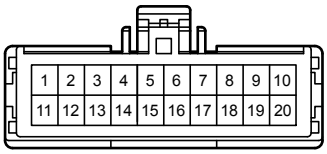

J103
White

