




(ACC)
(BAT)
10A
ACC
15A
RADIO
2
2
40
4A
10
4A
J55
Radio Receiver Assembly
B
ACC
GND
4
3
7
R
V
(RHD)
R
(LHD)
R
(LHD)
R
(RHD)
R
7
7
9
9
J90
No. 63
Junction Connector
J75
No. 27
Junction Connector
R
(LHD)
V
(RHD)
BR
JB


J55
Radio Receiver Assembly
FL–
FL+
FR–
FR+
6
2
5
1
V
P
L
LG
1 JF2
17 JF2
9 JF2
25 JF2
7 SF1
1 TF1
13 SF1
8 TF1
1 SF1
7 TF1
8 SF1 (LHD)
13 TF1 (RHD)
10 A
10 B
4 A
4 B
7 A
7 B
1 A (LHD)
1 B (RHD)
S16(A) No. 64 Junction Connector
T10(B) No. 37 Junction Connector
11 A
11 B
12 A
12 B
5 A
5 B
6 A
6 B
8 A
8 B
9 A
9 B
2 A
2 B
3 A (LHD)
3 B (RHD)
Y
B
V
P
W
R
L
LG
2 A
2 B
1 A (LHD)
1 B (RHD)
–
+
S14(A)
Rear No. 2 Speaker with Box Assembly
T9(B)
Rear No. 2 Speaker with Box Assembly
S12(A)
Front No. 2 Speaker with Box Assembly
T7(B)
Front No. 2 Speaker with Box Assembly
S13(A)
Rear No. 1 Speaker with Box Assembly
T8(B)
Rear No. 1 Speaker with Box Assembly
S11(A)
Front No. 1 Speaker with Box Assembly
T6(B)
Front No. 1 Speaker with Box Assembly


J 55
White

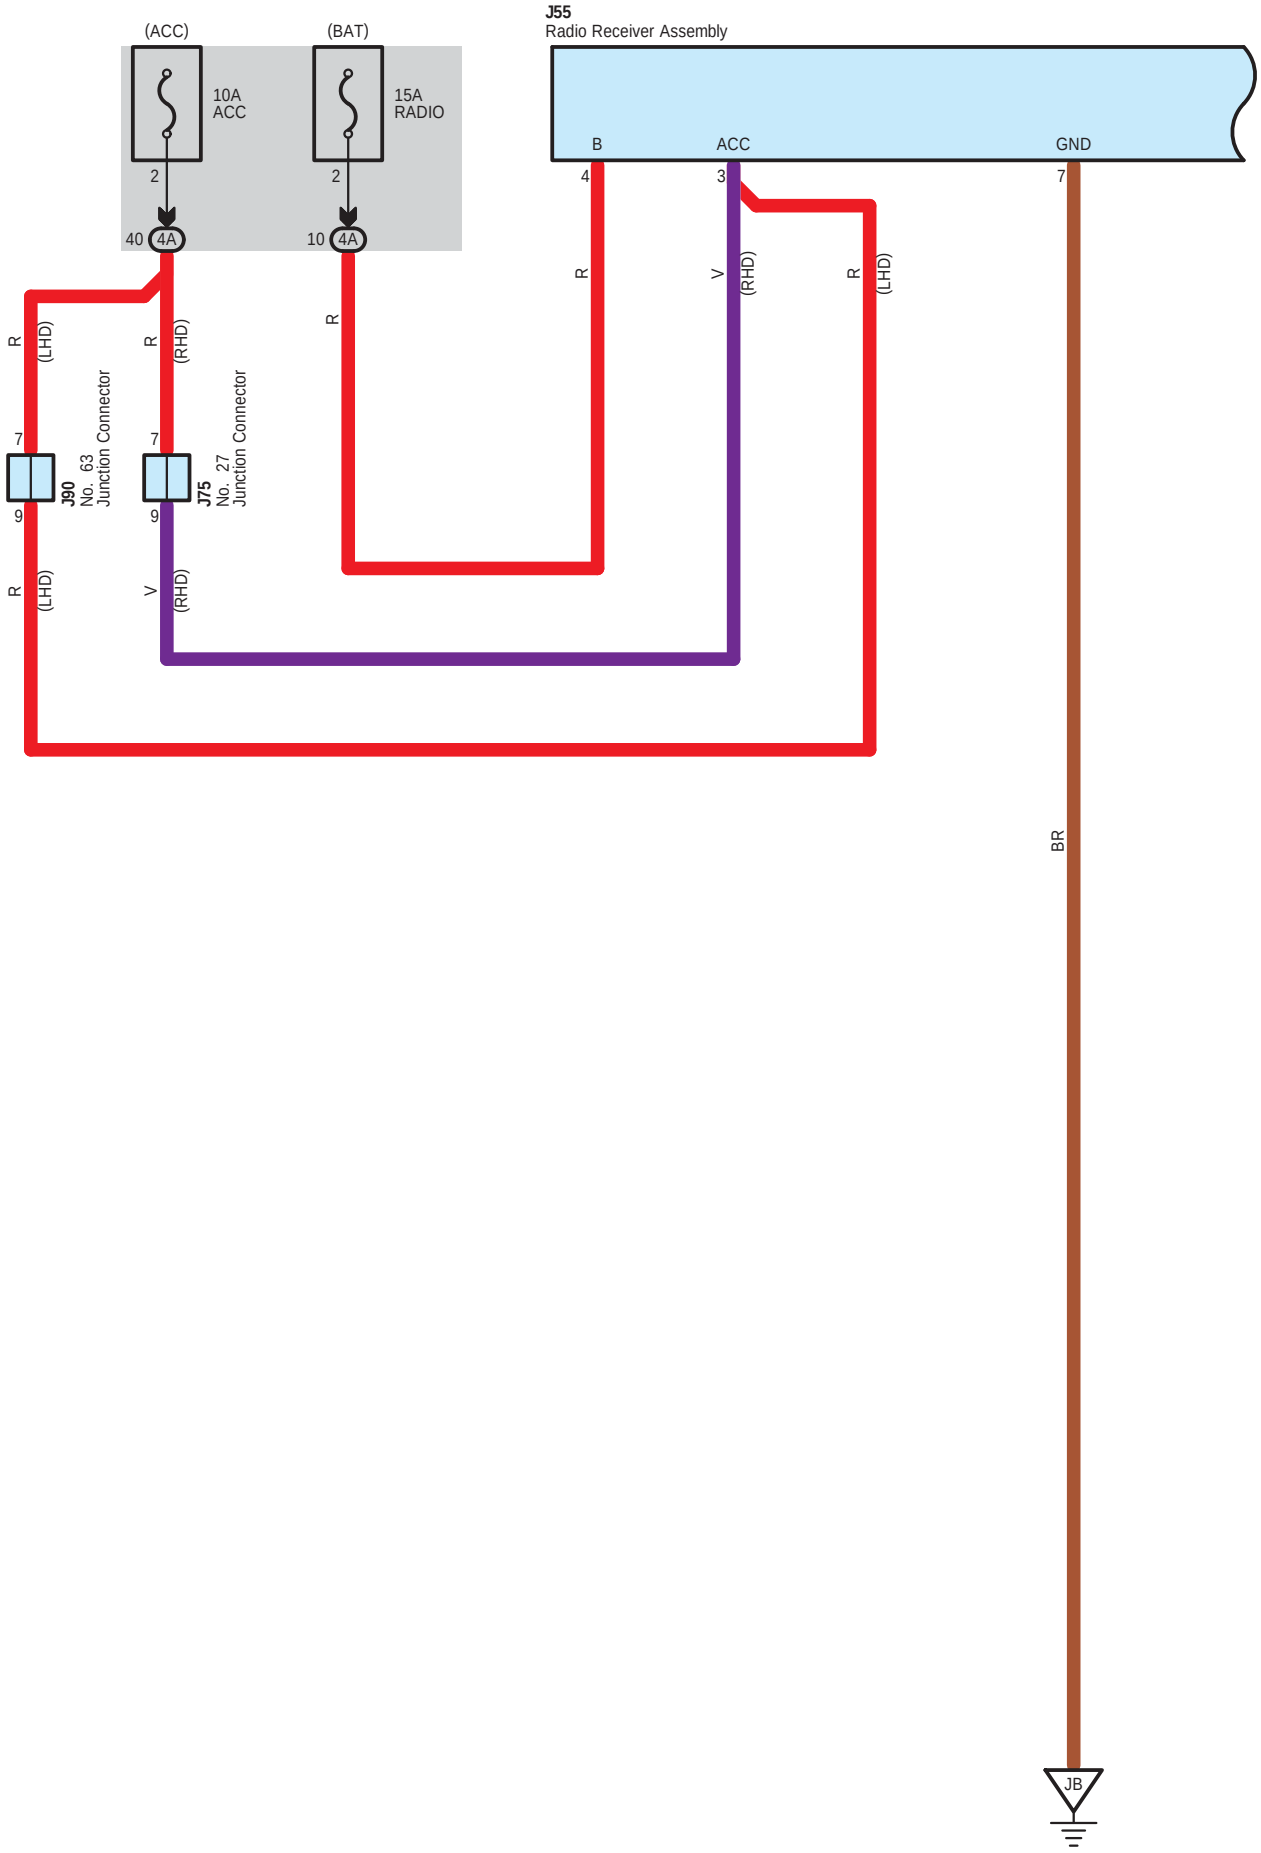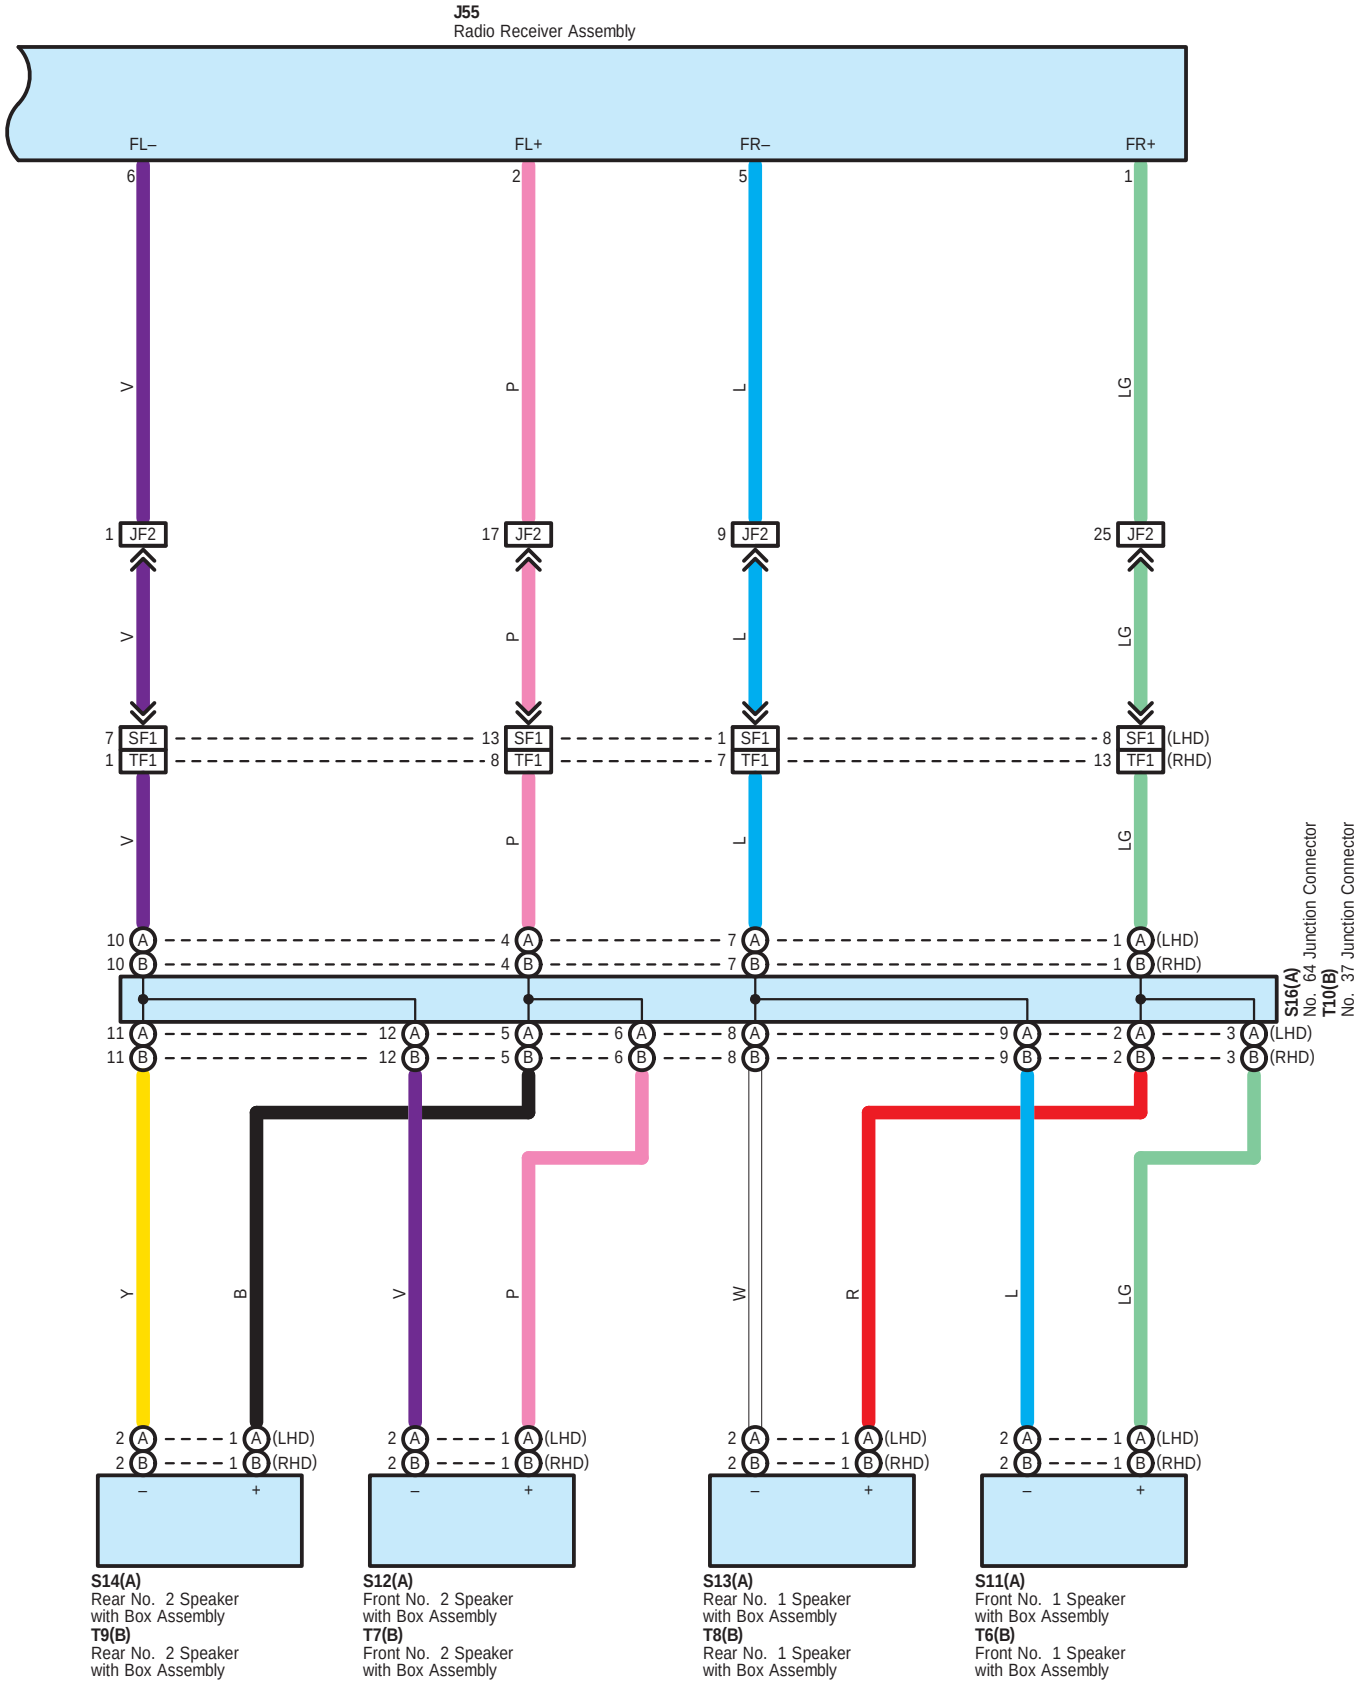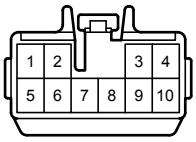


J 75
White

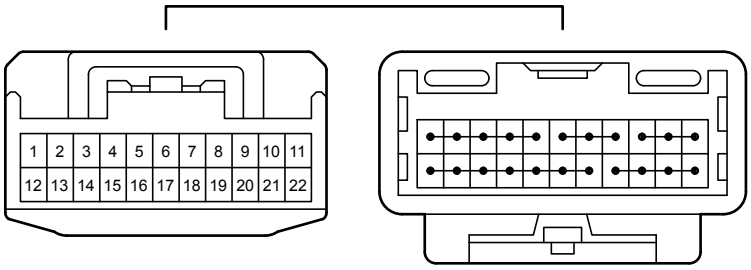


J 90
White

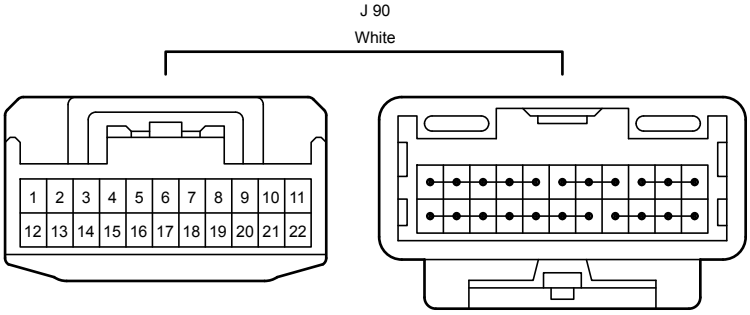


S 11
White




S 12
White




S 13
White



S 14
White




S 16
Gray

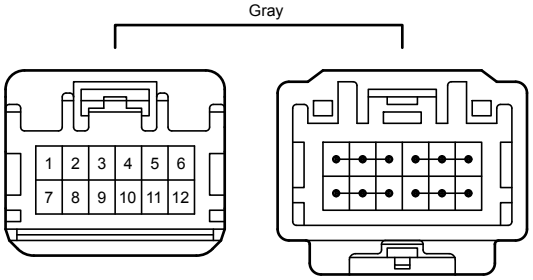


T 6
White




T 7
White




T 8
White




T 9
White




T 10
Gray

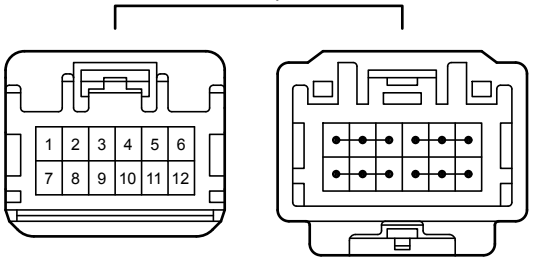


4A
White

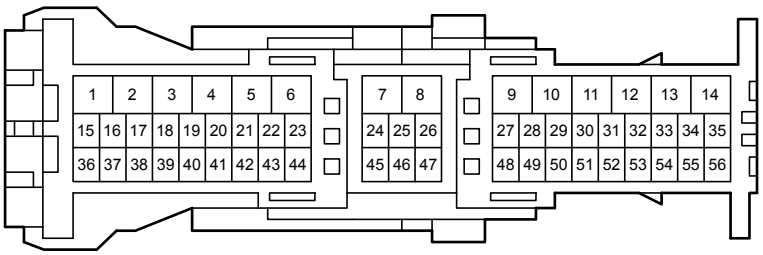

JF2
Gray

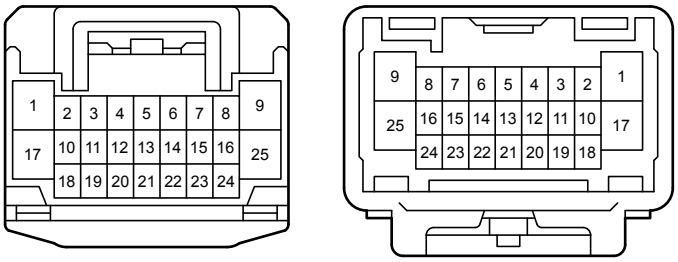

SF1
White

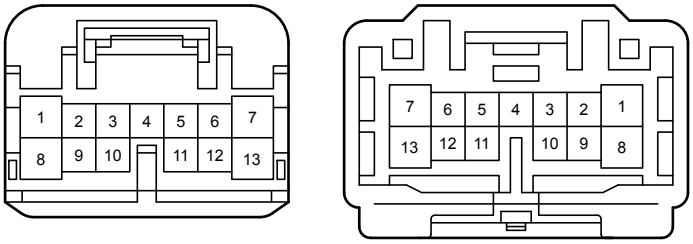

TF1
White

