




(ACC)
(BAT)
o1
Microphone Amplifier Assembly
10A
ACC
15A
RADIO
+BI
ACCI
ACCO
2
2
20
19
12
40 4A
10 4A
Y
LG
V
R (LHD)
R (RHD)
R
7
7
J90
No. 63
Junction Connector
J75
No. 27
Junction Connector
9
9
R (LHD)
V (RHD)
3 Jo1
4 Jo1
V
LG



o1
Microphone Amplifier Assembly
GND
+BO
FRI+
FRI–
FLI+
FLI–
GND
1
11
4
5
2
3
10
B
G
P
V
W
B
L
7
4
1
5
2
6
7
Jo1
GND
B
FR+
FR–
FL+
FL–
ACC
3
o2
Radio Receiver Assembly
V
BR
JB


o1
Microphone Amplifier Assembly
FLO–
FLO+
FRO–
FRO+
7
6
9
8
W
LG
G
BR
6 Jo1
2 Jo1
5 Jo1
1 Jo1
V
P
L
LG
1 JF2
17 JF2
9 JF2
25 JF2
7 SF1
1 TF1
13 SF1
8 TF1
1 SF1
7 TF1
8 SF1 (LHD)
13 TF1 (RHD)
S16(A)
No. 64
Junction Connector
T10(B)
No. 37
Junction Connector
10 A
10 B
4 A
4 B
7 A (LHD)
7 B (RHD)
1 A (LHD)
1 B (RHD)
11 A
11 B
12 A
12 B
5 A
5 B
6 A
6 B
8 A
8 B
9 A
9 B
2 A
2 B
3 A (LHD)
3 B (RHD)
Y
B
V
P
W
R
L
LG
2 A
2 B
1 A (LHD)
1 B (RHD)
–
+
S14(A)
Rear No. 2 Speaker
with Box Assembly
T9(B)
Rear No. 2 Speaker
with Box Assembly
S12(A)
Front No. 2 Speaker
with Box Assembly
T7(B)
Front No. 2 Speaker
with Box Assembly
S13(A)
Rear No. 1 Speaker
with Box Assembly
T8(B)
Rear No. 1 Speaker
with Box Assembly
S11(A)
Front No. 1 Speaker
with Box Assembly
T6(B)
Front No. 1 Speaker
with Box Assembly


J 75
White

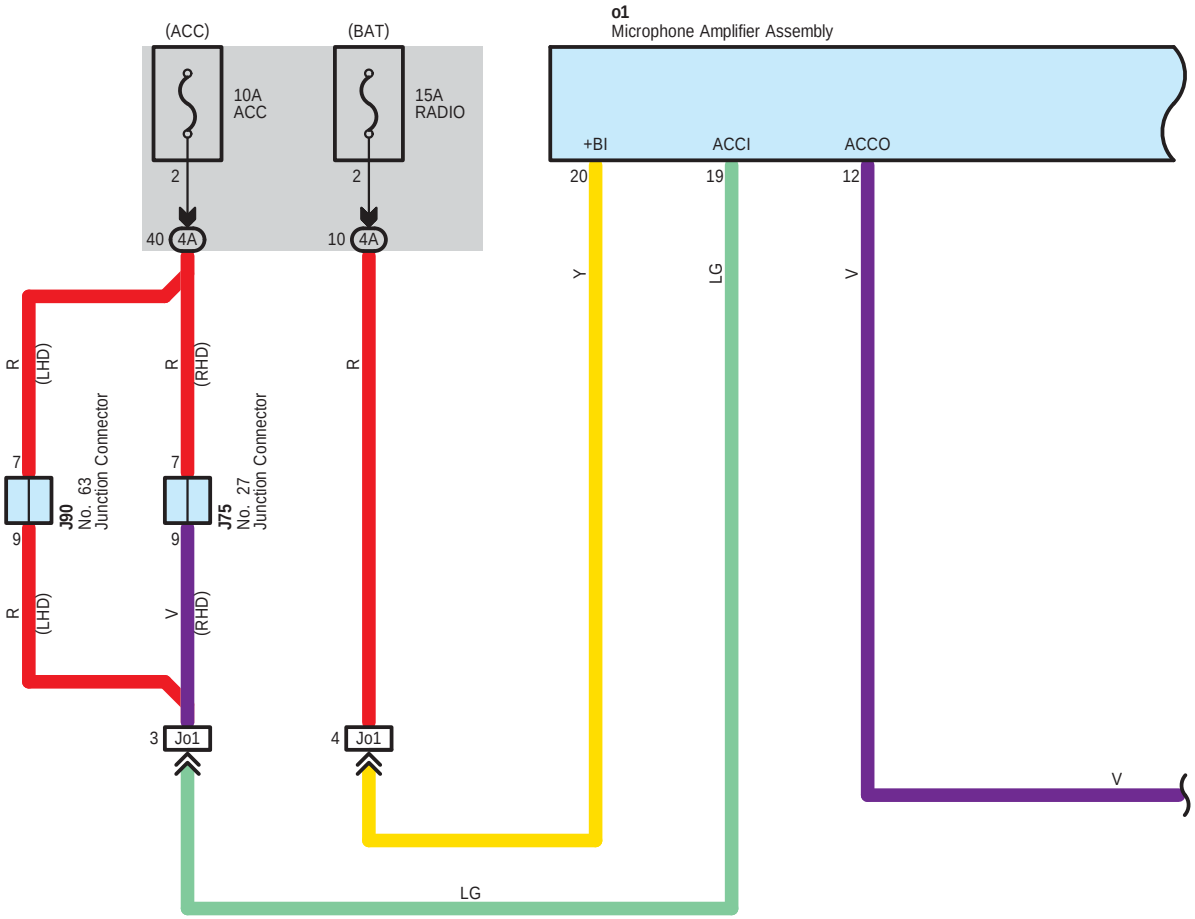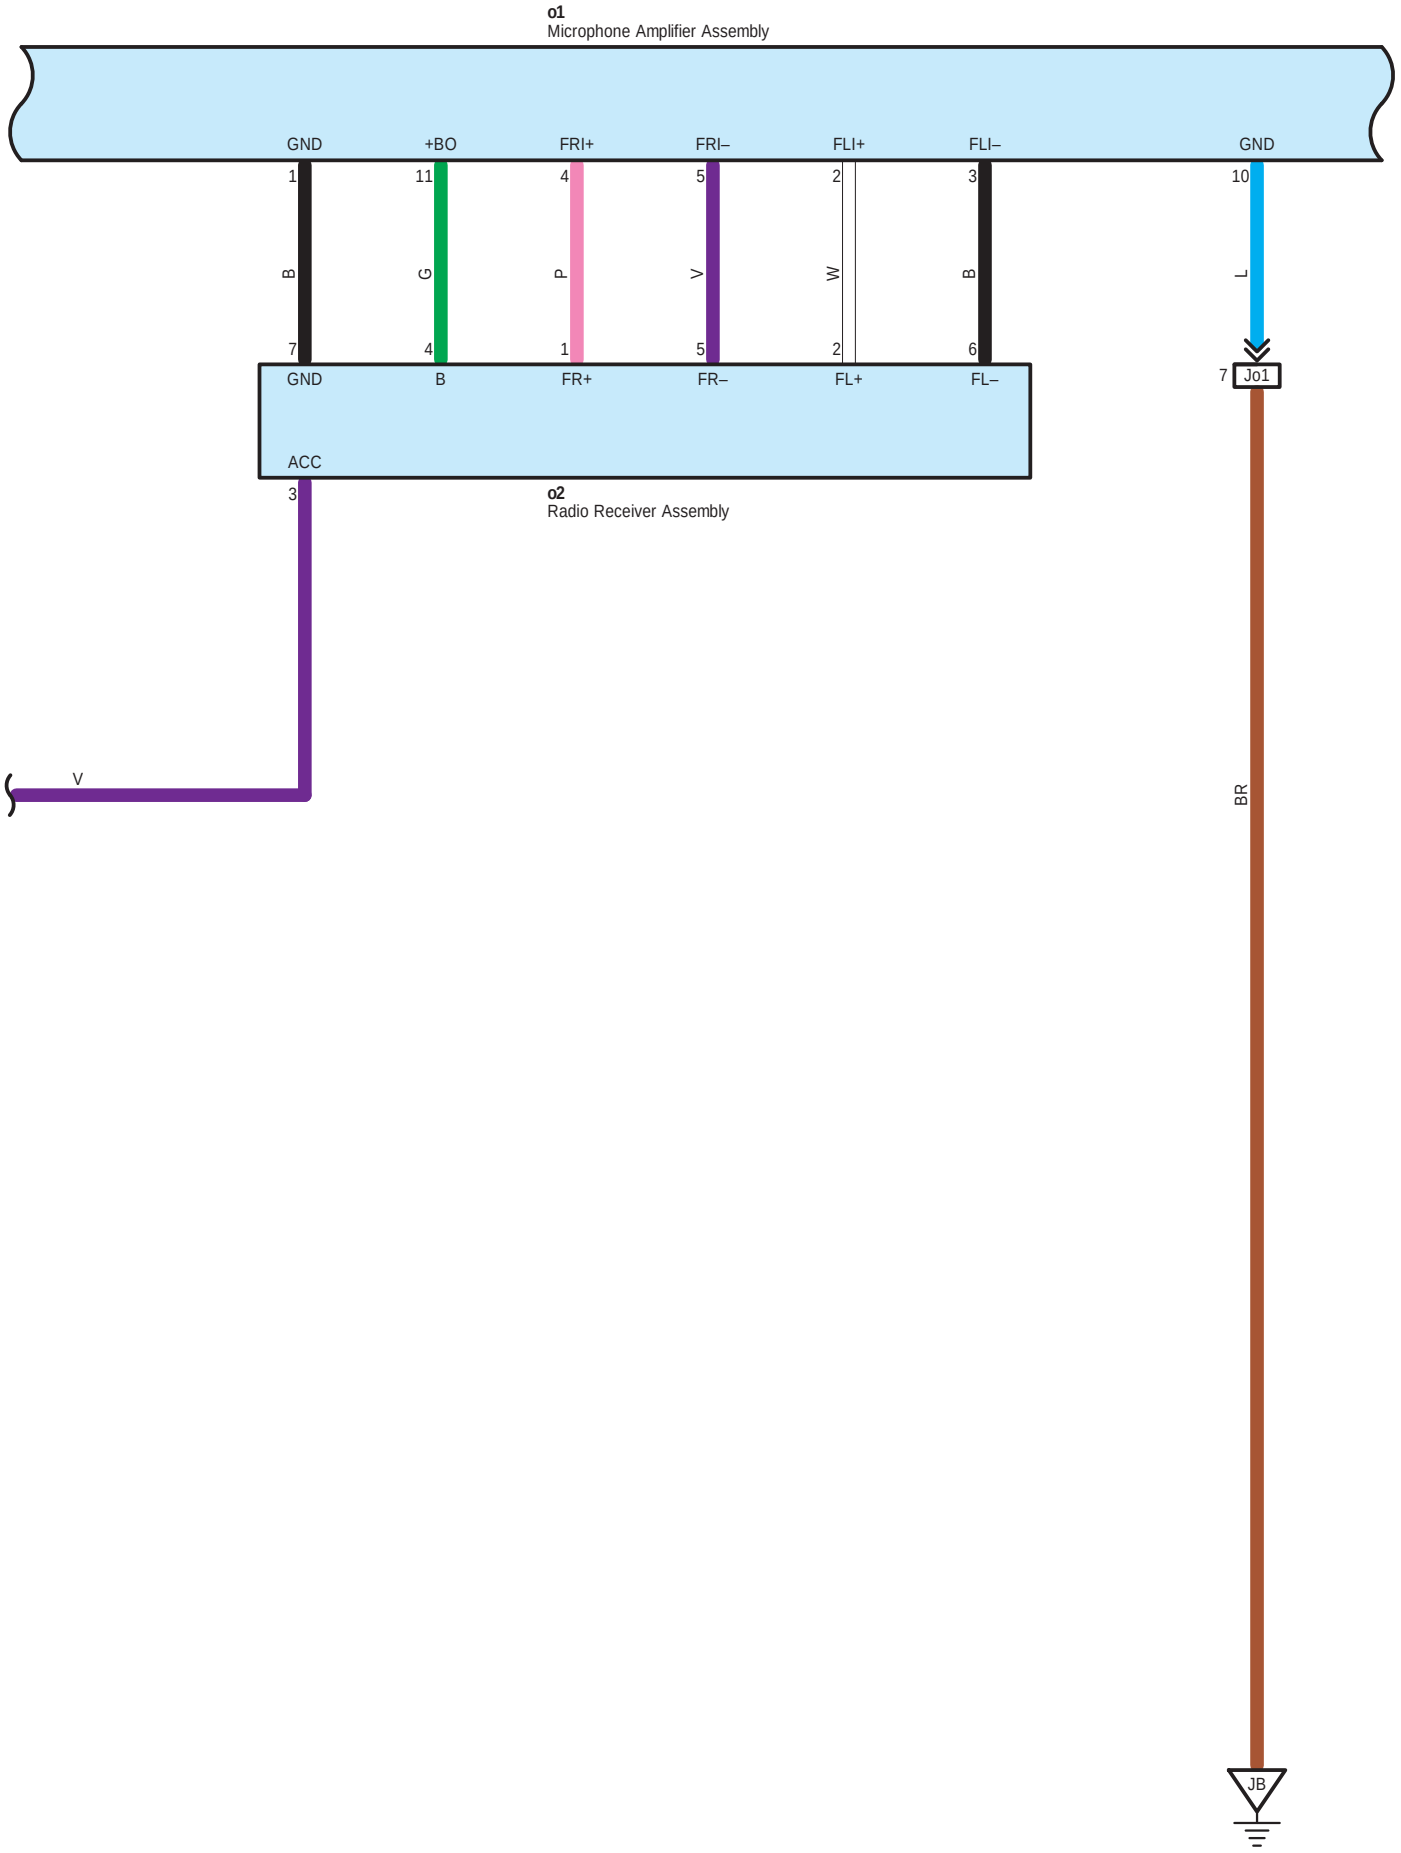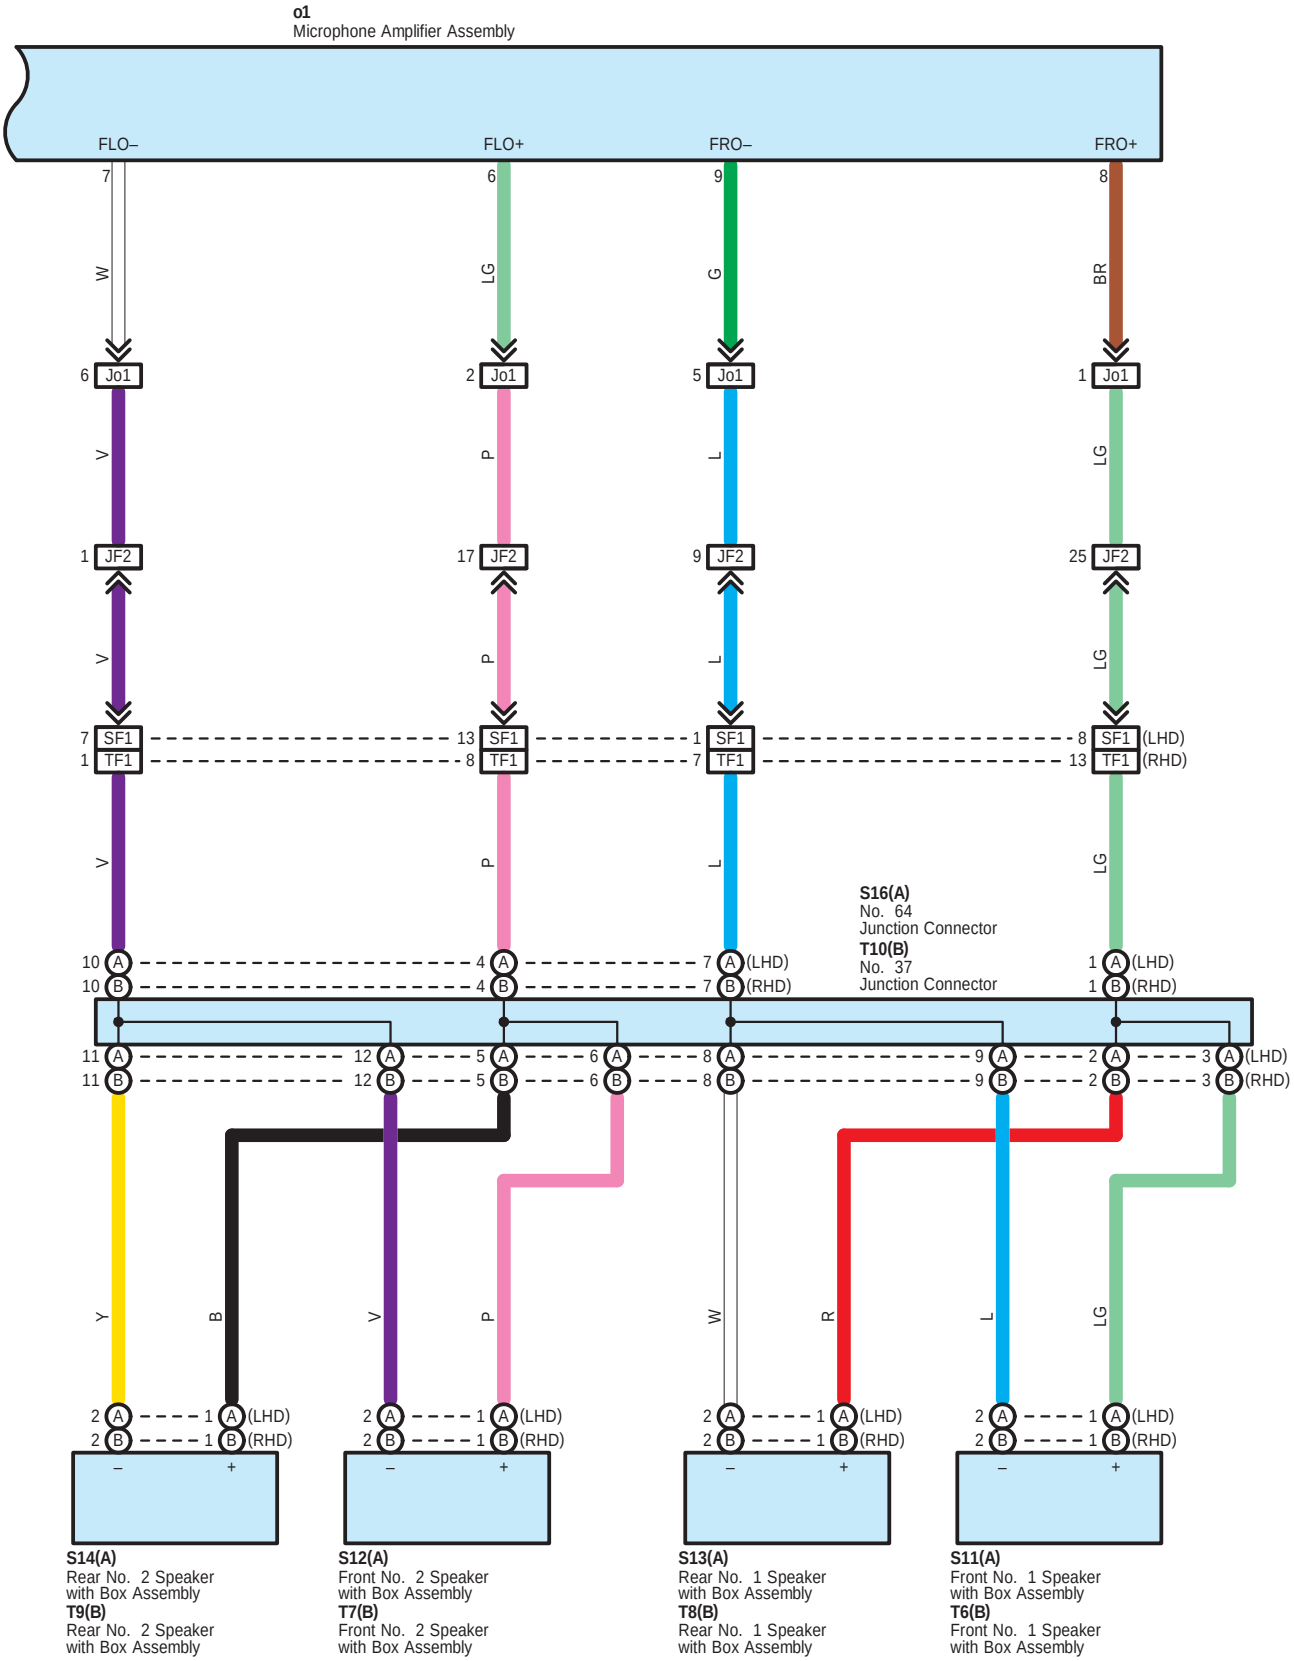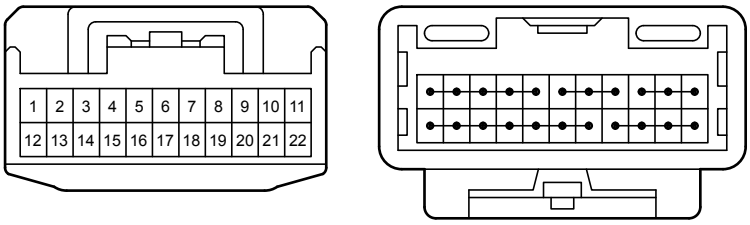


J 90
White

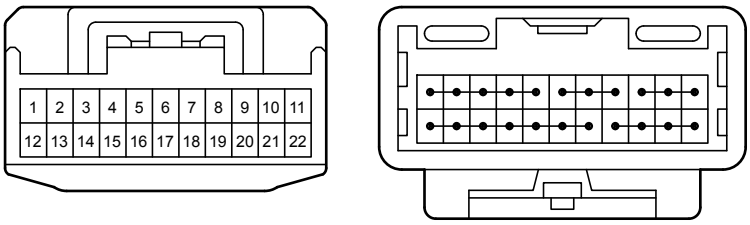


S 11
White




S 12
White




S 13
White



S 14
White




S 16
Gray

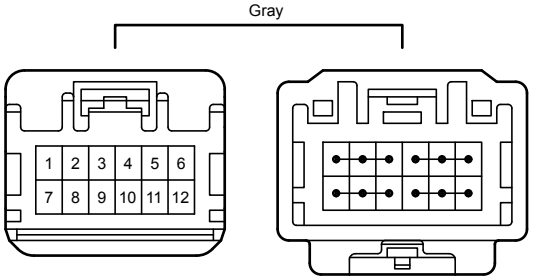


T 6
White




T 7
White




T 8
White




T 9
White




T 10
Gray

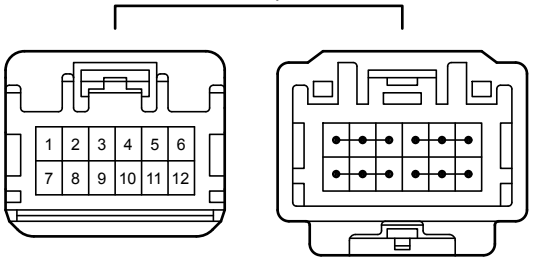


o 1
White

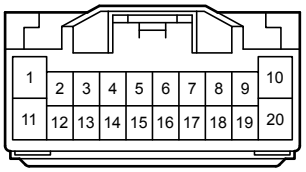


o 2
White

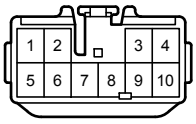


4A
White

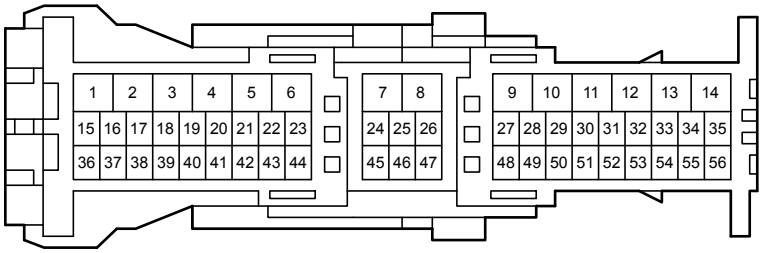


JF2
Gray

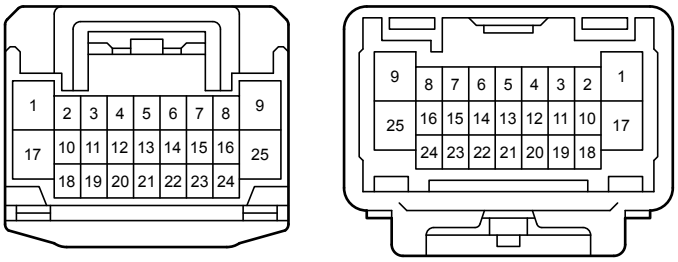

Jo1
White

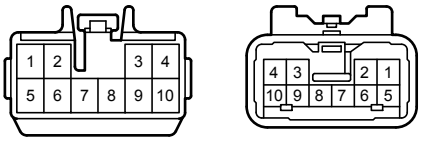

SF1
White

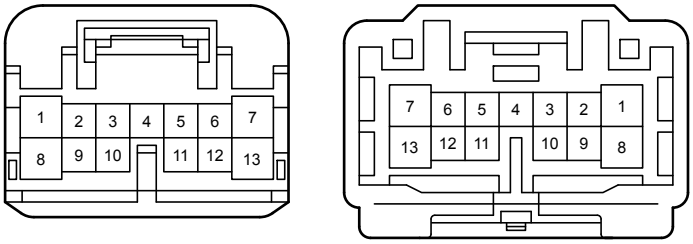

TF1
White

