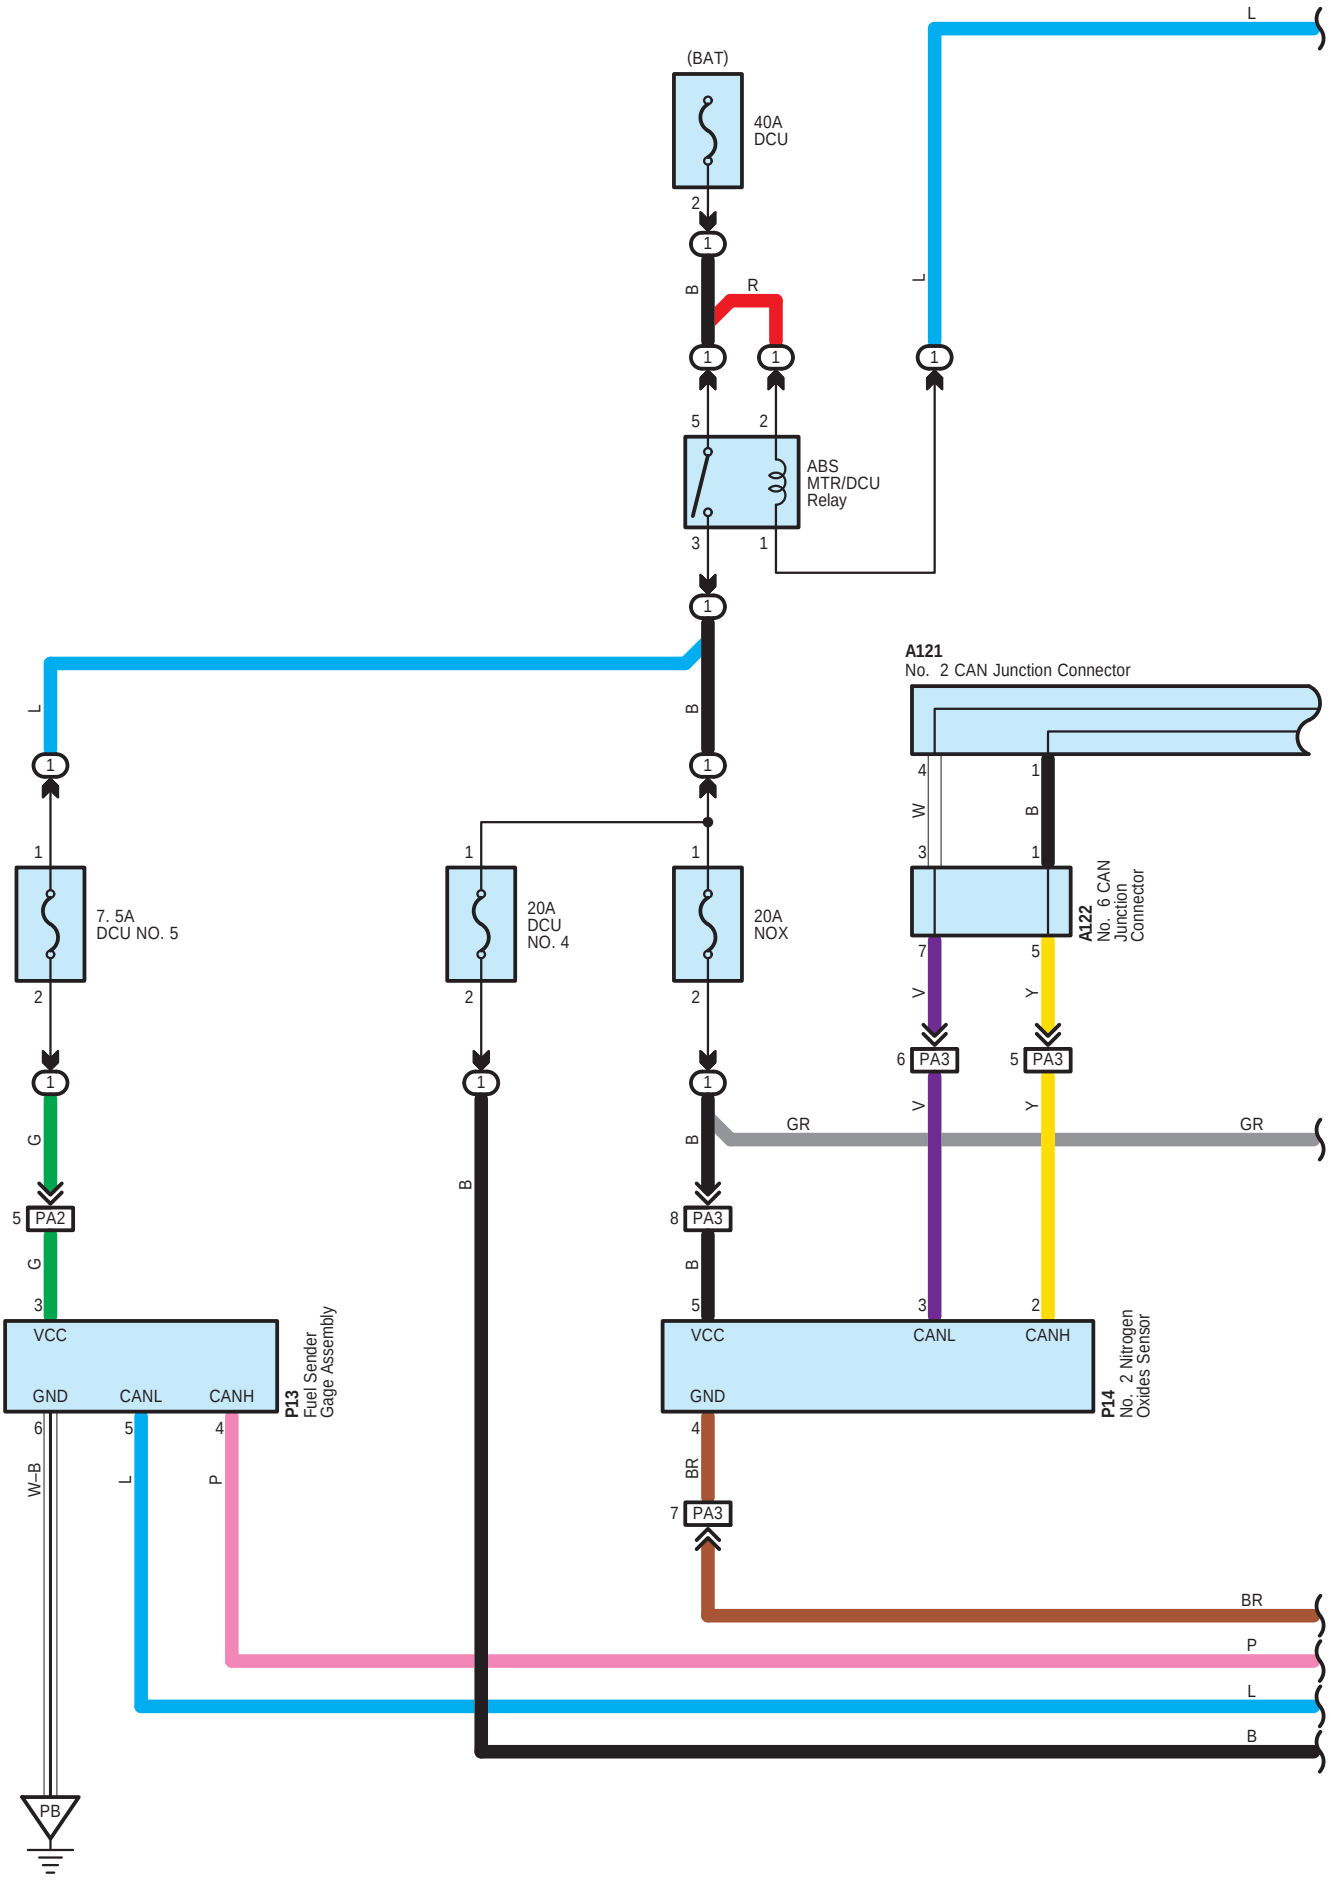
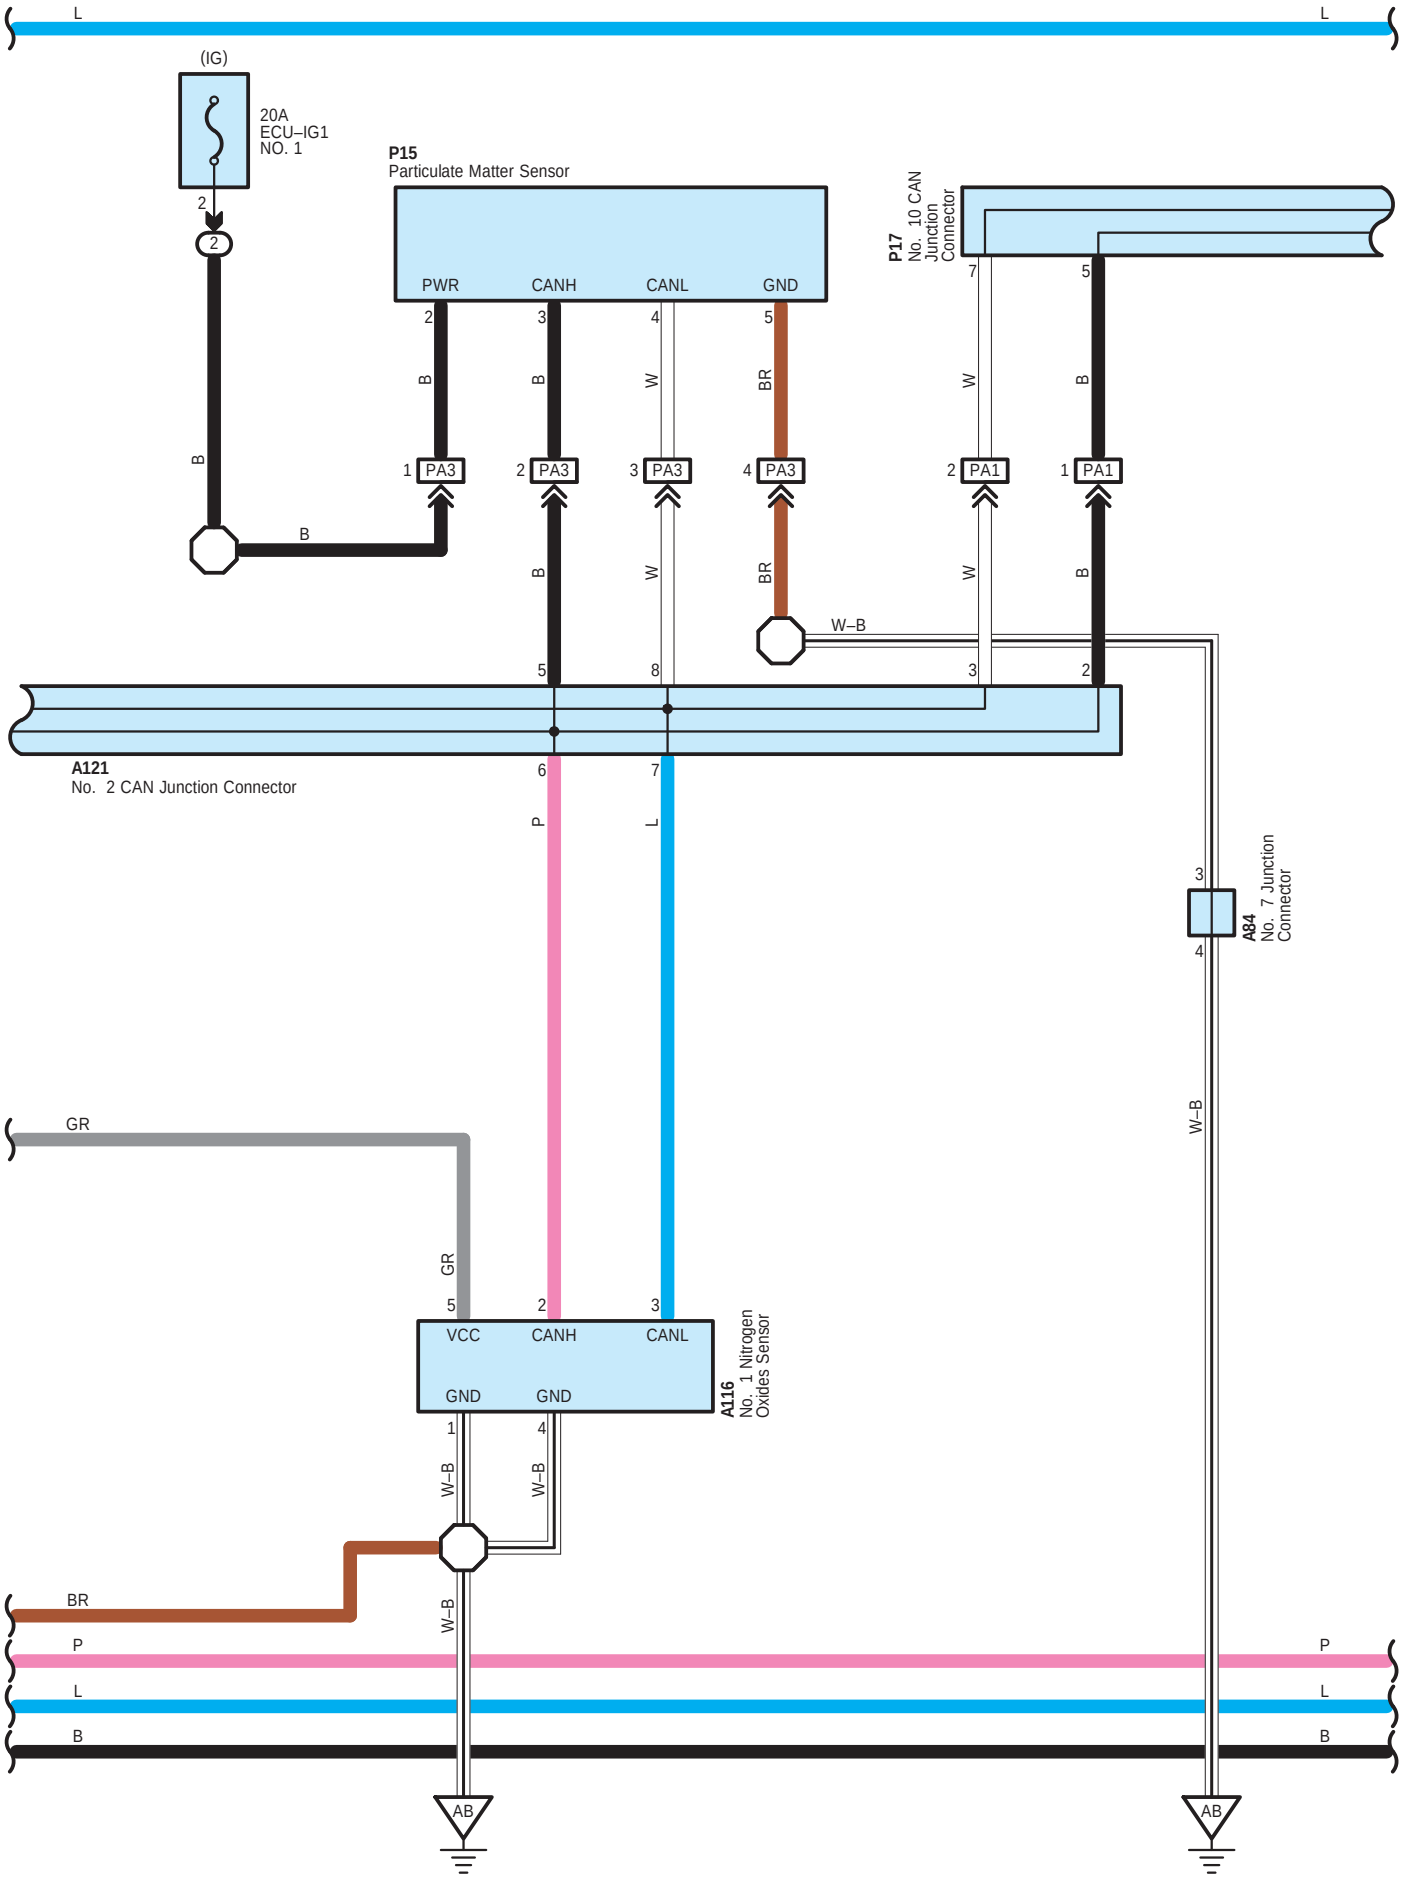
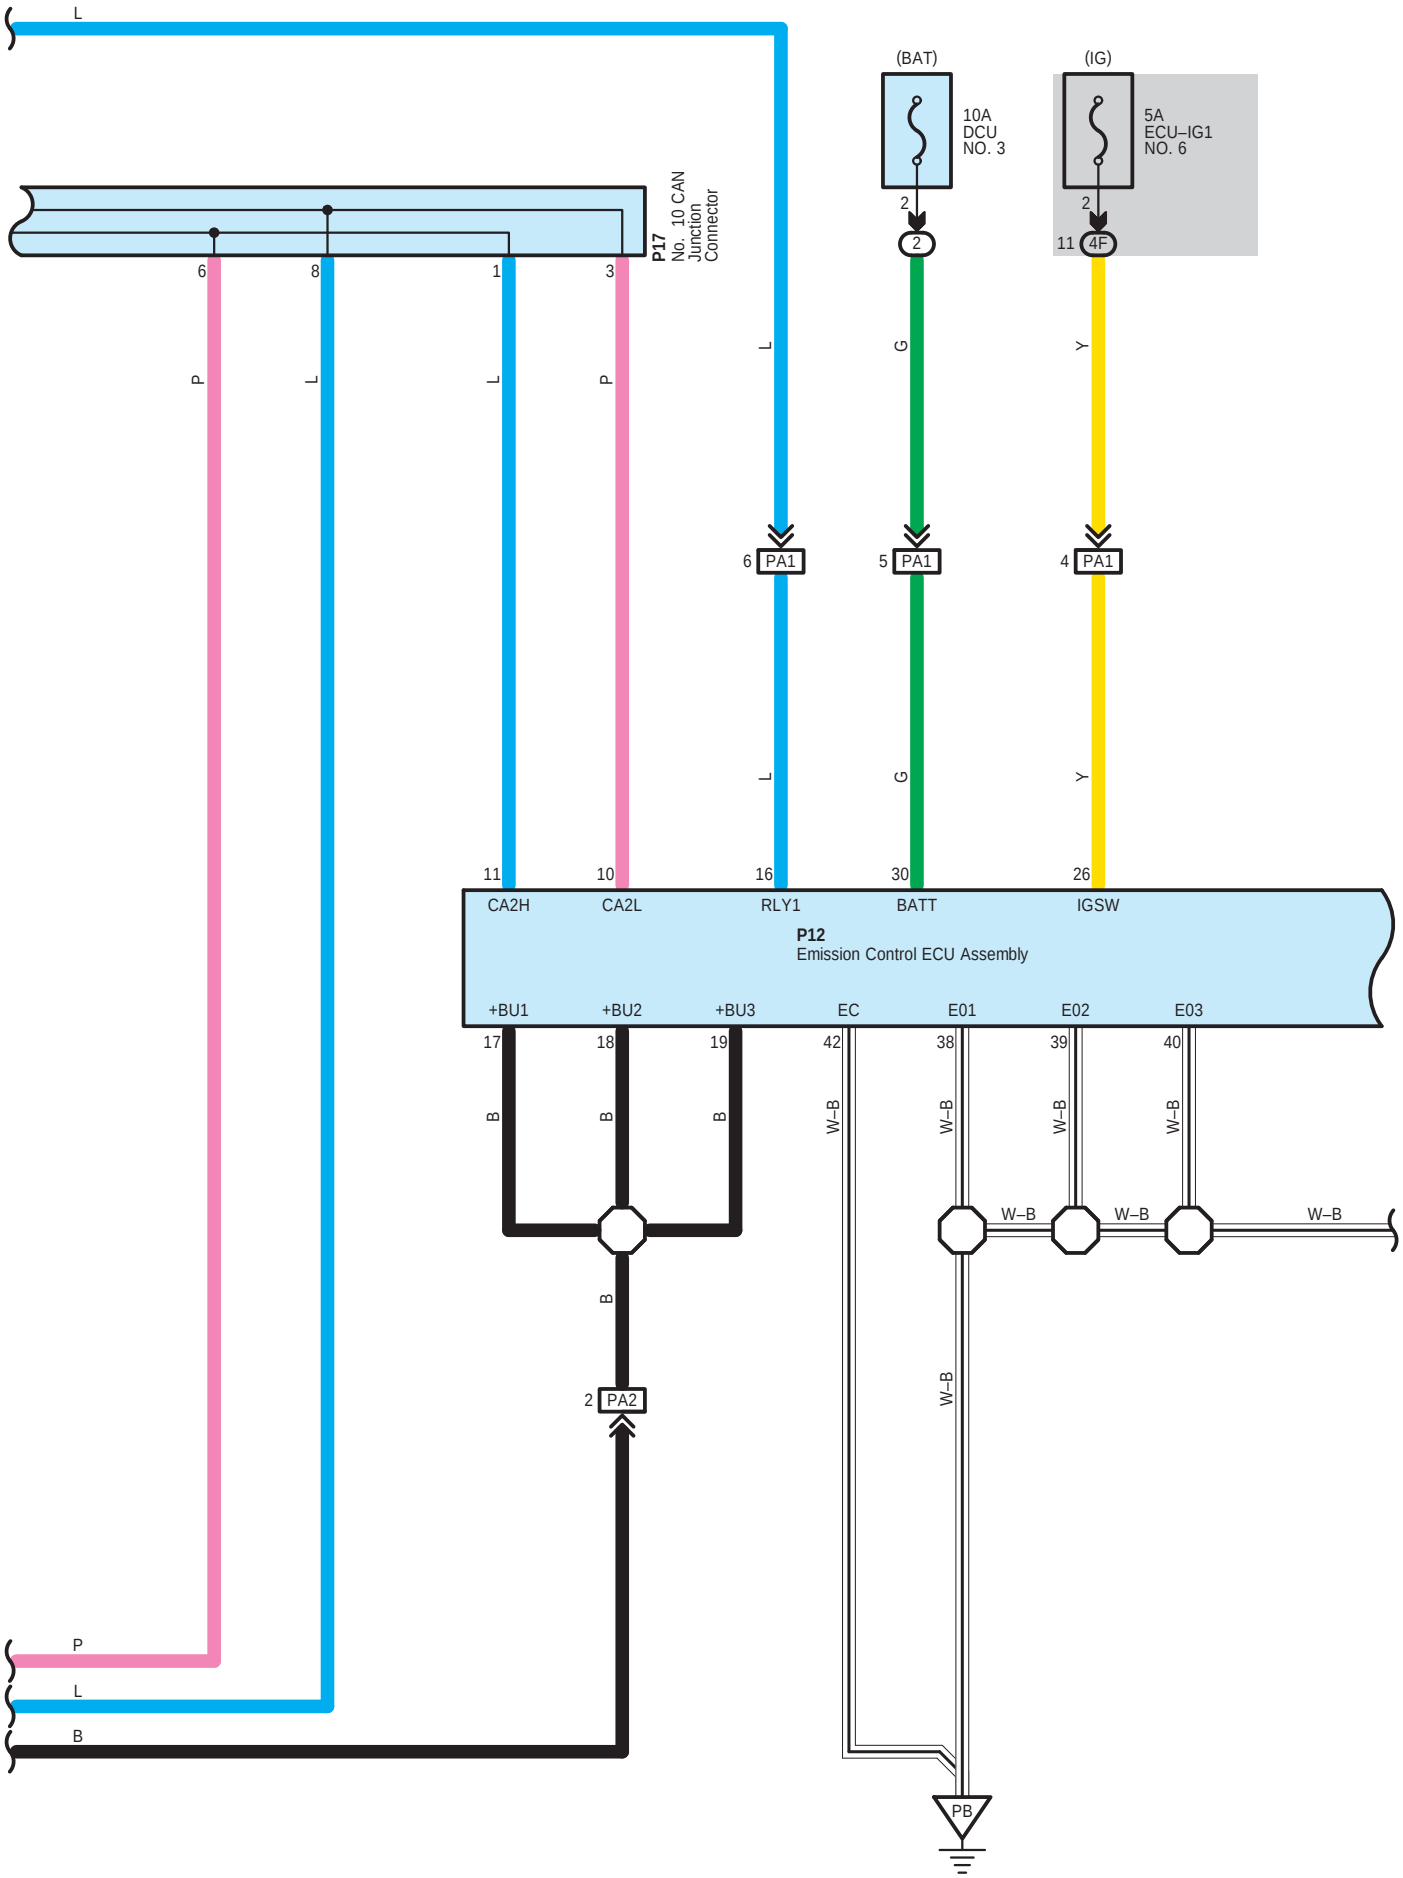
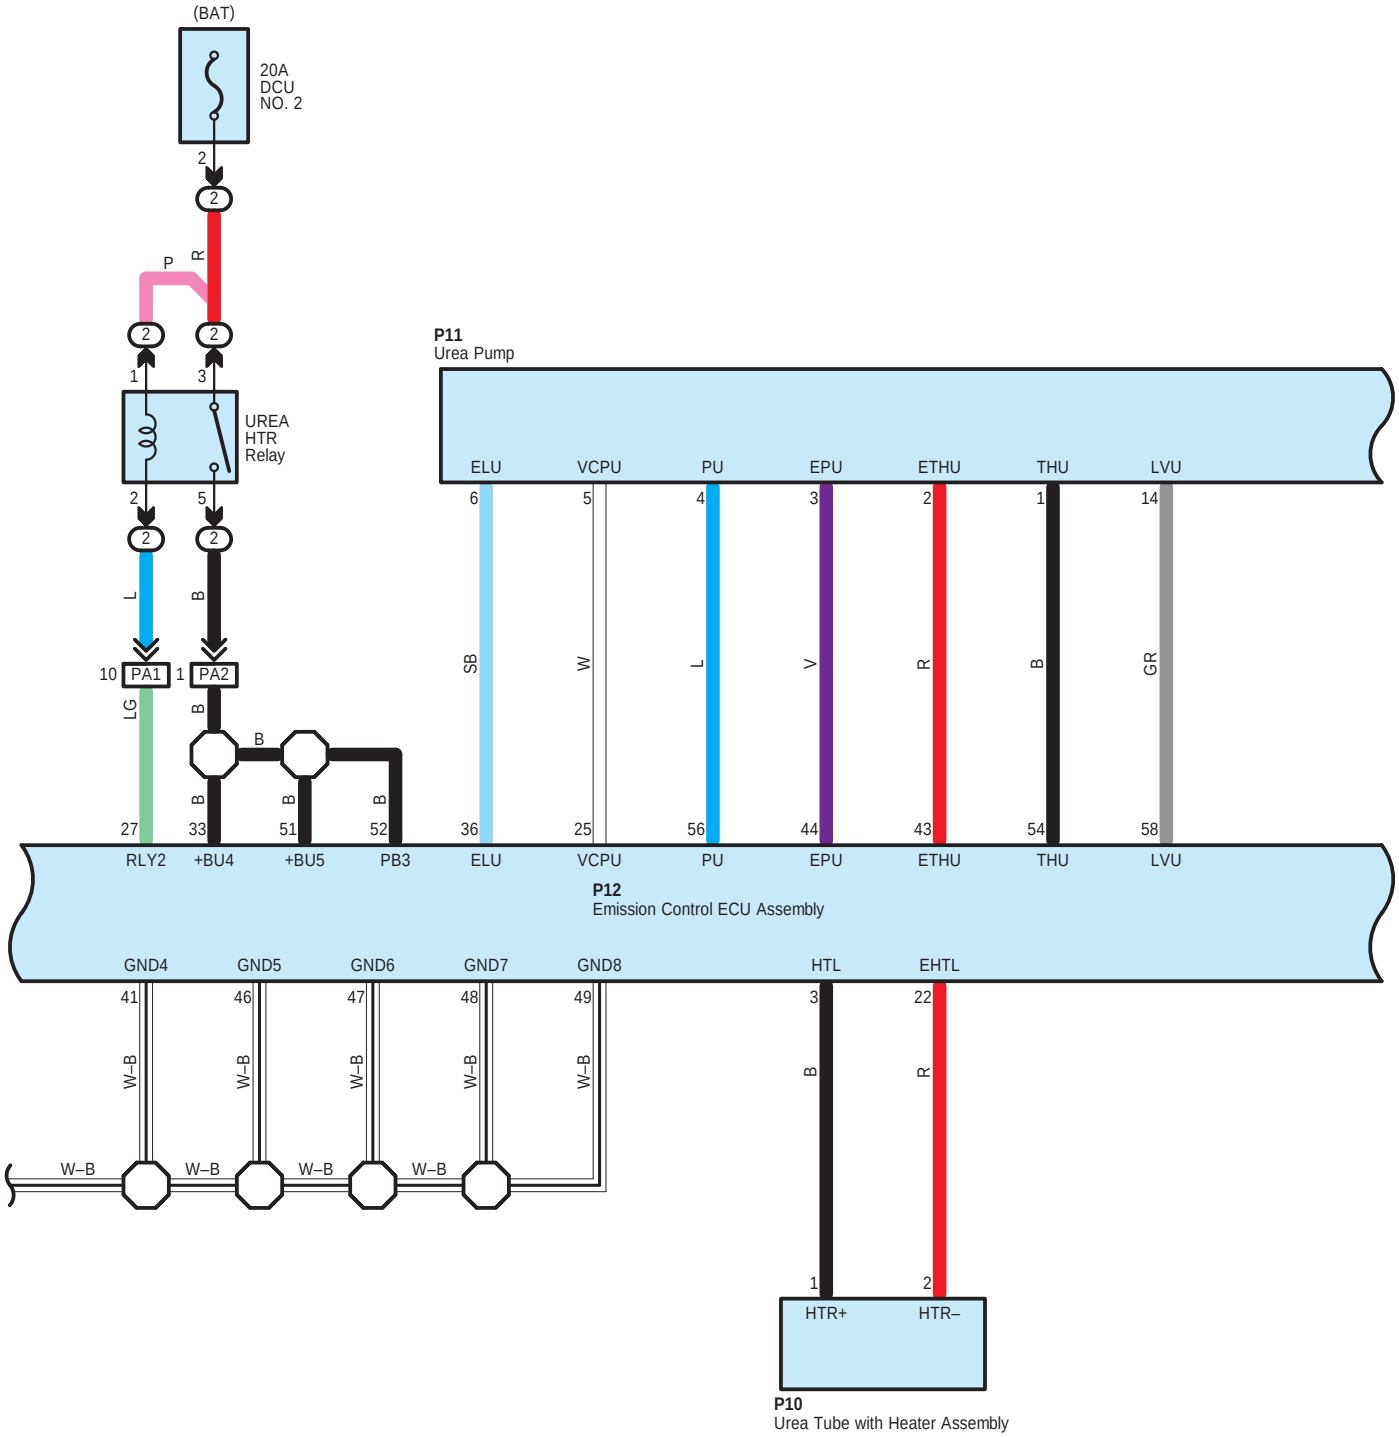
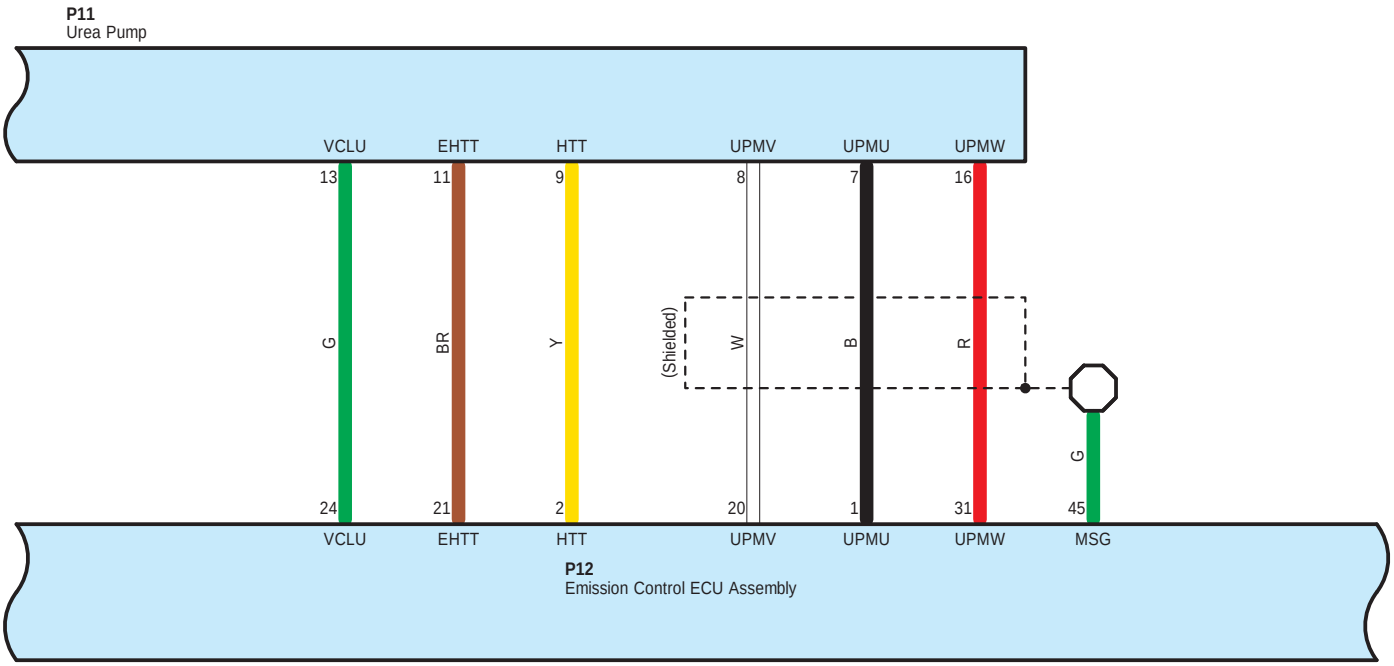
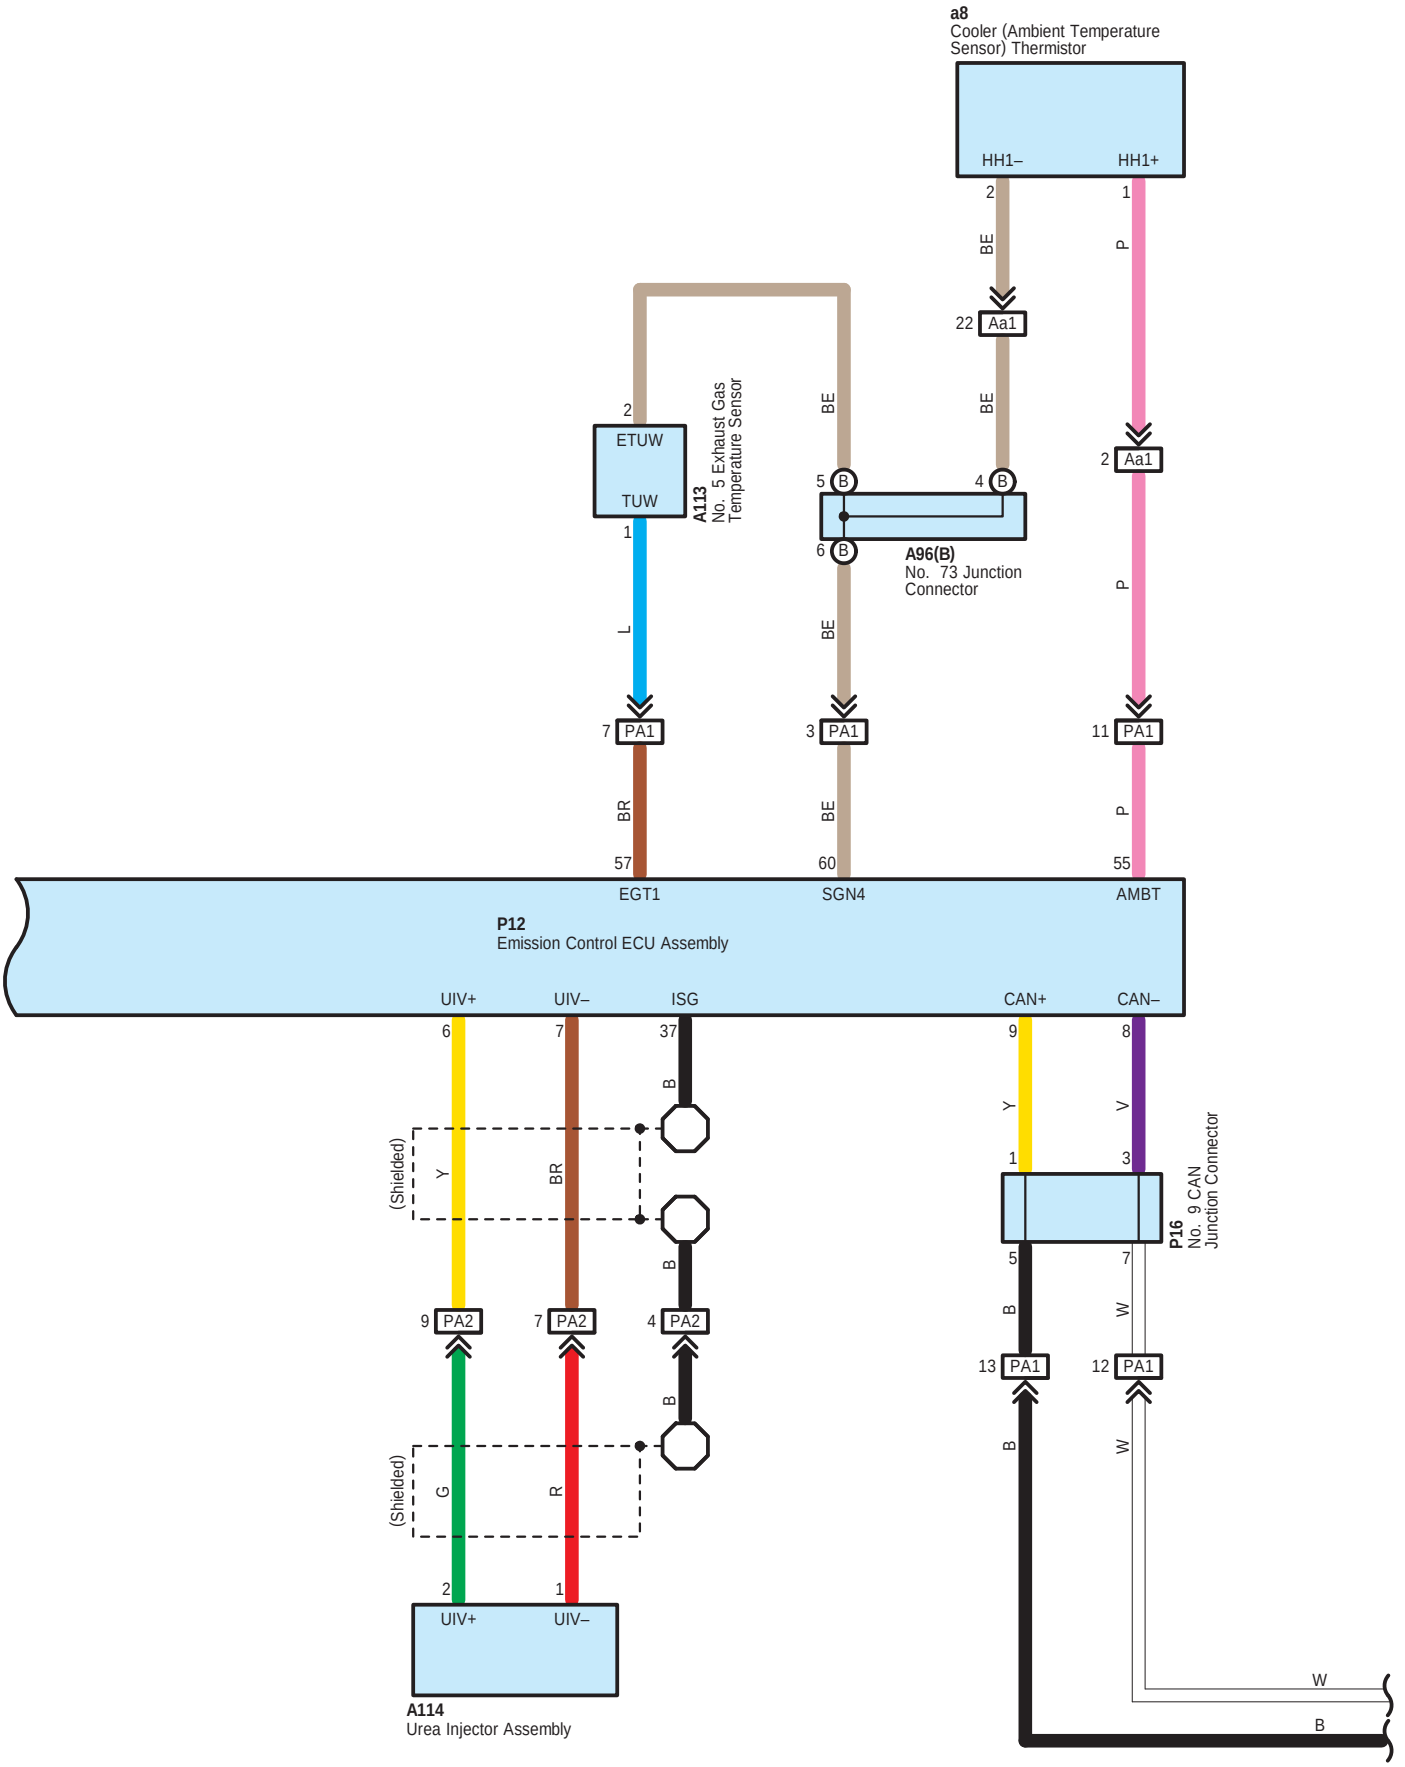

(BAT)
40A
DCU
L
R
B
ABS
MTR/DCU
Relay
7. 5A
DCU NO. 5
20A
DCU
NO. 4
20A
NOX
A121
No. 2 CAN Junction Connector
A122
No. 6 CAN
Junction
Connector
PA2
PA3
VCC
GND
CANL
CANH
P13
Fuel Sender
Gage Assembly
P14
No. 2 Nitrogen
Oxides Sensor
W–B
P
BR
GR
W
V
Y
PB



L
L
(IG)
20A
ECU–IG1
NO. 1
2
2
B
B
P15
Particulate Matter Sensor
PWR
CANH
CANL
GND
2
3
4
5
B
B
W
BR
1 PA3
2 PA3
3 PA3
4 PA3
B
W
BR
W–B
P17
No. 10 CAN
Junction
Connector
7
5
W
B
2 PA1
1 PA1
W
B
5
8
3
2
A121
No. 2 CAN Junction Connector
6
7
P
L
3
A84
No. 7 Junction
Connector
4
W–B
GR
GR
5
2
3
VCC
CANH
CANL
GND
GND
A116
No. 1 Nitrogen
Oxides Sensor
1
4
W–B
W–B
W–B
BR
P
L
B
P
L
B
AB
AB



L
(BAT)
(IG)
10A
DCU
NO. 3
5A
ECU–IG1
NO. 6
2
2
2
11
4F
P17
No. 10 CAN
Junction
Connector
6
8
1
3
P
L
L
P
L
G
Y
6
PA1
5
PA1
4
PA1
L
G
Y
11
10
16
30
26
CA2H
CA2L
RLY1
BATT
IGSW
P12
Emission Control ECU Assembly
+BU1
+BU2
+BU3
EC
E01
E02
E03
17
18
19
42
38
39
40
B
B
B
W–B
W–B
W–B
W–B
W–B
W–B
B
2
PA2
P
L
B
PB



(BAT)
20A
DCU
NO. 2
UREA
HTR
Relay
P11
Urea Pump
ELU
VCPU
PU
EPU
ETHU
THU
LVU
RLY2
+BU4
+BU5
PB3
P12
Emission Control ECU Assembly
GND4
GND5
GND6
GND7
GND8
HTL
EHTL
HTR+
HTR–
P10
Urea Tube with Heater Assembly



P11
Urea Pump
VCLU
EHTT
HTT
UPMV
UPMU
UPMW
13
11
9
8
7
16
G
BR
Y
(Shielded)
W
B
R
G
24
21
2
20
1
31
45
VCLU
EHTT
HTT
UPMV
UPMU
UPMW
MSG
P12
Emission Control ECU Assembly



a8
Cooler (Ambient Temperature Sensor) Thermistor
HH1–
HH1+
2
1
BE
P
22 Aa1
2 Aa1
BE
P
2
ETUW
TUW
1
A113
No. 5 Exhaust Gas Temperature Sensor
L
5 B
4 B
6 B
A96(B)
No. 73 Junction Connector
BE
7 PA1
3 PA1
11 PA1
BR
BE
P
57
60
55
EGT1
SGN4
AMBT
P12
Emission Control ECU Assembly
UIV+
UIV–
ISG
CAN+
CAN–
6
7
37
9
8
B
Y
V
(Shielded)
Y
BR
1
3
P16
No. 9 CAN Junction Connector
B
B
5
7
9 PA2
7 PA2
4 PA2
B
W
13 PA1
12 PA1
B
W
(Shielded)
G
R
2
1
UIV+
UIV–
A114
Urea Injector Assembly
W
B

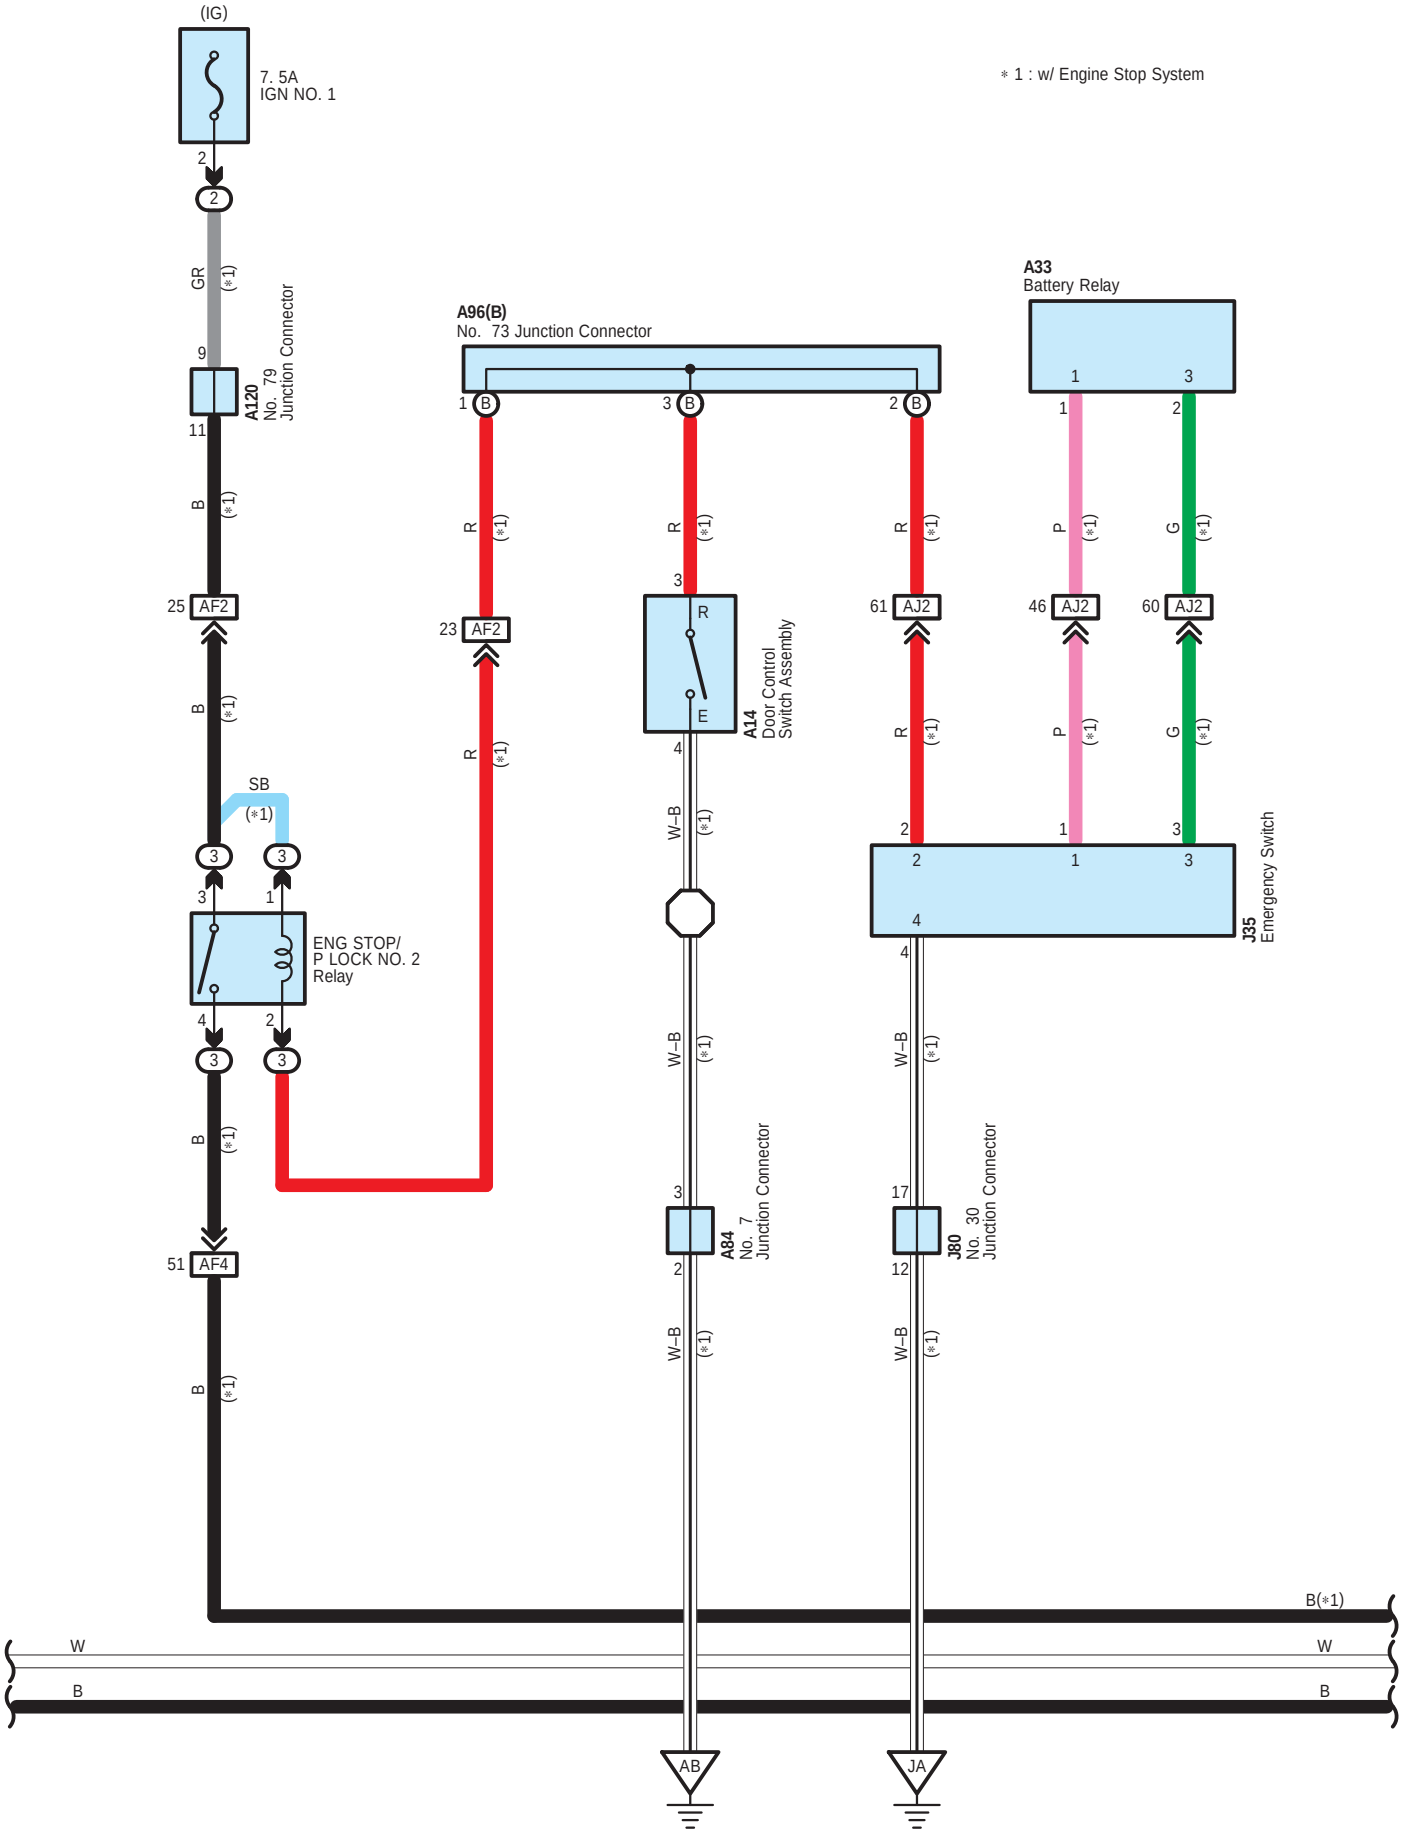

(IG)
7. 5A
IGN NO. 1
∗ 1 : w/ Engine Stop System
A120
No. 79
Junction Connector
A96(B)
No. 73 Junction Connector
A33
Battery Relay
A14
Door Control
Switch Assembly
J35
Emergency Switch
A84
No. 7
Junction Connector
J80
No. 30
Junction Connector
ENG STOP/
P LOCK NO. 2
Relay
SB
AF2
AF4
AJ2
AB
JA
GR
B
R
W–B
P
G
W

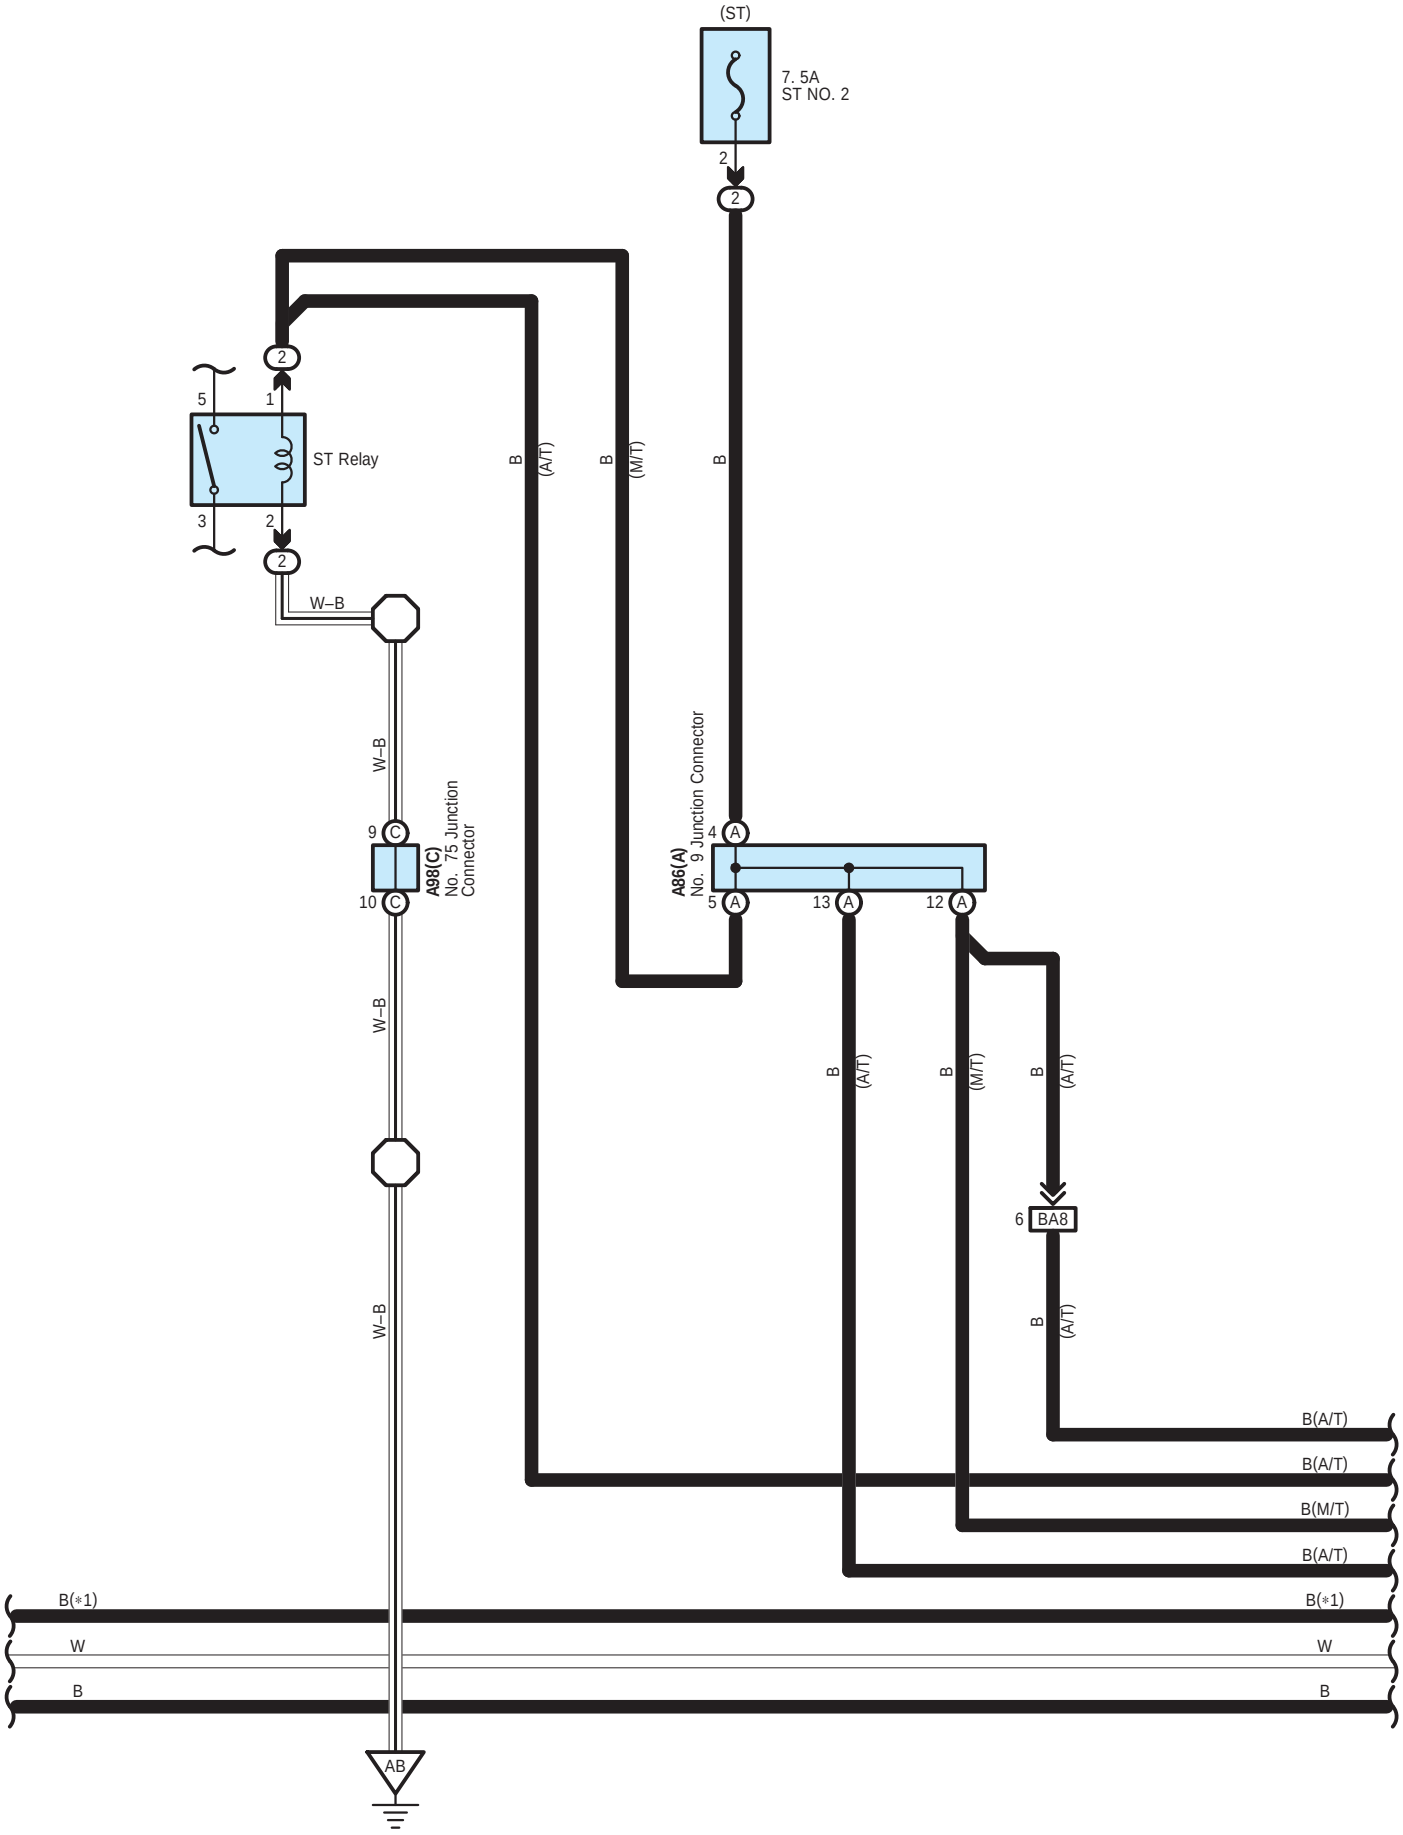

(ST)
7. 5A
ST NO. 2
2
2
5
1
ST Relay
3
2
2
W–B
B (A/T)
B (M/T)
B
W–B
9 C
A98(C)
No. 75 Junction
Connector
10 C
W–B
W–B
A86(A)
No. 9 Junction Connector
4 A
5 A
13 A
12 A
B (A/T)
B (M/T)
B (A/T)
6 BA8
B (A/T)
B(A/T)
B(A/T)
B(M/T)
B(A/T)
B(∗1)
W
B
B(∗1)
W
B
AB

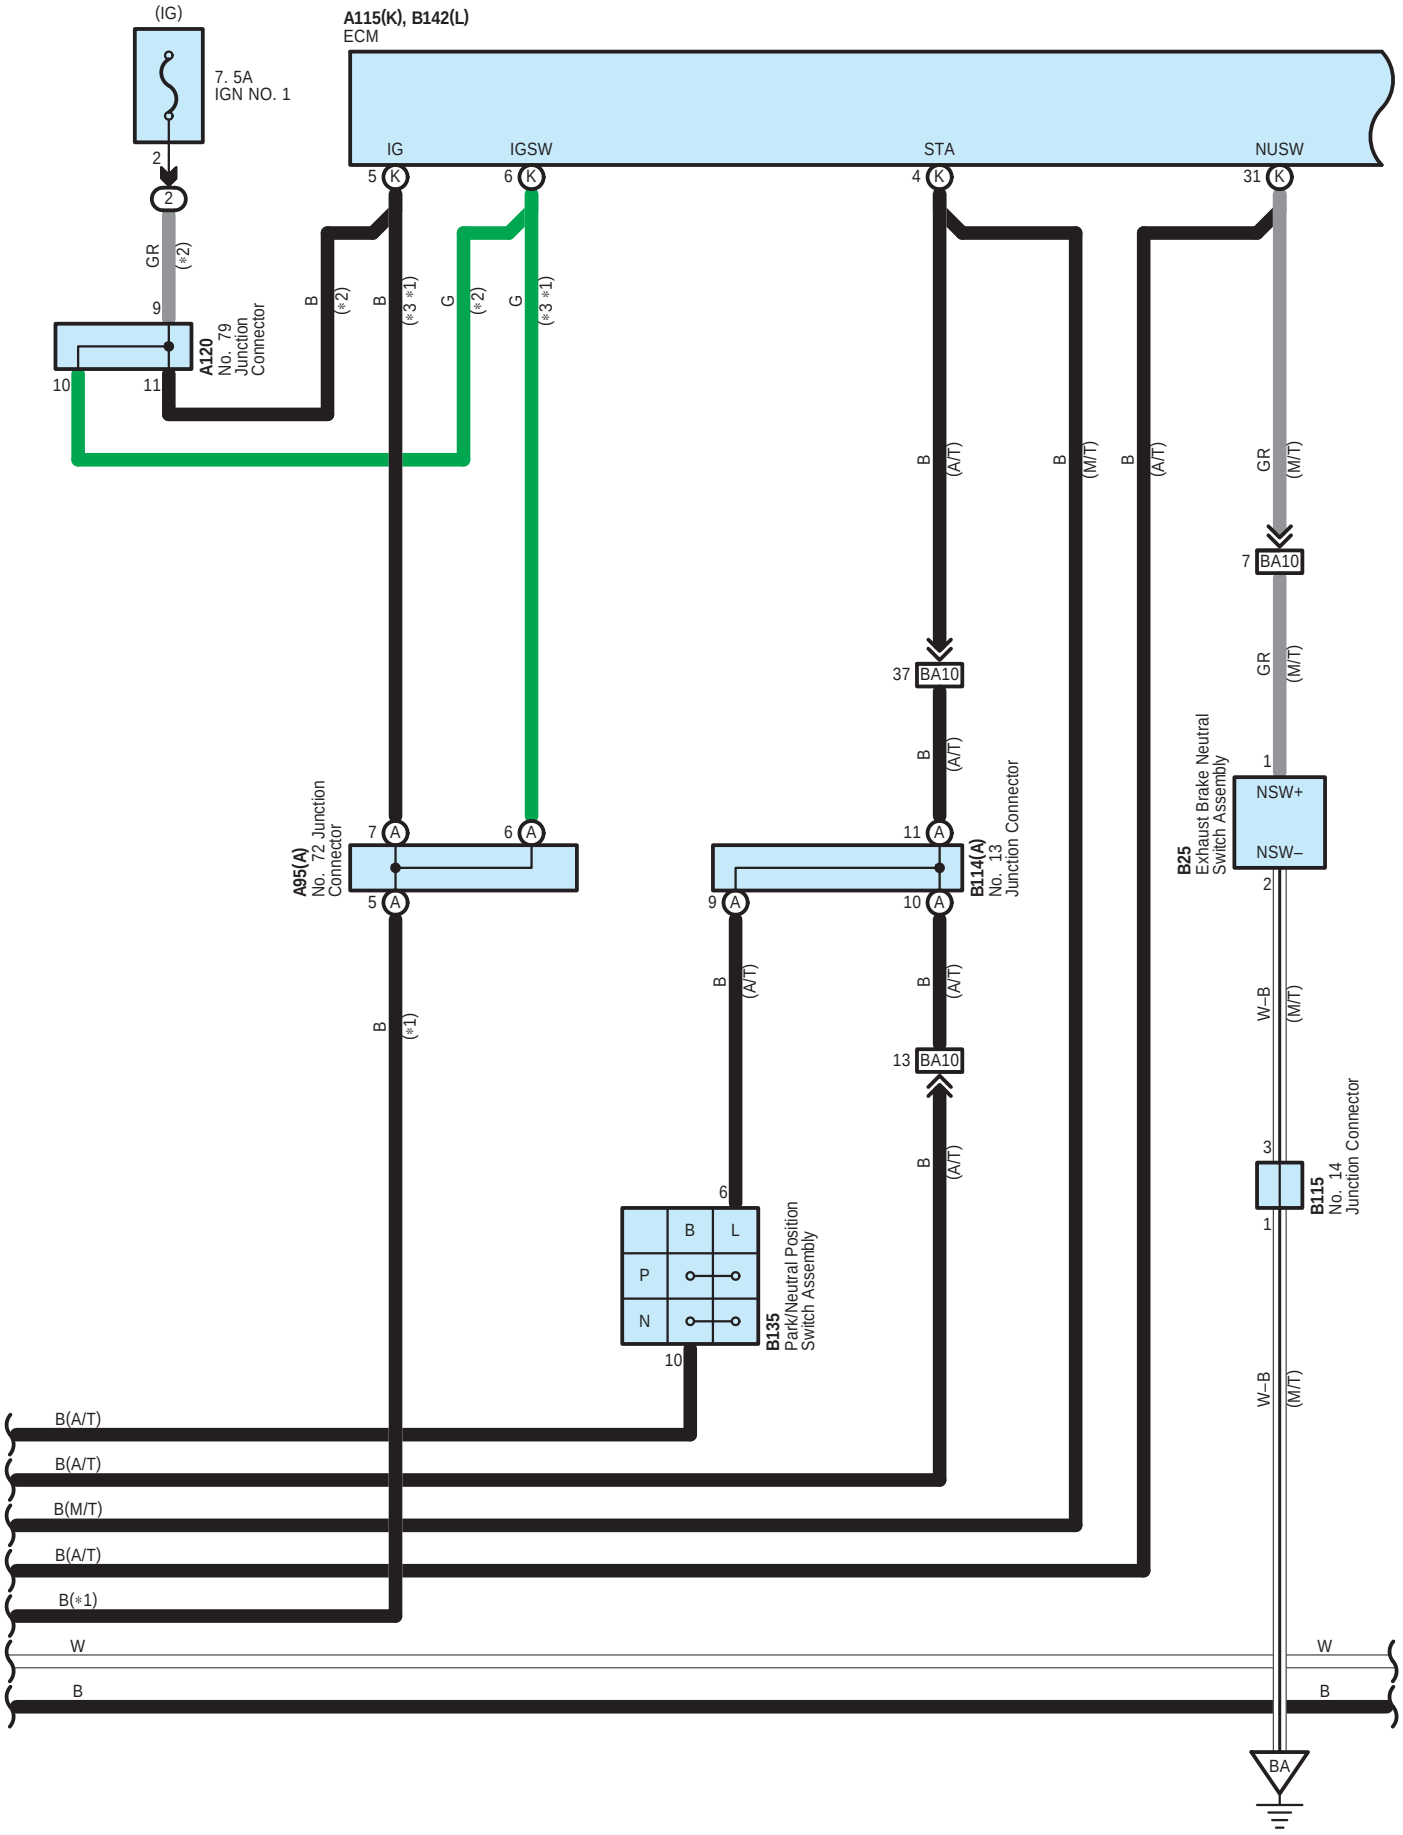

(IG)
7. 5A
IGN NO. 1
A115(K), B142(L)
ECM
IG
IGSW
STA
NUSW
GR
(*2)
B
(*2)
B
(*3 *1)
G
(*2)
G
(*3 *1)
A120
No. 79
Junction
Connector
B
(A/T)
B
(M/T)
B
(A/T)
GR
(M/T)
BA10
GR
(M/T)
A95(A)
No. 72 Junction
Connector
B114(A)
No. 13
Junction Connector
B25
Exhaust Brake Neutral
Switch Assembly
NSW+
NSW–
B
(*1)
B
(A/T)
B
(A/T)
W–B
(M/T)
B135
Park/Neutral Position
Switch Assembly
B
L
P
N
B115
No. 14
Junction Connector
W–B
(M/T)
B(A/T)
B(A/T)
B(M/T)
B(A/T)
B(*1)
W
B
W
B
BA

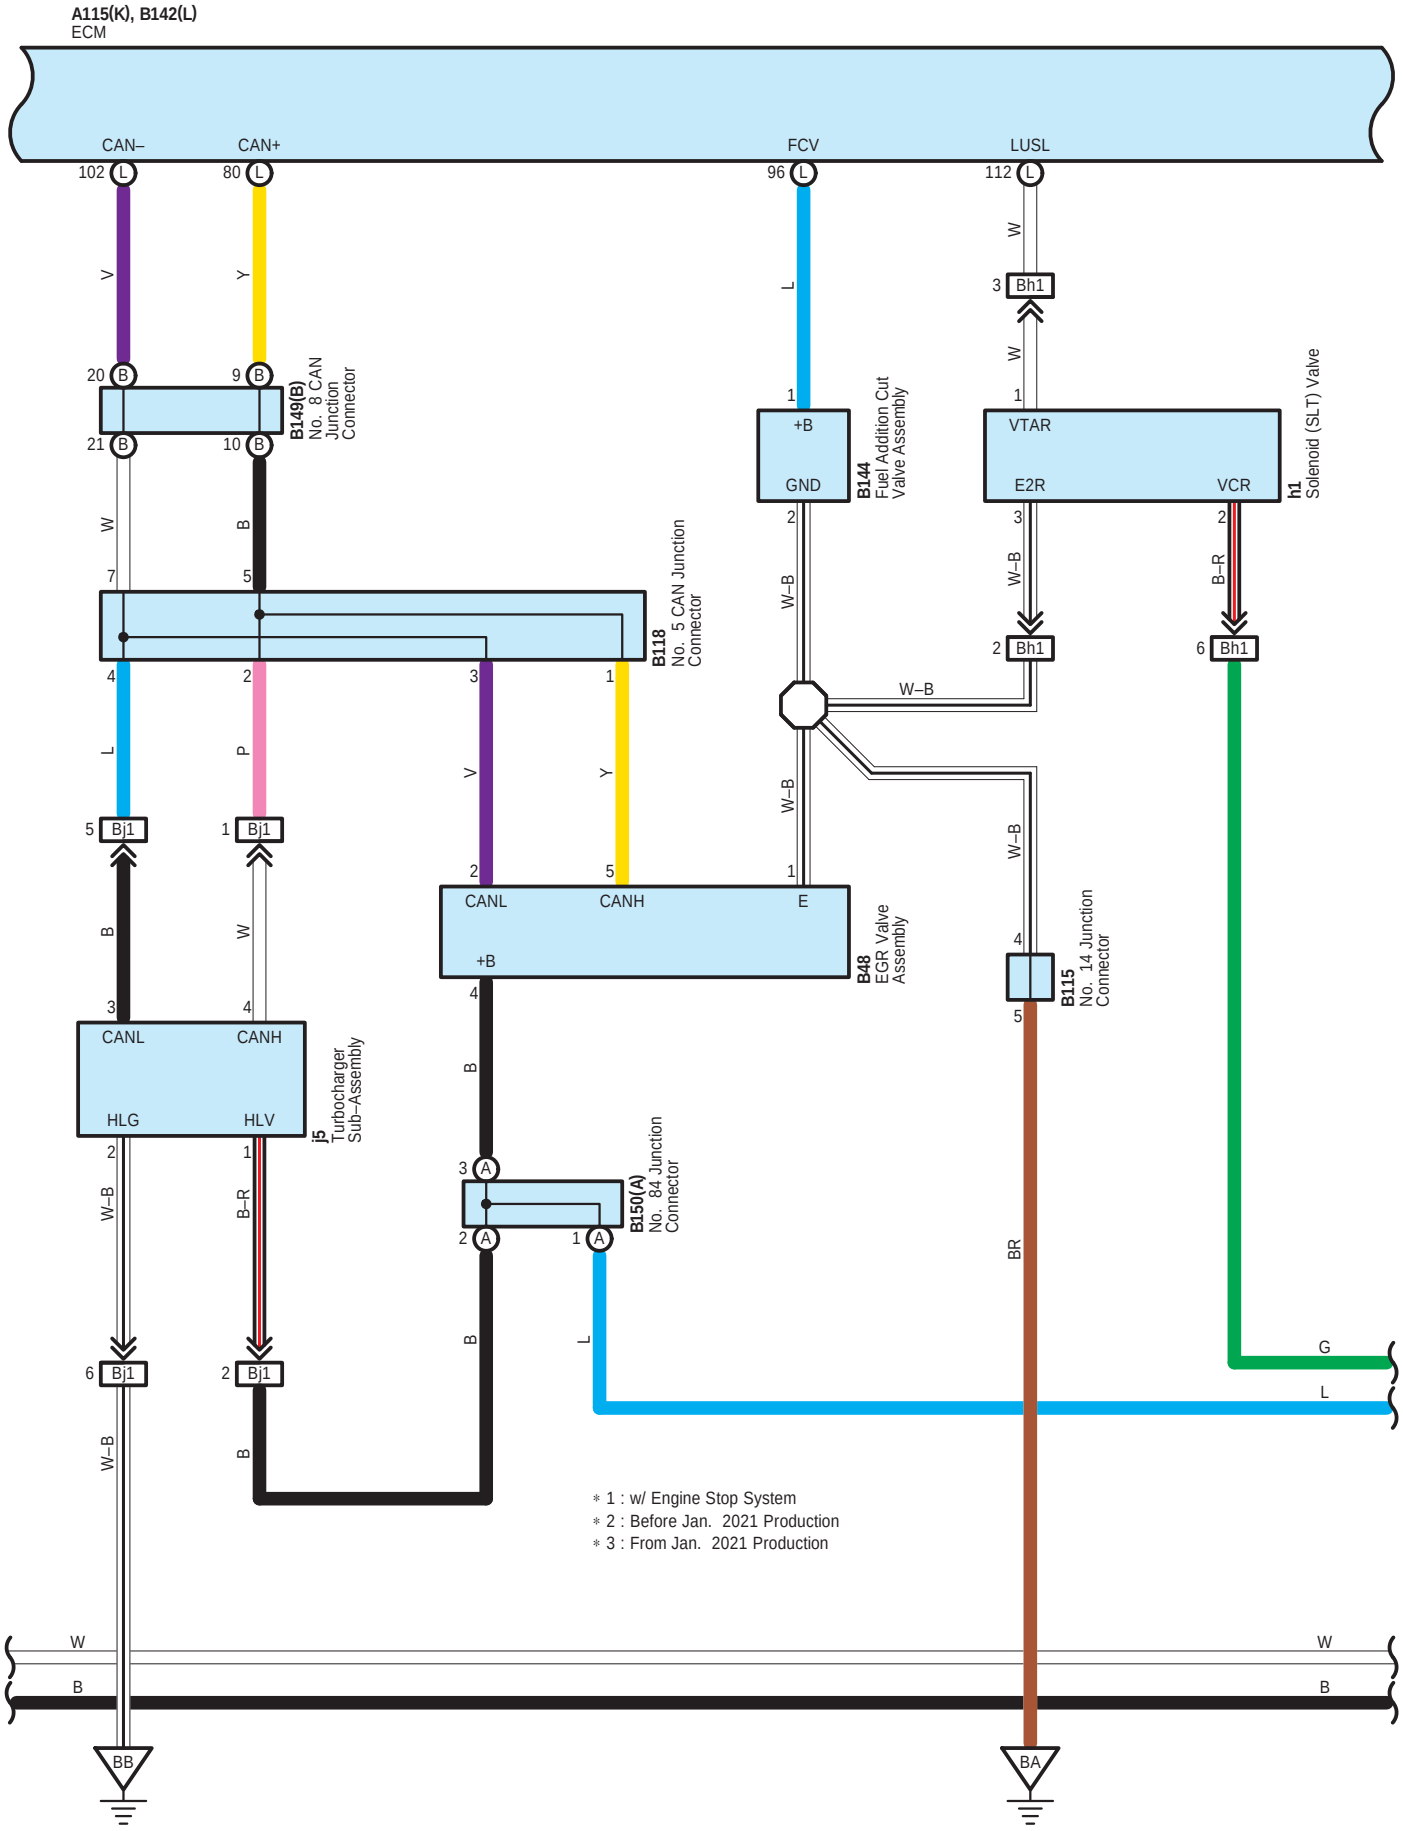
A115(K), B142(L)
ECM
CAN–
CAN+
FCV
LUSL
102
80
96
112
20
9
21
10
B149(B)
No. 8 CAN Junction Connector
B144
Fuel Addition Cut Valve Assembly
VTAR
E2R
VCR
h1
Solenoid (SLT) Valve
B118
No. 5 CAN Junction Connector
+B
GND
Bh1
Bj1
CANL
CANH
E
B48
EGR Valve Assembly
B115
No. 14 Junction Connector
HLG
HLV
j5
Turbocharger Sub–Assembly
B150(A)
No. 84 Junction Connector
BB
BA
∗ 1 : w/ Engine Stop System
∗ 2 : Before Jan. 2021 Production
∗ 3 : From Jan. 2021 Production

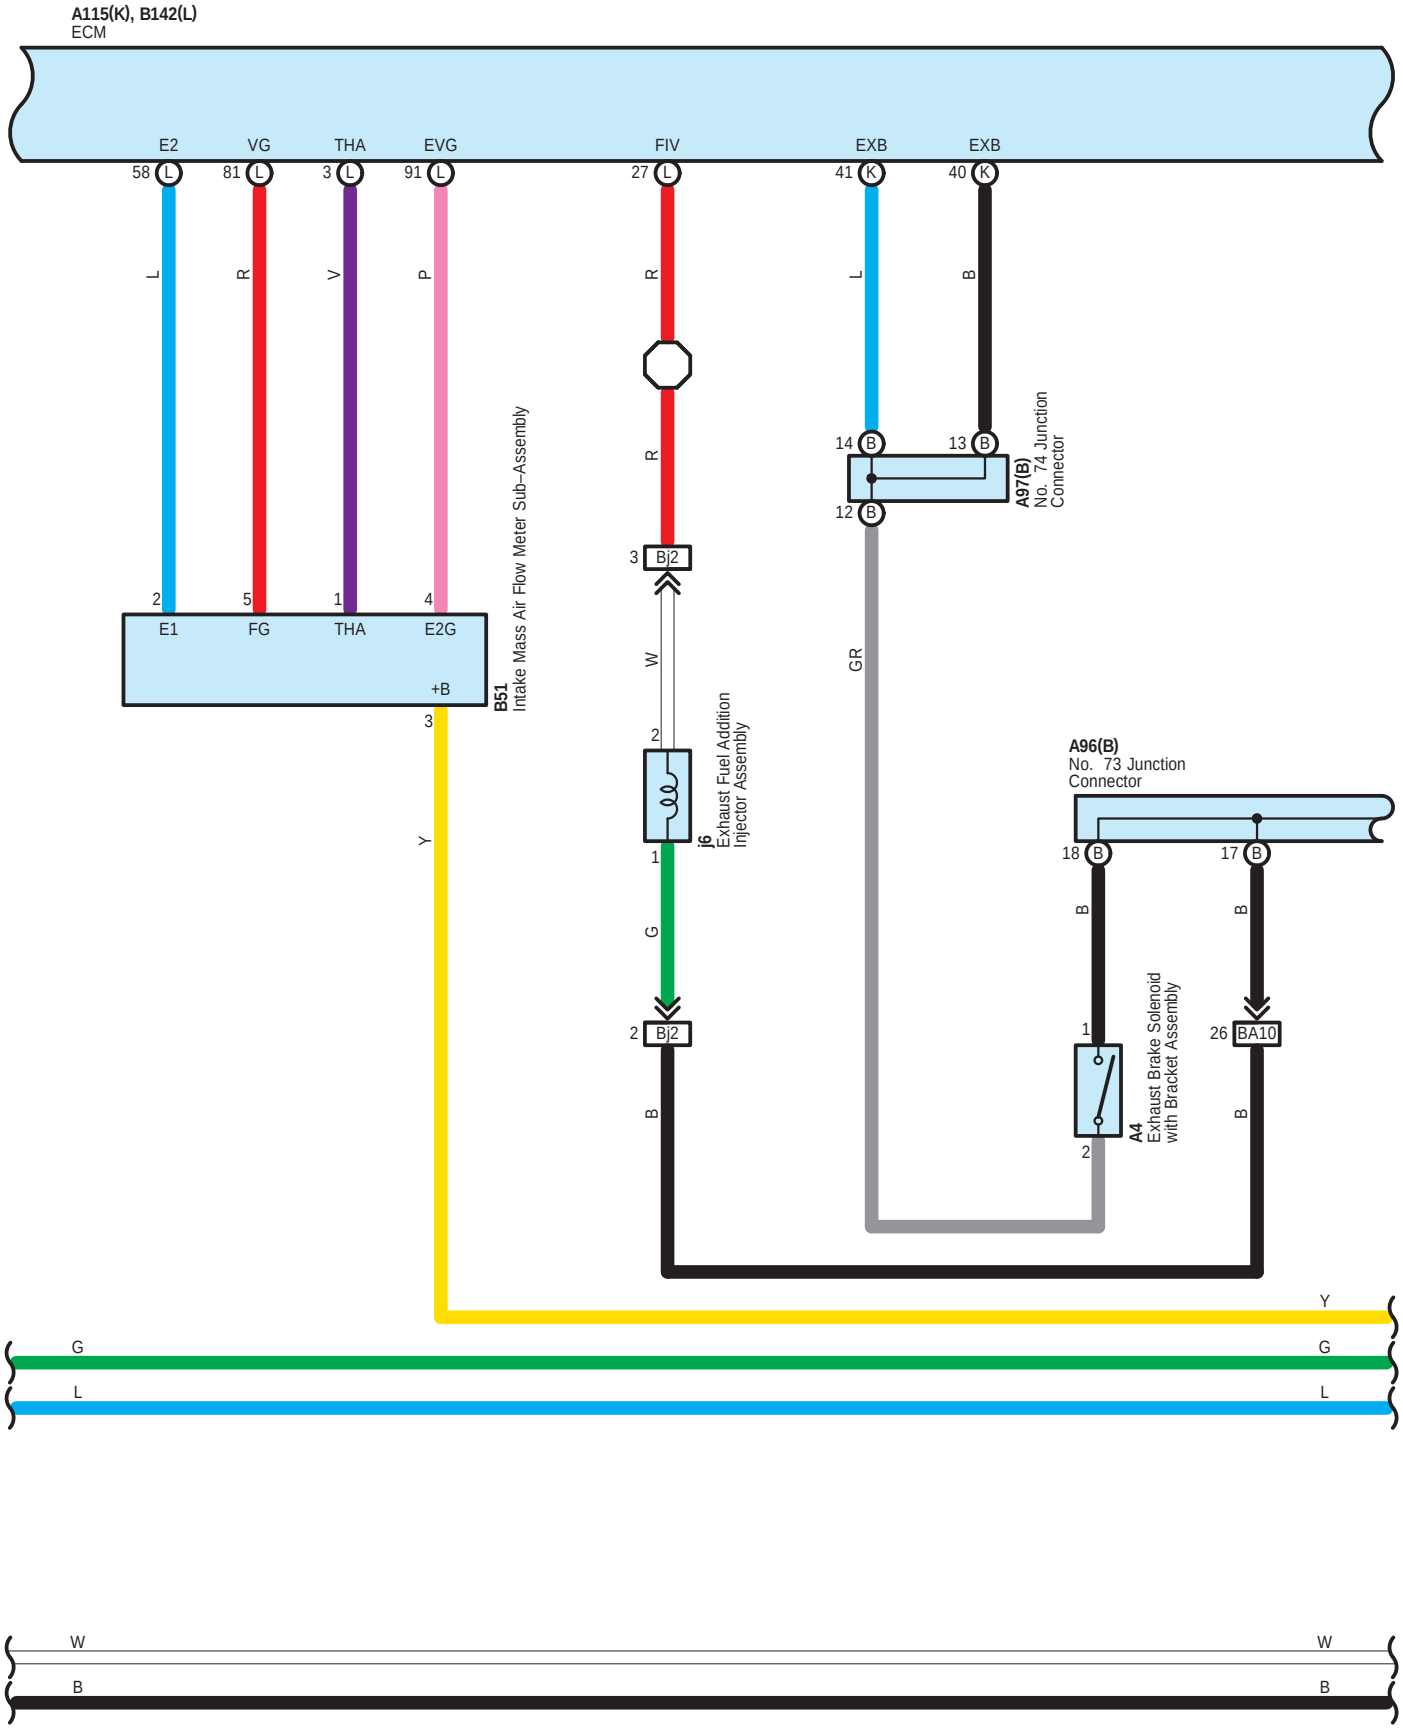

A115(K), B142(L)
ECM
E2
VG
THA
EVG
FIV
EXB
EXB
58 L
81 L
3 L
91 L
27 L
41 K
40 K
L
R
V
P
R
L
B
R
14 B
13 B
12 B
A97(B)
No. 74 Junction
Connector
3 BJ2
W
2
j6
Exhaust Fuel Addition
Injector Assembly
1
G
2 BJ2
B
GR
2
5
1
4
E1
FG
THA
E2G
+B
3
B51
Intake Mass Air Flow Meter Sub–Assembly
Y
A96(B)
No. 73 Junction
Connector
18 B
17 B
B
B
1
2
A4
Exhaust Brake Solenoid
with Bracket Assembly
26 BA10
B
Y
G
L
W
B

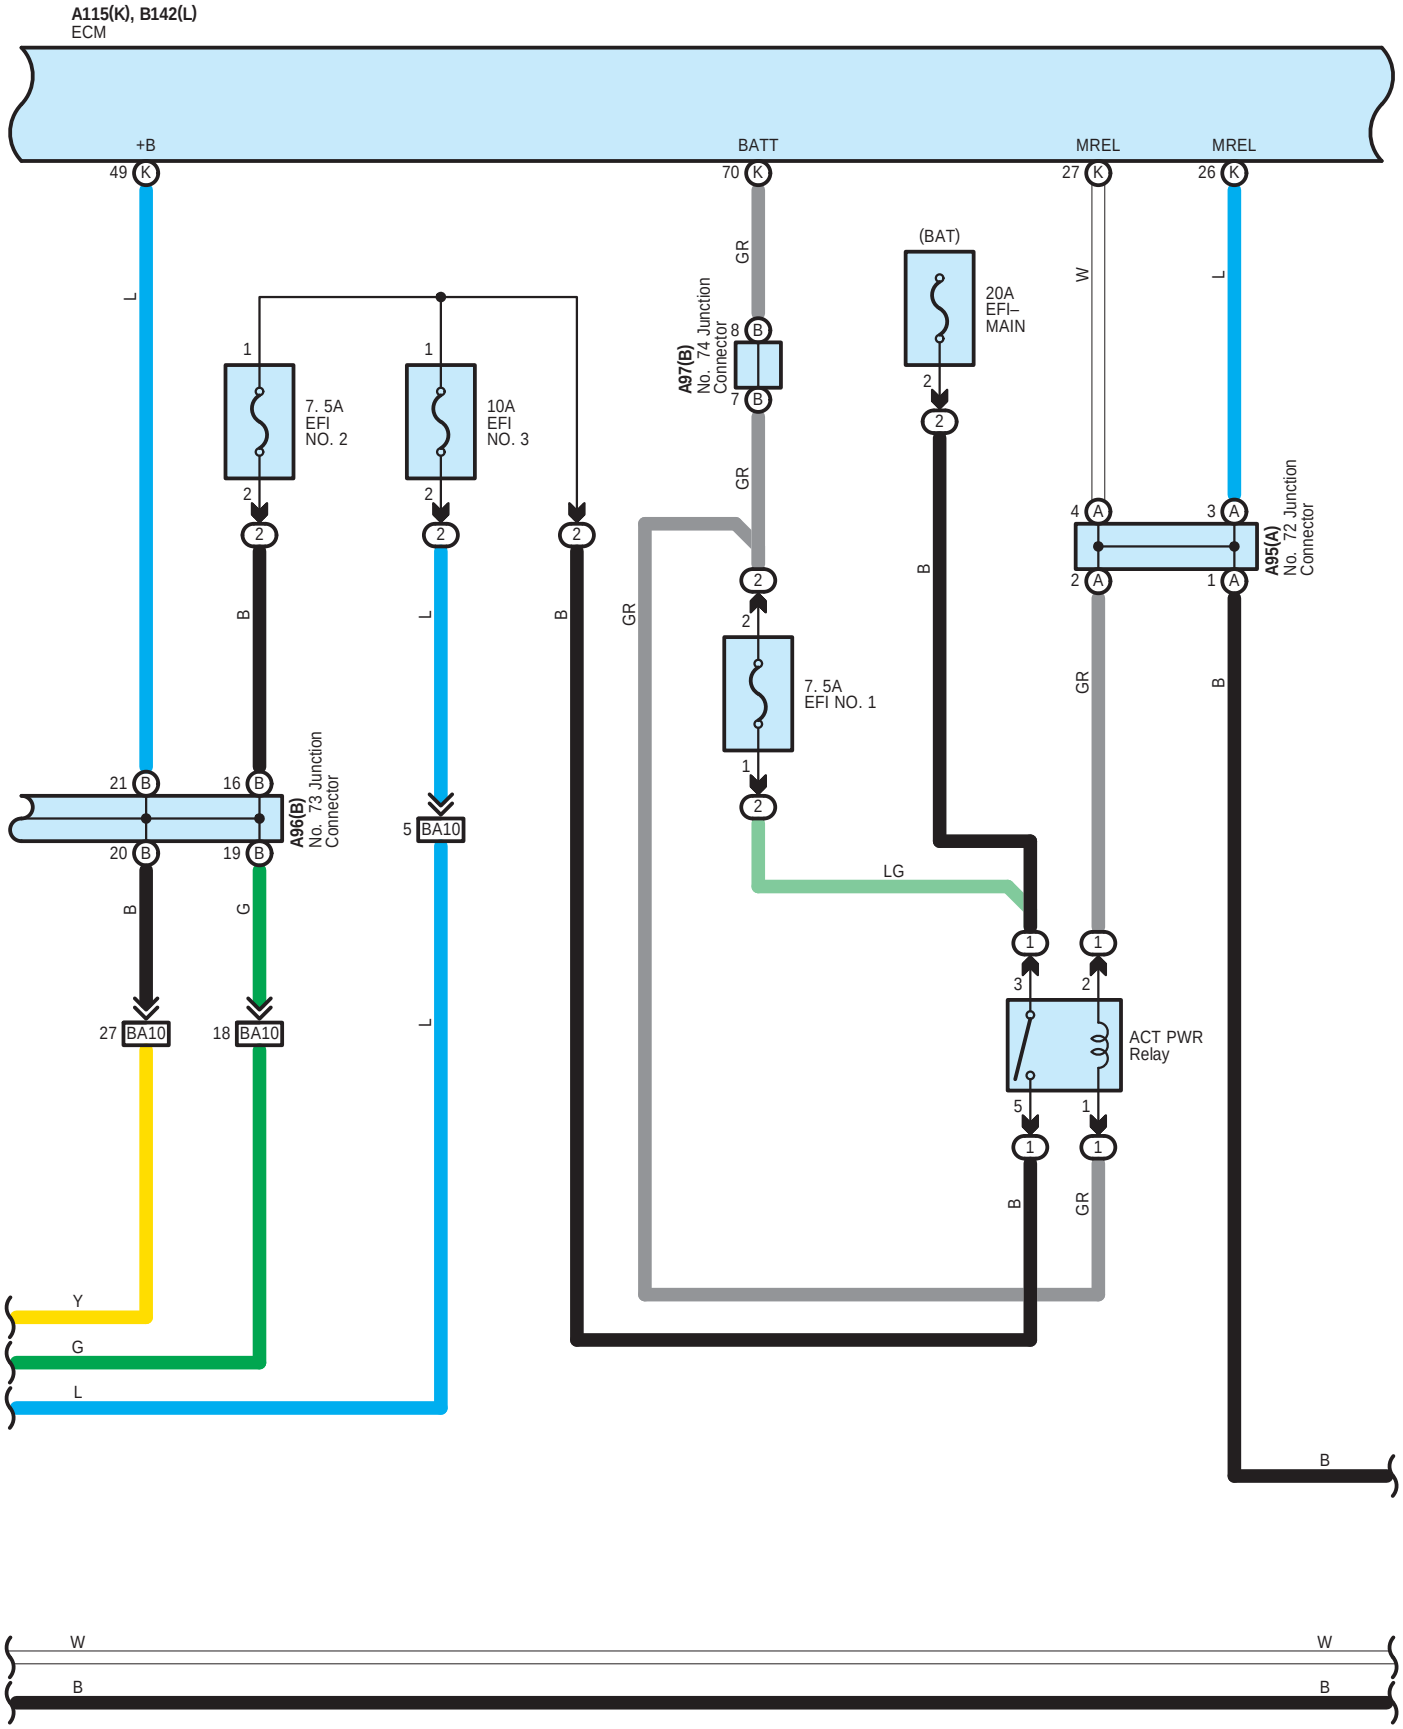

A115(K), B142(L)
ECM
+B
BATT
MREL
MREL
49 K
70 K
27 K
26 K
L
GR
W
L
(BAT)
20A
EFI–
MAIN
A97(B)
No. 74 Junction
Connector
8 B
7 B
1
2
7. 5A
EFI
NO. 2
10A
EFI
NO. 3
7. 5A
EFI NO. 1
A95(A)
No. 72 Junction
Connector
4 A
3 A
2 A
1 A
A96(B)
No. 73 Junction
Connector
21 B
16 B
20 B
19 B
5 BA10
27 BA10
18 BA10
B
G
L
LG
ACT PWR
Relay
3
2
5
1
Y
G
L
B
GR
W
B

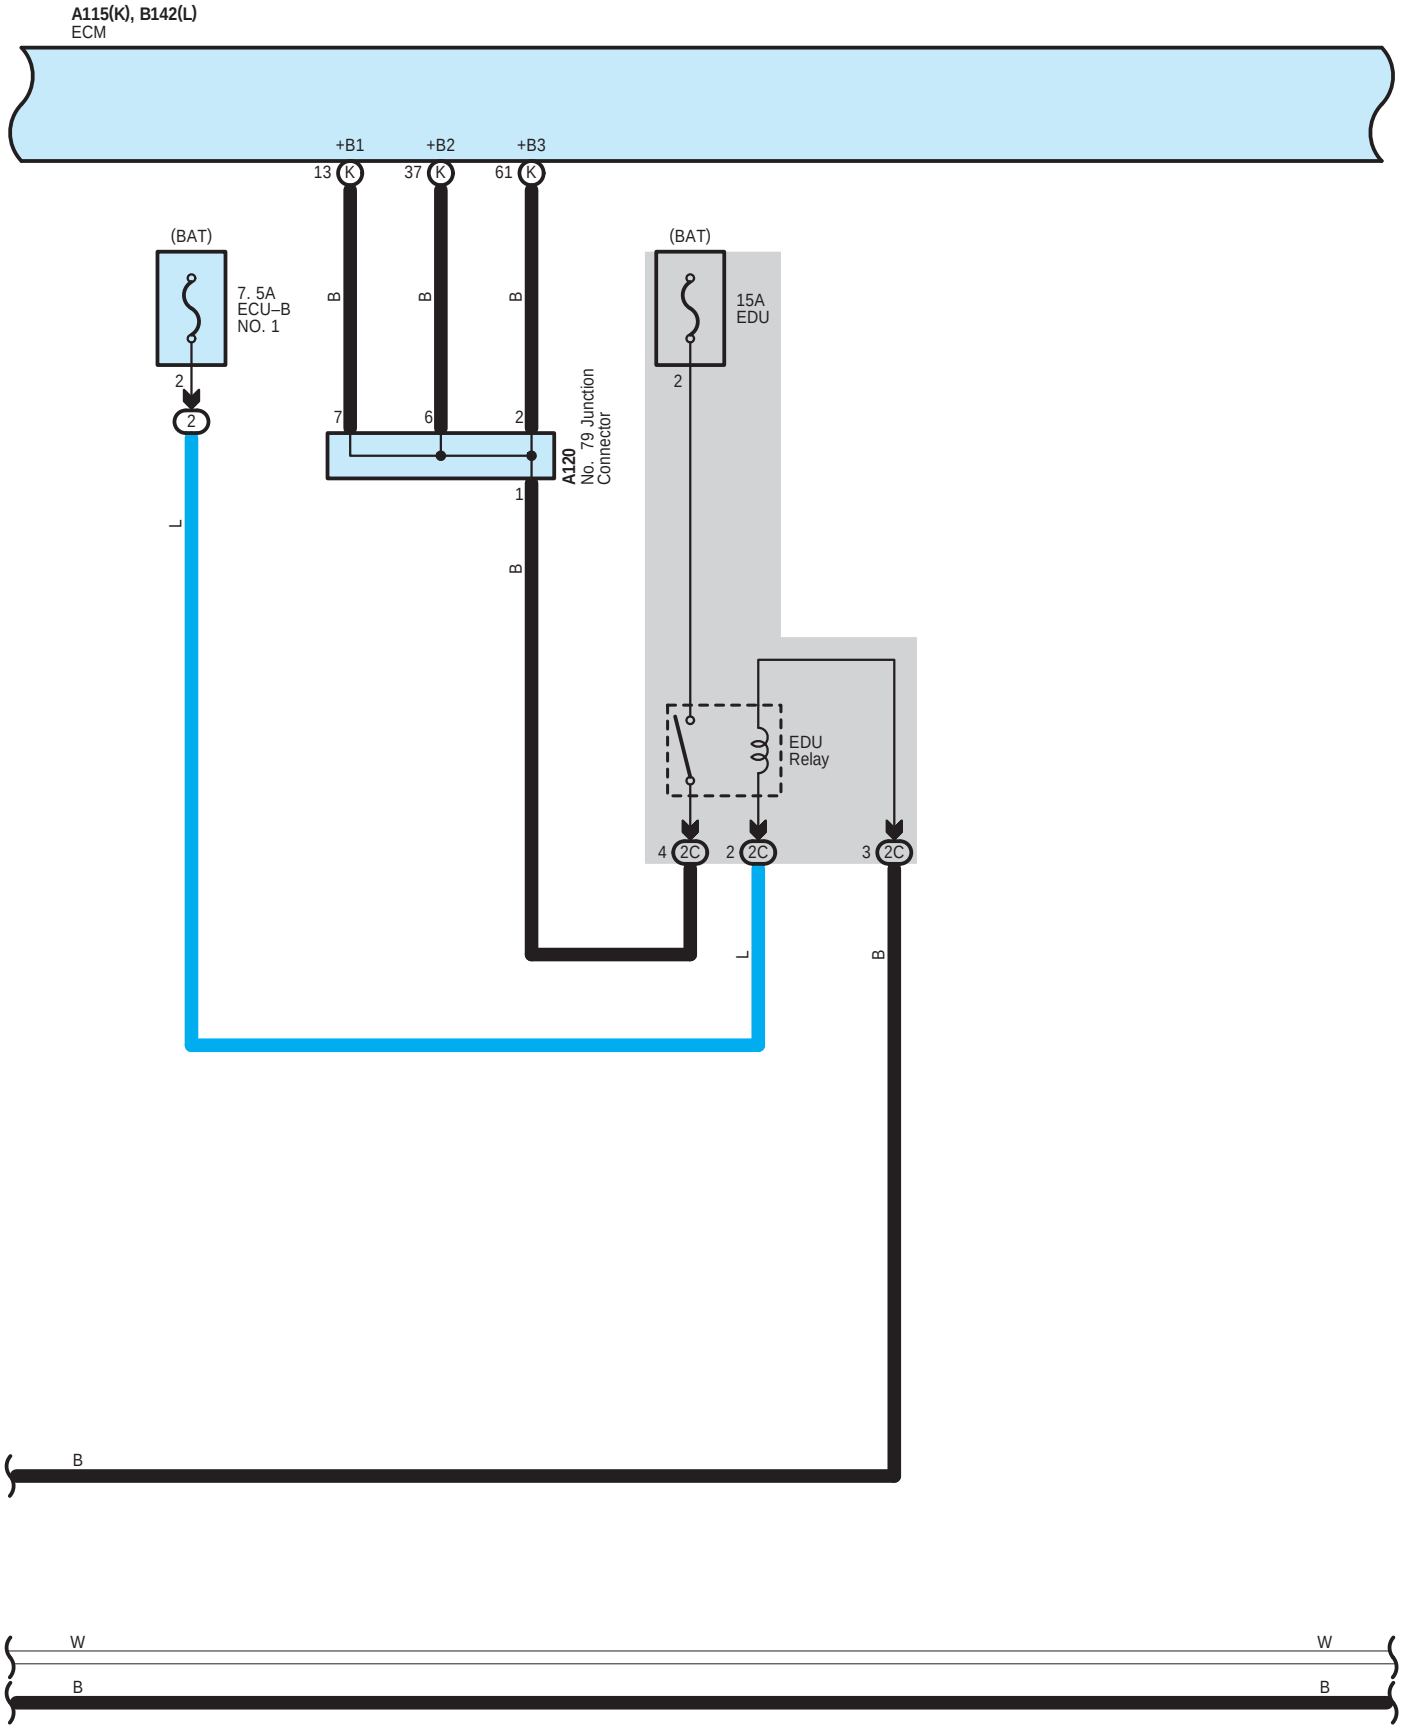

A115(K), B142(L)
ECM
+B1
+B2
+B3
13 K
37 K
61 K
(BAT)
7. 5A
ECU–B
NO. 1
2
2
B
B
B
7
6
2
1
A120
No. 79 Junction
Connector
L
B
(BAT)
15A
EDU
2
EDU
Relay
4 2C
2 2C
3 2C
L
B
B
W
B
W
B

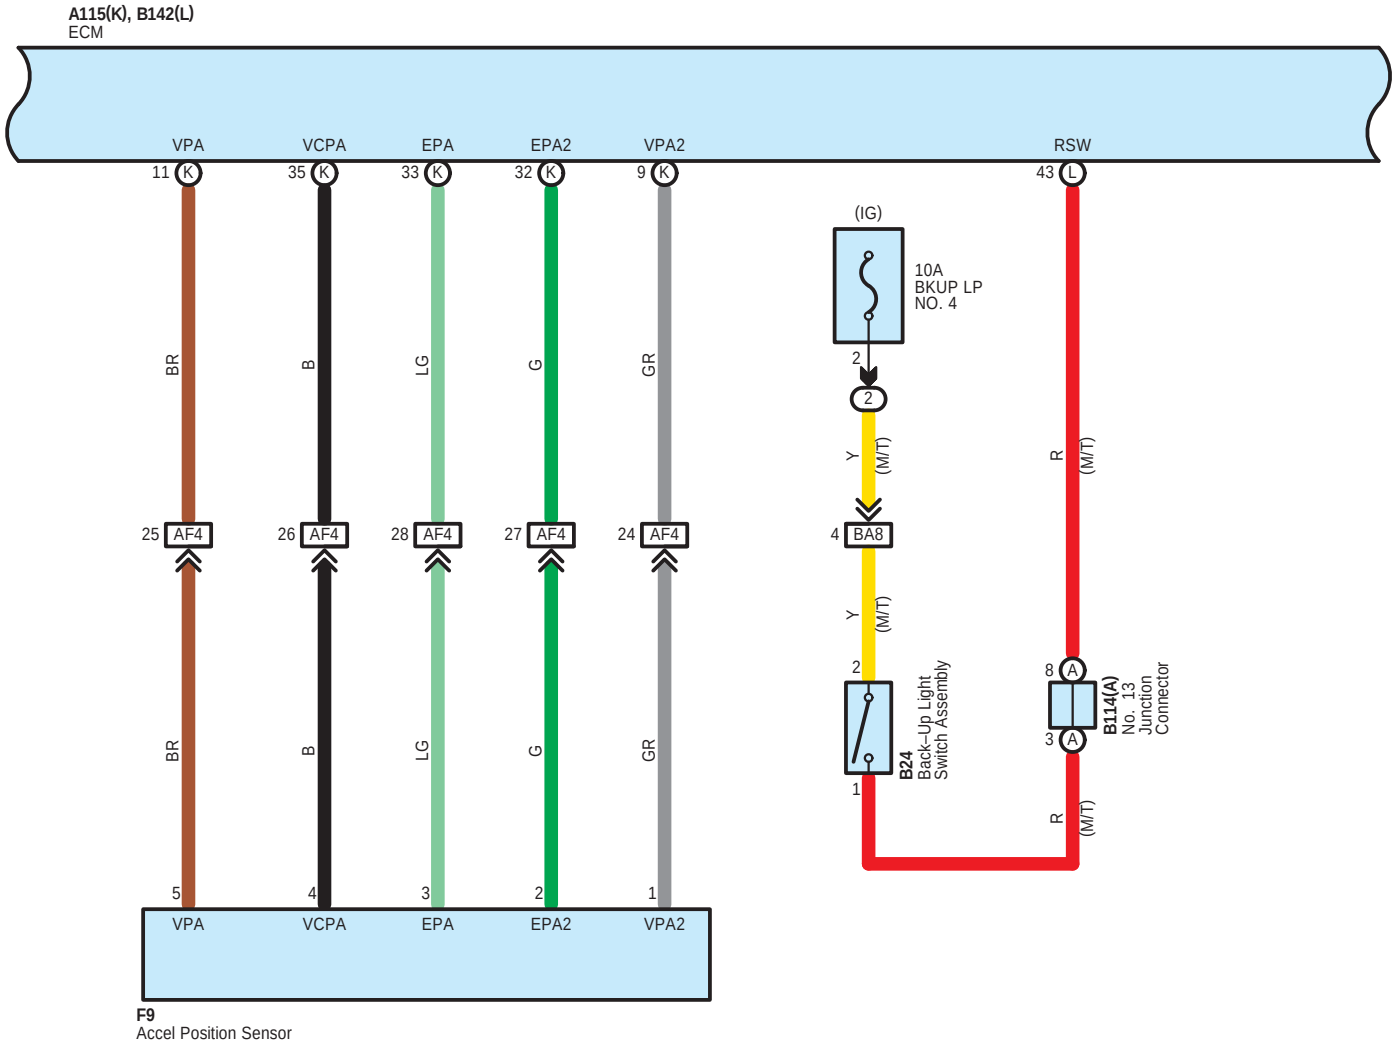
A115(K), B142(L)
ECM
VPA
VCPA
EPA
EPA2
VPA2
RSW
11 K
35 K
33 K
32 K
9 K
43 L
BR
B
LG
G
GR
25 AF4
26 AF4
28 AF4
27 AF4
24 AF4
5
4
3
2
1
VPA
VCPA
EPA
EPA2
VPA2
F9
Accel Position Sensor
(IG)
10A
BKUP LP
NO. 4
2
2
Y
(M/T)
4 BA8
Y
(M/T)
2
1
B24
Back–Up Light
Switch Assembly
R
(M/T)
8 A
3 A
B114(A)
No. 13
Junction
Connector
R
(M/T)



W
W
B
B

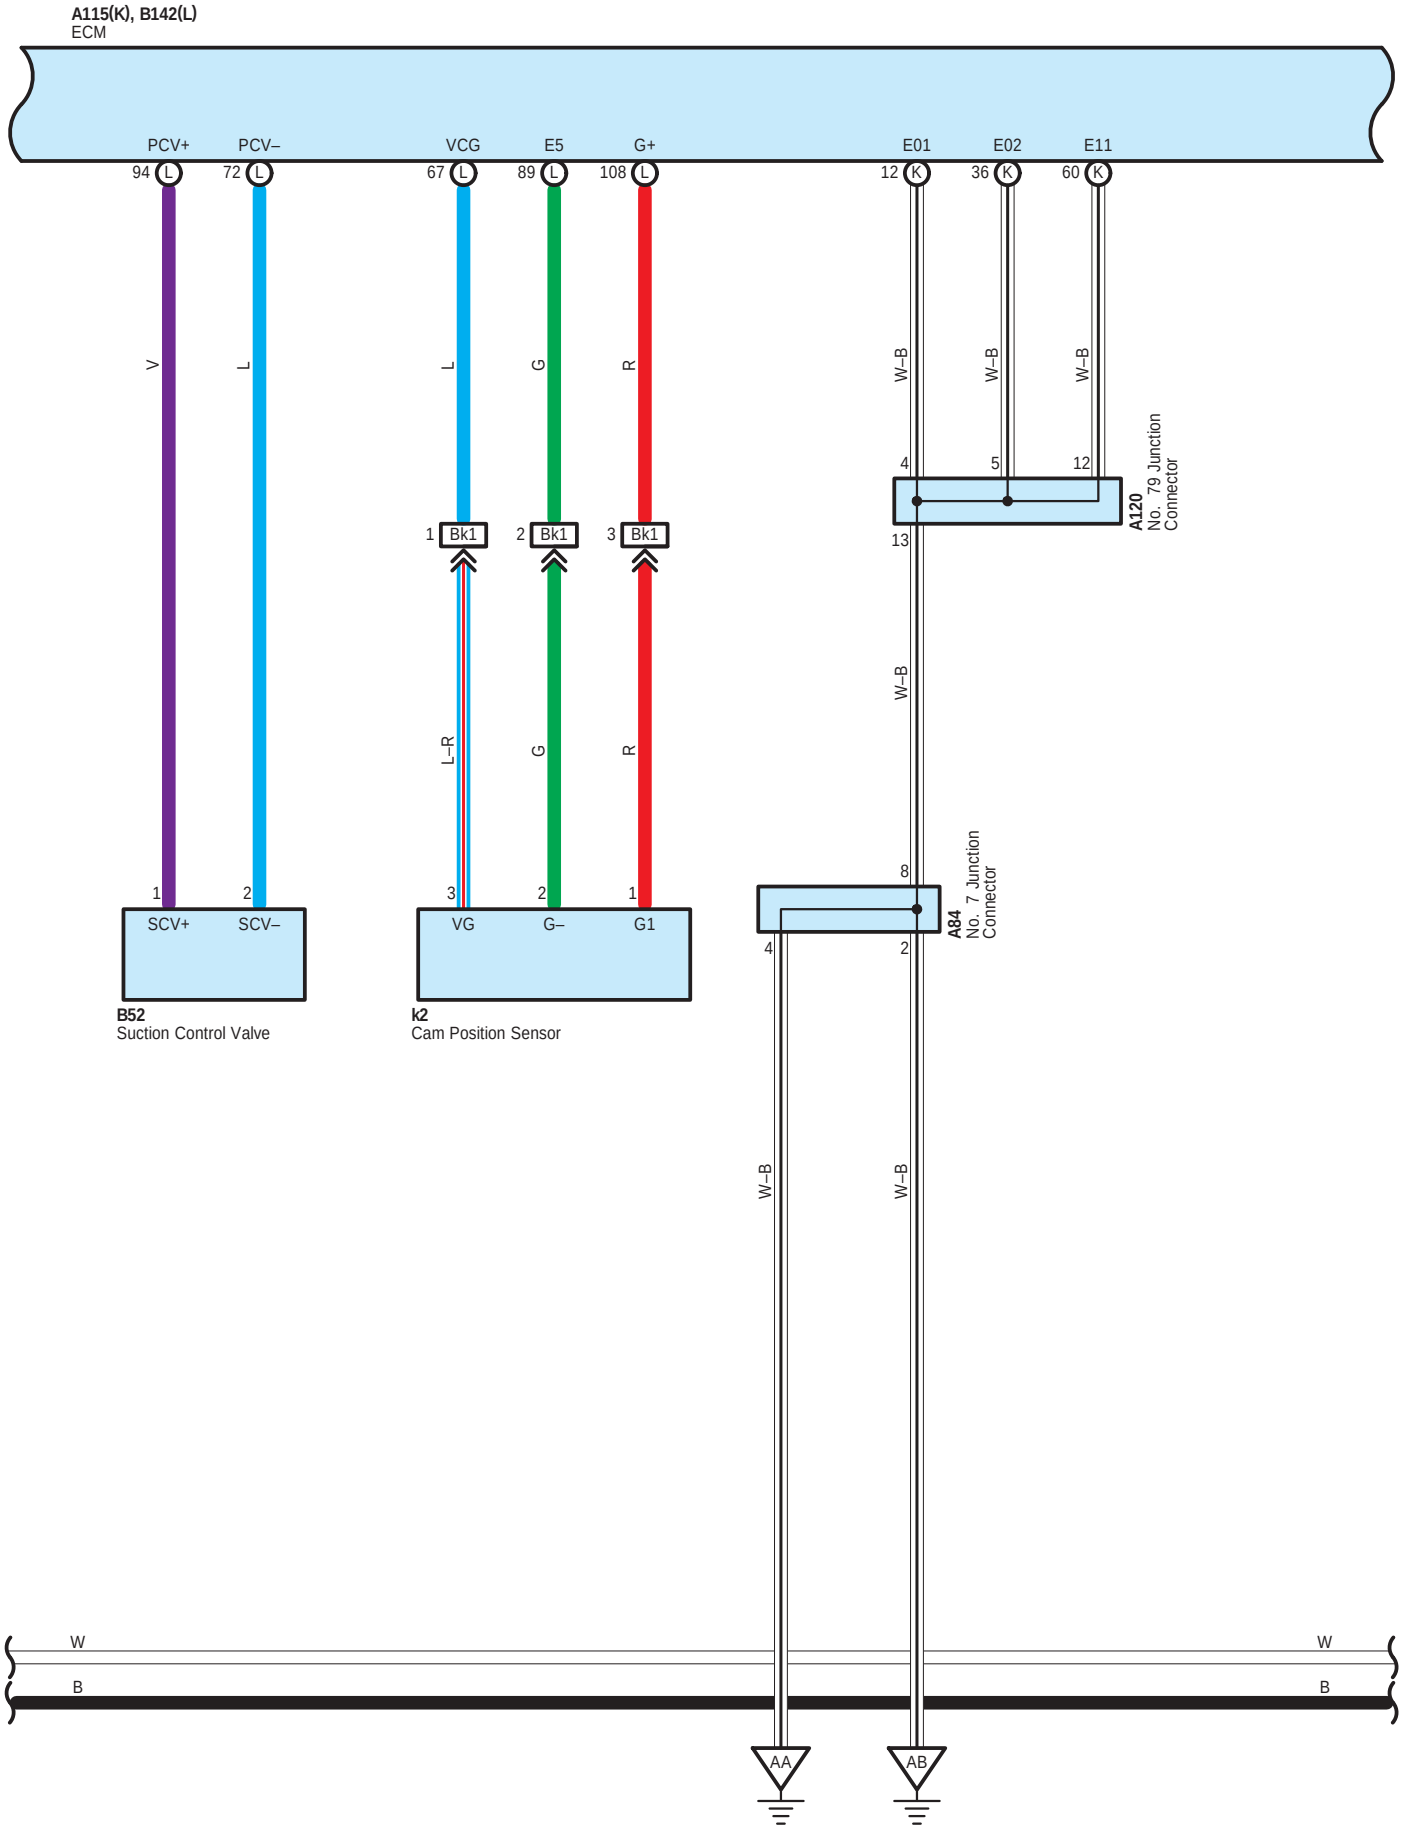
A115(K), B142(L)
ECM
PCV+
PCV–
VCG
E5
G+
E01
E02
E11
94 L
72 L
67 L
89 L
108 L
12 K
36 K
60 K
V
L
L
G
R
W–B
W–B
W–B
4
5
12
13
A120
No. 79 Junction Connector
1 Bk1
2 Bk1
3 Bk1
L–R
G
R
W–B
8
A84
No. 7 Junction Connector
4
2
W–B
W–B
1
2
3
2
1
SCV+
SCV–
VG
G–
G1
B52
Suction Control Valve
k2
Cam Position Sensor
W
B
W
B
AA
AB

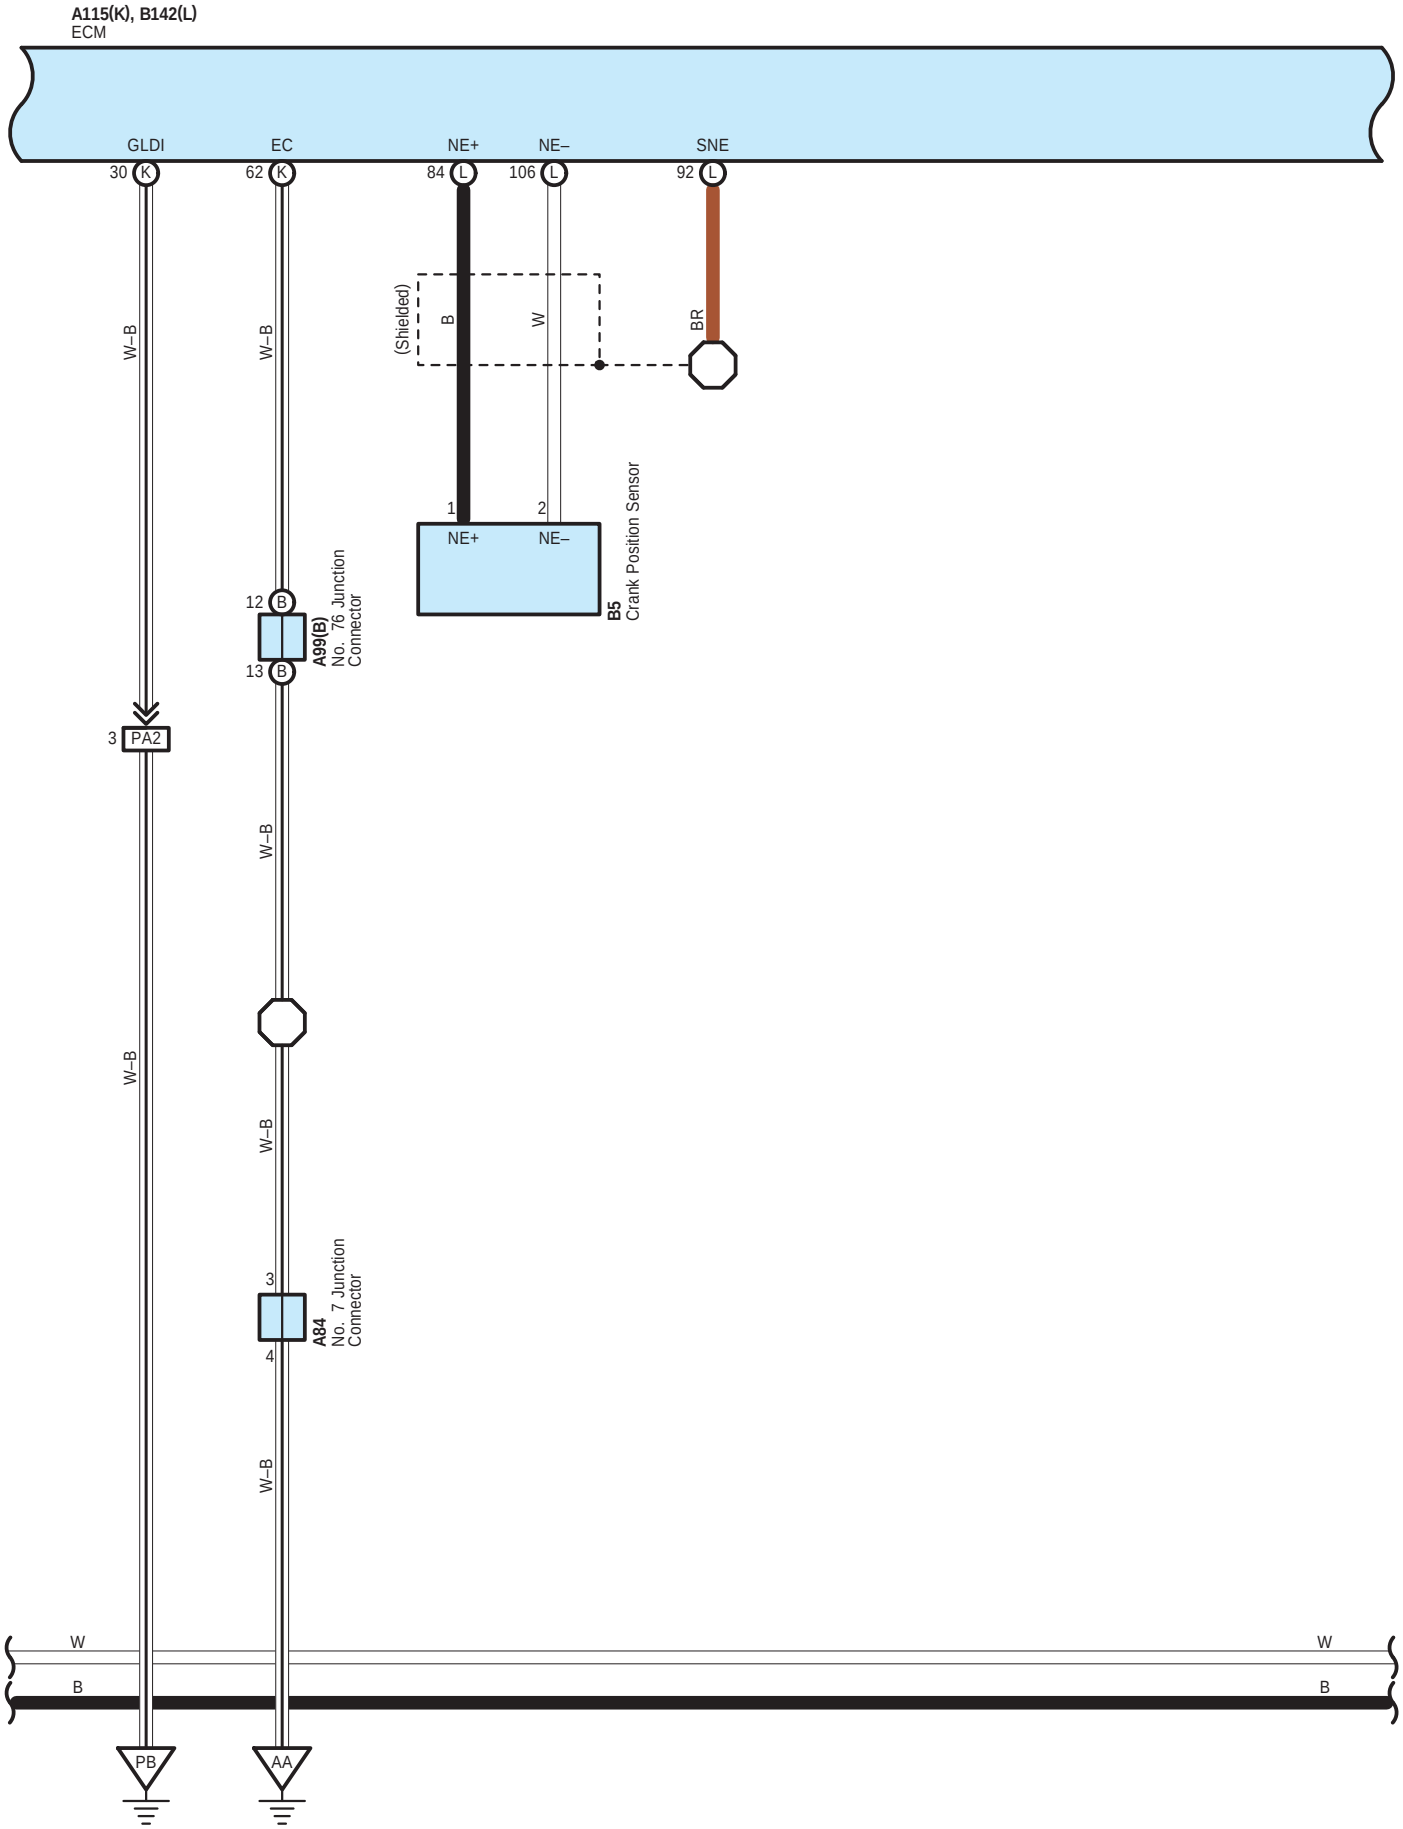

A115(K), B142(L)
ECM
GLDI
EC
NE+
NE–
SNE
30 K
62 K
84 L
106 L
92 L
W–B
W–B
(Shielded)
B
W
BR
1
2
NE+
NE–
B5
Crank Position Sensor
12 B
13 B
A99(B)
No. 76 Junction Connector
3 PA2
W–B
W–B
W–B
3
4
A84
No. 7 Junction Connector
W–B
W
B
W
B
PB
AA

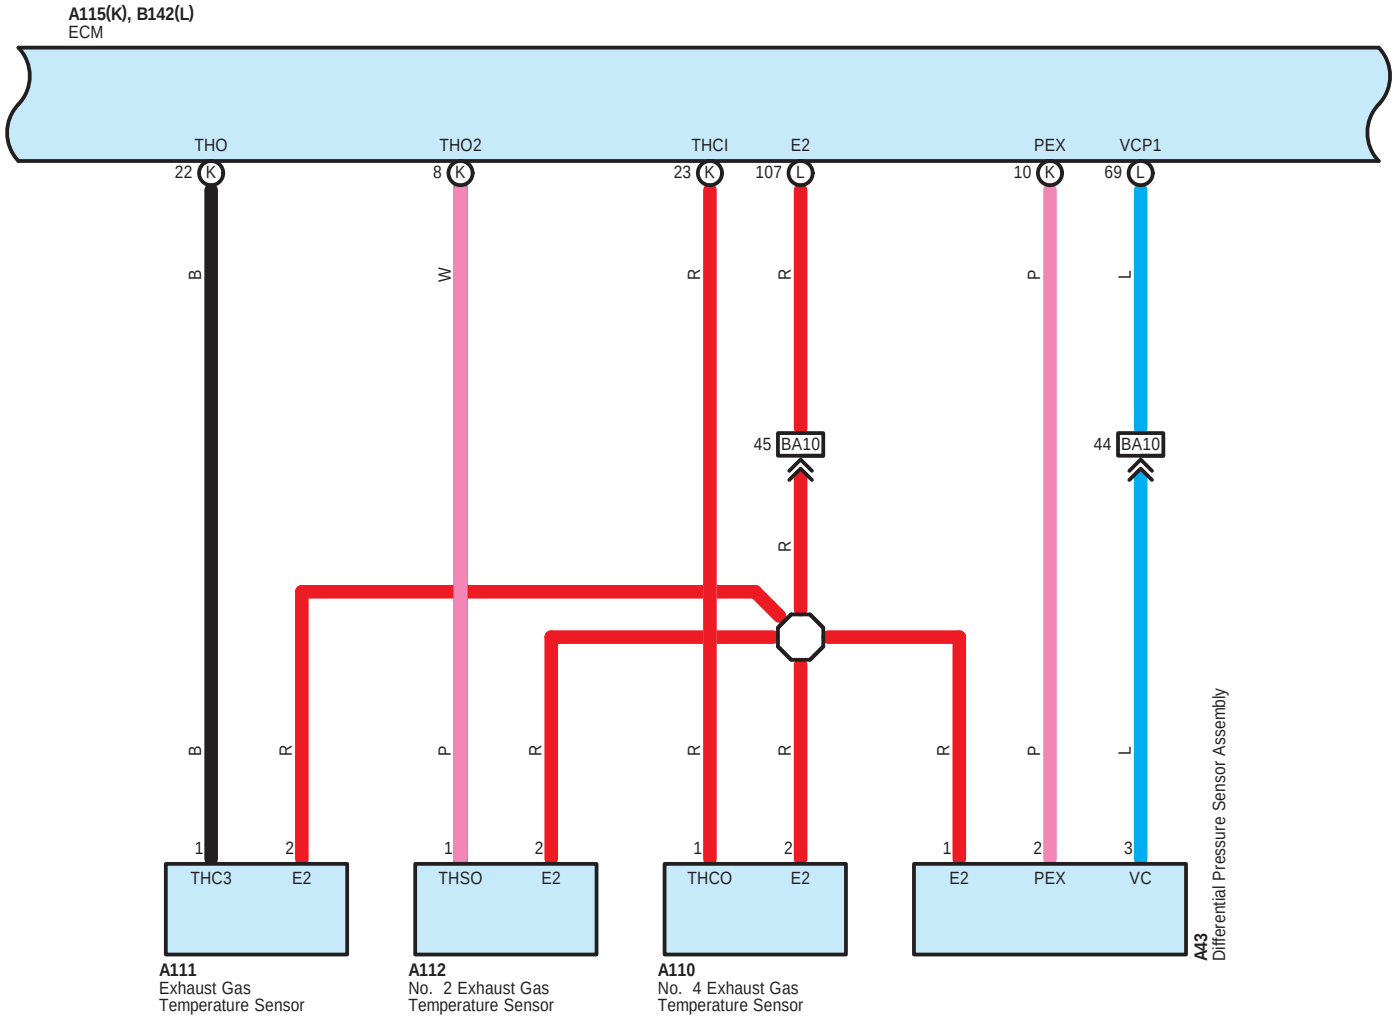
A115(K), B142(L)
ECM
THO
THO2
THCI
E2
PEX
VCP1
22 K
8 K
23 K
107 L
10 K
69 L
B
W
R
R
P
L
45 BA10
44 BA10
R
B
R
P
R
R
R
R
R
P
L
1
2
1
2
1
2
1
2
3
THC3
E2
THSO
E2
THCO
E2
E2
PEX
VC
A111
Exhaust Gas
Temperature Sensor
A112
No. 2 Exhaust Gas
Temperature Sensor
A110
No. 4 Exhaust Gas
Temperature Sensor
A43
Differential Pressure Sensor Assembly



W
W
B
B

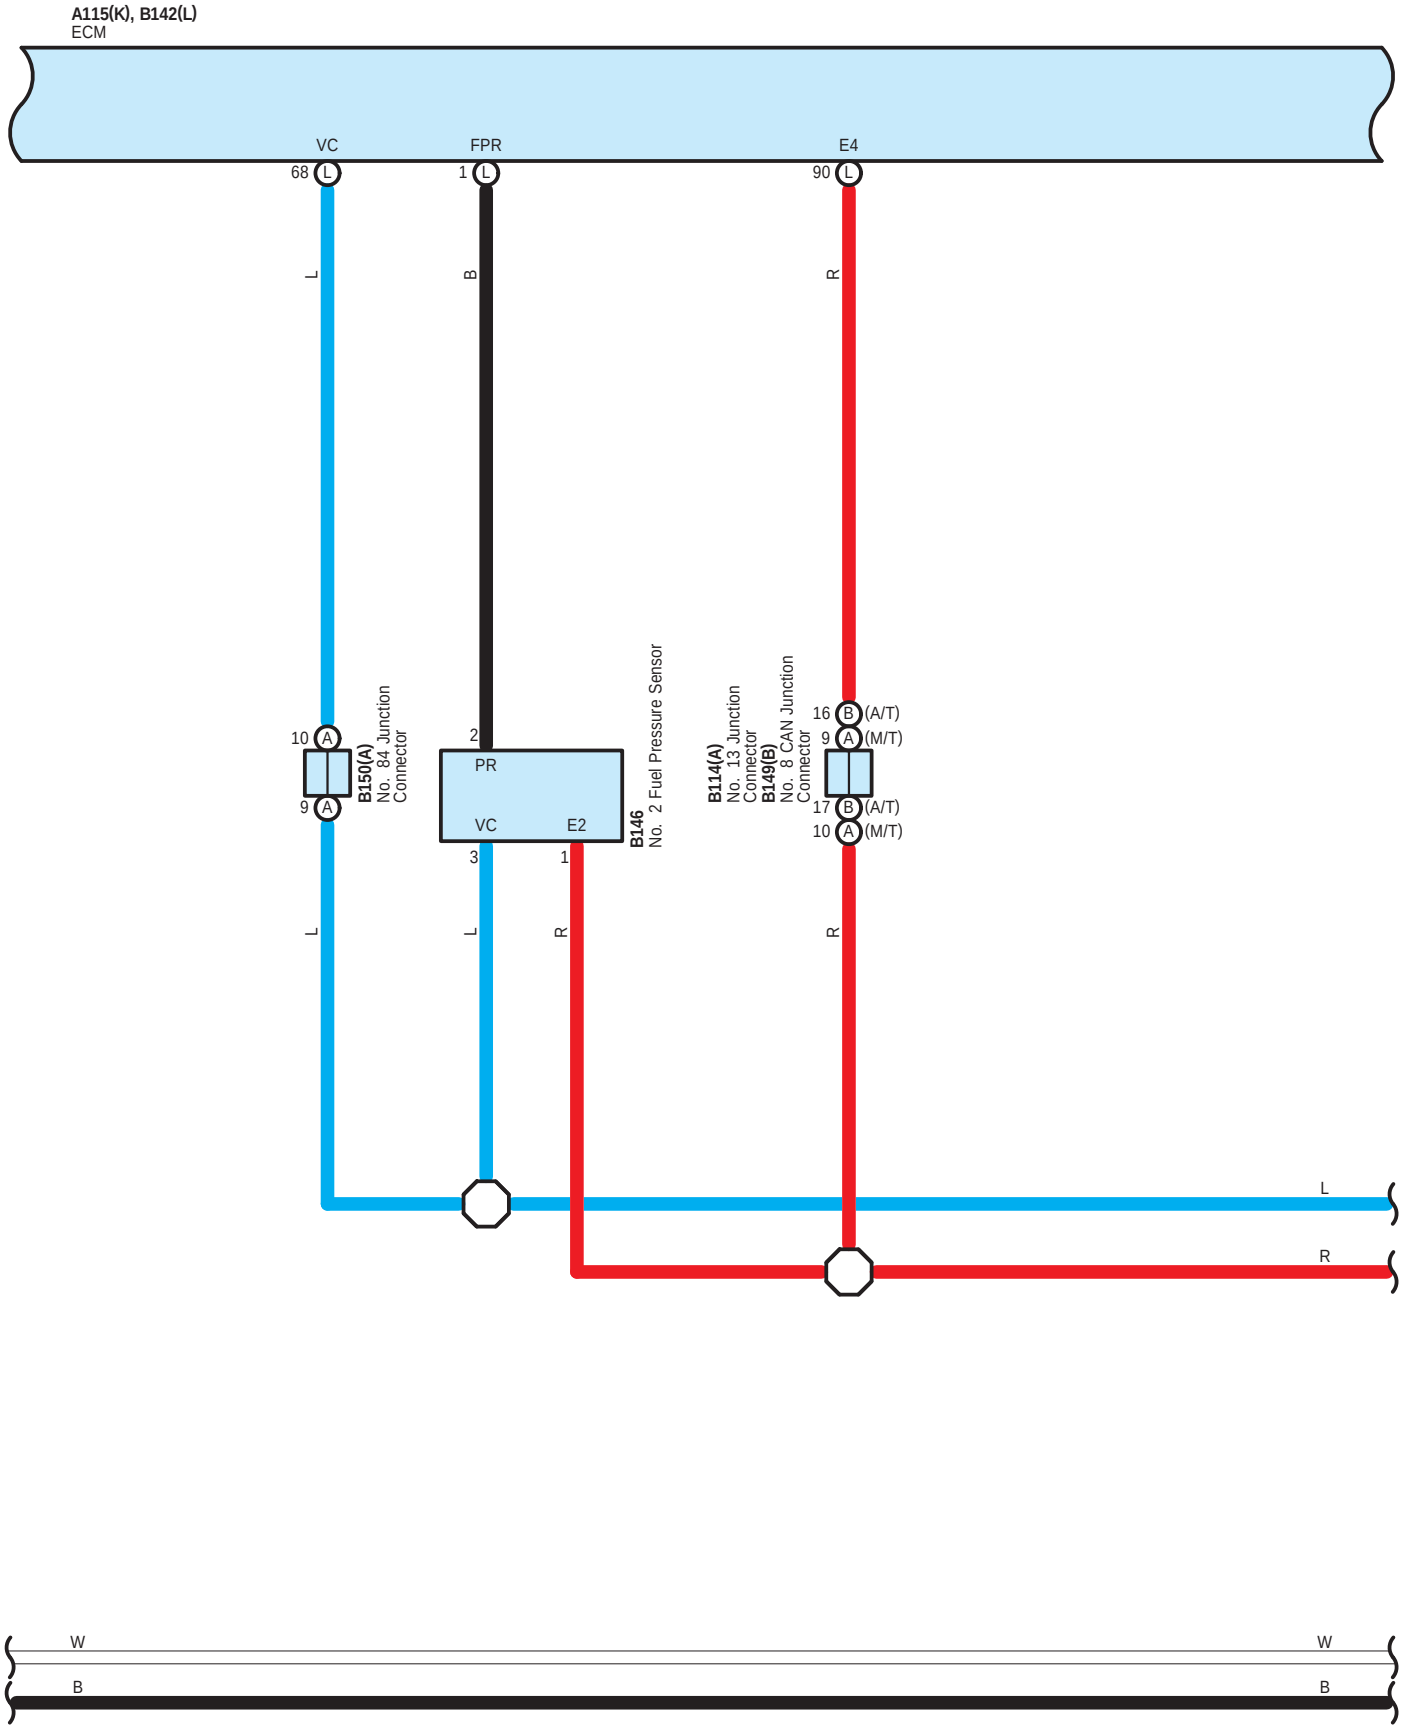

A115(K), B142(L)
ECM
VC
FPR
E4
68 L
1 L
90 L
L
B
R
10 A
9 A
B150(A)
No. 84 Junction
Connector
2
PR
VC
E2
3
1
B146
No. 2 Fuel Pressure Sensor
B114(A)
No. 13 Junction
Connector
B149(B)
No. 8 CAN Junction
Connector
16 B (A/T)
9 A (M/T)
17 B (A/T)
10 A (M/T)
L
R
L
R
L
R

W
B
W
B

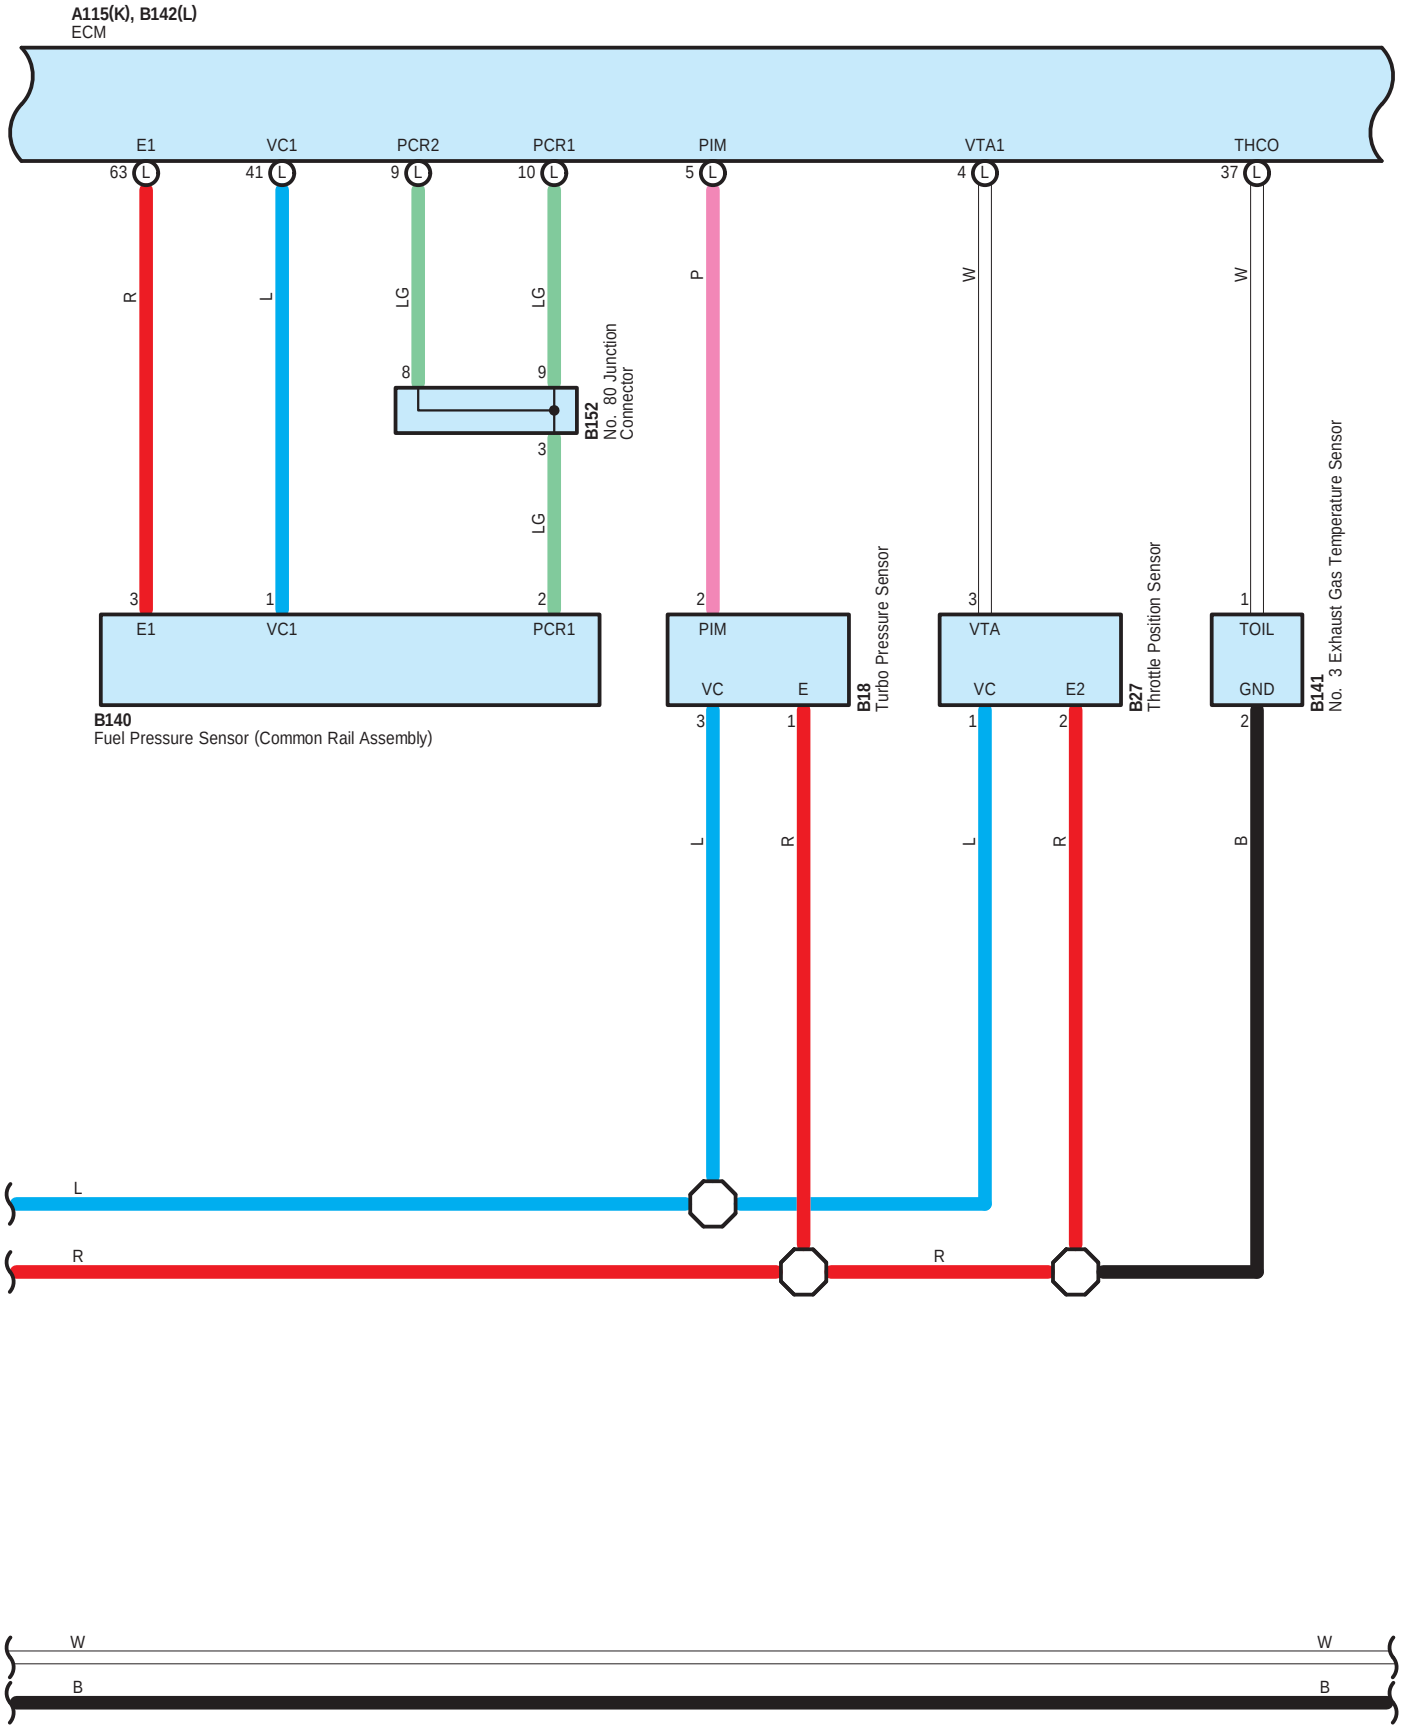

A115(K), B142(L)
ECM
E1
VC1
PCR2
PCR1
PIM
VTA1
THCO
63
41
9
10
5
4
37
R
L
LG
LG
P
W
W
8
9
B152
No. 80 Junction Connector
3
LG
3
1
2
2
3
1
E1
VC1
PCR1
PIM
VC
E
VTA
VC
E2
TOIL
GND
B140
Fuel Pressure Sensor (Common Rail Assembly)
B18
Turbo Pressure Sensor
B27
Throttle Position Sensor
B141
No. 3 Exhaust Gas Temperature Sensor
3
1
1
2
2
L
R
L
R
B
L
R
R

W
W
B
B

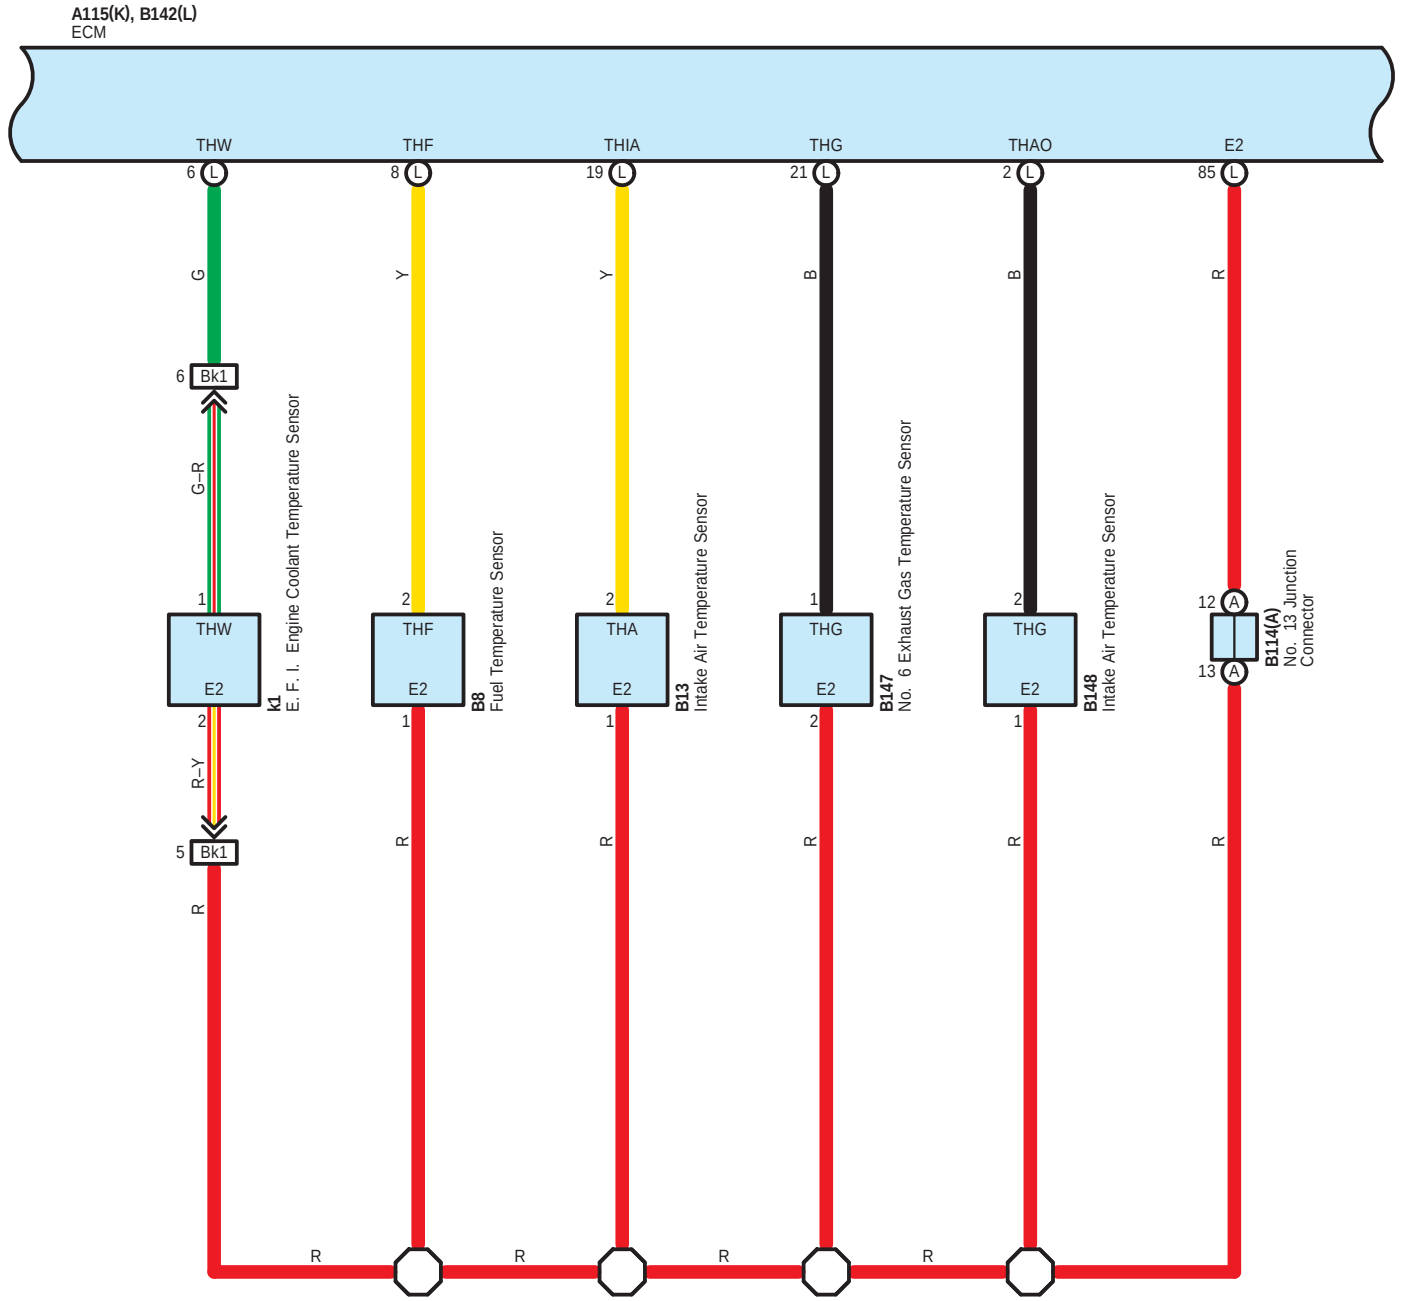

A115(K), B142(L)
ECM
THW
THF
THIA
THG
THAO
E2
6 L
8 L
19 L
21 L
2 L
85 L
G
Y
Y
B
B
R
6 Bk1
G–R
1
2
2
1
2
12 A
13 A
THW
E2
THF
E2
THA
E2
THG
E2
THG
E2
K1
E. F. I. Engine Coolant Temperature Sensor
B8
Fuel Temperature Sensor
B13
Intake Air Temperature Sensor
B147
No. 6 Exhaust Gas Temperature Sensor
B148
Intake Air Temperature Sensor
B114(A)
No. 13 Junction Connector
2
1
1
2
1
R–Y
5 Bk1
R
R
R
R
R
R
R
R
W
B
W
B

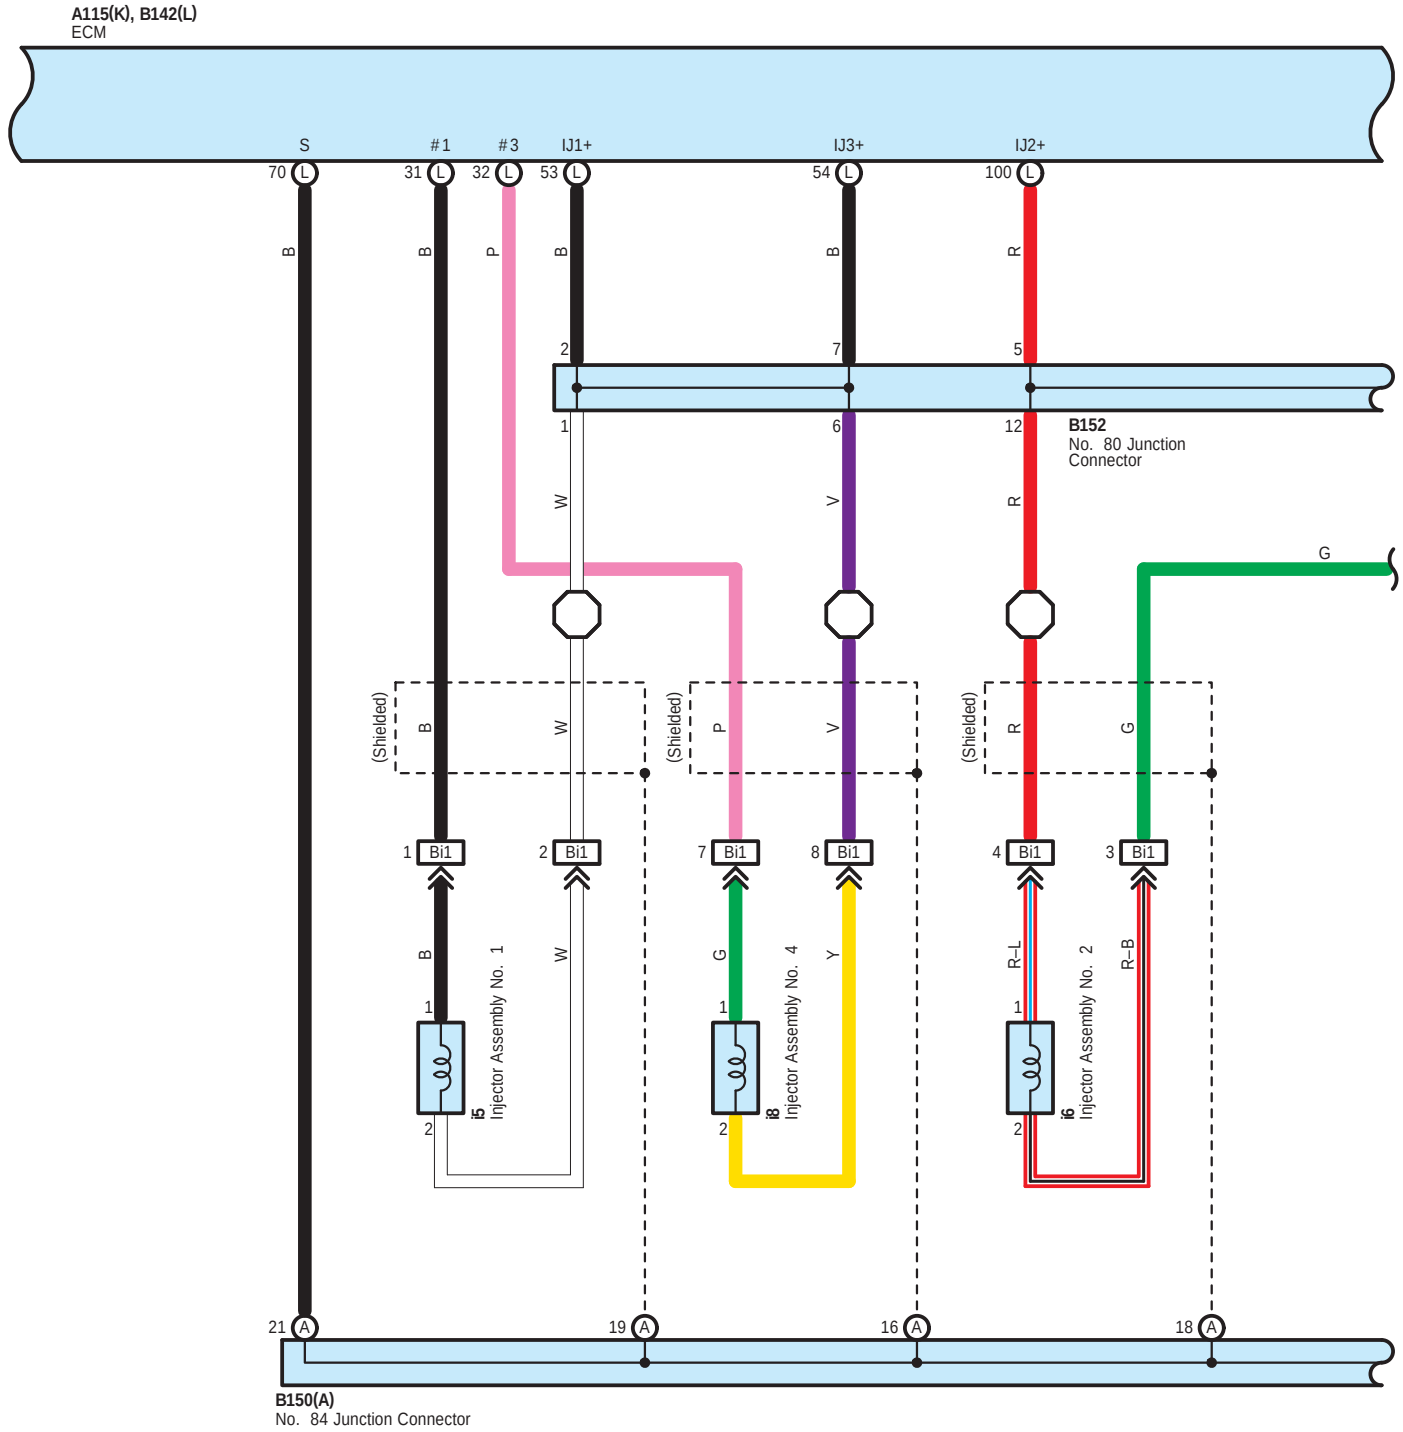

A115(K), B142(L)
ECM
S
#1
#3
IJ1+
IJ3+
IJ2+
70 L
31 L
32 L
53 L
54 L
100 L
B
B
P
B
B
R
2
7
5
1
6
12
B152
No. 80 Junction Connector
W
V
R
G
(Shielded)
B
W
(Shielded)
P
V
(Shielded)
R
G
1 Bi1
2 Bi1
7 Bi1
8 Bi1
4 Bi1
3 Bi1
B
W
G
Y
R–L
R–B
1
2
i5 Injector Assembly No. 1
i8 Injector Assembly No. 4
i6 Injector Assembly No. 2
21 A
19 A
16 A
18 A
B150(A)
No. 84 Junction Connector



W
W
B
B

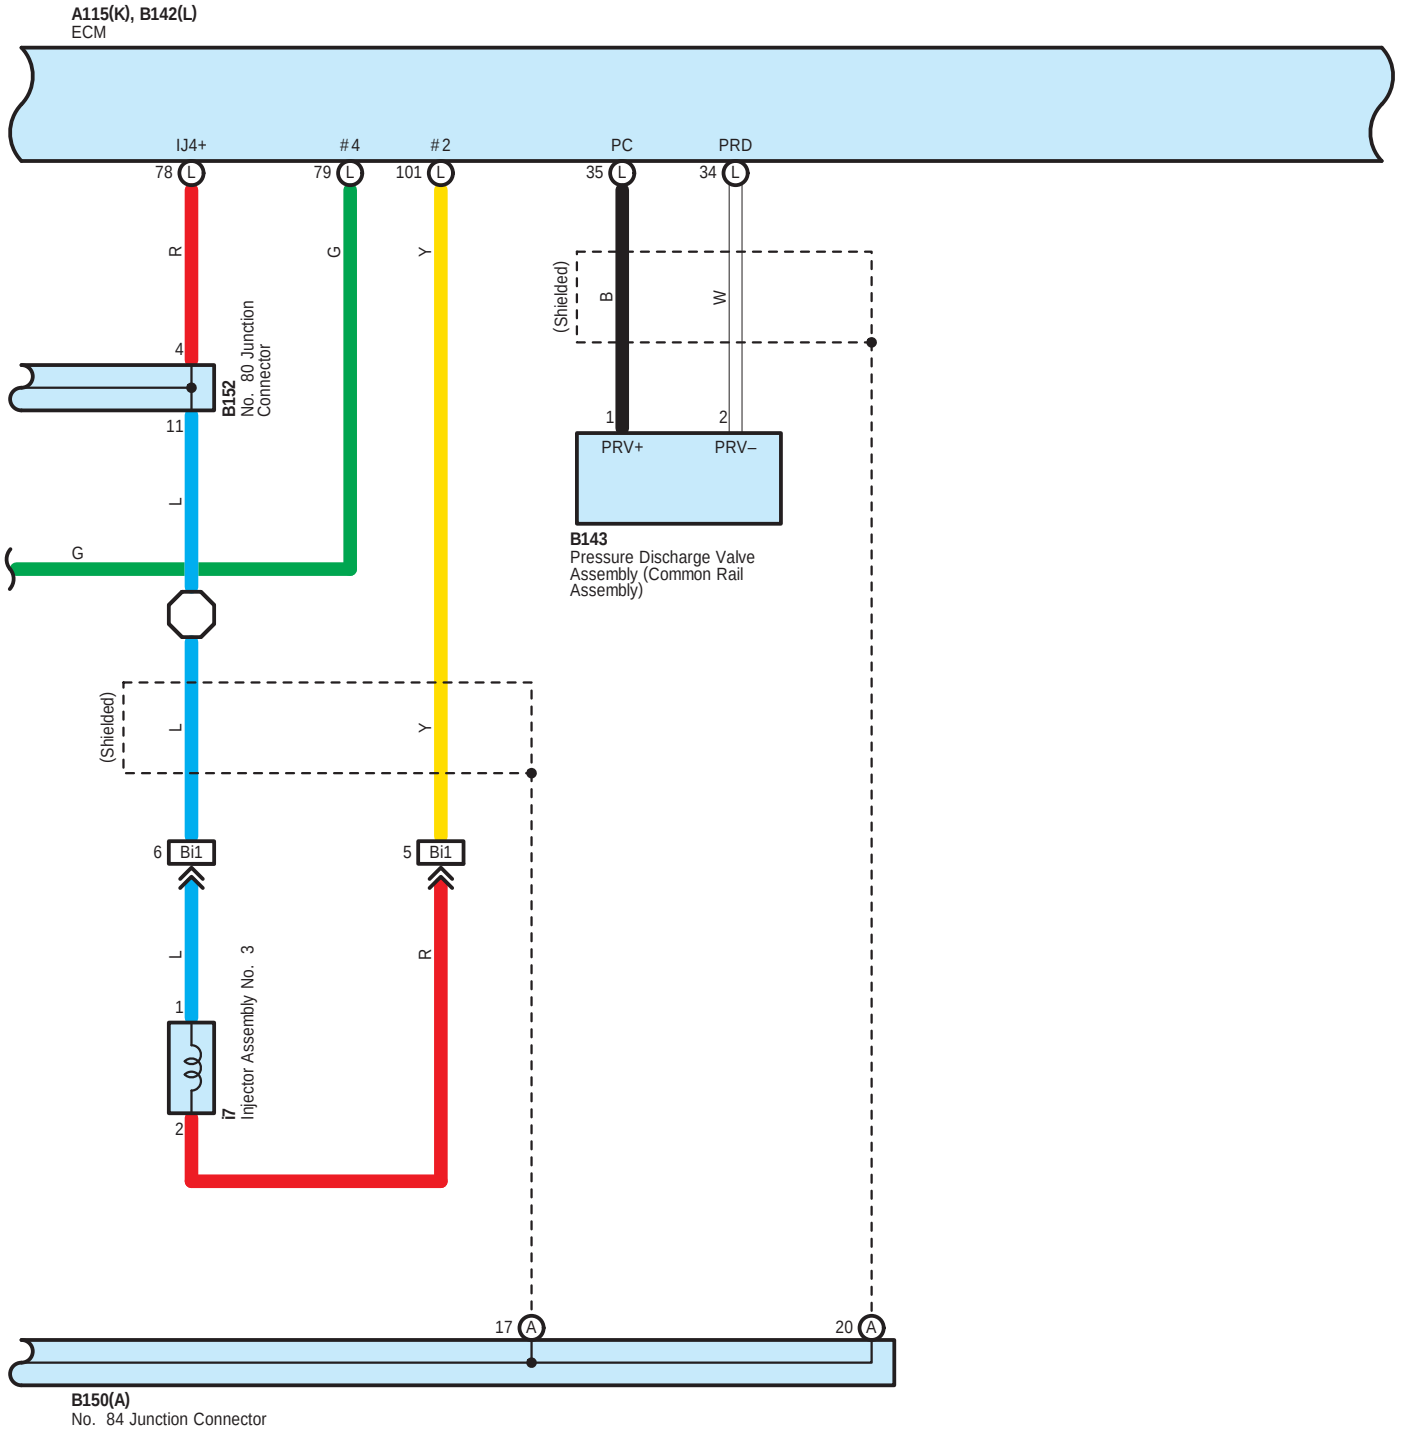

A115(K), B142(L)
ECM
IJ4+
#4
#2
PC
PRD
78 L
79 L
101 L
35 L
34 L
R
G
Y
B
W
(Shielded)
4
11
B152
No. 80 Junction Connector
L
G
1
2
PRV+
PRV–
B143
Pressure Discharge Valve Assembly (Common Rail Assembly)
(Shielded)
L
Y
6 Bi1
5 Bi1
L
R
1
2
i7
Injector Assembly No. 3
17 A
20 A
B150(A)
No. 84 Junction Connector



W
W
B
B

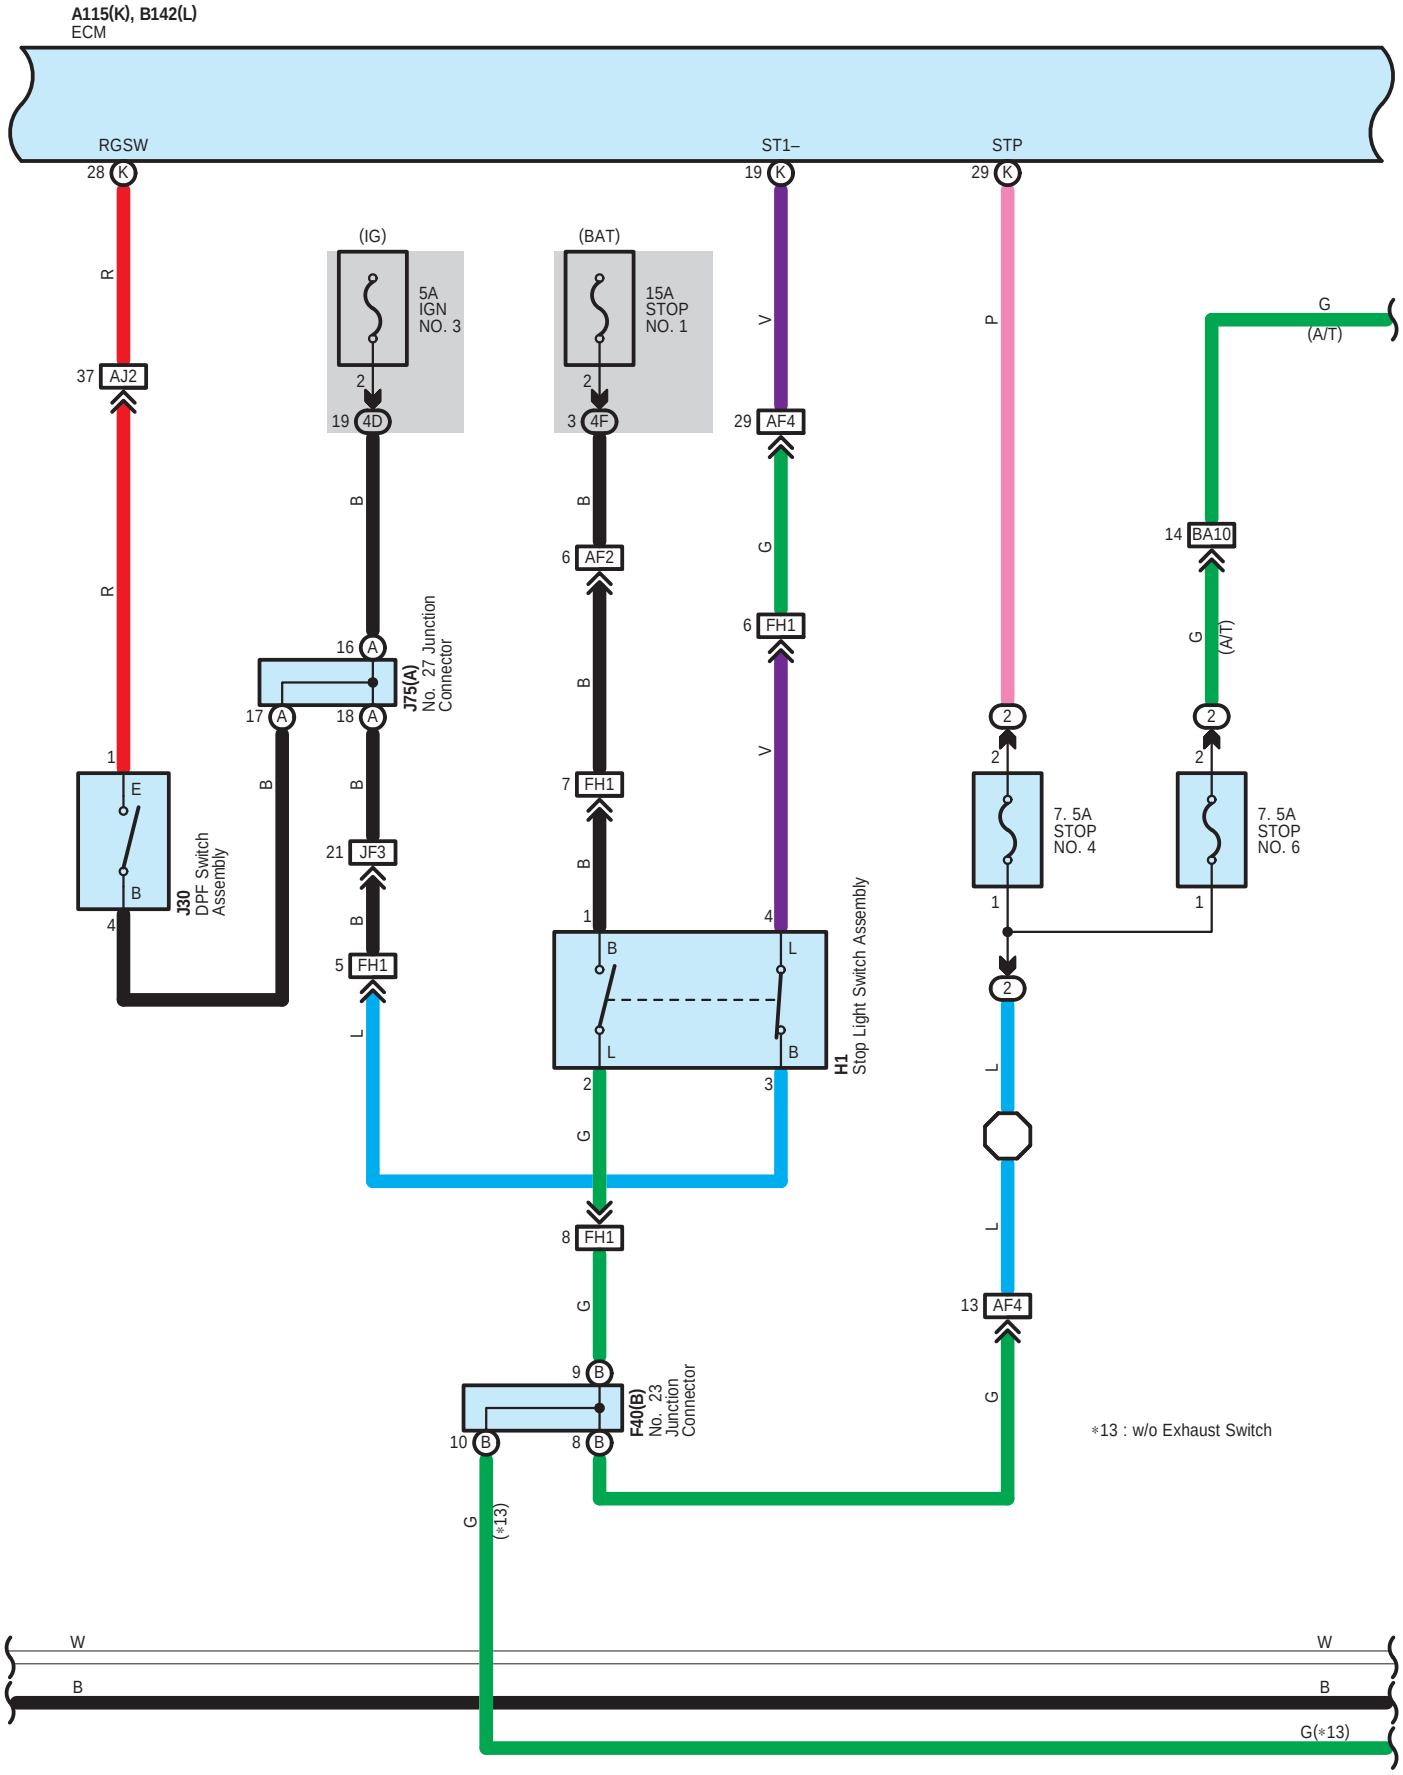

A115(K), B142(L)
ECM
RGSW
ST1–
STP
28 K
19 K
29 K
(IG)
(BAT)
5A
IGN
NO. 3
15A
STOP
NO. 1
37 AJ2
19 4D
3 4F
29 AF4
6 AF2
6 FH1
7 FH1
5 FH1
8 FH1
21 JF3
16 A
17 A
18 A
J75(A)
No. 27 Junction
Connector
1 E
4 B
J30
DPF Switch
Assembly
H1
Stop Light Switch Assembly
9 B
10 B
8 B
F40(B)
No. 23
Junction
Connector
(*13)
2
3
1
4
7. 5A
STOP
NO. 4
7. 5A
STOP
NO. 6
14 BA10
13 AF4
G
(A/T)
R
B
V
P
L
W
*13 : w/o Exhaust Switch

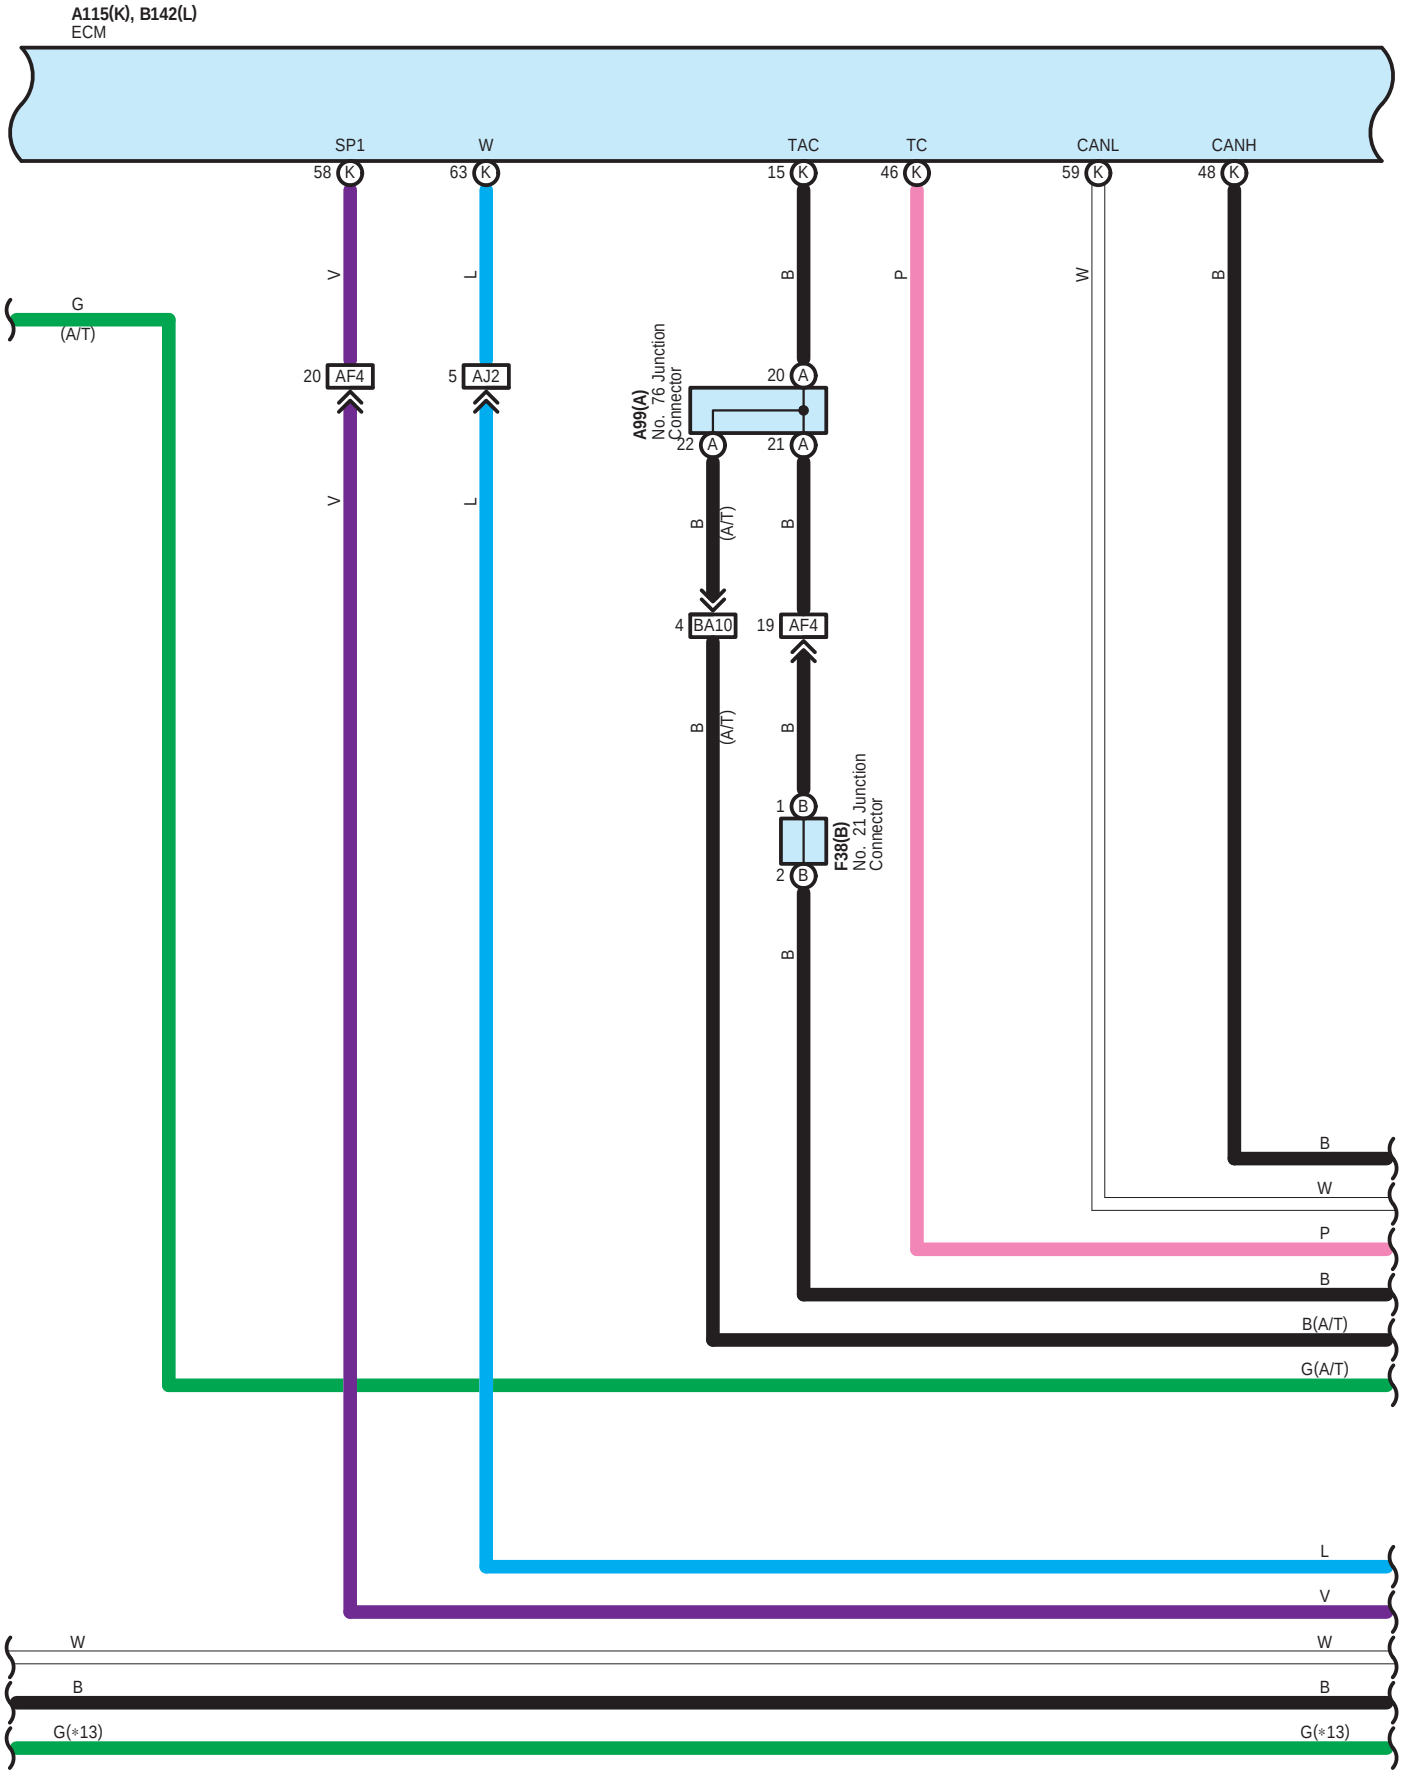
A115(K), B142(L)
ECM
SP1
W
TAC
TC
CANL
CANH
58 K
63 K
15 K
46 K
59 K
48 K
V
L
B
P
W
B
G
(A/T)
20 AF4
5 AJ2
A99(A)
No. 76 Junction
Connector
20 A
22 A
21 A
B
(A/T)
4 BA10
19 AF4
1 B
2 B
F38(B)
No. 21 Junction
Connector
B
W
P
B
B(A/T)
G(A/T)
L
V
W
B
G(*13)
W
B
G(*13)

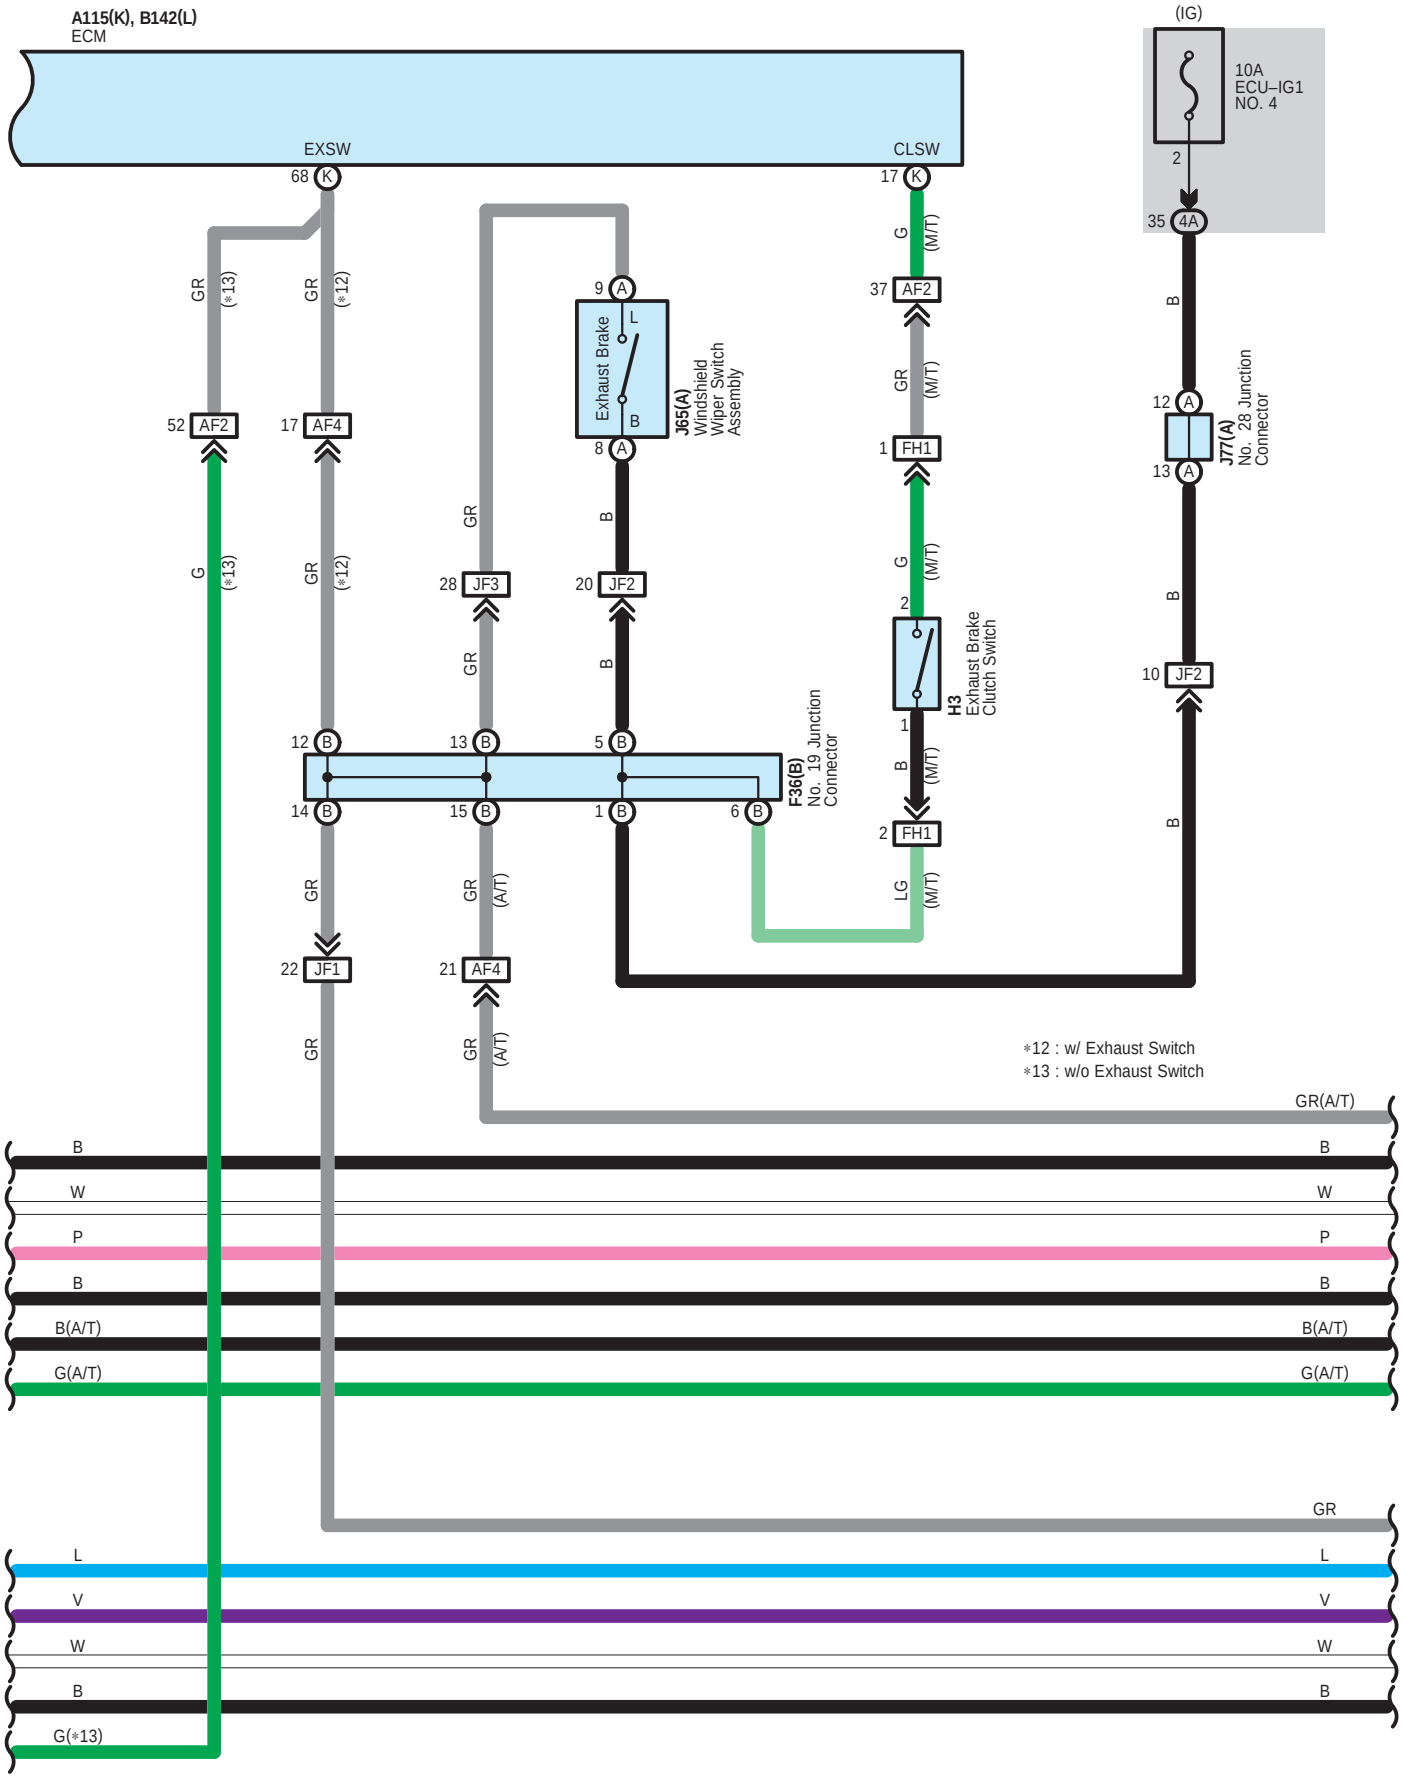
A115(K), B142(L)
ECM
EXSW
CLSW
(IG)
10A
ECU–IG1
NO. 4
68 K
17 K
35 4A
2
GR (*13)
GR (*12)
G (M/T)
37 AF2
52 AF2
17 AF4
9 A
Exhaust Brake
L
B
8 A
J65(A)
Windshield
Wiper Switch
Assembly
GR (M/T)
1 FH1
B
12 A
13 A
J77(A)
No. 28 Junction
Connector
28 JF3
20 JF2
GR
B
G (*13)
GR (*12)
G (M/T)
2
H3
Exhaust Brake
Clutch Switch
10 JF2
12 B
13 B
5 B
14 B
15 B
1 B
6 B
F36(B)
No. 19 Junction
Connector
1
B (M/T)
2 FH1
LG (M/T)
GR
GR (A/T)
22 JF1
21 AF4
GR (A/T)
*12 : w/ Exhaust Switch
*13 : w/o Exhaust Switch
GR(A/T)
B
W
P
B
B(A/T)
G(A/T)
GR
L
V
W
B
G(*13)

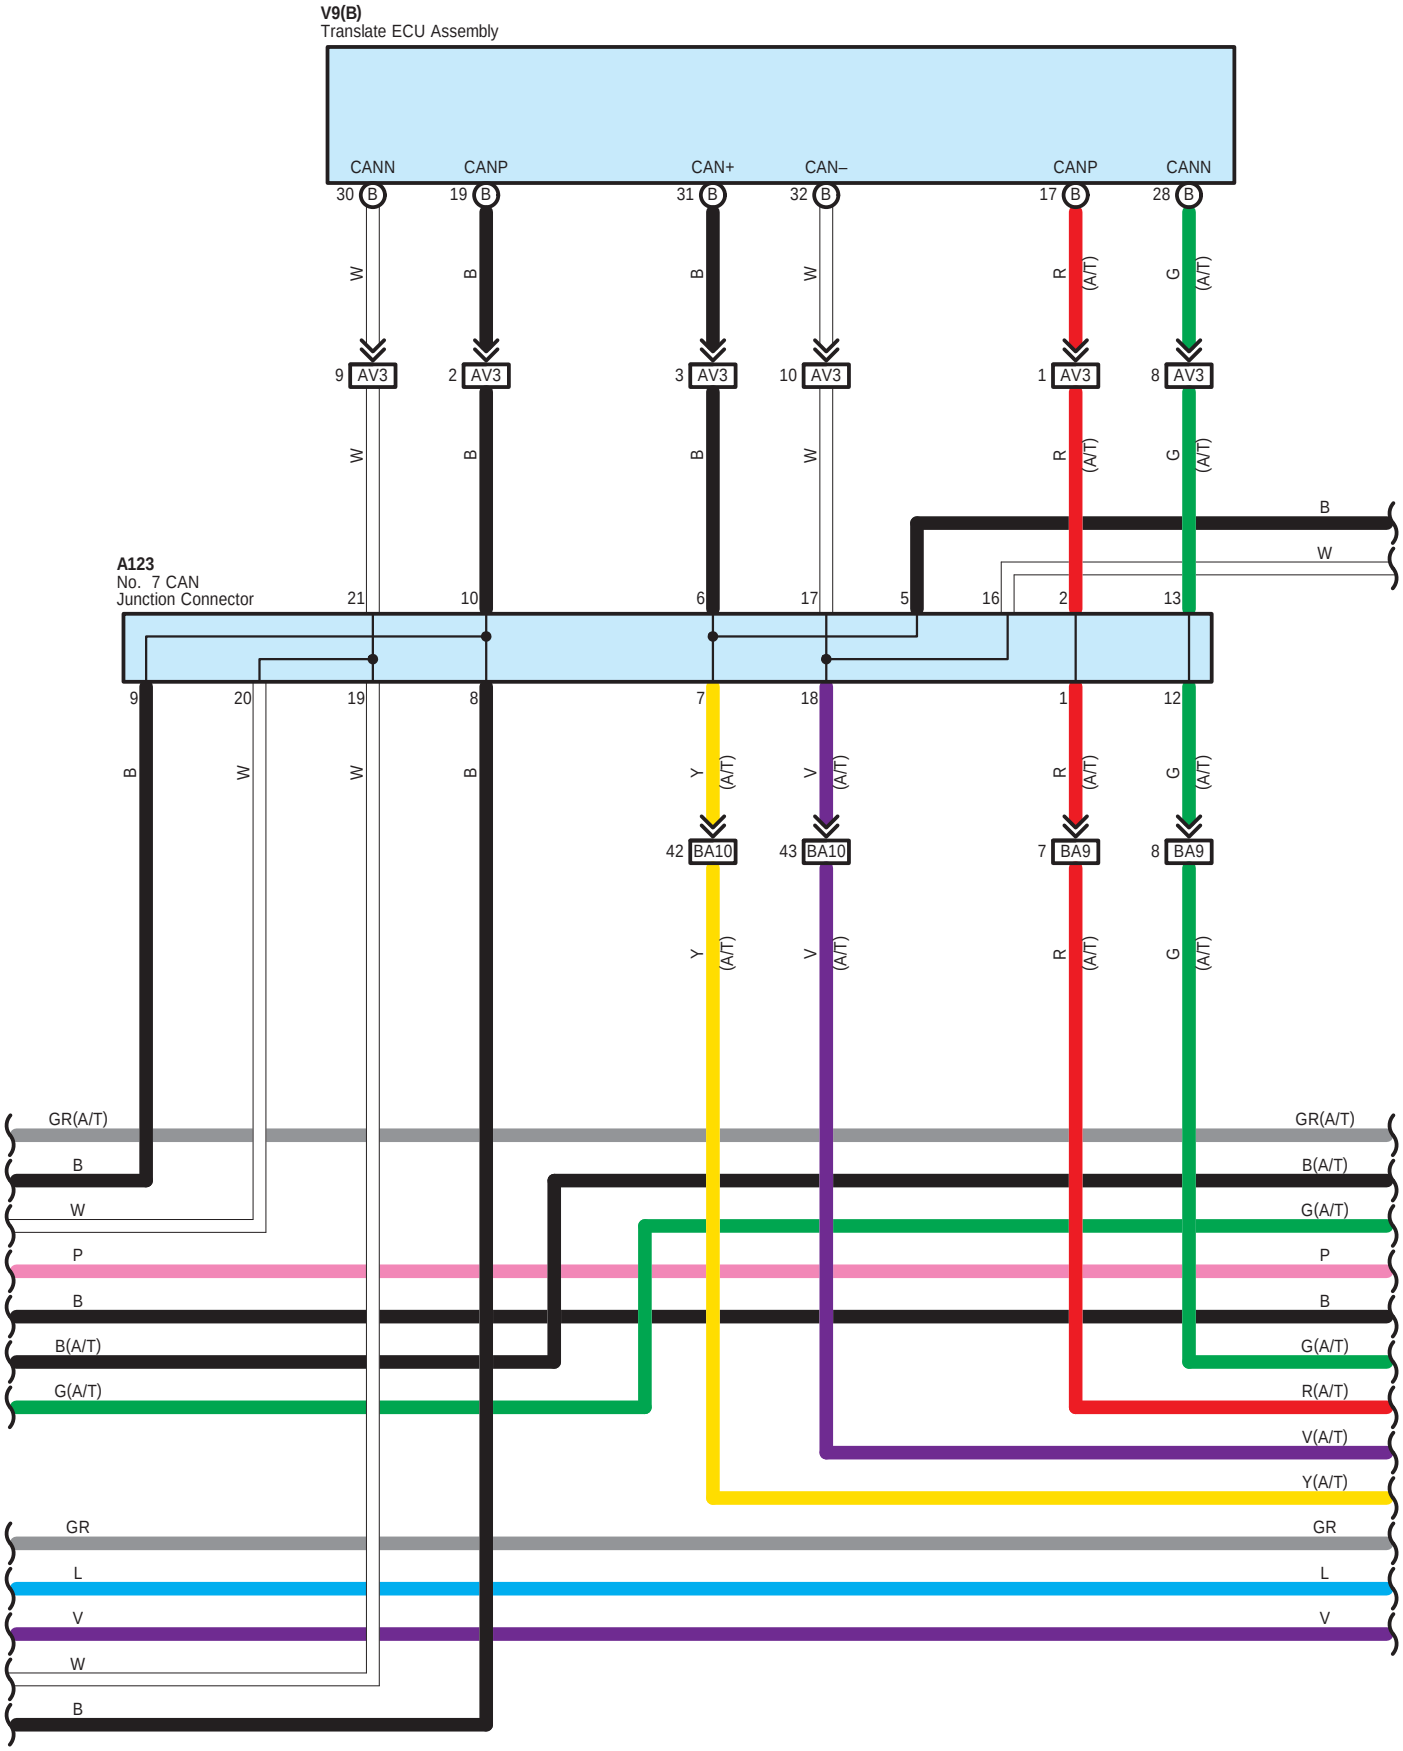

V9(B)
Translate ECU Assembly
CANN
CANP
CAN+
CAN–
CANP
CANN
30 B
19 B
31 B
32 B
17 B
28 B
W
B
B
W
R (A/T)
G (A/T)
9 AV3
2 AV3
3 AV3
10 AV3
1 AV3
8 AV3
A123
No. 7 CAN
Junction Connector
21
10
6
17
5
16
2
13
B
W
9
20
19
8
7
18
1
12
B
W
W
B
Y (A/T)
V (A/T)
R (A/T)
G (A/T)
42 BA10
43 BA10
7 BA9
8 BA9
GR(A/T)
B
W
P
B
B(A/T)
G(A/T)
R(A/T)
V(A/T)
Y(A/T)
GR
L
V
W
B

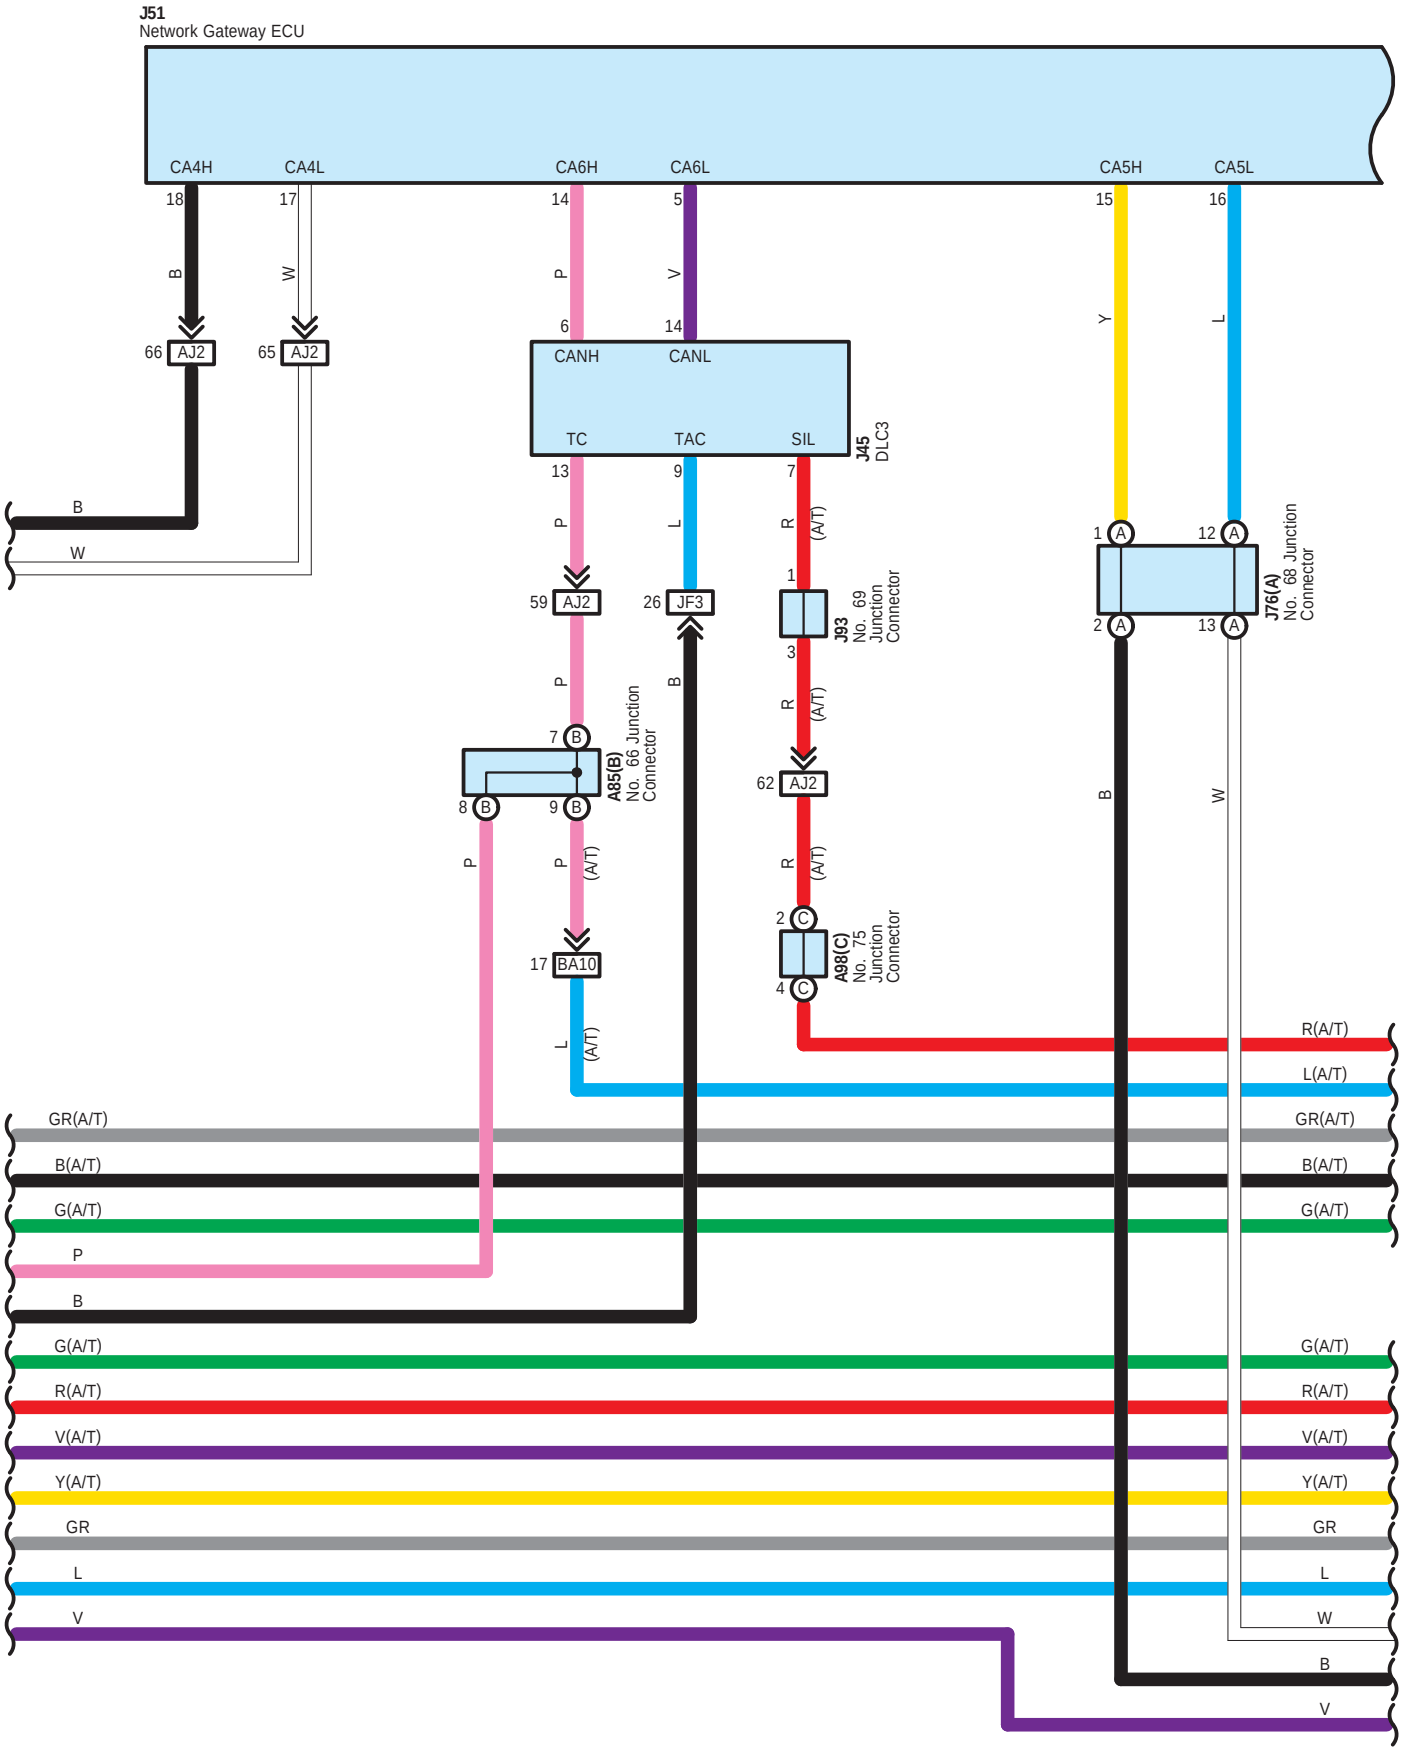

J51
Network Gateway ECU
CA4H
CA4L
CA6H
CA6L
CA5H
CA5L
18
17
14
5
15
16
B
W
P
V
Y
L
66 AJ2
65 AJ2
6
14
CANH
CANL
TC
TAC
SIL
J45 DLC3
13
9
7
P
L
R (A/T)
59 AJ2
26 JF3
1
J93 No. 69 Junction Connector
3
62 AJ2
7 B
8 B
9 B
A85(B) No. 66 Junction Connector
17 BA10
2 C
4 C
A98(C) No. 75 Junction Connector
1 A
12 A
2 A
13 A
J76(A) No. 68 Junction Connector
R(A/T)
L(A/T)
GR(A/T)
B(A/T)
G(A/T)
P
B
G(A/T)
R(A/T)
V(A/T)
Y(A/T)
GR
L
V
G(A/T)
R(A/T)
V(A/T)
Y(A/T)
GR
L
W
B
V

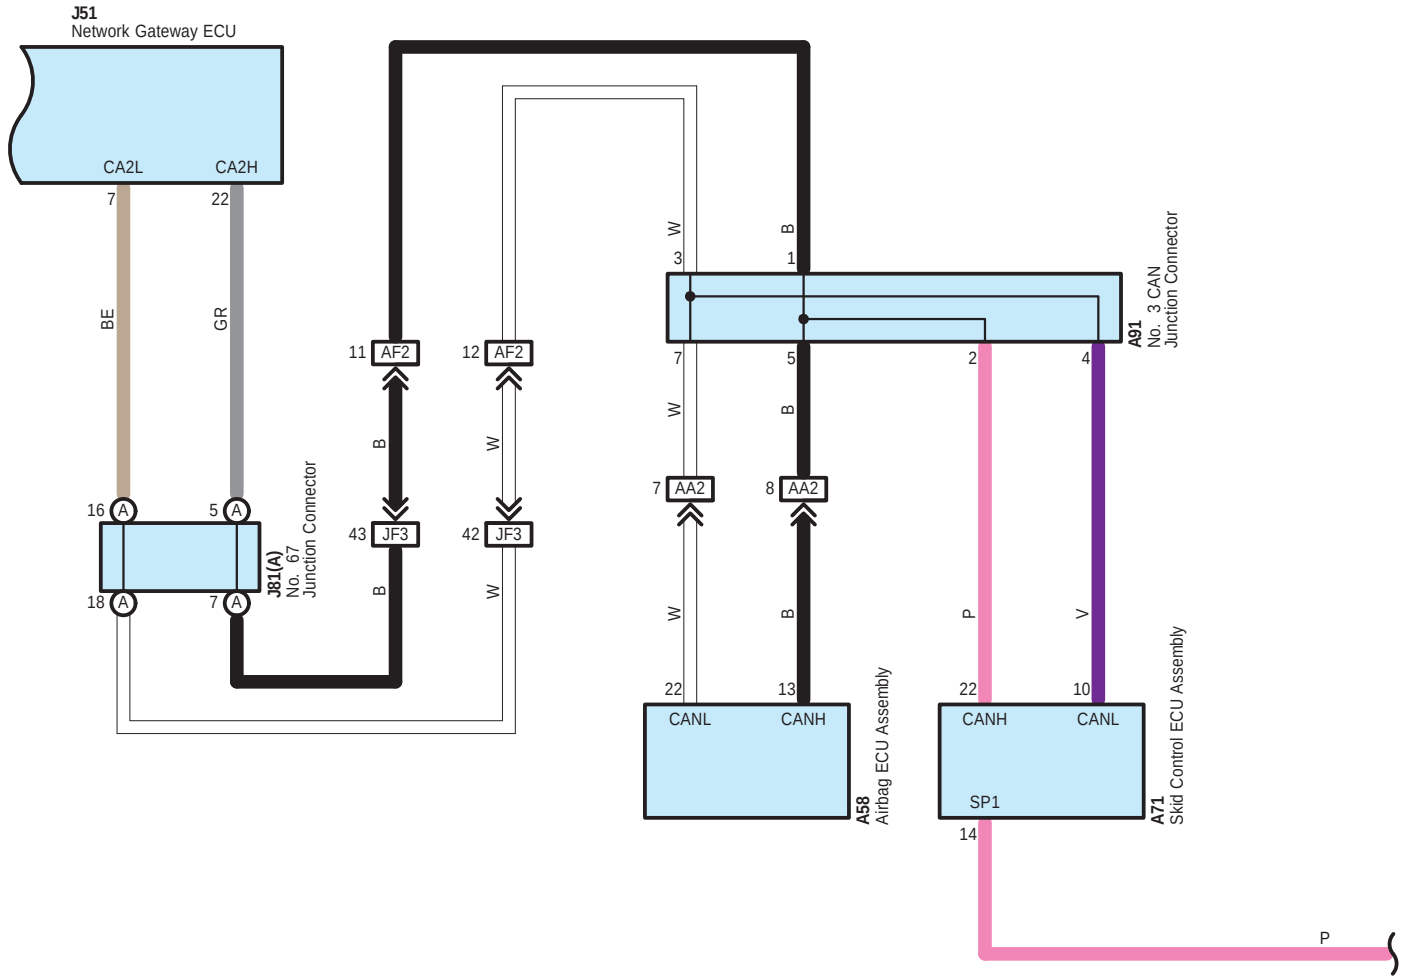

J51
Network Gateway ECU
CA2L
CA2H
7
22
BE
GR
16 A
5 A
18 A
7 A
J81(A)
No. 67
Junction Connector
11 AF2
12 AF2
43 JF3
42 JF3
B
W
B
W
3
1
7
5
2
4
A91
No. 3 CAN
Junction Connector
7 AA2
8 AA2
22
13
CANL
CANH
A58
Airbag ECU Assembly
22
10
CANH
CANL
SP1
14
A71
Skid Control ECU Assembly
P
V
P



R(A/T)
L(A/T)
GR(A/T)
B(A/T)
G(A/T)
R(A/T)
L(A/T)
GR(A/T)
B(A/T)
G(A/T)


G(A/T)
R(A/T)
V(A/T)
Y(A/T)
GR
L
W
B
V
G(A/T)
R(A/T)
V(A/T)
Y(A/T)
GR
L
W
B
V

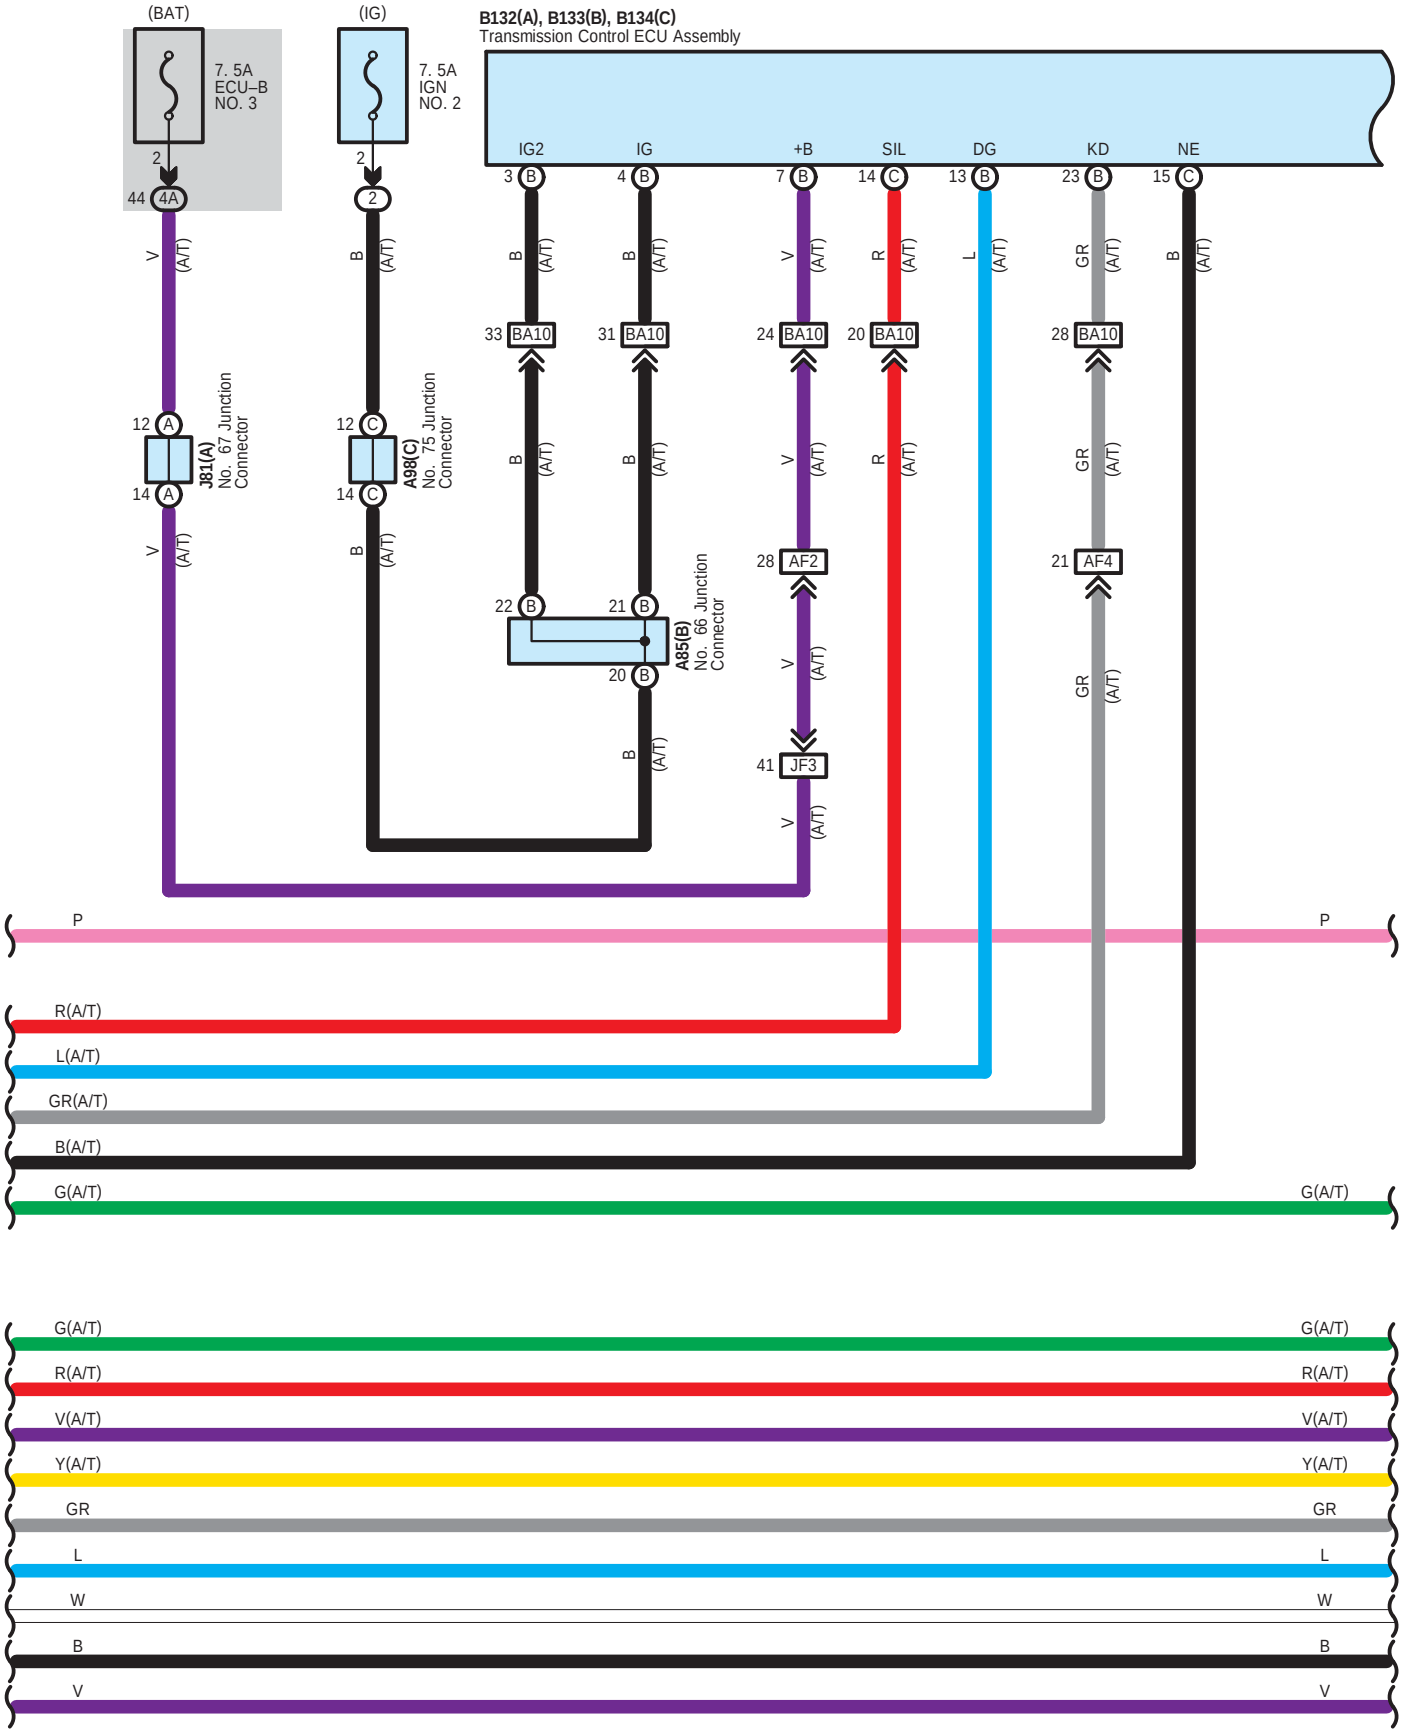

(BAT)
(IG)
7. 5A
ECU–B
NO. 3
7. 5A
IGN
NO. 2
B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
IG2
IG
+B
SIL
DG
KD
NE
J81(A)
No. 67 Junction
Connector
A98(C)
No. 75 Junction
Connector
A85(B)
No. 66 Junction
Connector
BA10
AF2
AF4
JF3
P
R(A/T)
L(A/T)
GR(A/T)
B(A/T)
G(A/T)
V(A/T)
Y(A/T)
GR
L
W
B
V

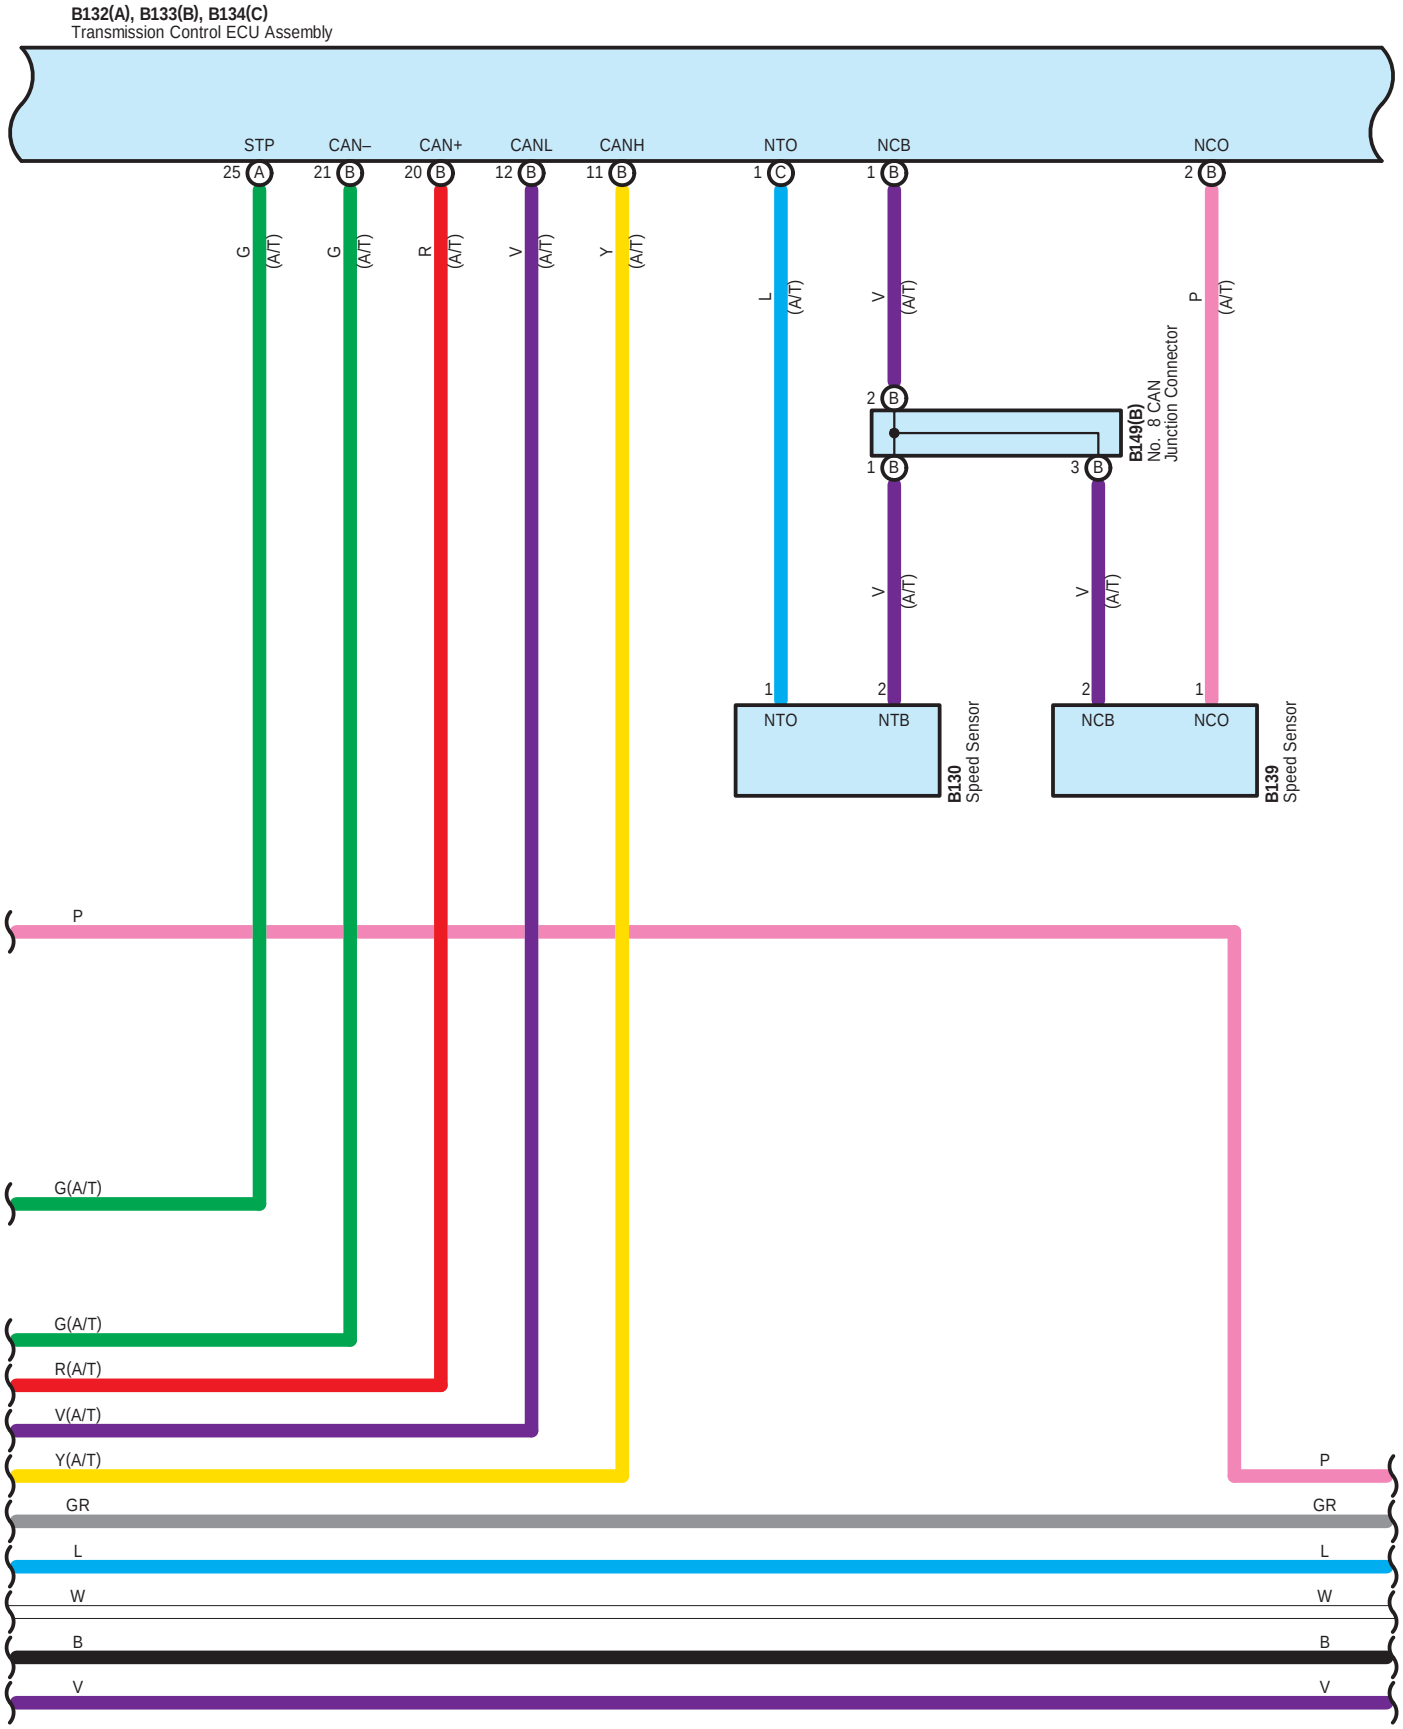
B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
STP
CAN–
CAN+
CANL
CANH
NTO
NCB
NCO
25 A
21 B
20 B
12 B
11 B
1 C
1 B
2 B
G (A/T)
G (A/T)
R (A/T)
V (A/T)
Y (A/T)
L (A/T)
V (A/T)
P (A/T)
B149(B)
No. 8 CAN
Junction Connector
2 B
1 B
3 B
V (A/T)
V (A/T)
1
2
NTO
NTB
B130
Speed Sensor
2
1
NCB
NCO
B139
Speed Sensor
P
G(A/T)
G(A/T)
R(A/T)
V(A/T)
Y(A/T)
P
GR
GR
L
L
W
W
B
B
V
V

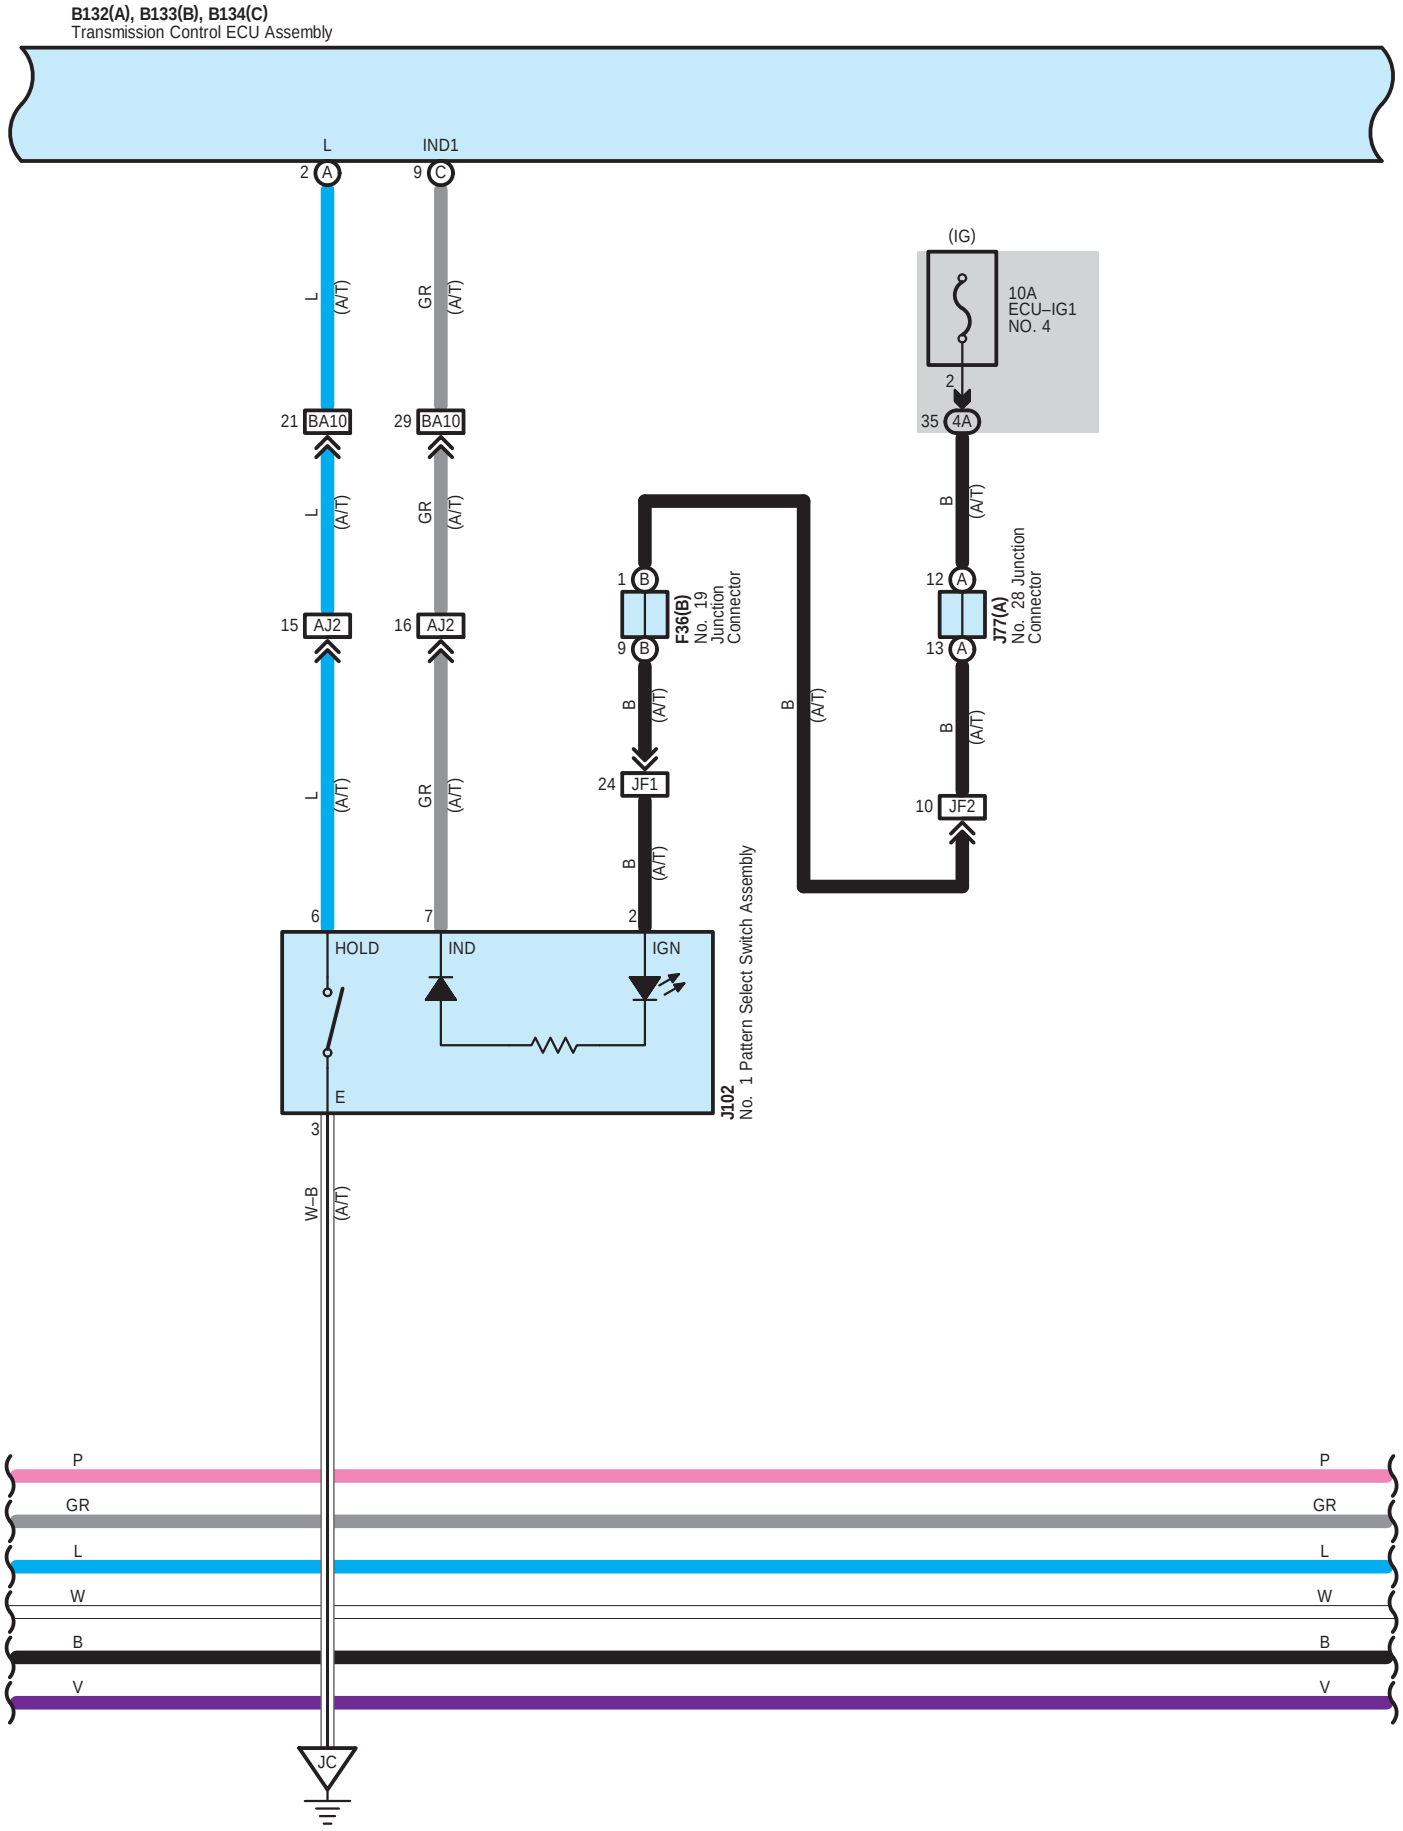

B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
L
IND1
2 A
9 C
L (A/T)
GR (A/T)
21 BA10
29 BA10
L (A/T)
GR (A/T)
15 AJ2
16 AJ2
L (A/T)
GR (A/T)
6
7
HOLD
IND
IGN
E
J102
No. 1 Pattern Select Switch Assembly
3
W–B (A/T)
(IG)
10A
ECU–IG1
NO. 4
2
35 4A
B (A/T)
12 A
13 A
J77(A)
No. 28 Junction
Connector
B (A/T)
10 JF2
1 B
9 B
F36(B)
No. 19
Junction
Connector
B (A/T)
24 JF1
B (A/T)
P
GR
L
W
B
V
JC

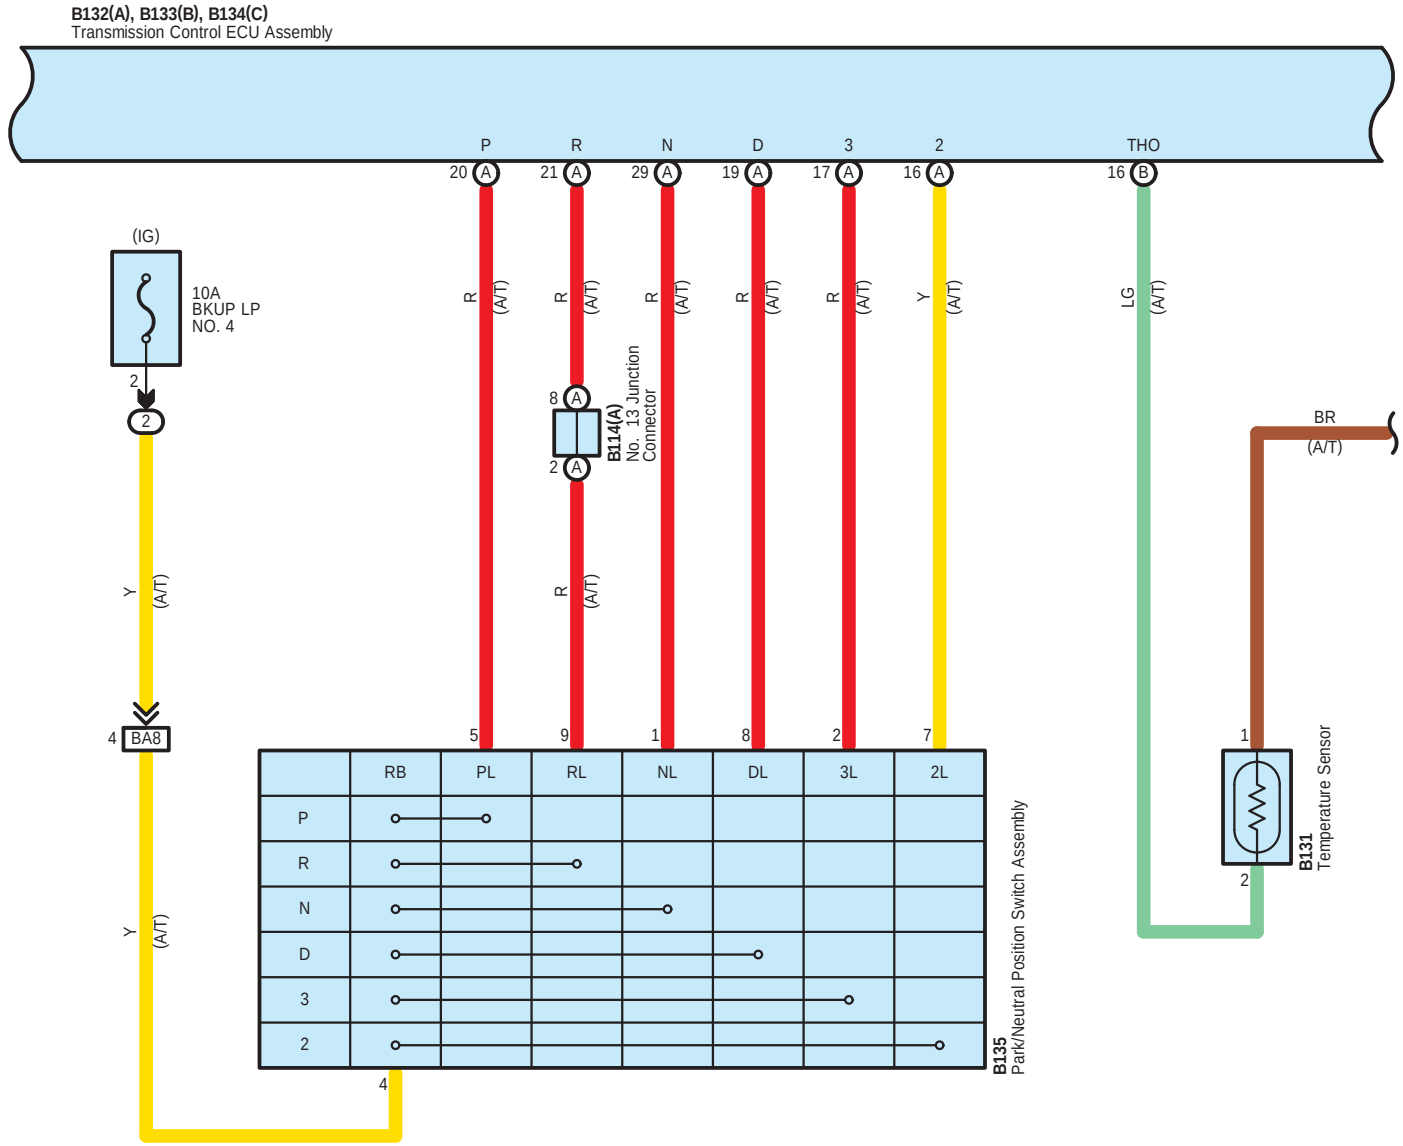

B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
P
R
N
D
3
2
THO
20 A
21 A
29 A
19 A
17 A
16 A
16 B
(IG)
10A
BKUP LP
NO. 4
2
2
R (A/T)
R (A/T)
R (A/T)
R (A/T)
R (A/T)
Y (A/T)
LG (A/T)
8 A
2 A
B114(A)
No. 13 Junction
Connector
R (A/T)
BR
(A/T)
Y (A/T)
4 BA8
Y (A/T)
5
9
1
8
2
7
RB
PL
RL
NL
DL
3L
2L
P
R
N
D
3
2
4
B135
Park/Neutral Position Switch Assembly
1
2
B131
Temperature Sensor



P
GR
L
W
B
V
P
GR
L
W
B
V

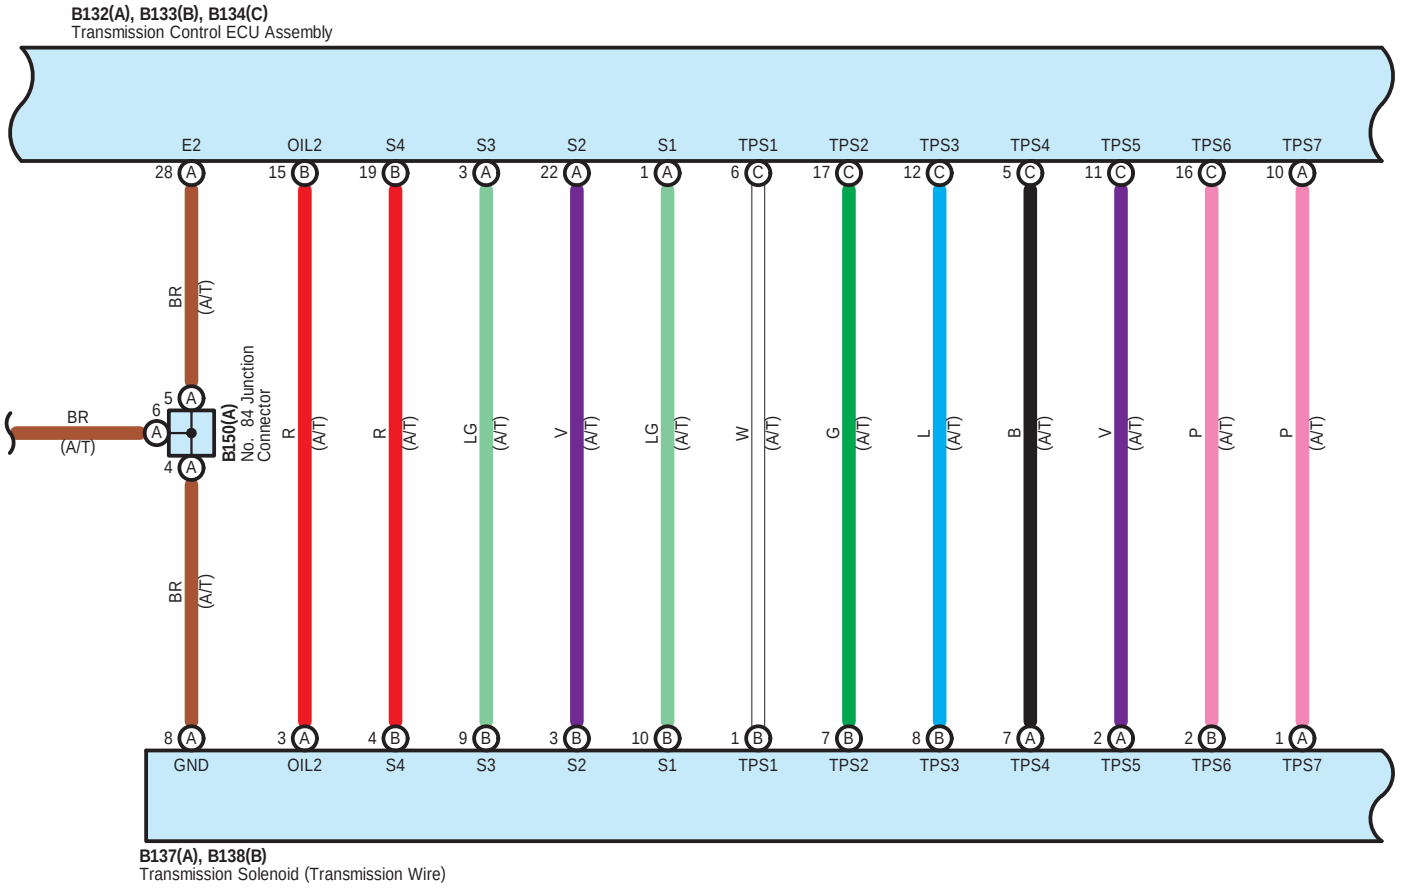

B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
E2
OIL2
S4
S3
S2
S1
TPS1
TPS2
TPS3
TPS4
TPS5
TPS6
TPS7
28 A
15 B
19 B
3 A
22 A
1 A
6 C
17 C
12 C
5 C
11 C
16 C
10 A
BR (A/T)
R (A/T)
R (A/T)
LG (A/T)
V (A/T)
LG (A/T)
W (A/T)
G (A/T)
L (A/T)
B (A/T)
V (A/T)
P (A/T)
P (A/T)
BR (A/T)
5 A
6 A
4 A
B150(A)
No. 84 Junction Connector
8 A
3 A
4 B
9 B
3 B
10 B
1 B
7 B
8 B
7 A
2 A
2 B
1 A
GND
OIL2
S4
S3
S2
S1
TPS1
TPS2
TPS3
TPS4
TPS5
TPS6
TPS7
B137(A), B138(B)
Transmission Solenoid (Transmission Wire)


P
GR
L
W
B
V
P
GR
L
W
B
V

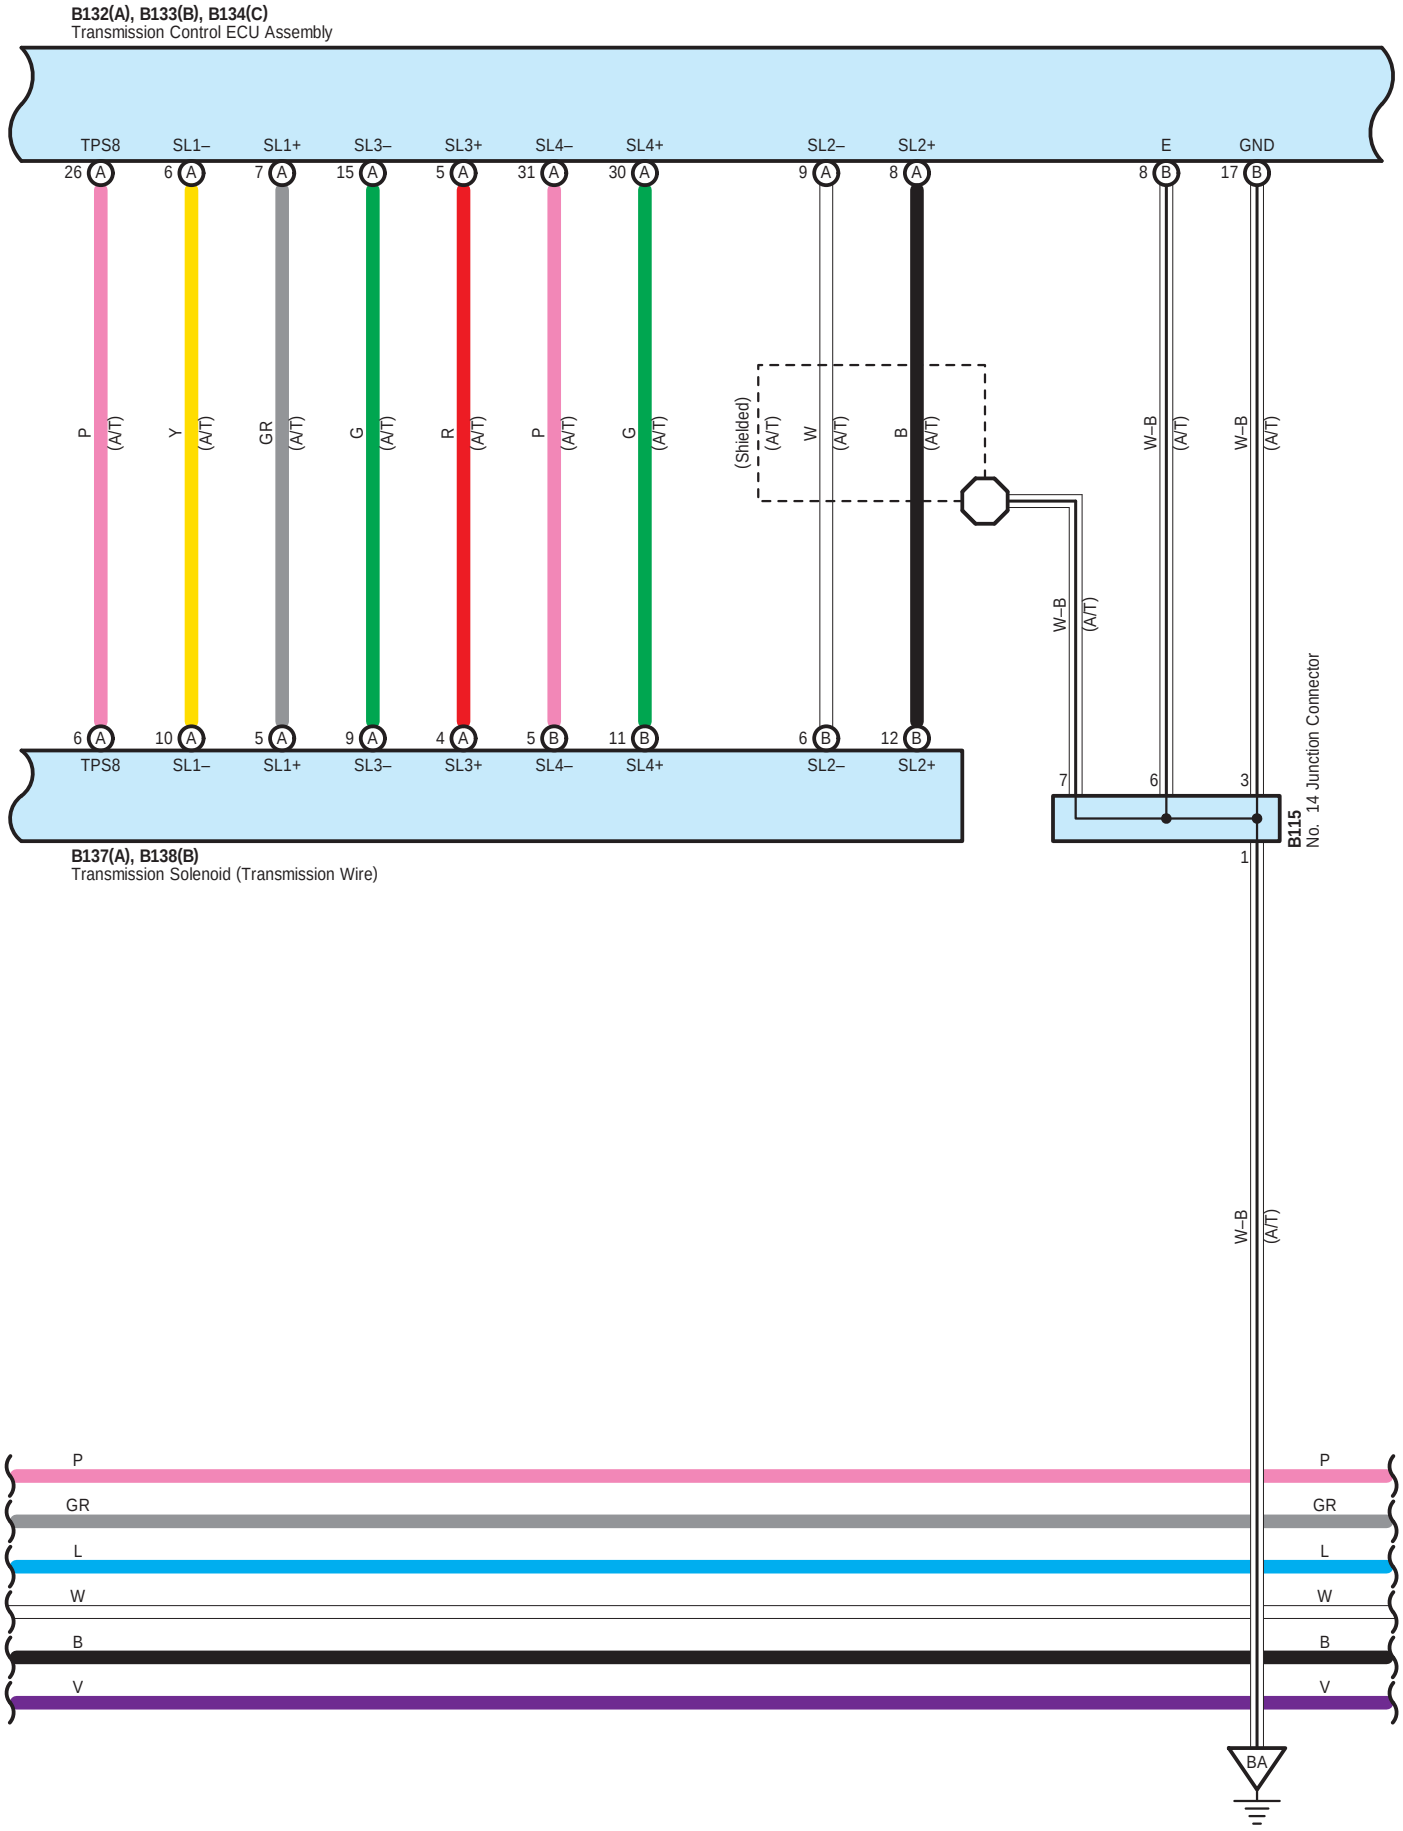

B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
TPS8
SL1–
SL1+
SL3–
SL3+
SL4–
SL4+
SL2–
SL2+
E
GND
26
6
7
15
5
31
30
9
8
8
17
P (A/T)
Y (A/T)
GR (A/T)
G (A/T)
R (A/T)
P (A/T)
G (A/T)
(Shielded) (A/T)
W (A/T)
B (A/T)
W–B (A/T)
W–B (A/T)
6
10
5
9
4
5
11
6
12
TPS8
SL1–
SL1+
SL3–
SL3+
SL4–
SL4+
SL2–
SL2+
W–B (A/T)
7
6
3
B115
No. 14 Junction Connector
1
B137(A), B138(B)
Transmission Solenoid (Transmission Wire)
W–B (A/T)
P
GR
L
W
B
V
P
GR
L
W
B
V
BA

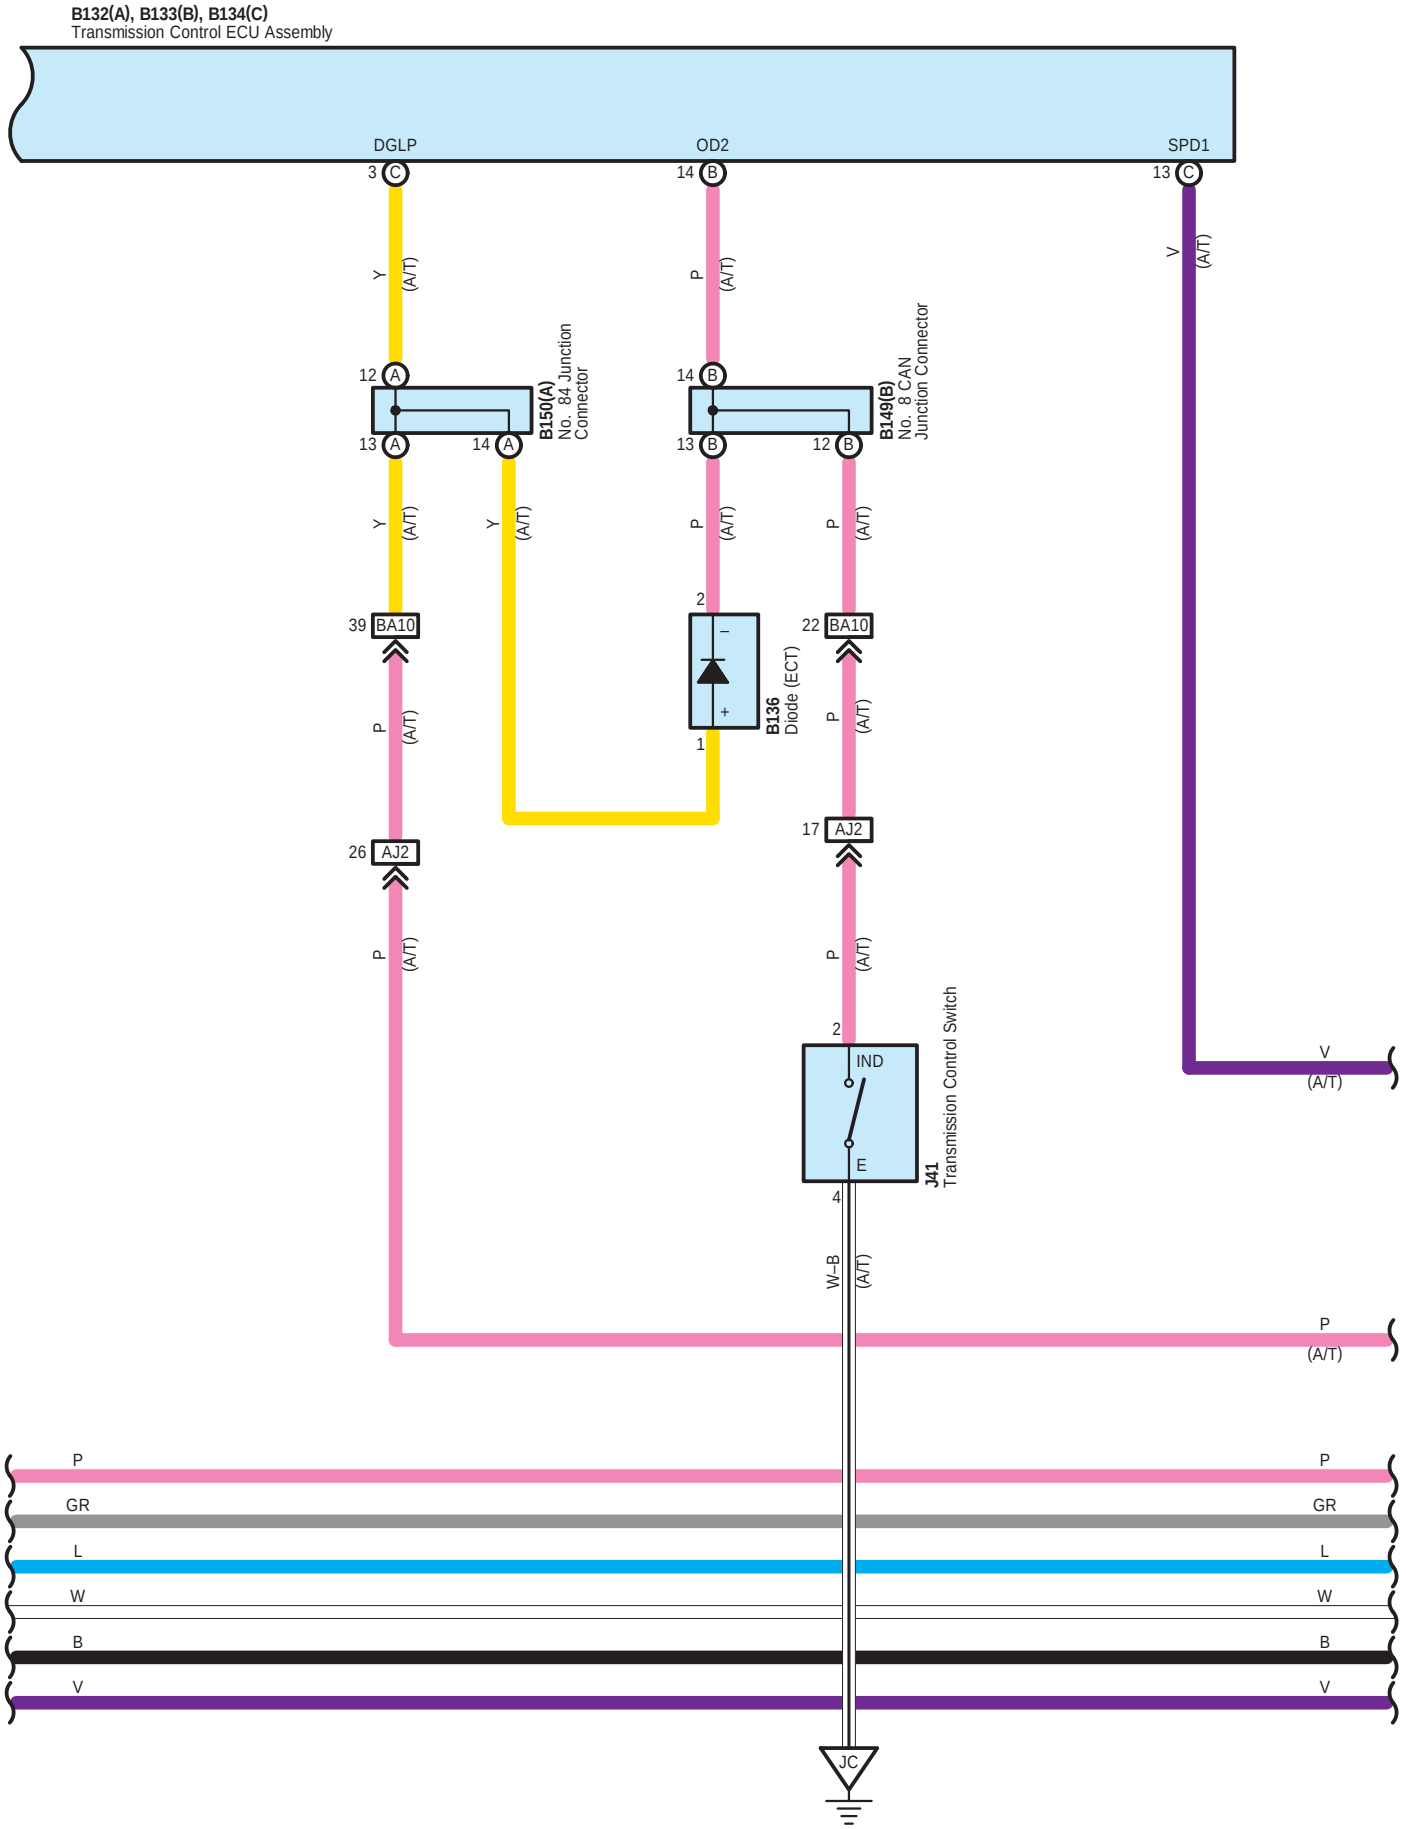
B132(A), B133(B), B134(C)
Transmission Control ECU Assembly
DGLP
OD2
SPD1
3 C
14 B
13 C
Y (A/T)
P (A/T)
V (A/T)
12 A
14 B
B150(A) No. 84 Junction Connector
B149(B) No. 8 CAN Junction Connector
13 A
14 A
13 B
12 B
Y (A/T)
P (A/T)
2
39 BA10
22 BA10
B136 Diode (ECT)
1
17 AJ2
26 AJ2
2
IND
E
J41 Transmission Control Switch
4
W–B (A/T)
V (A/T)
P (A/T)
P
GR
L
W
B
V
JC

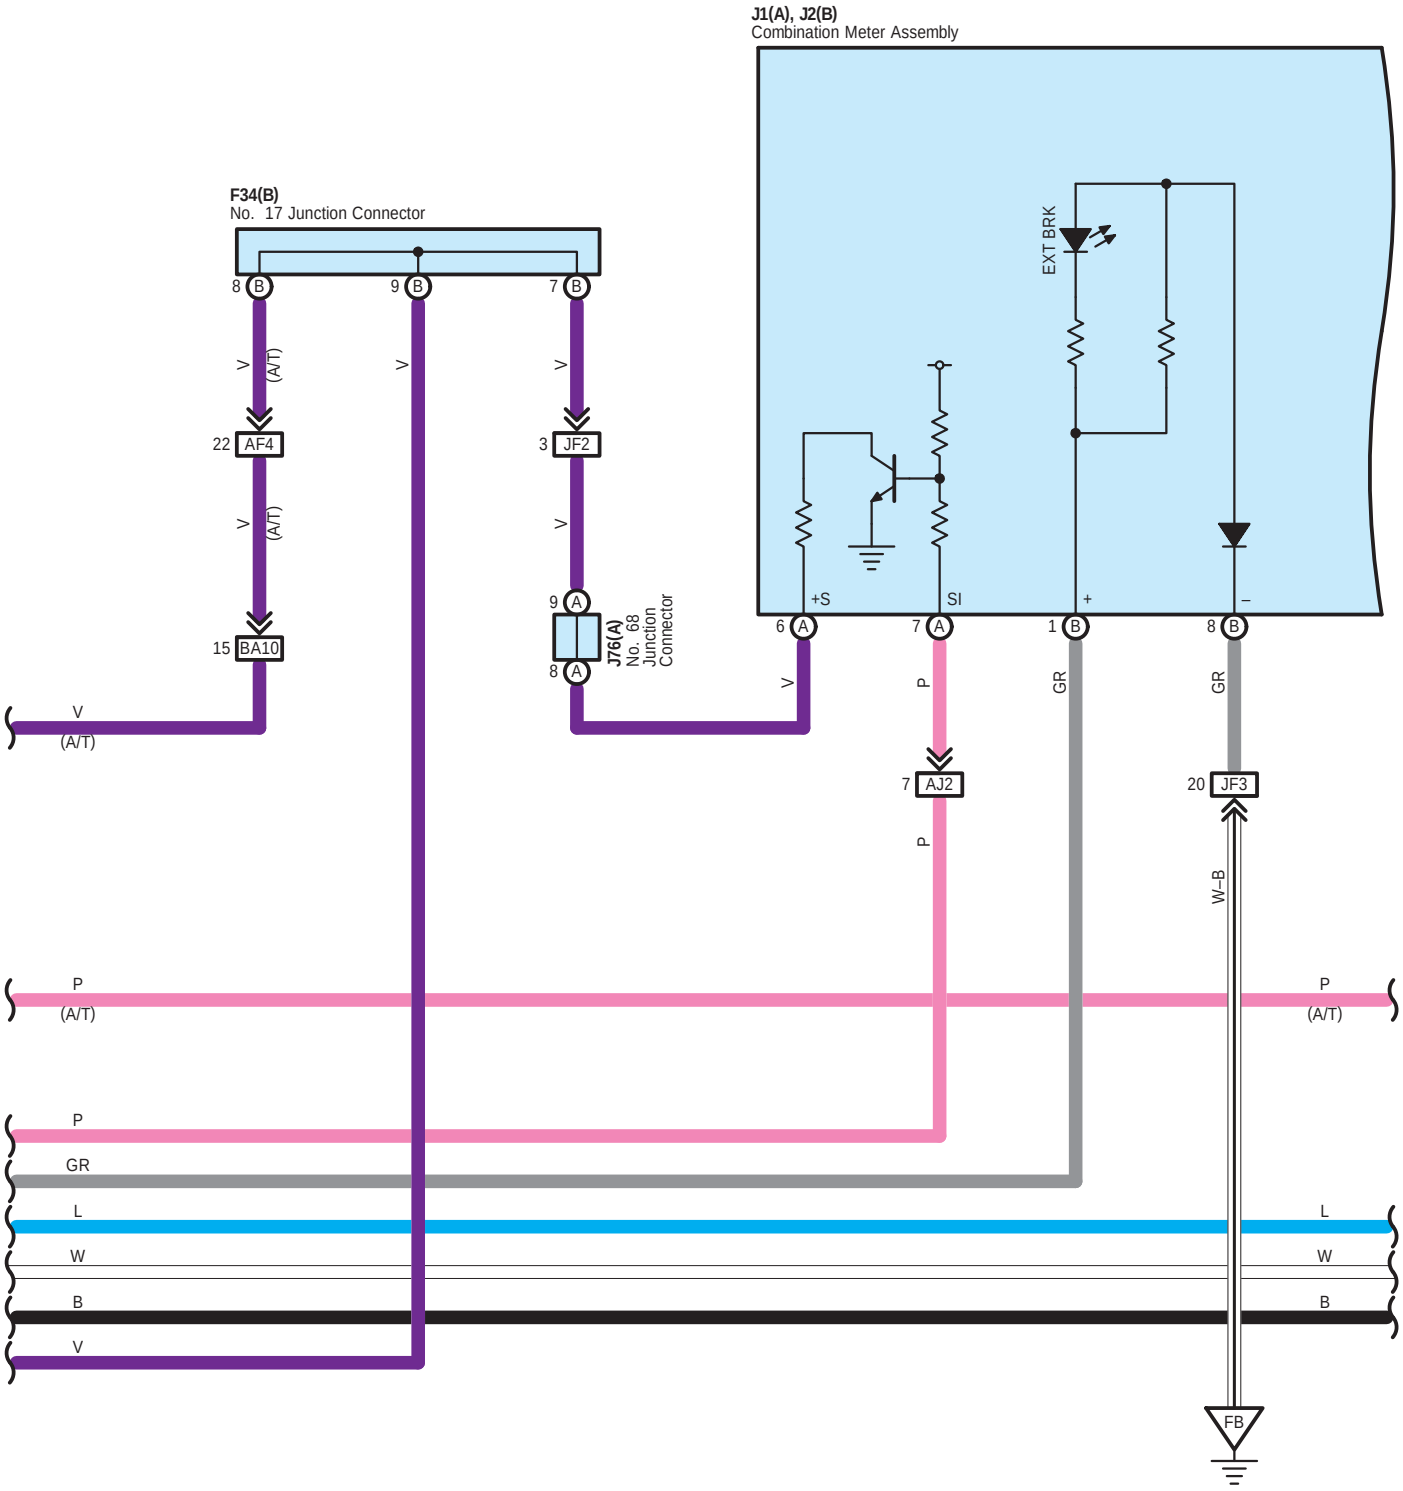
J1(A), J2(B)
Combination Meter Assembly
EXT BRK
+S
SI
+
–
F34(B)
No. 17 Junction Connector
8 B
9 B
7 B
V
(A/T)
22 AF4
15 BA10
3 JF2
9 A
8 A
J76(A)
No. 68
Junction
Connector
6 A
7 A
1 B
8 B
P
GR
7 AJ2
20 JF3
W–B
FB
L
W
B

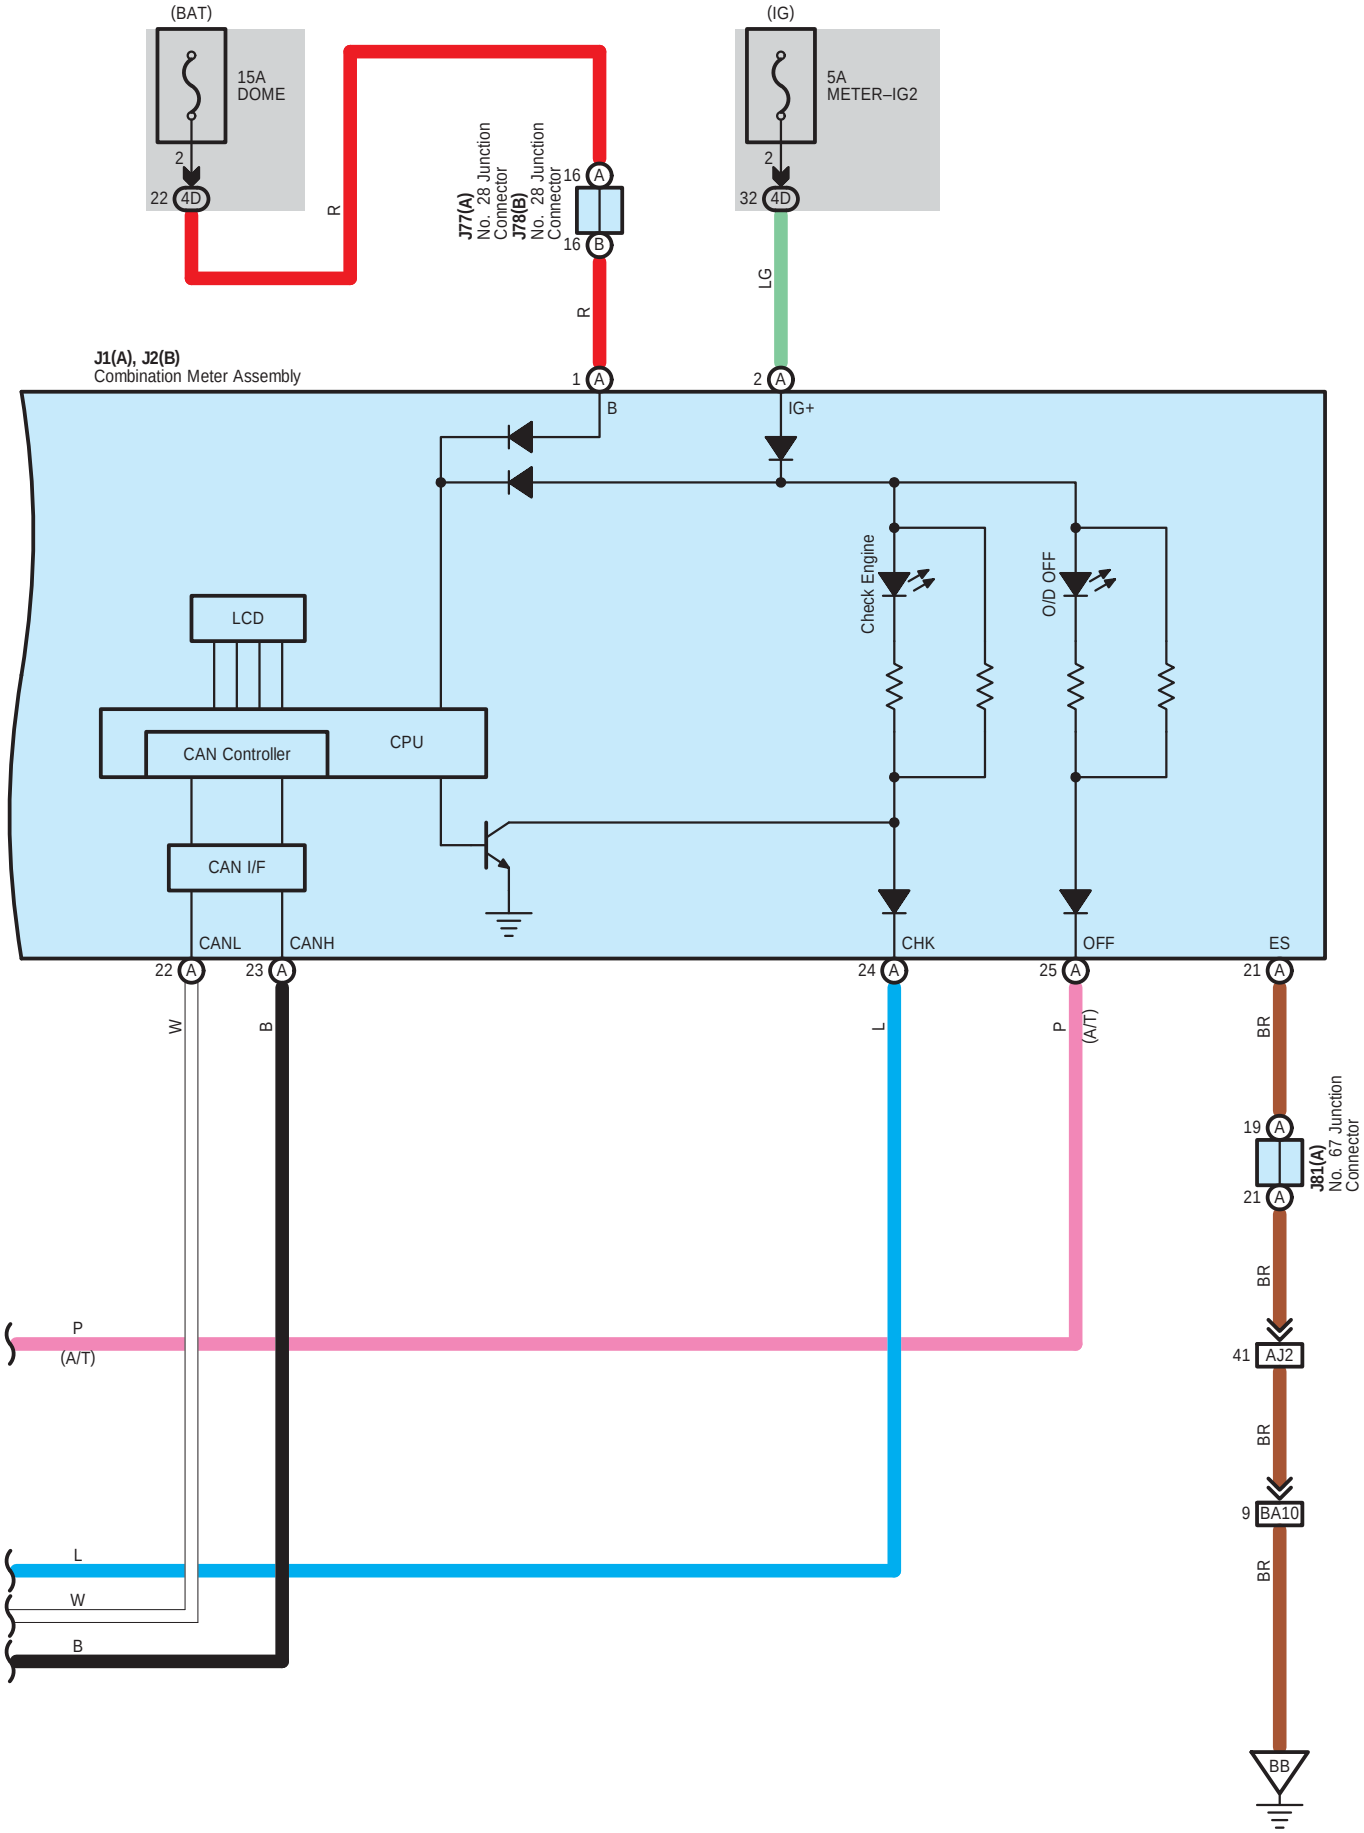
(BAT)
15A
DOME
2
22 4D
R
J77(A)
No. 28 Junction
Connector
J78(B)
No. 28 Junction
Connector
16 A
16 B
R
(IG)
5A
METER–IG2
2
32 4D
LG
J1(A), J2(B)
Combination Meter Assembly
1 A
B
2 A
IG+
Check Engine
O/D OFF
LCD
CAN Controller
CPU
CAN I/F
CANL
CANH
CHK
OFF
ES
22 A
23 A
24 A
25 A
21 A
W
B
L
P
(A/T)
BR
19 A
21 A
J81(A)
No. 67 Junction
Connector
41 AJ2
9 BA10
BB
P
(A/T)
L
W
B


A 4
Gray

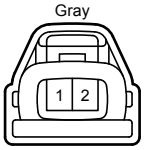


A 14
Gray




A 33
Black

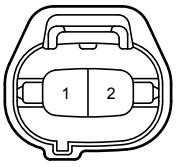


A 43
Black

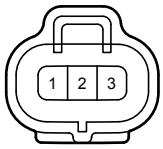


A 58
Yellow

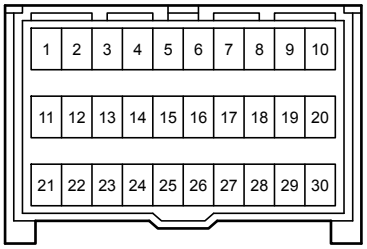


A 71
Black

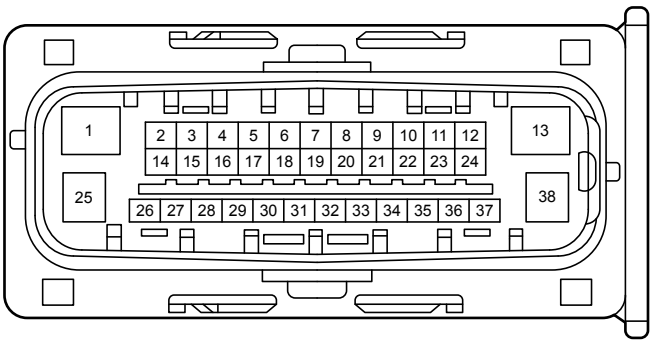


A 84
Gray

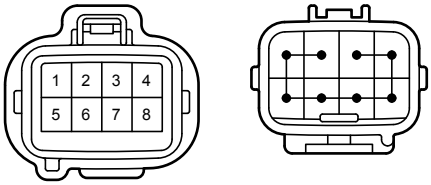


A 85
White

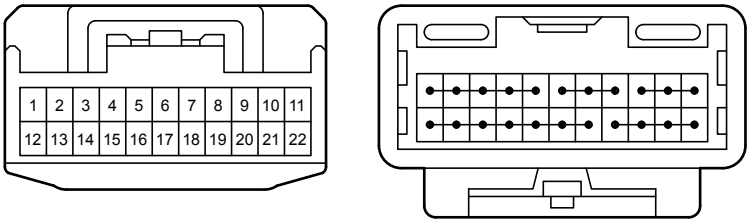


A 86
Blue

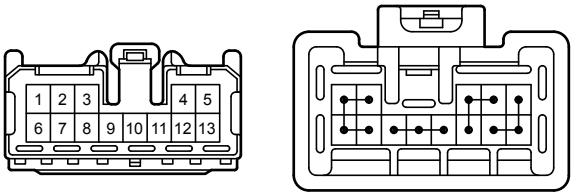


A 91
Dark Gray

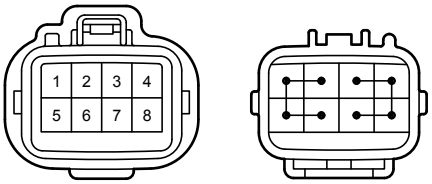


A 95
Black

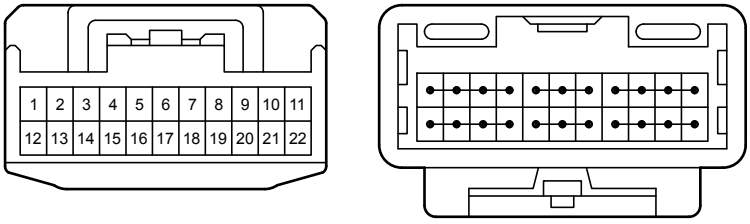


A 96
White

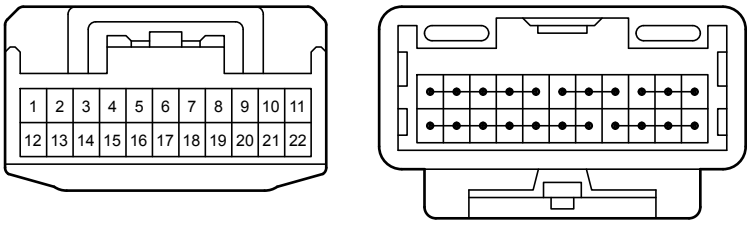


A 97
White

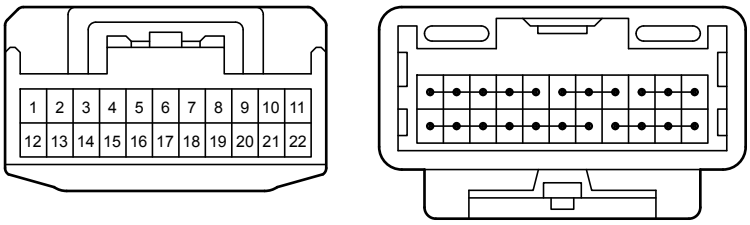

A 98
Black

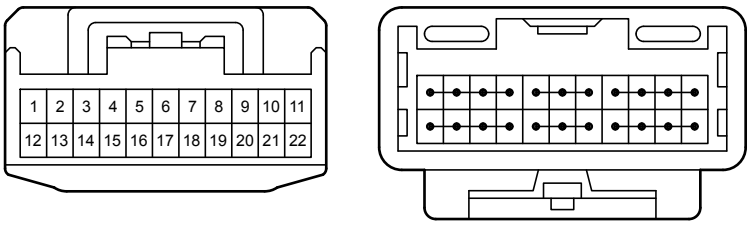

A 99
Black

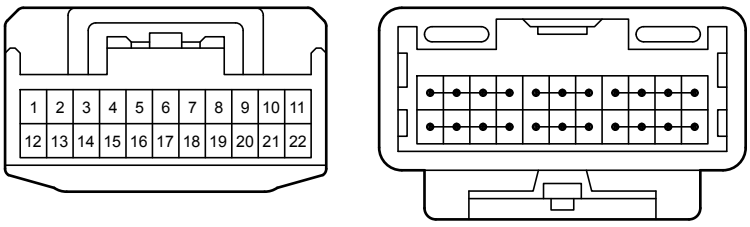

A110
Black



A111
Dark Gray



A112
Black




A113
Dark Gray




A114
Gray




A115
Black

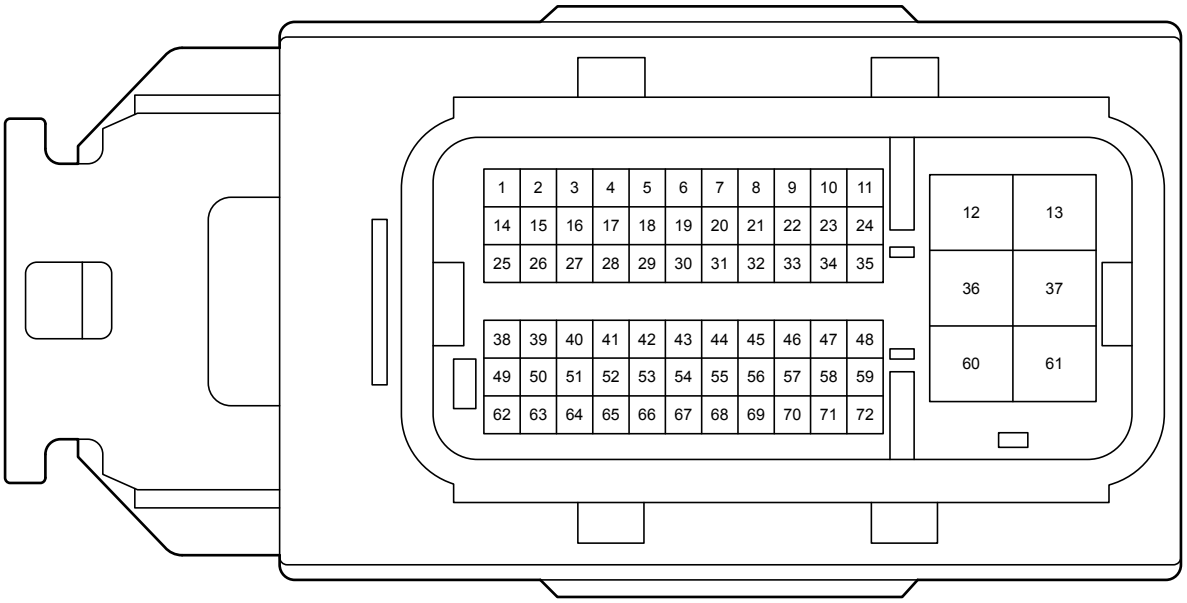


A116
Black

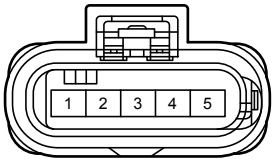


A120
White

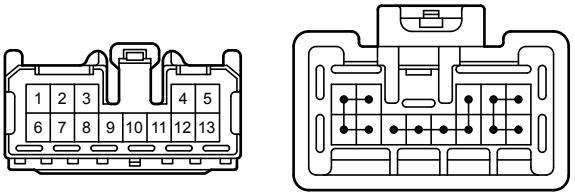


A121
Dark Gray

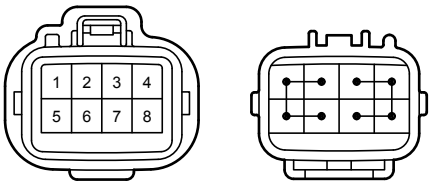

A122
Dark Gray

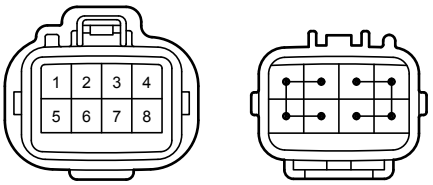

A123
Black

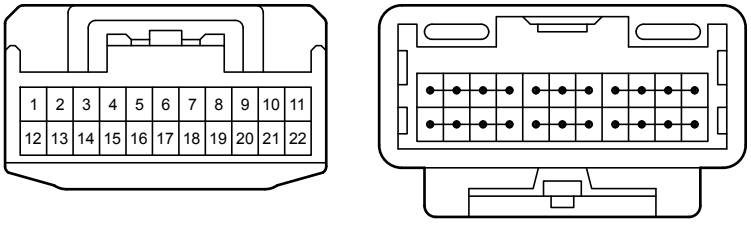

B 5
Black




B 8
Dark Gray




B 13
Dark Gray



B 18
Black

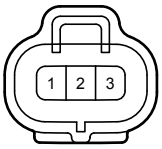

B 24
Gray

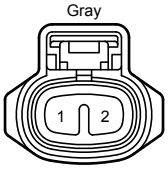


B 25
Gray




B 27
Black



B 48
Dark Gray

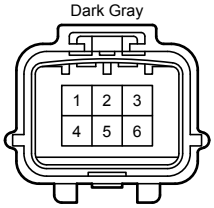


B 51
Black

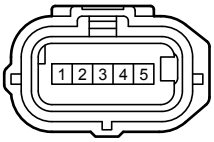


B 52
Gray




B114
Blue

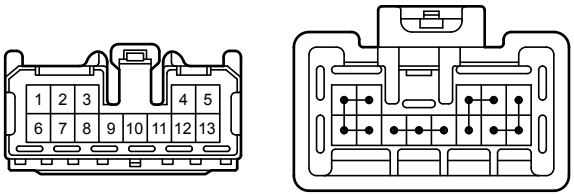


B115
Gray

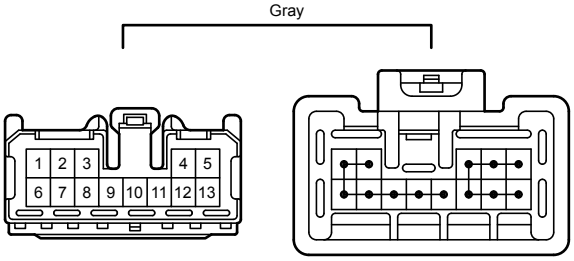


B118
Dark Gray

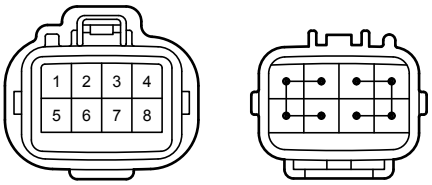


B130
Black

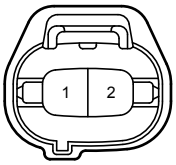


B131
White

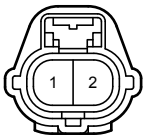


B132
White

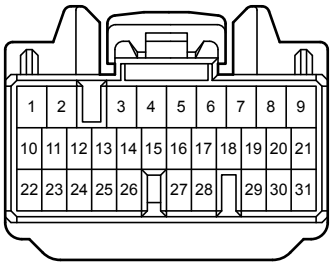


B133
White

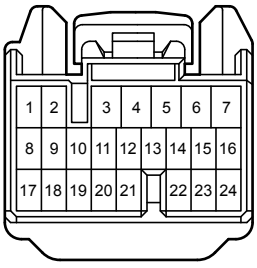

B134
White

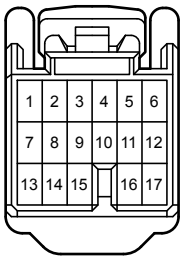


B135
Black

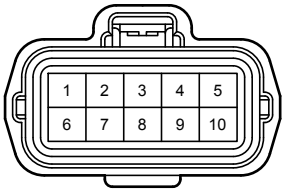


B136
Black




B137
Gray

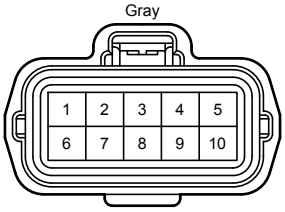


B138
Gray

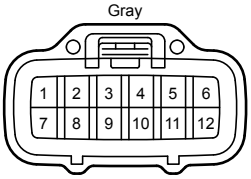

B139
Black

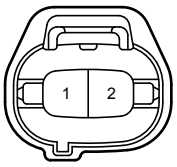


B140
Black

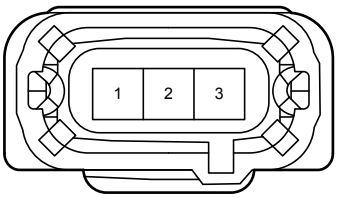


B141
Dark Gray




B142
Black

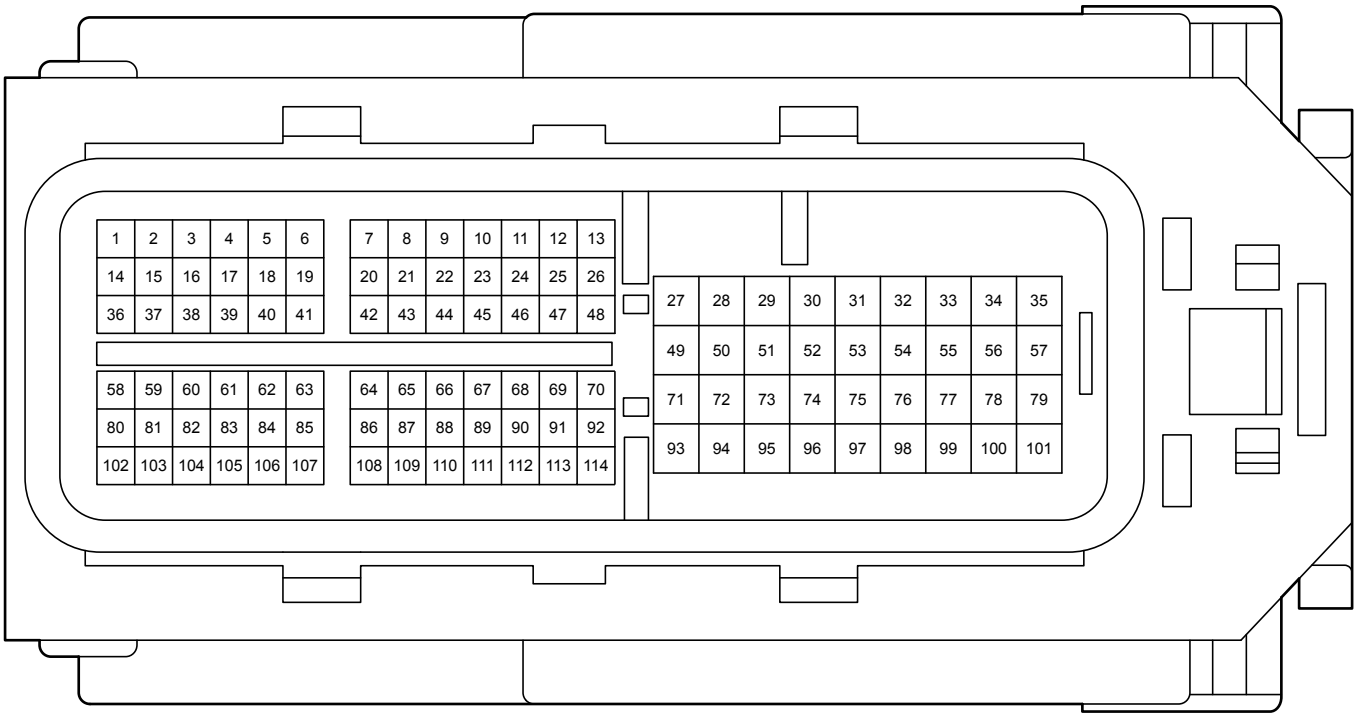

B143
Gray

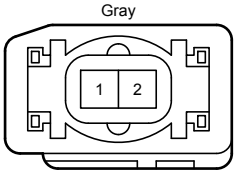

B144
Black

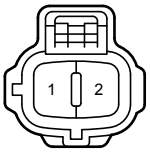

B146
Dark Gray




B147
Black




B148
Gray




B149
Black

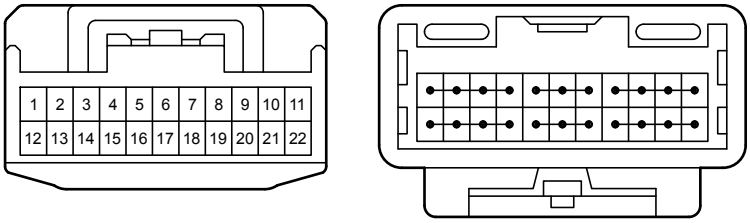

B150
White

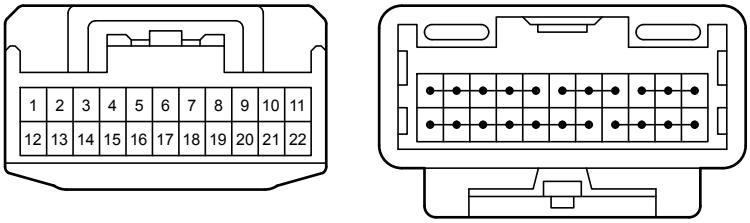


B152
White

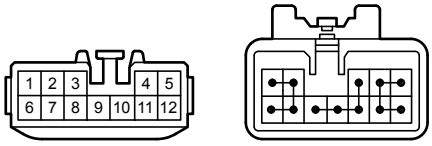


F 9
Dark Gray




F 34
White

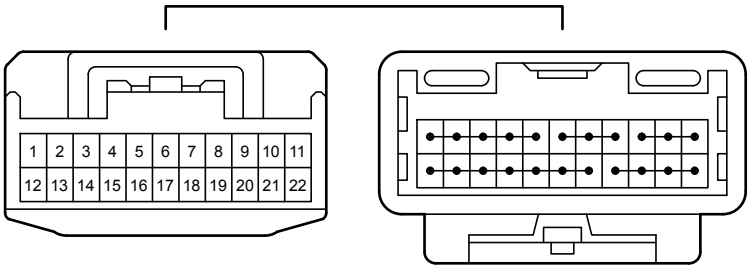


F 36
Black

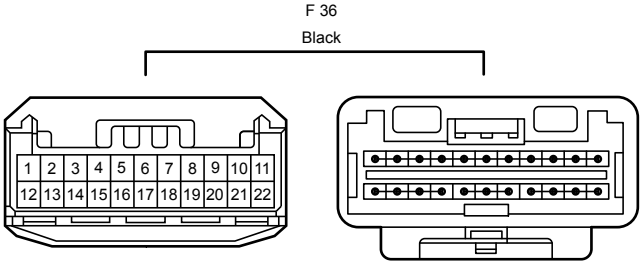


F 38
White

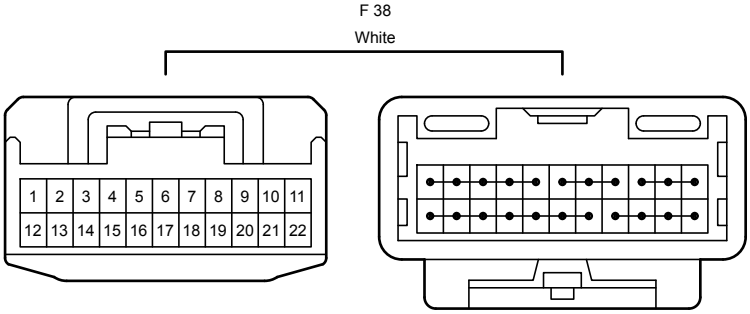

F 40
Black

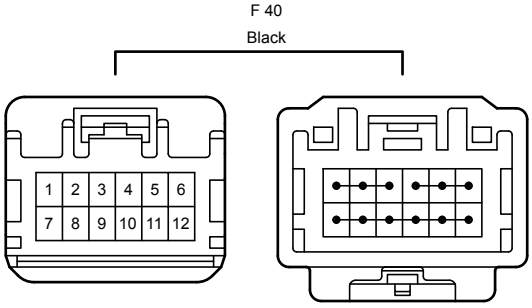


H 1
White

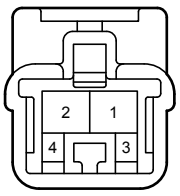


H 3
White




J 1
White

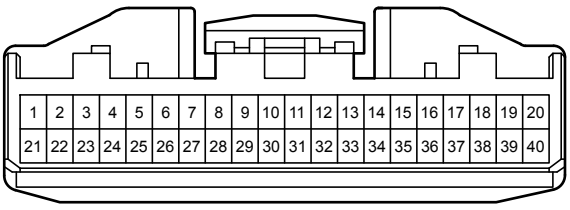


J 2
White

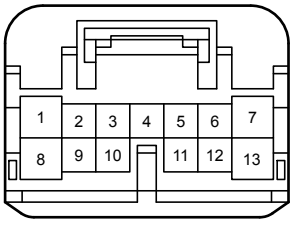


J 30
Gray

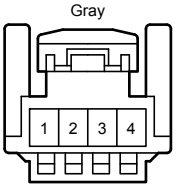


J 35
White




J 41
Blue




J 45
Black

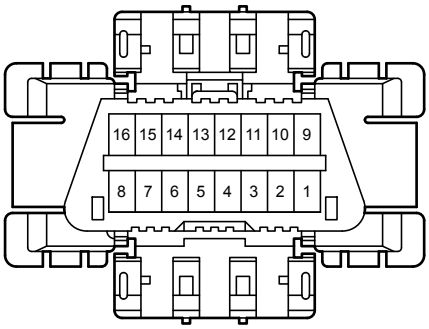


J 51
Black

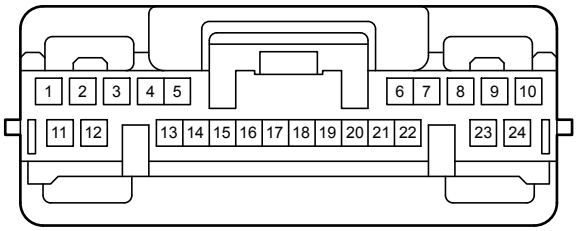


J 65
Black

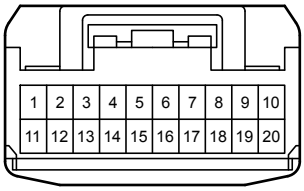


J 75
White

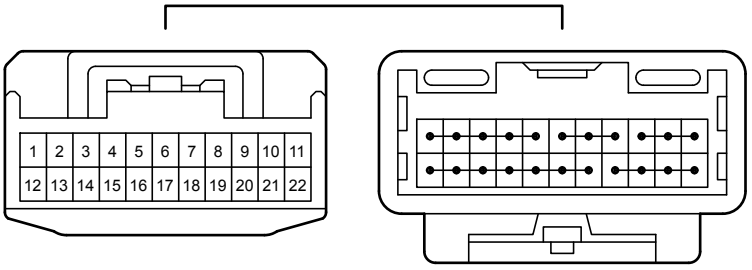


J 76
Blue

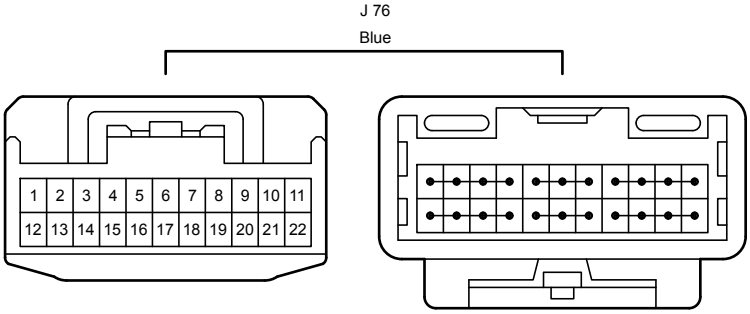


J 77
Black

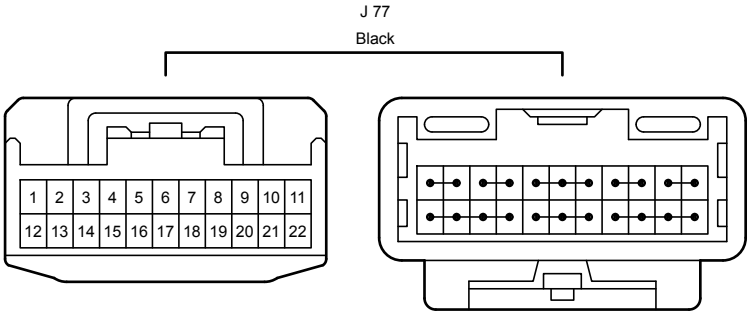


J 78
Black

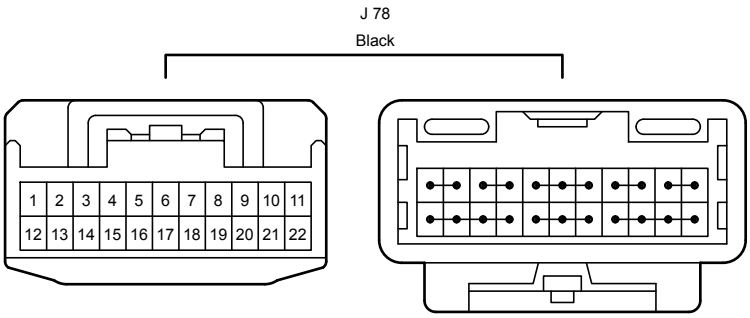


J 80
Gray

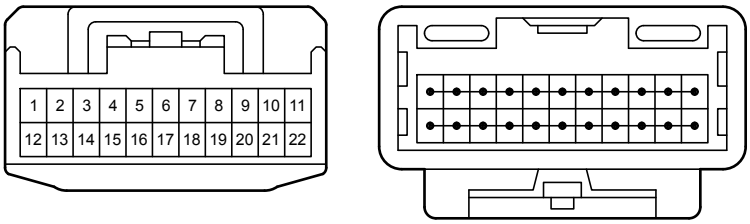


J 81
Blue

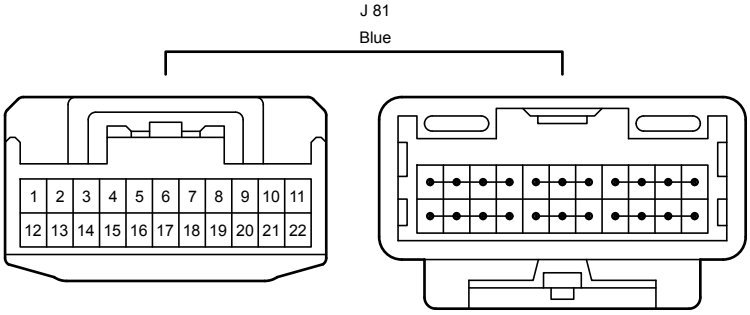


J 93
Blue

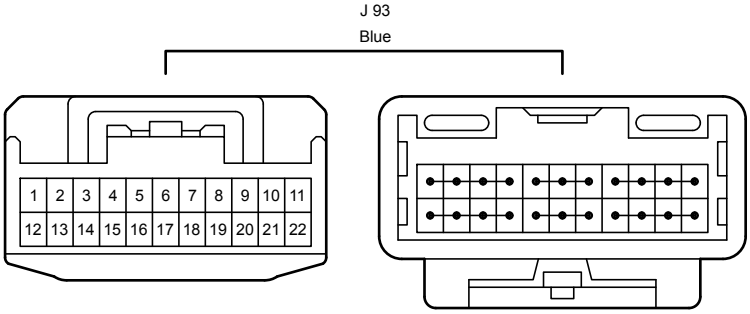


J102
Black

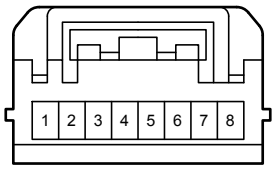


P 10
White

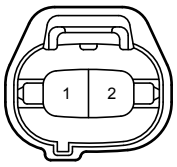


P 11
Black

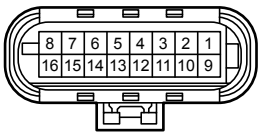


P 12
Black

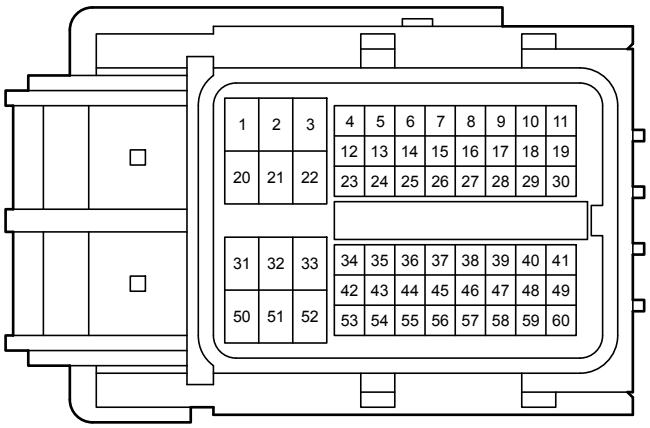


P 13
Black

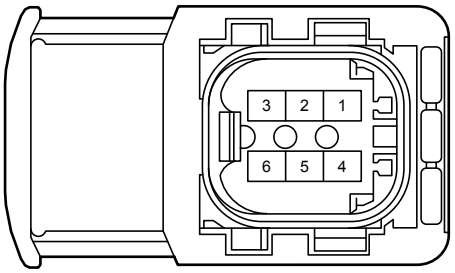


P 14
Black

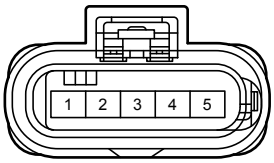


P 15
Black

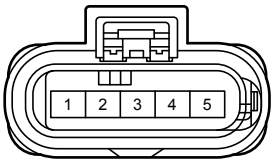


P 16
Dark Gray

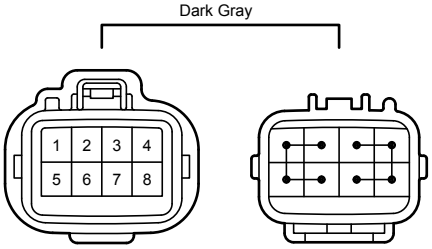

P 17
Dark Gray

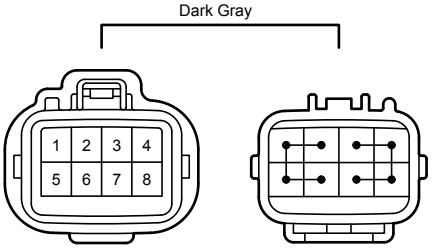

V 9
White

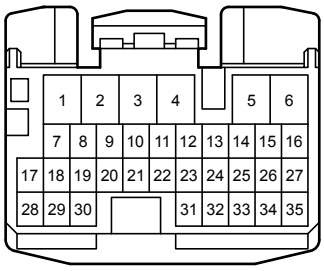


a 8
Black




h 1
Black




i 5
Gray

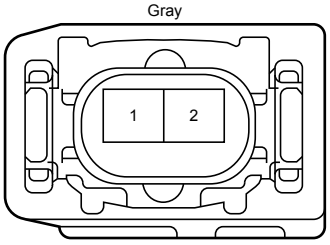


i 6
Gray

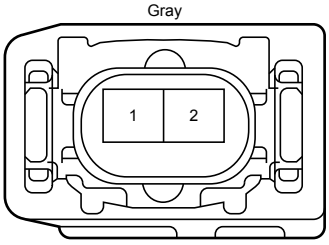

i 7
Gray

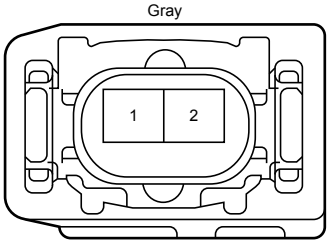

i 8
Gray

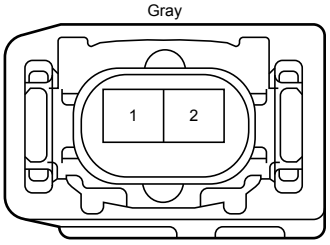


j 5
Dark Gray



j 6
Brown




k 1
Dark Gray

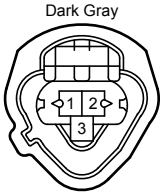


k 2
Black




2C
White

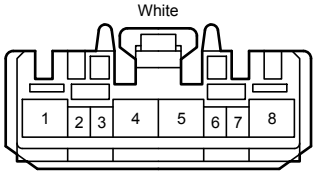


4A
White

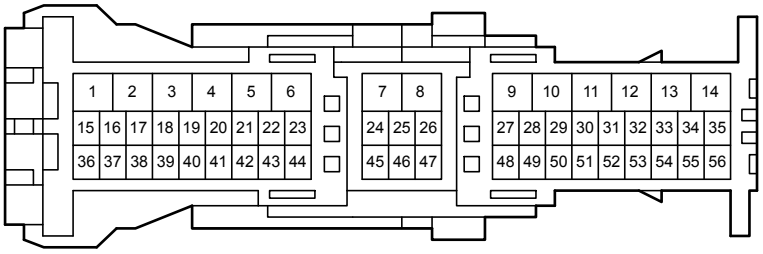


4D
White

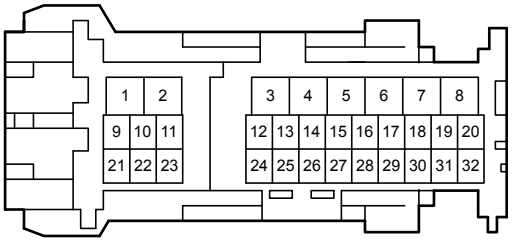


4F
White

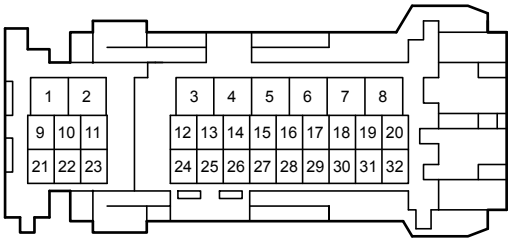


AA2
White

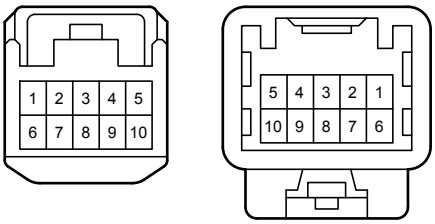


AF2
White

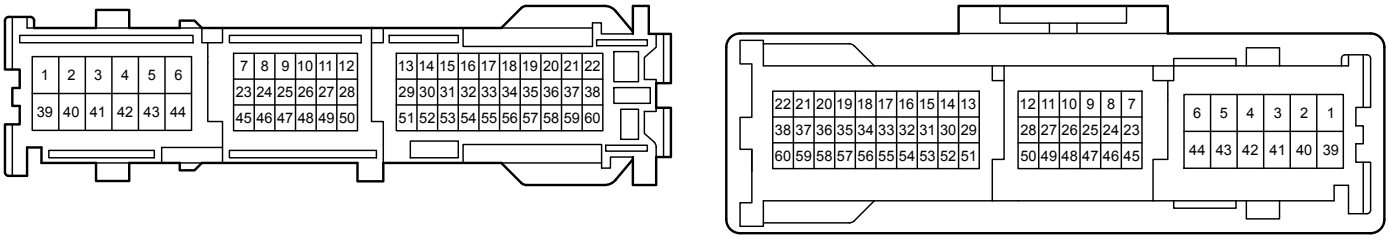


AF4
White

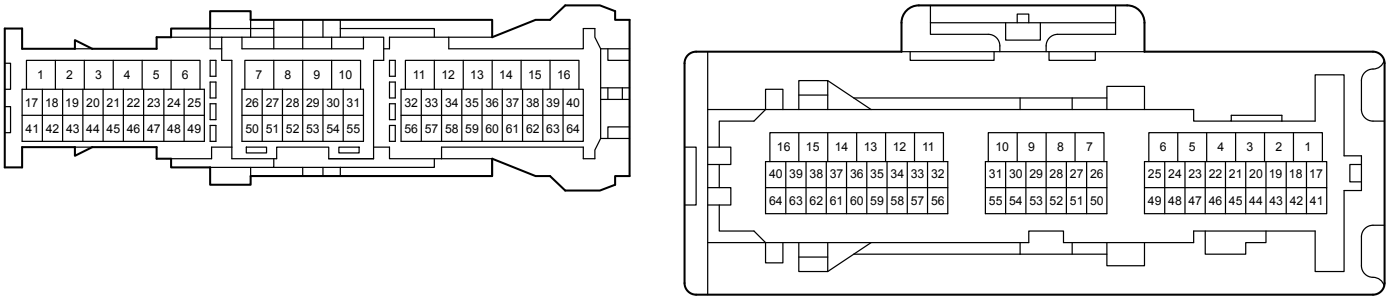


AJ2
White

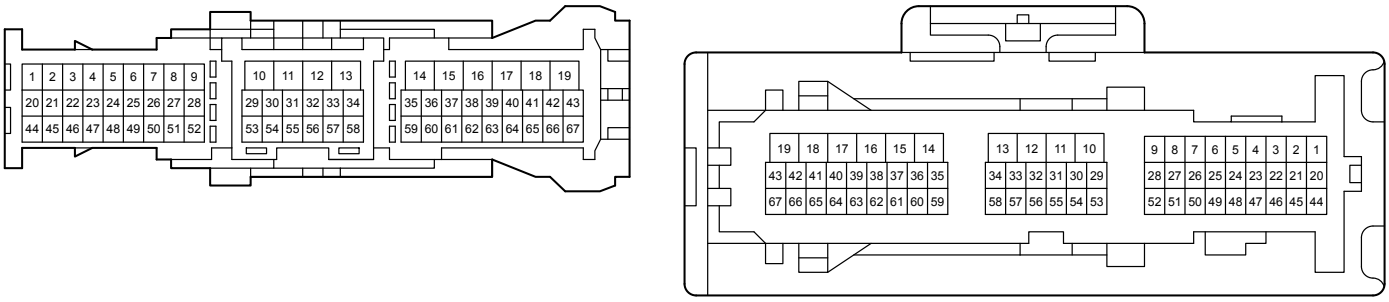


AV3
White

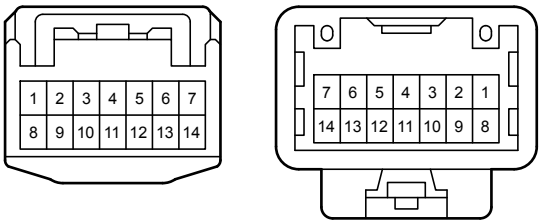


Aa1
Black

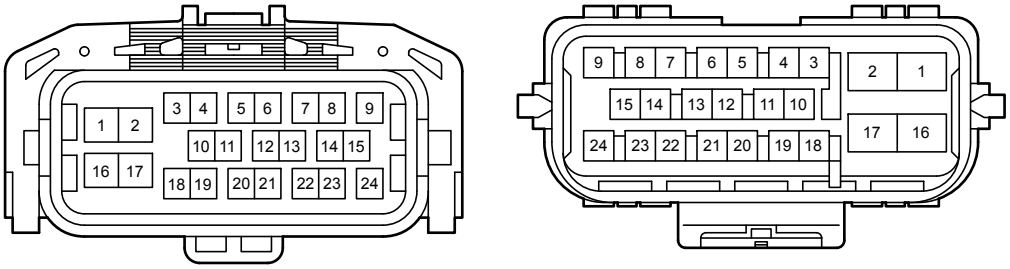



BA8
Black

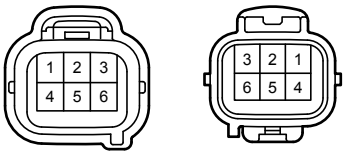



BA9
Gray

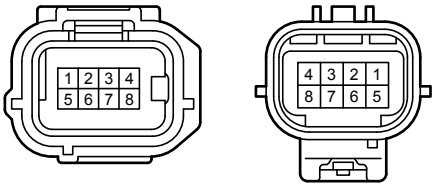


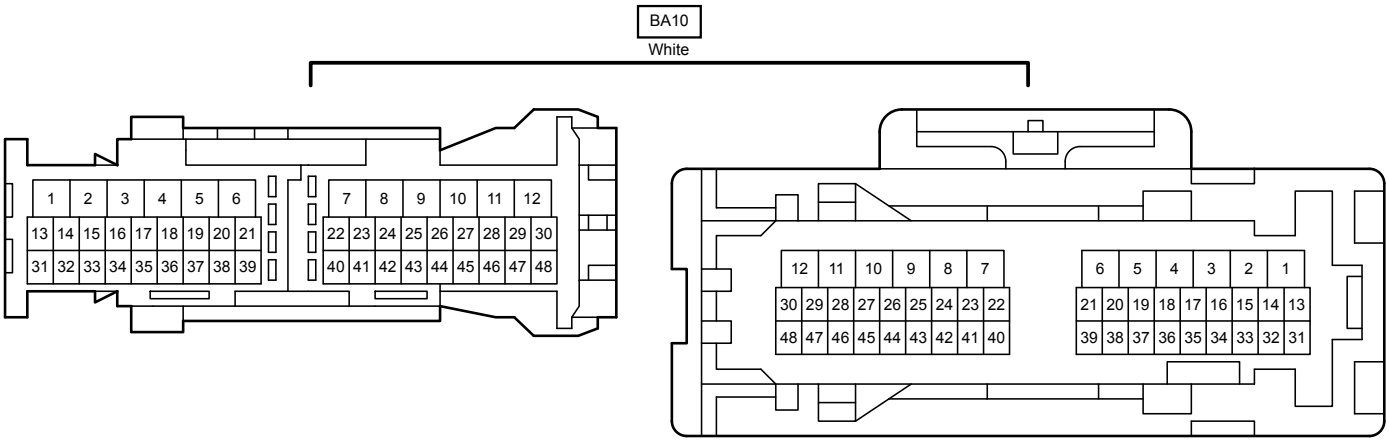

BA10
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31

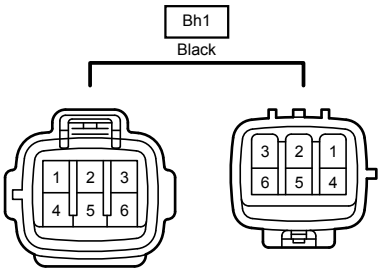

Bh1
Black
1 2 3 4 5 6
3 2 1 6 5 4

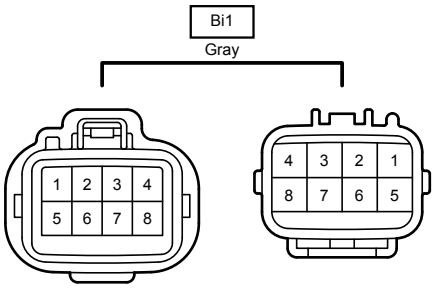
Bi1
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

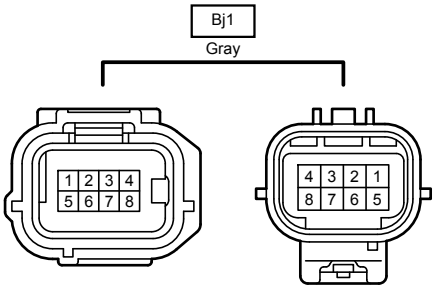

Bj1
Gray
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5

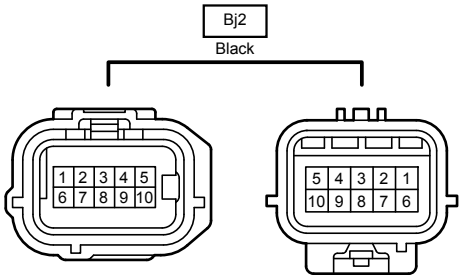
Bj2
Black
1 2 3 4 5 6 7 8 9 10
5 4 3 2 1 10 9 8 7 6

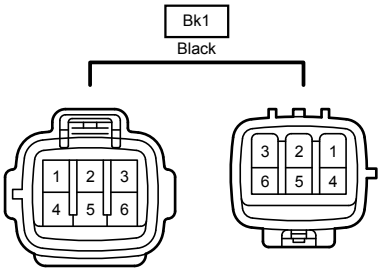

Bk1
Black
1 2 3 4 5 6
3 2 1 6 5 4

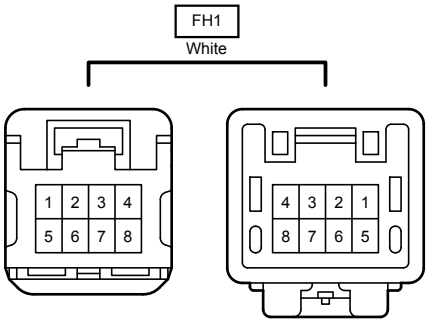
FH1
White
1 2 3 4 5 6 7 8
4 3 2 1 8 7 6 5


JF1
Blue

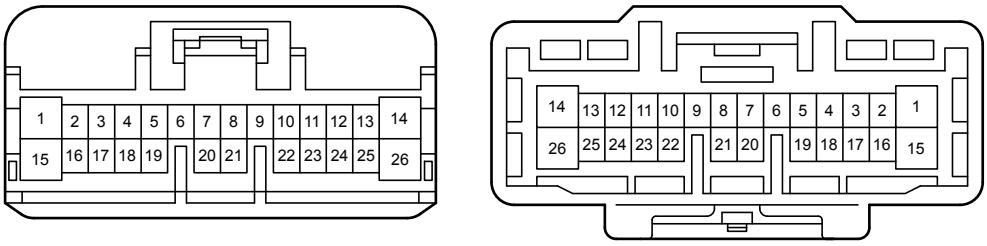


JF2
Gray

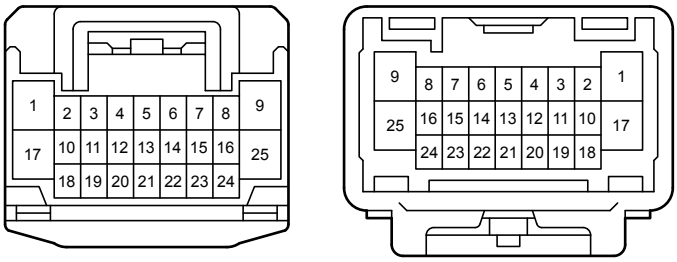


JF3
White

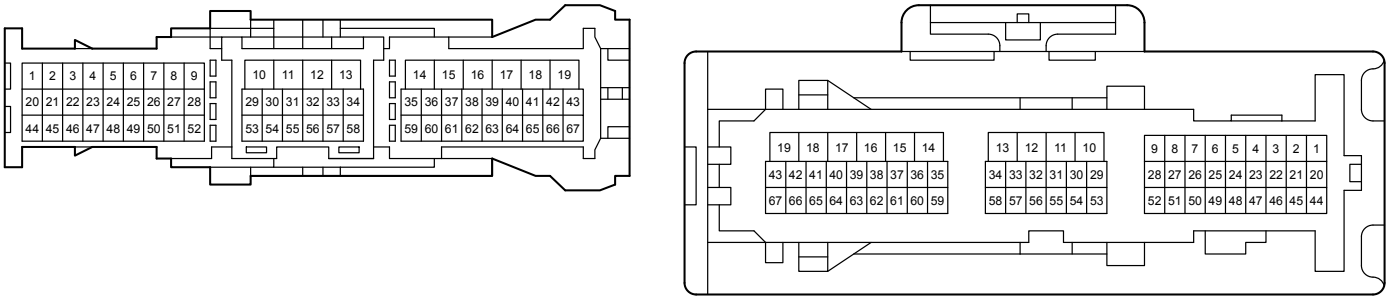


PA1
Gray

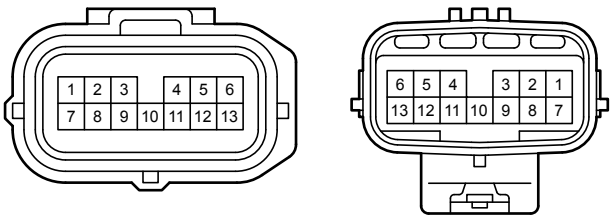

PA2
Gray

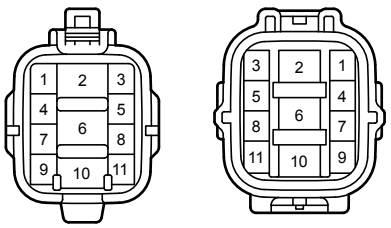

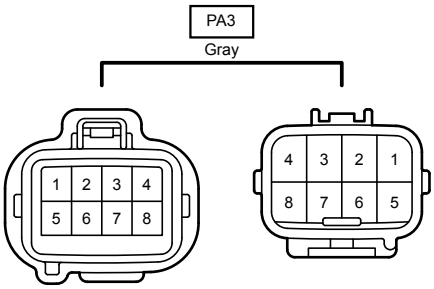
PA3
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5