




(BAT)
50A
ST NO. 1
(ST)
7. 5A
ST NO. 2
ST Relay
W
B
W–B
B–DG
AB8
BA10
BA8
ST
B99(A), C11(B)
Starter Assembly
A98
No. 75 Junction
Connector
A80(A)
No. 3 Junction Connector
D1(A), E1(B)
Battery
C4(B), C5(C), D2(F), E2(G)
Battery
CC
CG
AB


B
B
20
D
NUSW
STA
A57(B), B103(D)
ECM
6
B
B
37
BA10
B
11
B114
No. 13
Junction Connector
9
10
B
13
BA10
B
B
6
B
L
P
N
B135
Park/Neutral Position
Switch Assembly
10
B
B


A 57
White

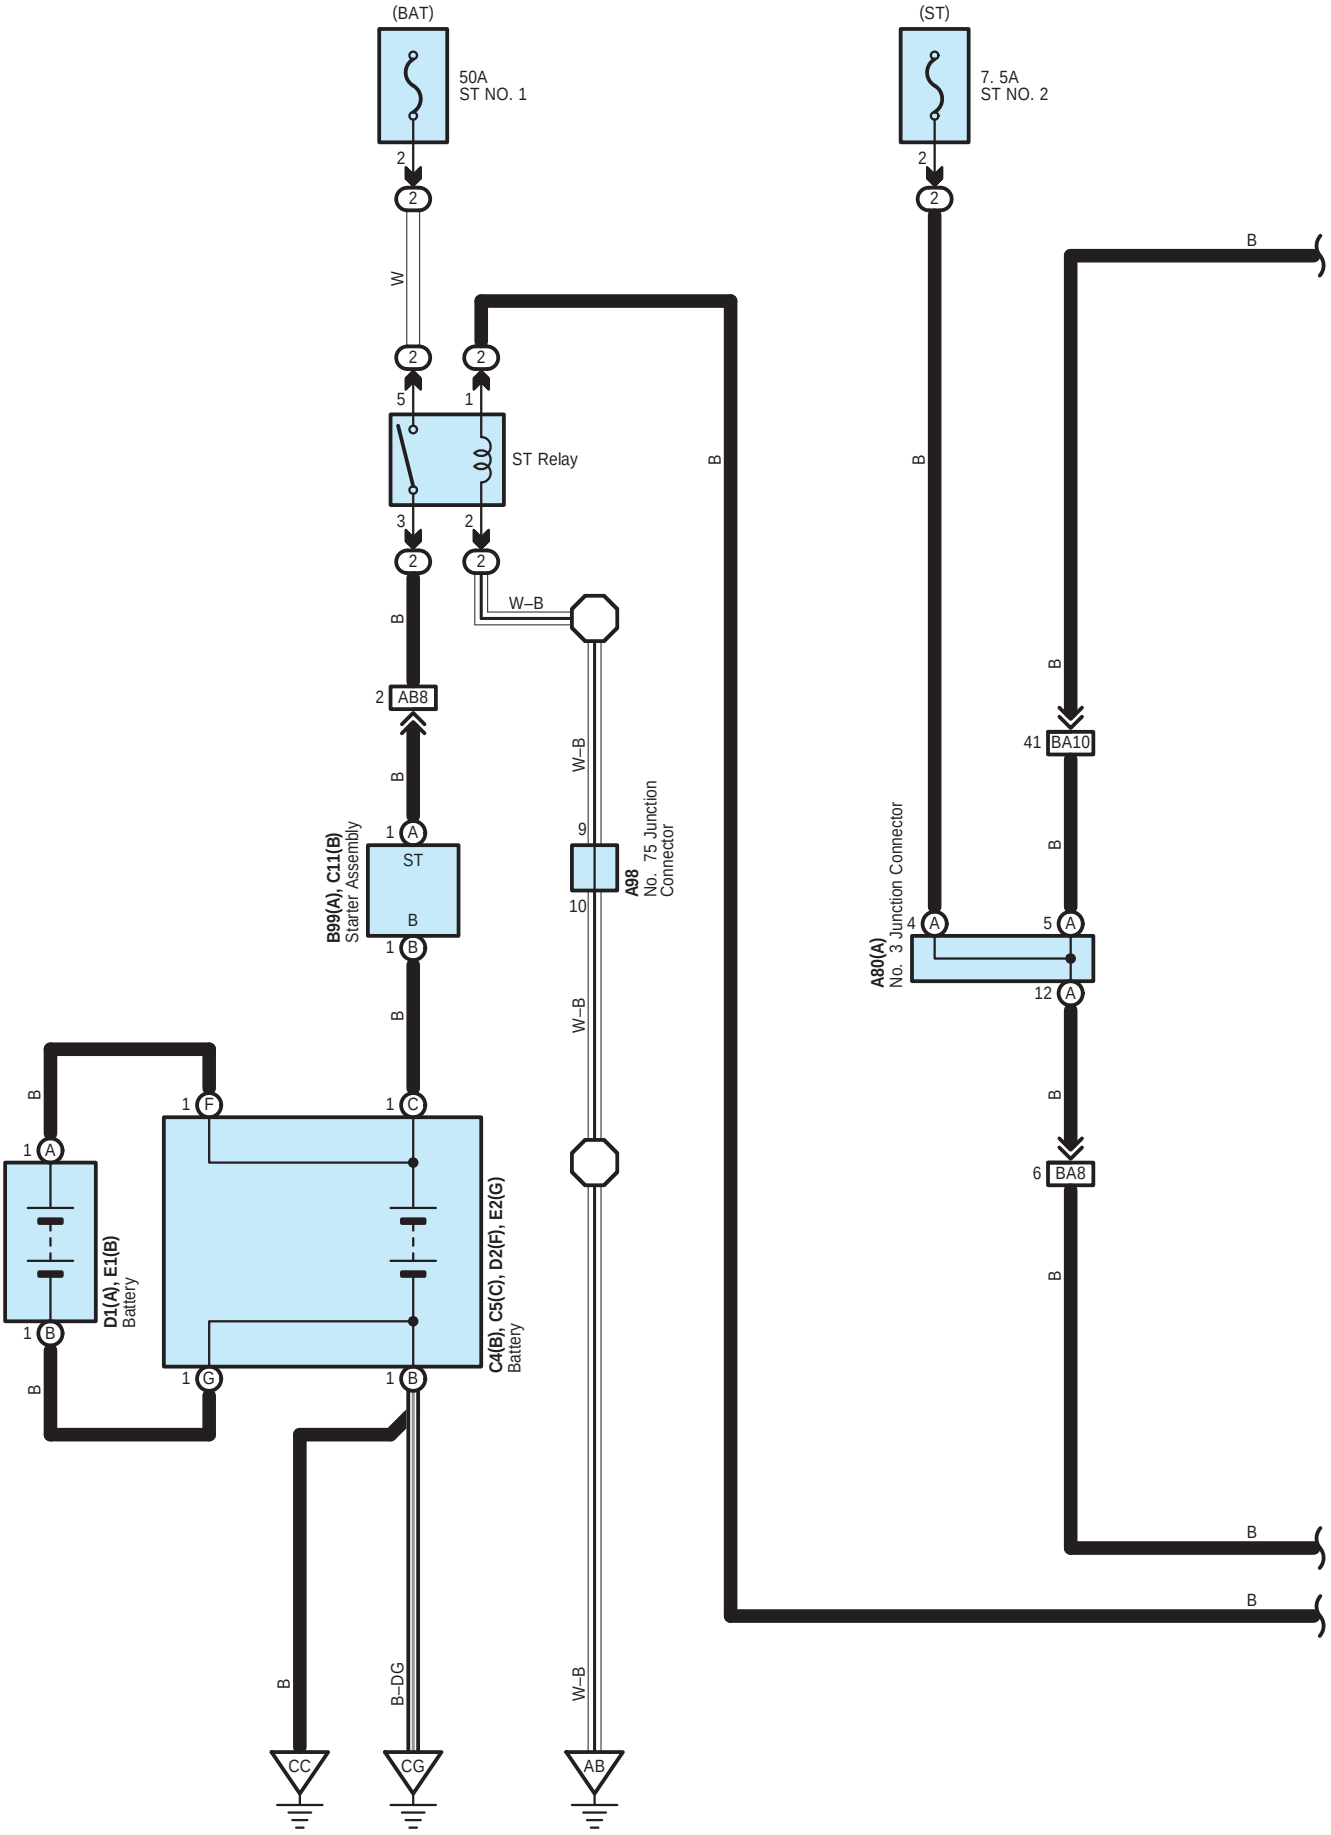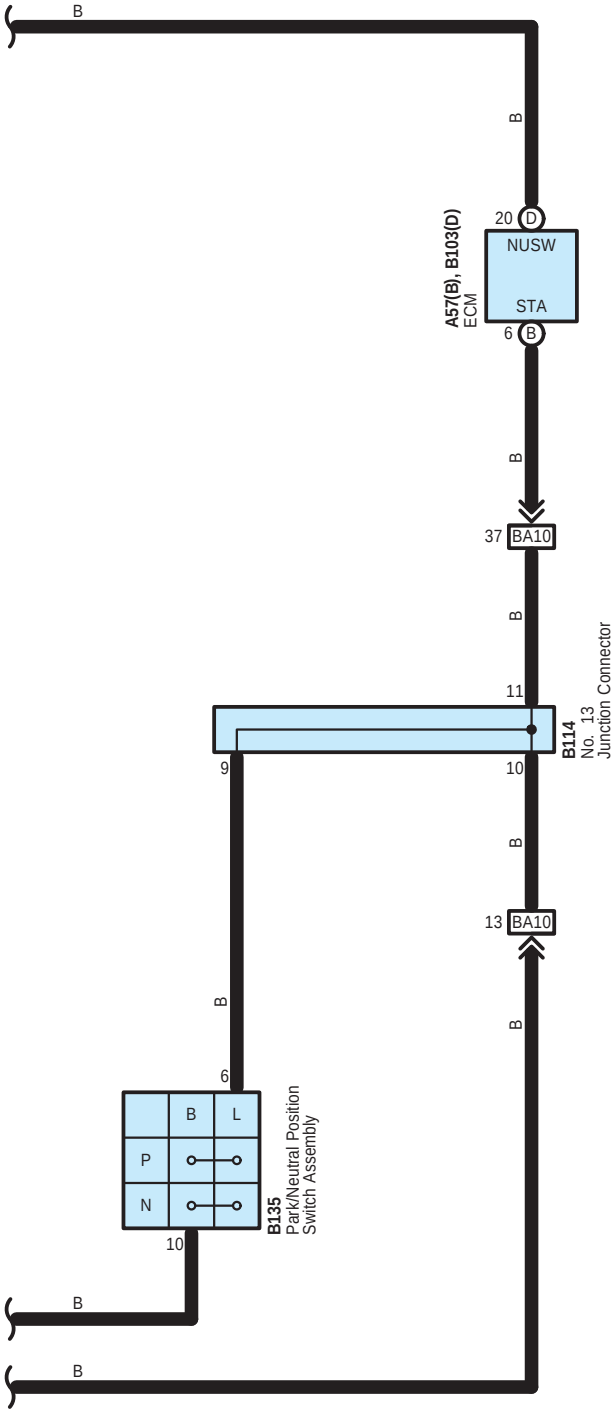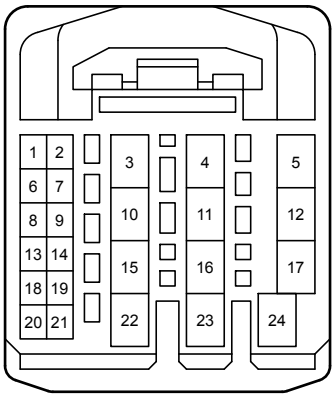

A 80
White

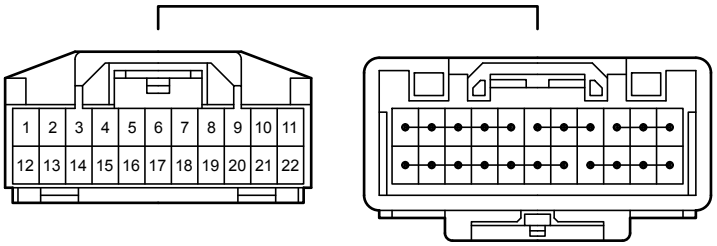


A 98
Black

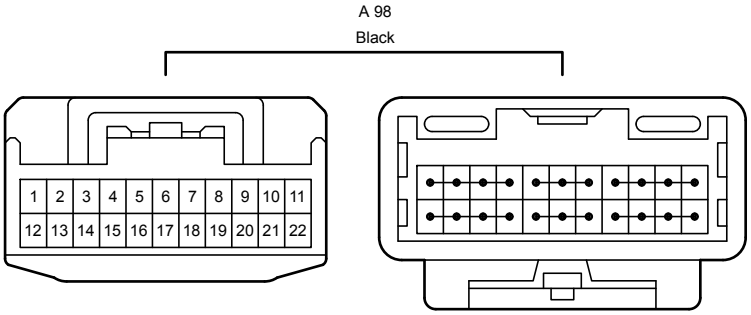


B 99
Black




B103
White

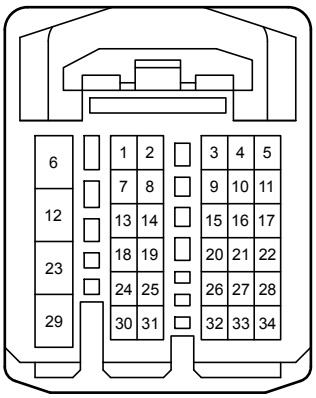


B114
Blue

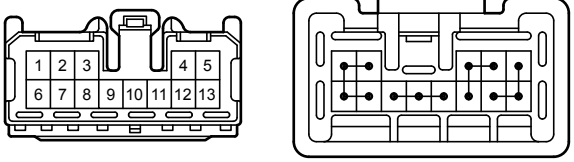


B135
Black

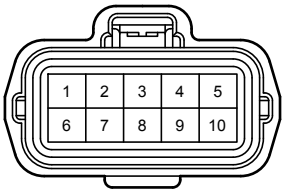


C 4




C 5




C 11




D 1




D 2




E 1




E 2




AB8
Gray

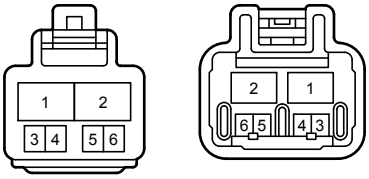

BA8
Black

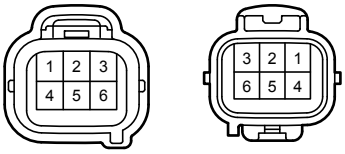

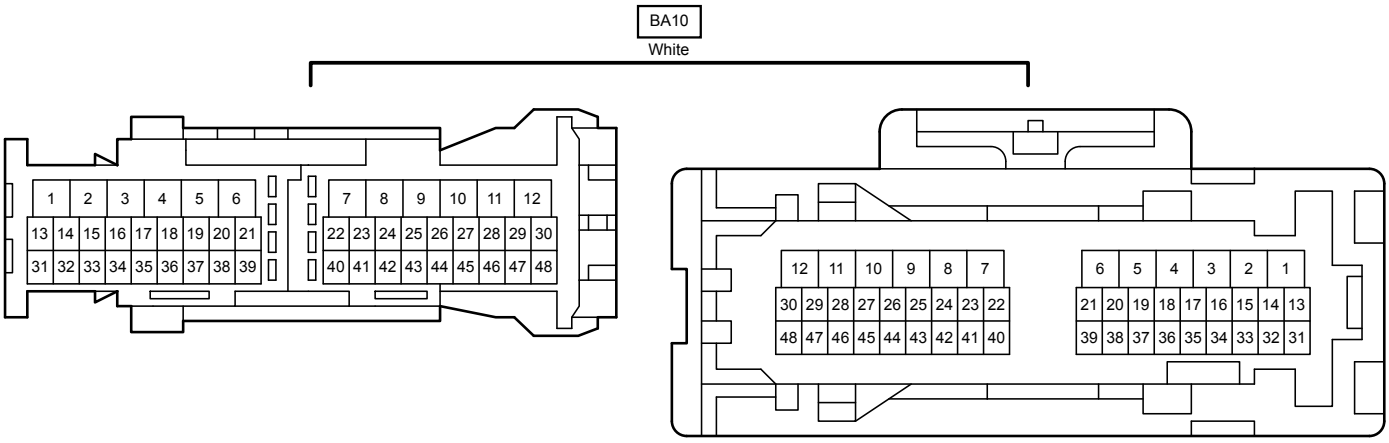
BA10
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31