

(Cont. next page)

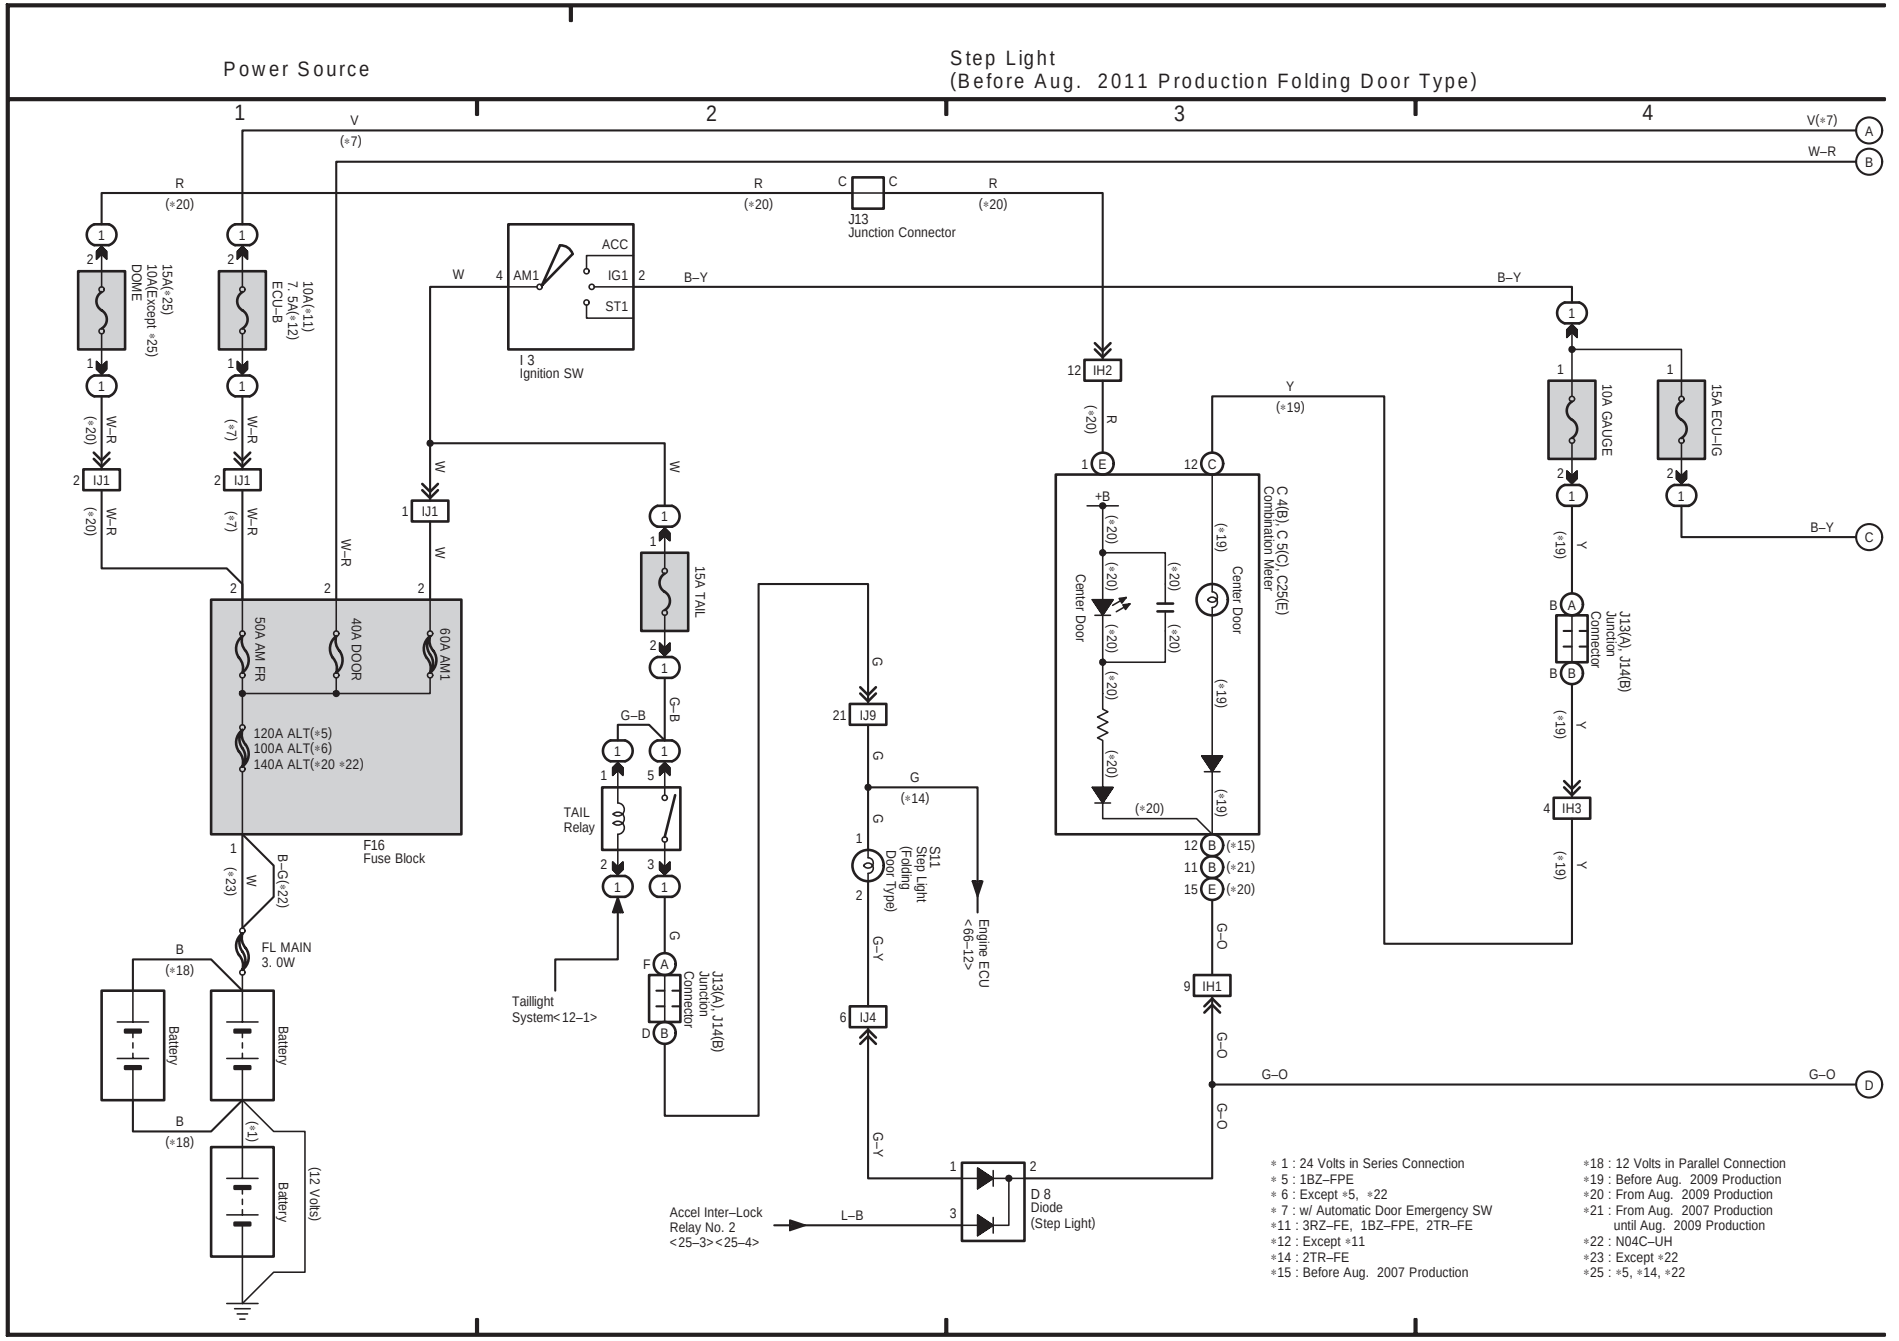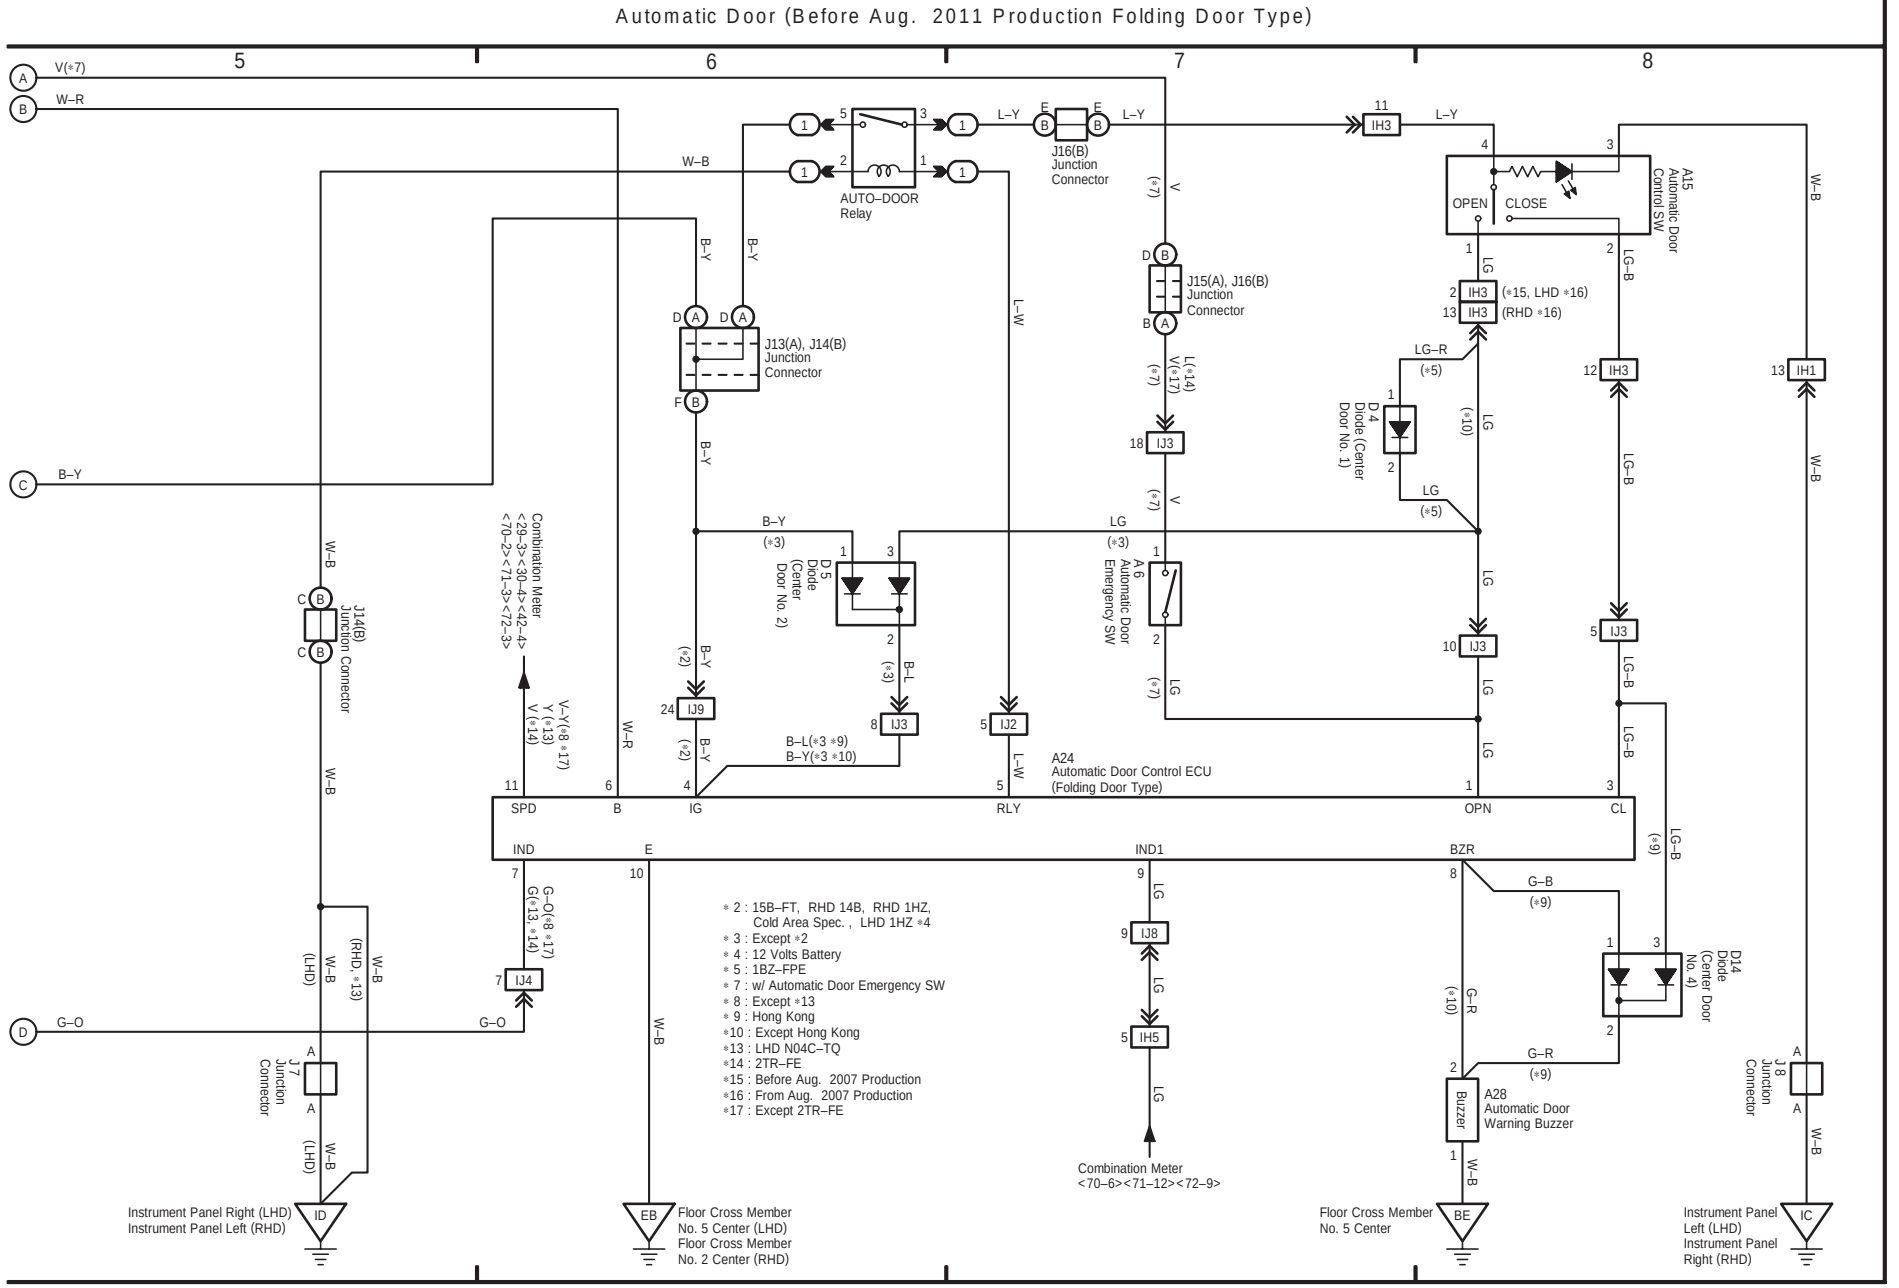


Automatic Door (Before Aug. 2011 Production Folding Door Type)
5
6
7
8
AUTO–DOOR Relay
J16(B) Junction Connector
J15(A), J16(B) Junction Connector
J13(A), J14(B) Junction Connector
J14(B) Junction Connector
A15 Automatic Door Control SW
OPEN
CLOSE
D4 Diode (Center Door No. 1)
D5 Diode (Center Door No. 2)
A6 Automatic Door Emergency SW
D14 Diode (Center Door No. 4)
A28 Automatic Door Warning Buzzer
Buzzer
J7 Junction Connector
J8 Junction Connector
Combination Meter <29–3><30–4><42–4><70–2><71–3><72–3>
Combination Meter <70–6><71–12><72–9>
A24 Automatic Door Control ECU (Folding Door Type)
SPD
B
IG
RLY
OPN
CL
IND
E
IND1
BZR
∗2 : 15B–FT, RHD 14B, RHD 1HZ, Cold Area Spec. , LHD 1HZ ∗4
∗3 : Except ∗2
∗4 : 12 Volts Battery
∗5 : 1BZ–FPE
∗7 : w/ Automatic Door Emergency SW
∗8 : Except ∗13
∗9 : Hong Kong
∗10 : Except Hong Kong
∗13 : LHD N04C–TQ
∗14 : 2TR–FE
∗15 : Before Aug. 2007 Production
∗16 : From Aug. 2007 Production
∗17 : Except 2TR–FE
Instrument Panel Right (LHD)
Instrument Panel Left (RHD)
Floor Cross Member No. 5 Center (LHD)
Floor Cross Member No. 2 Center (RHD)
Floor Cross Member No. 5 Center
Instrument Panel Left (LHD)
Instrument Panel Right (RHD)