
H OVERALL ELECTRICAL WIRING DIAGRAM

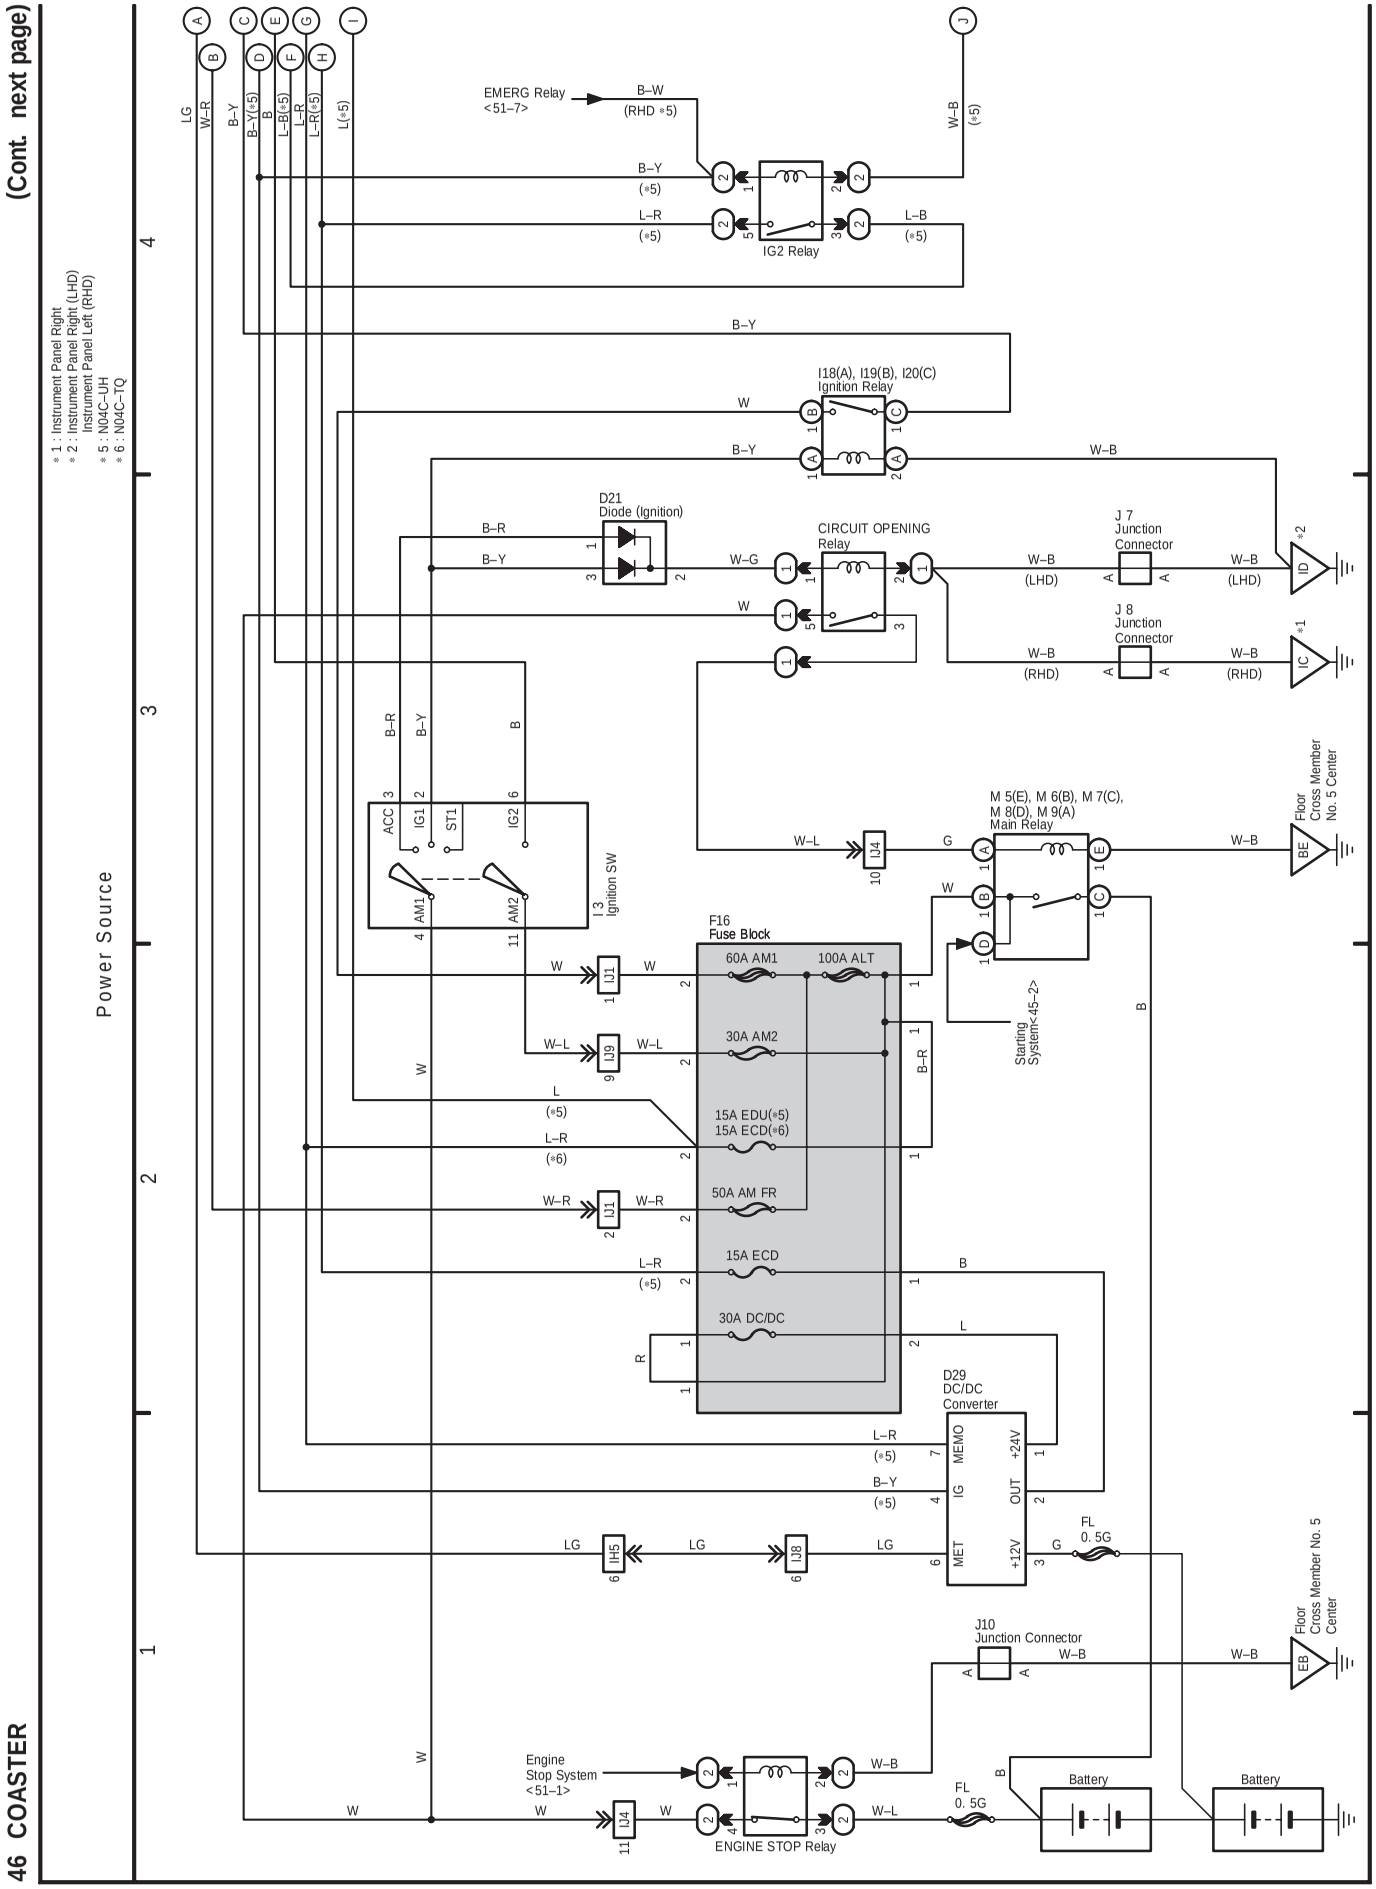


(Cont. next page)

Power Source


Engine Control (Europe N04C–TQ, N04C–UH)

∗ 5 : N04C–UH
∗ 6 : N04C–TQ
∗ 8 : Before Dec. 2013 Production
∗ 9 : From Dec. 2013 Production

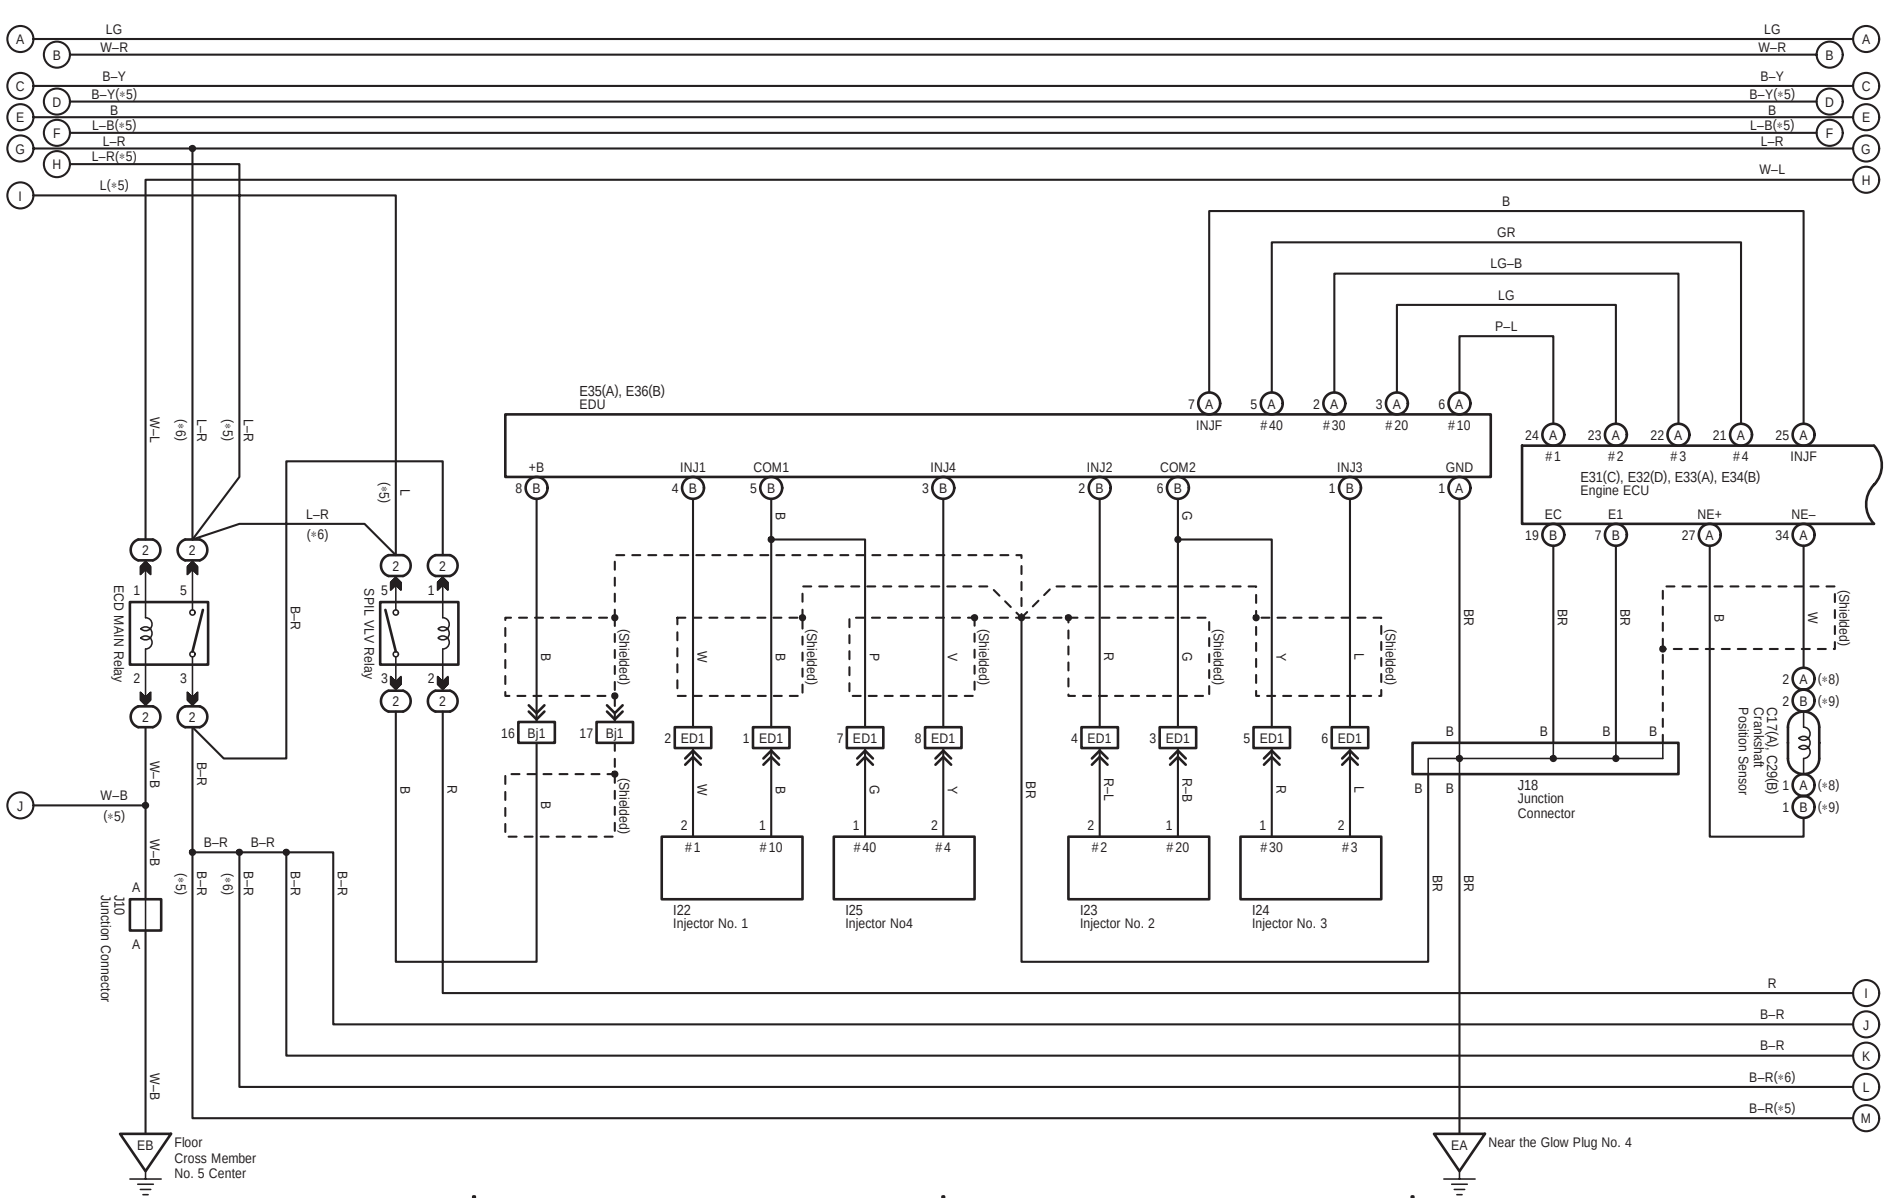


H

(Cont. next page)

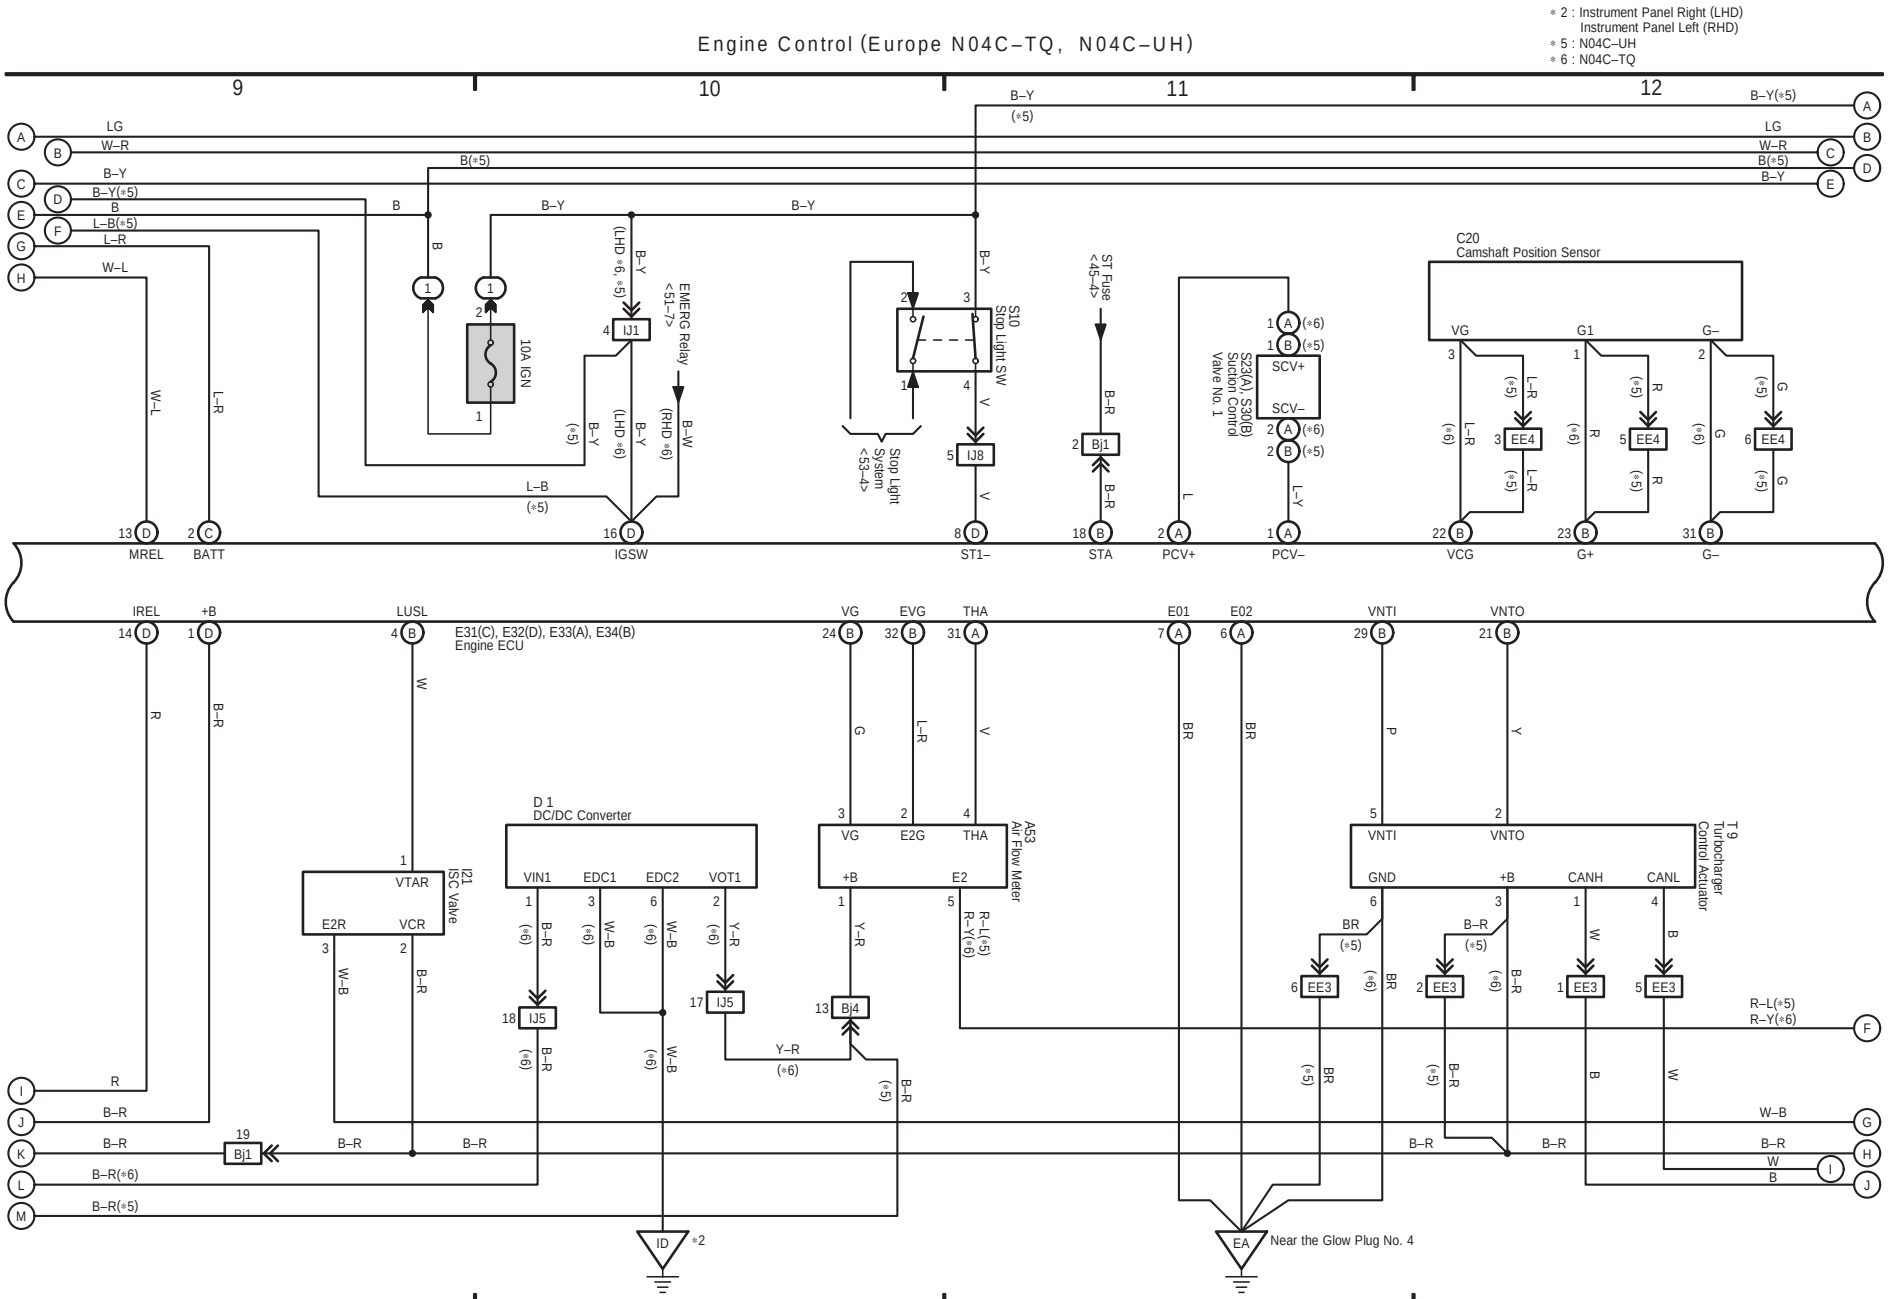


(Cont. next page)

Engine Control (Europe N04C–TQ, N04C–UH)

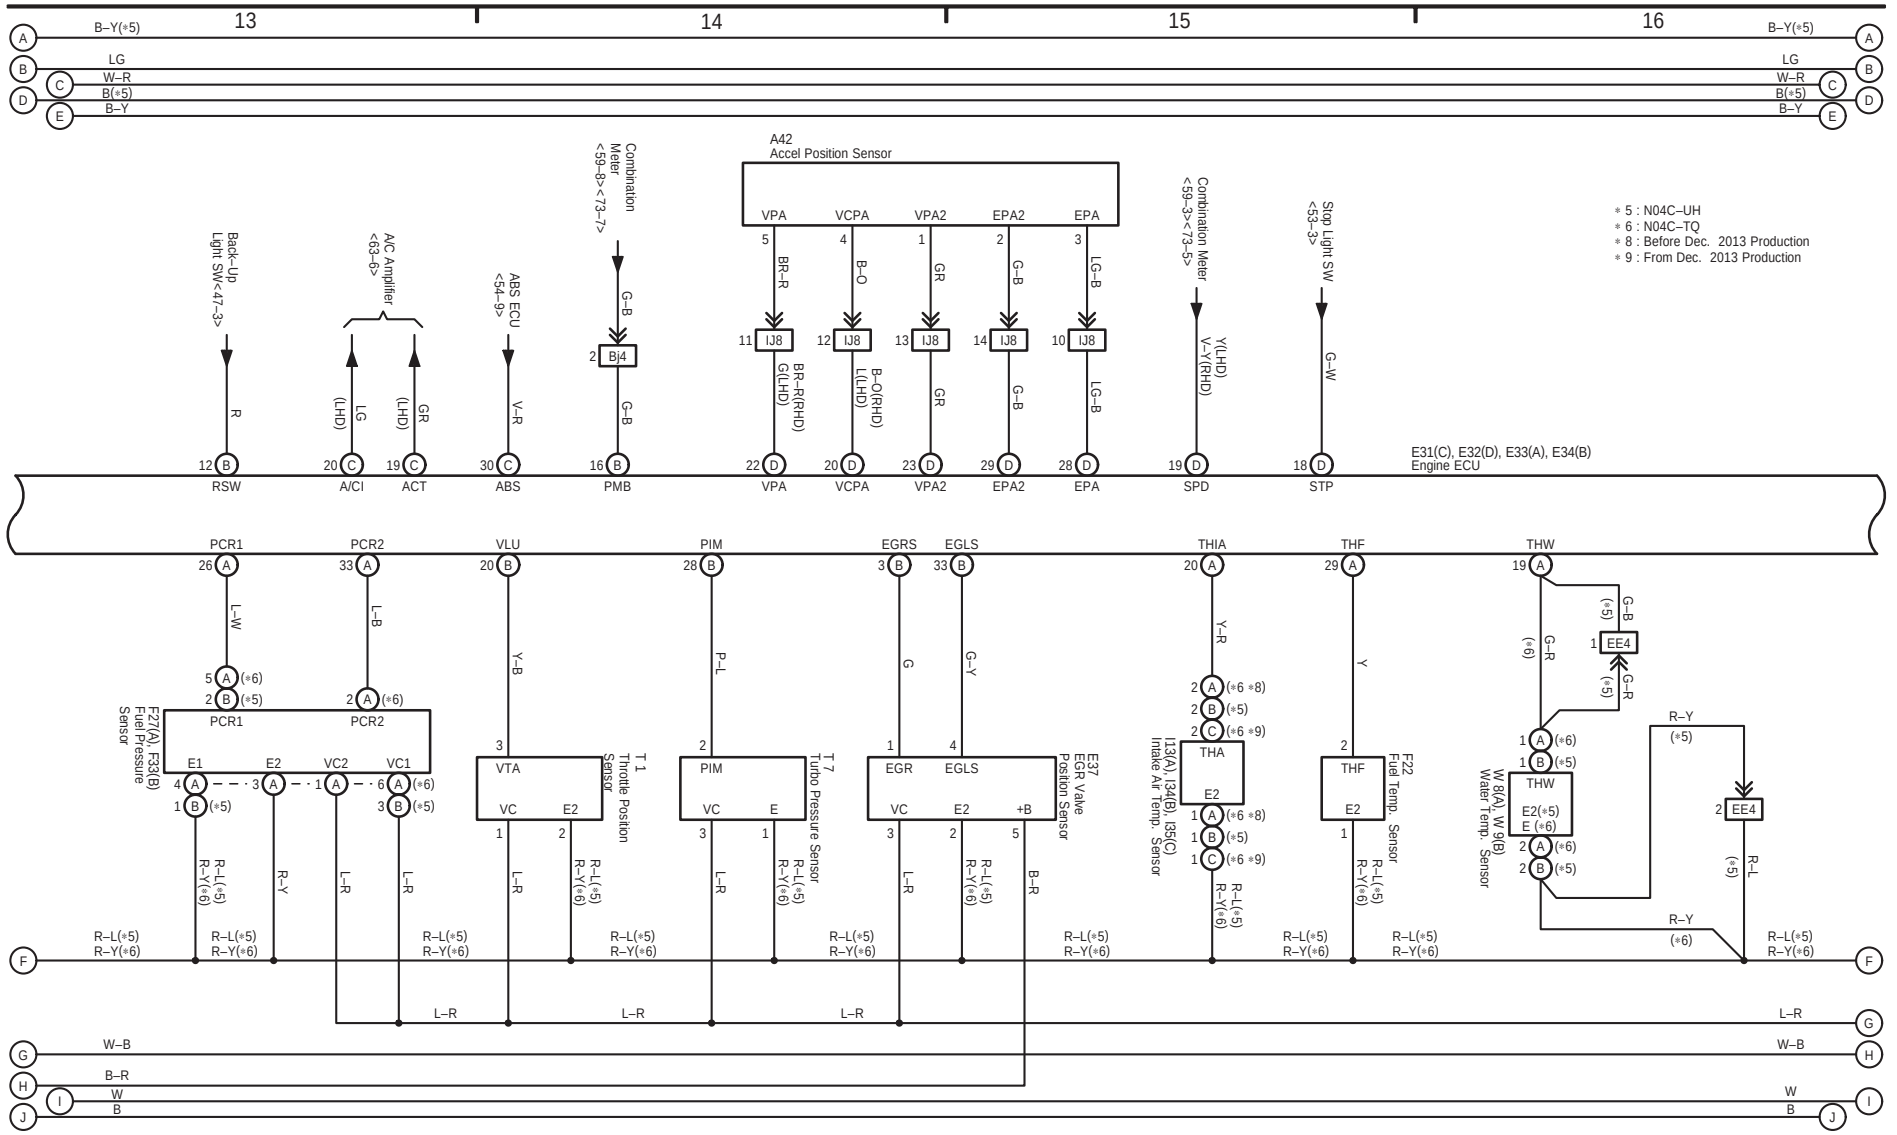



(Cont. next page)

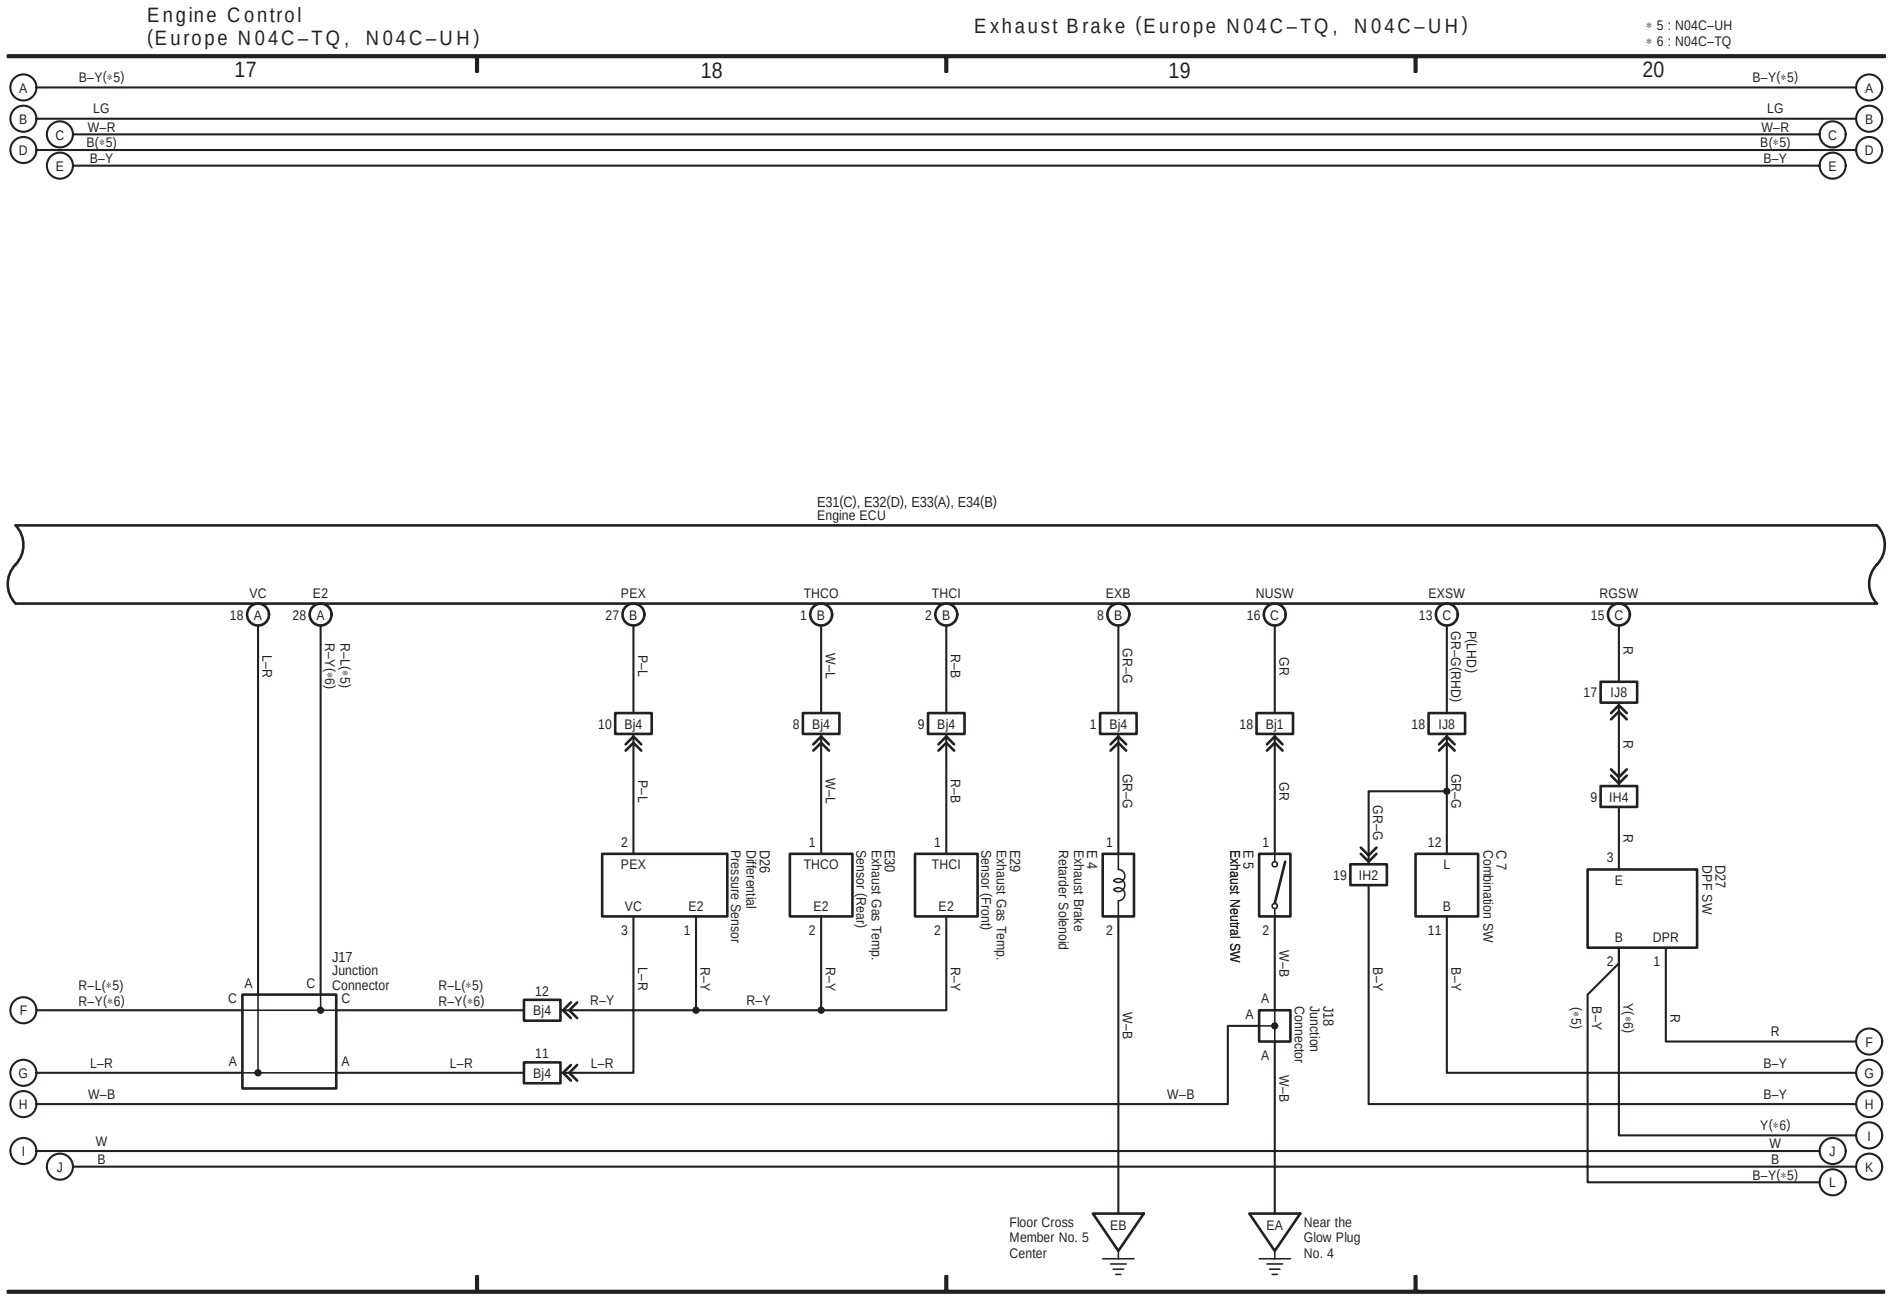

(Cont. next page)

Exhaust Brake (Europe N04C–TQ, N04C–UH)

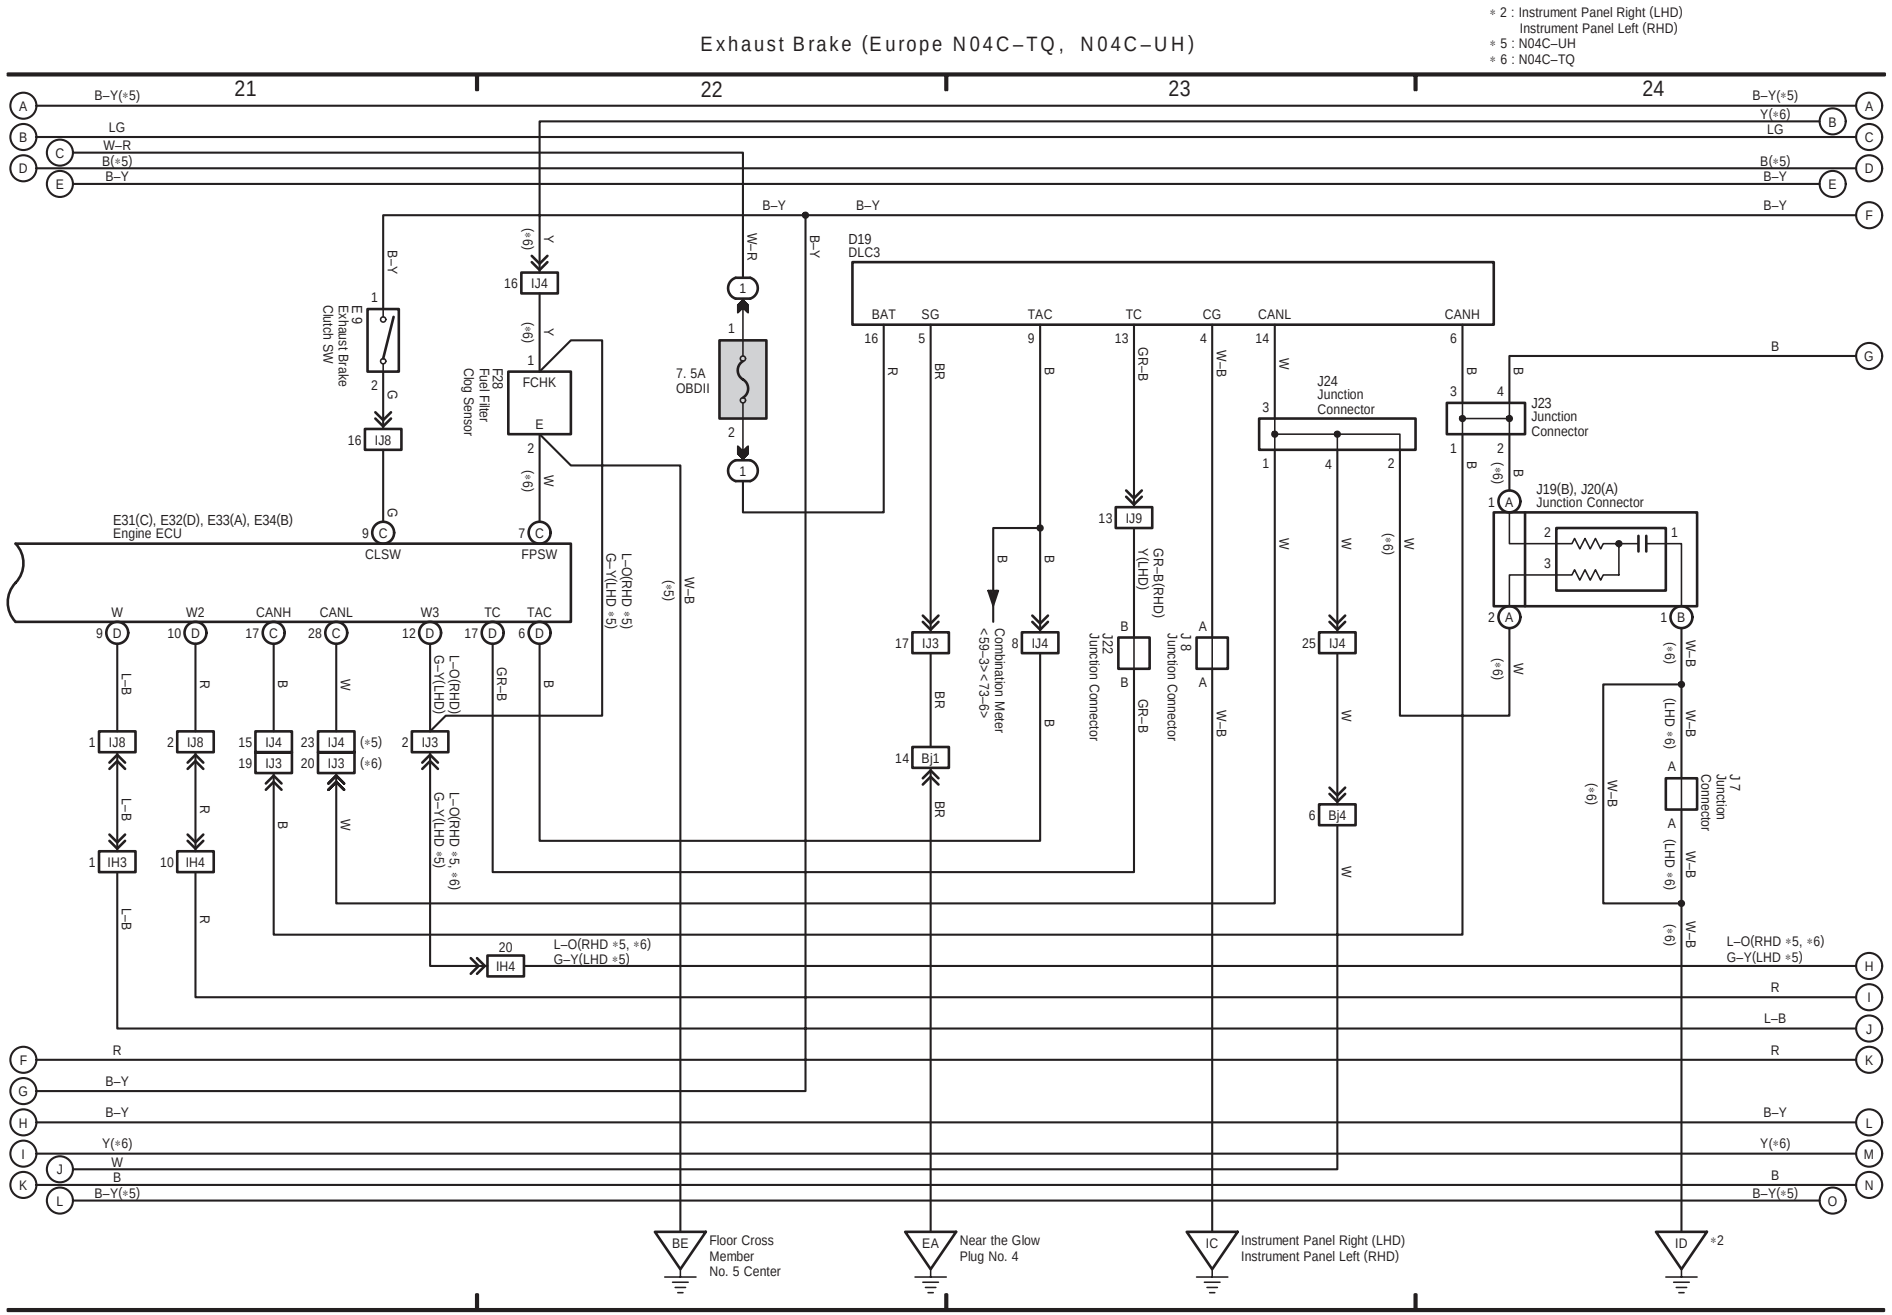

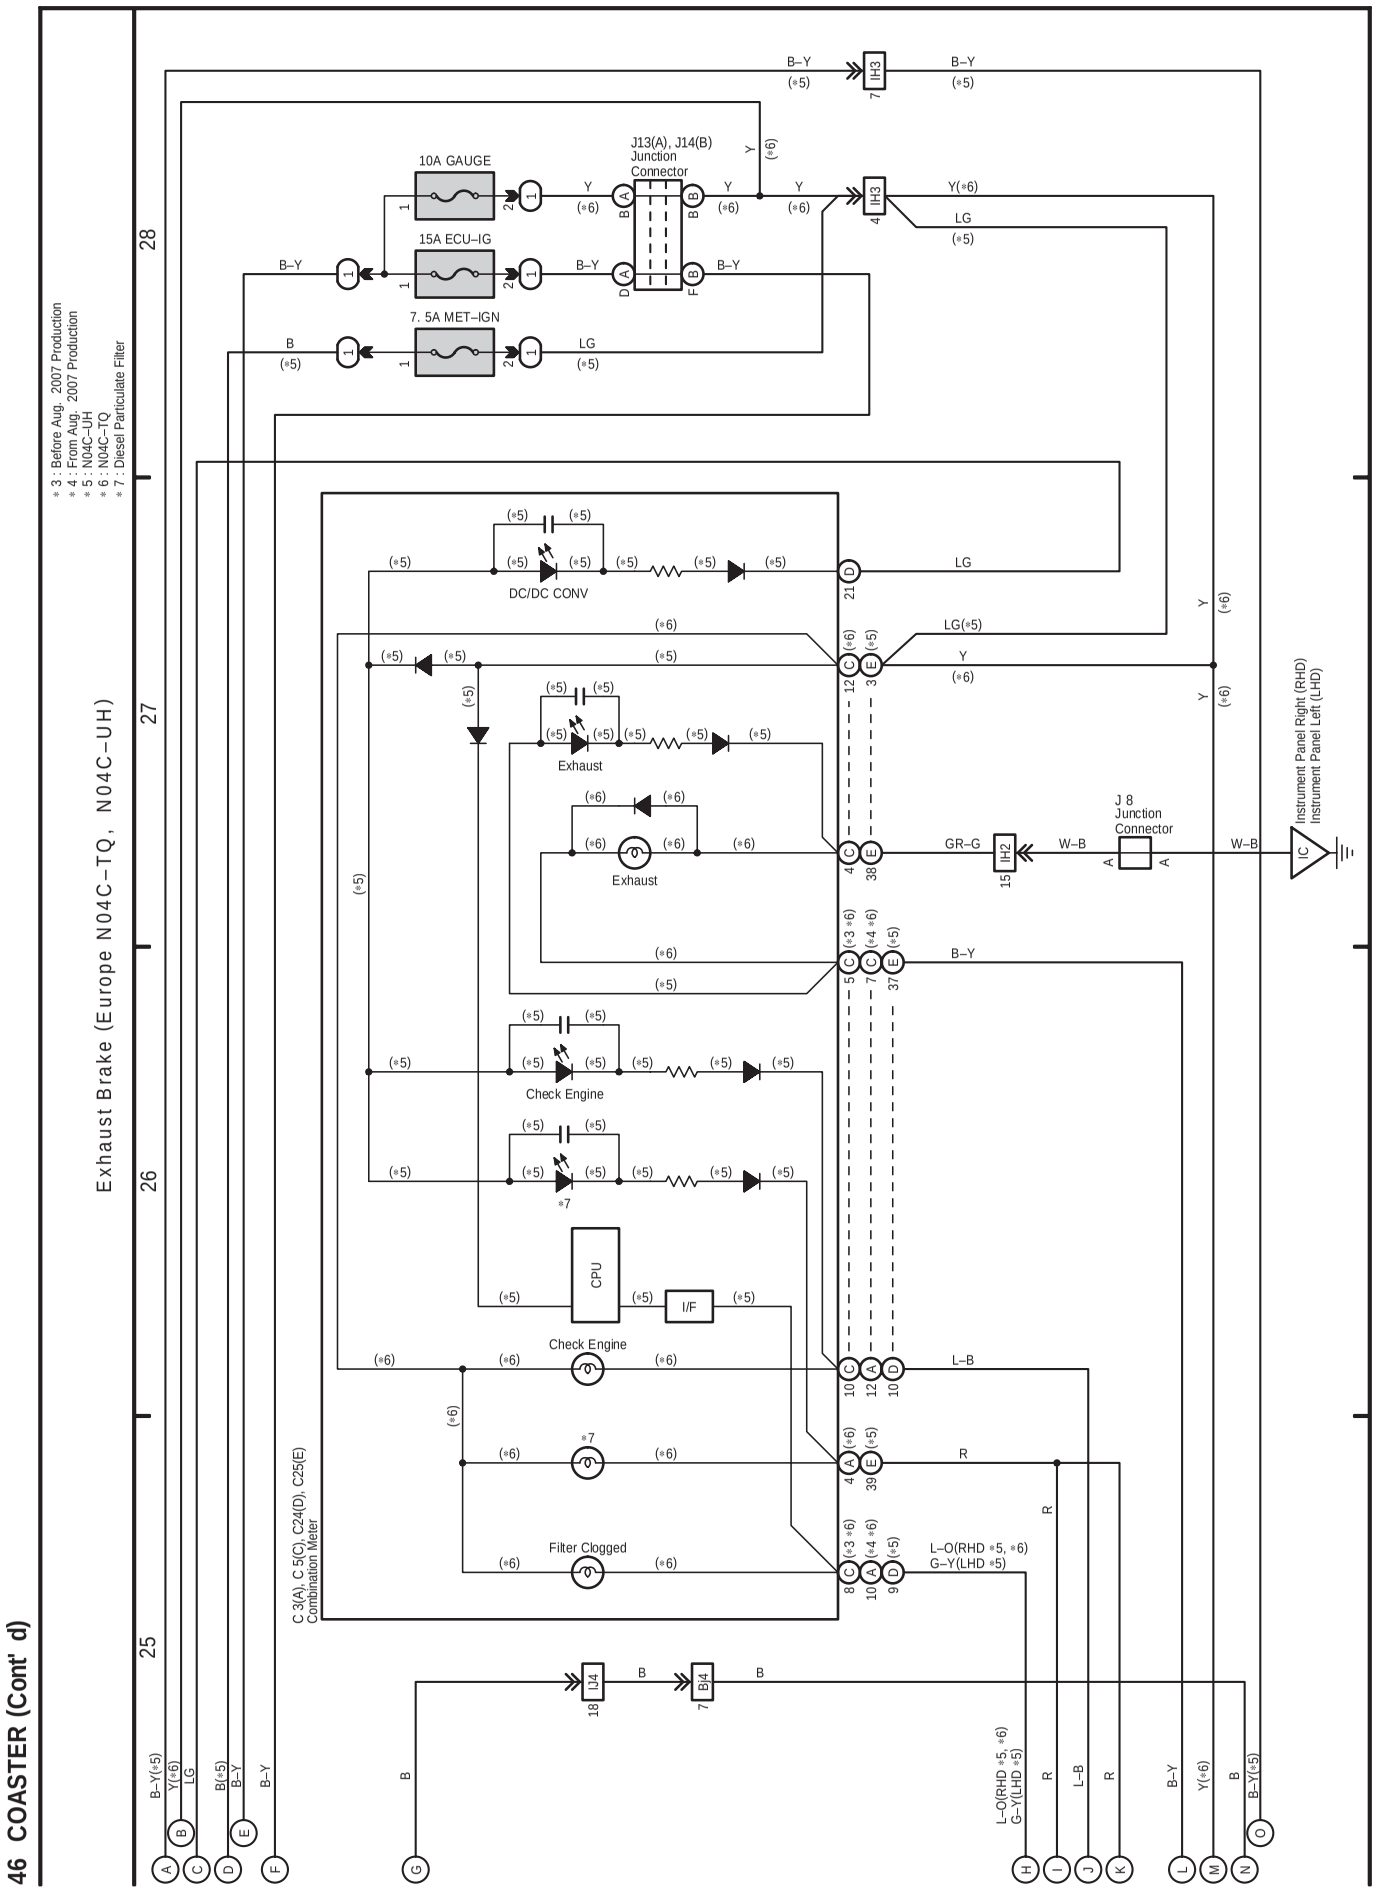
46 COASTER (Cont' d)
Exhaust Brake (Europe N04C–TQ, N04C–UH)
25
26
27
28
*3 : Before Aug., 2007 Production
*4 : From Aug., 2007 Production
*5 : N04C–UH
*6 : N04C–TQ
*7 : Diesel Particulate Filter
10A GAUGE
15A ECU–IG
7. 5A MET–IGN
J13(A), J14(B) Junction Connector
IH3
DC/DC CONV
Exhaust
Check Engine
CPU
I/F
Filter Clogged
J 8 Junction Connector
IH2
IC
Instrument Panel Right (RHD)
Instrument Panel Left (LHD)
C 3(A), C 5(C), C24(D), C25(E) Combination Meter
IJ4
BJ4