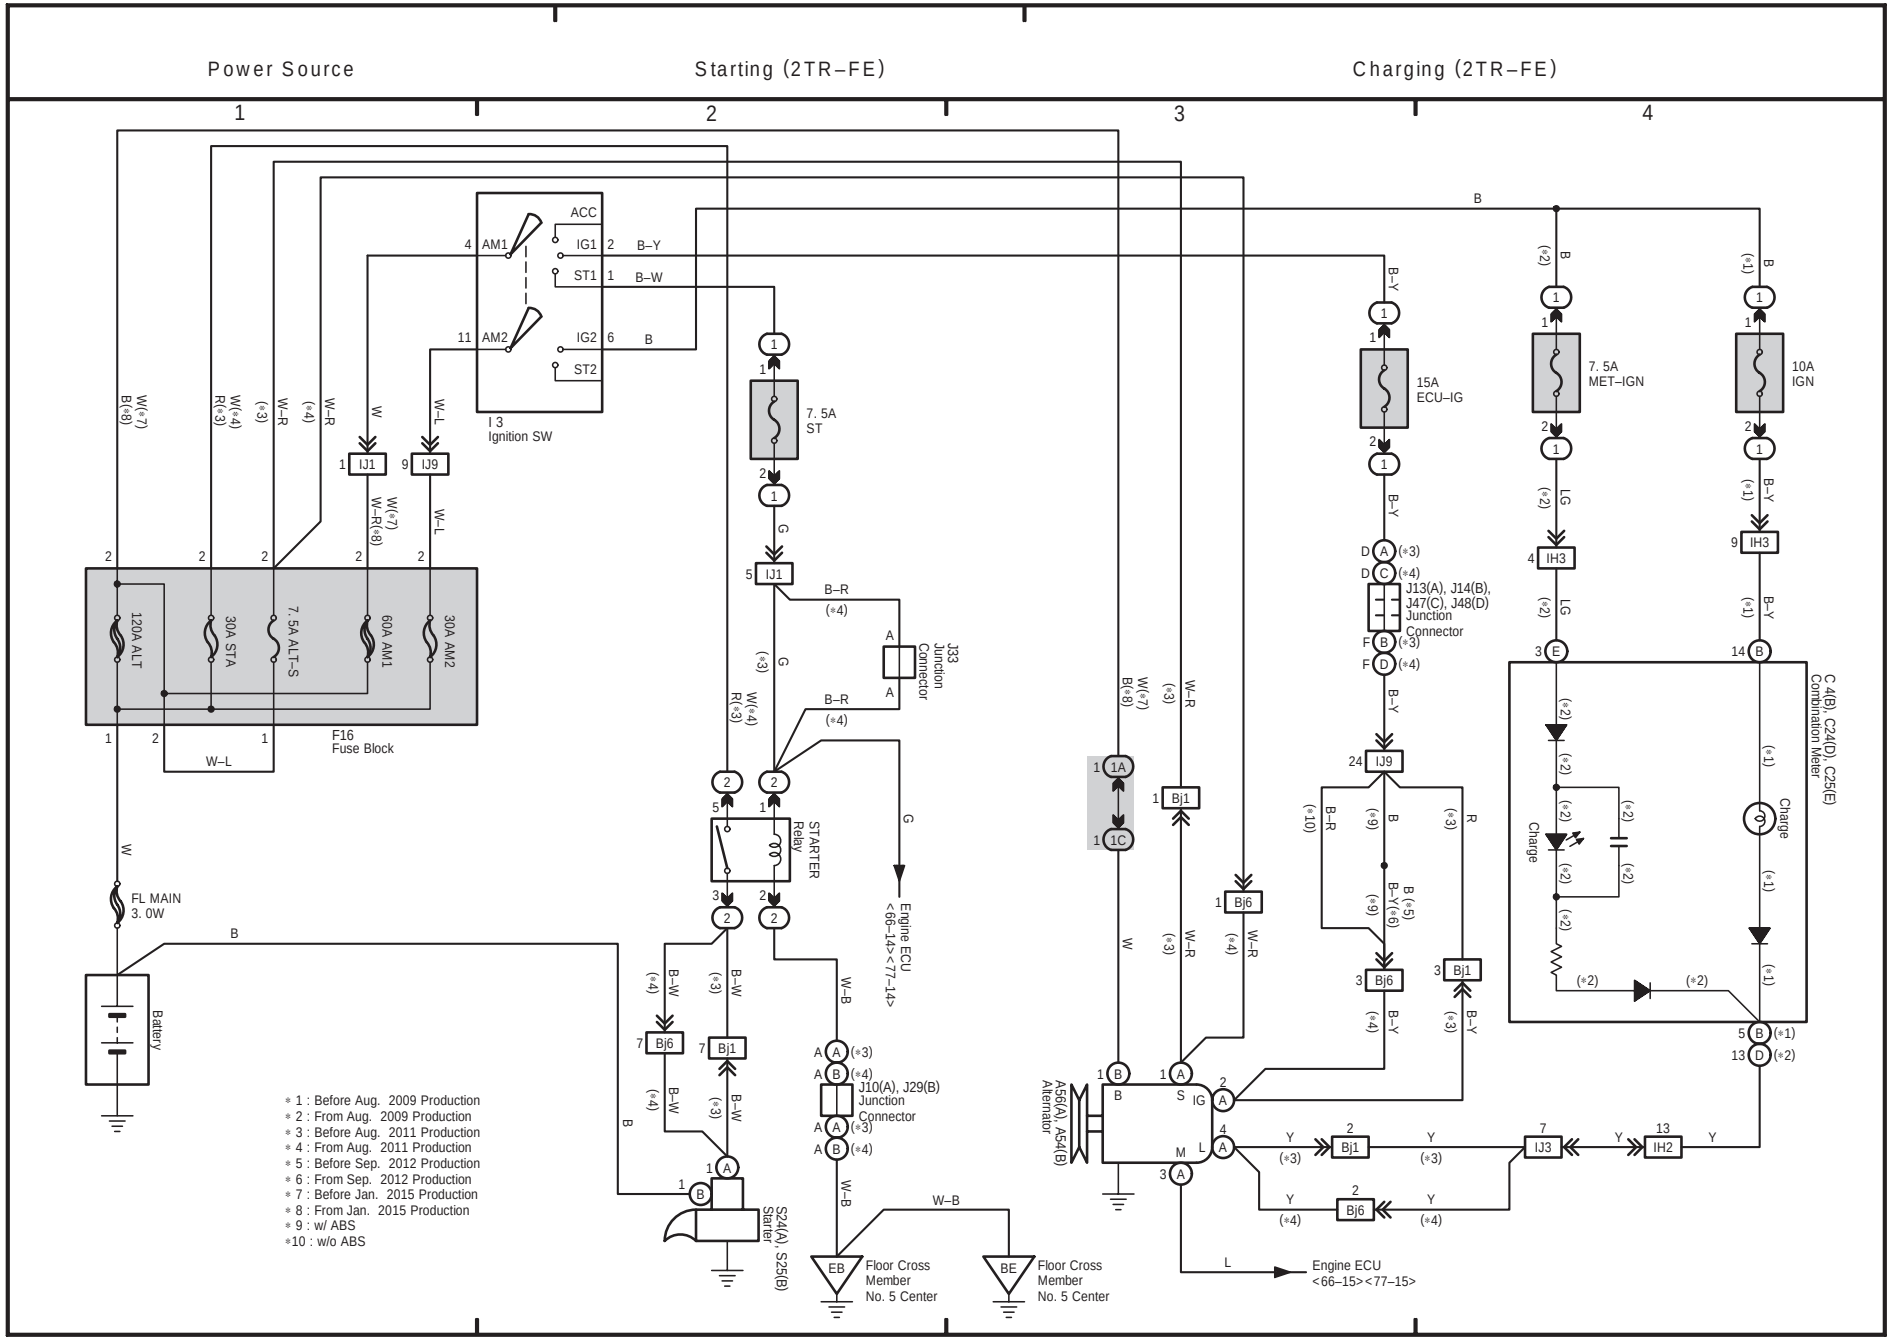

Power Source
Starting (2TR–FE)
Charging (2TR–FE)
1
2
3
4
ACC
IG1
ST1
IG2
ST2
AM1
AM2
I 3
Ignition SW
7. 5A
ST
15A
ECU–IG
7. 5A
MET–IGN
10A
IGN
IJ1
IJ9
IH3
IH2
Bj1
Bj6
IJ3
F16
Fuse Block
120A ALT
30A STA
7. 5A ALT–S
60A AM1
30A AM2
FL MAIN
3. 0W
Battery
STARTER
Relay
J33
Junction
Connector
J13(A), J14(B),
J47(C), J48(D)
Junction
Connector
J10(A), J29(B)
Junction
Connector
A56(A), A54(B)
Alternator
S24(A), S25(B)
Starter
Floor Cross
Member
No. 5 Center
Engine ECU
<66–14><77–14>
Engine ECU
<66–15><77–15>
C 4(B), C24(D), C25(E)
Combination Meter
Charge
* 1 : Before Aug. 2009 Production
* 2 : From Aug. 2009 Production
* 3 : Before Aug. 2011 Production
* 4 : From Aug. 2011 Production
* 5 : Before Sep. 2012 Production
* 6 : From Sep. 2012 Production
* 7 : Before Jan. 2015 Production
* 8 : From Jan. 2015 Production
* 9 : w/ ABS
*10 : w/o ABS