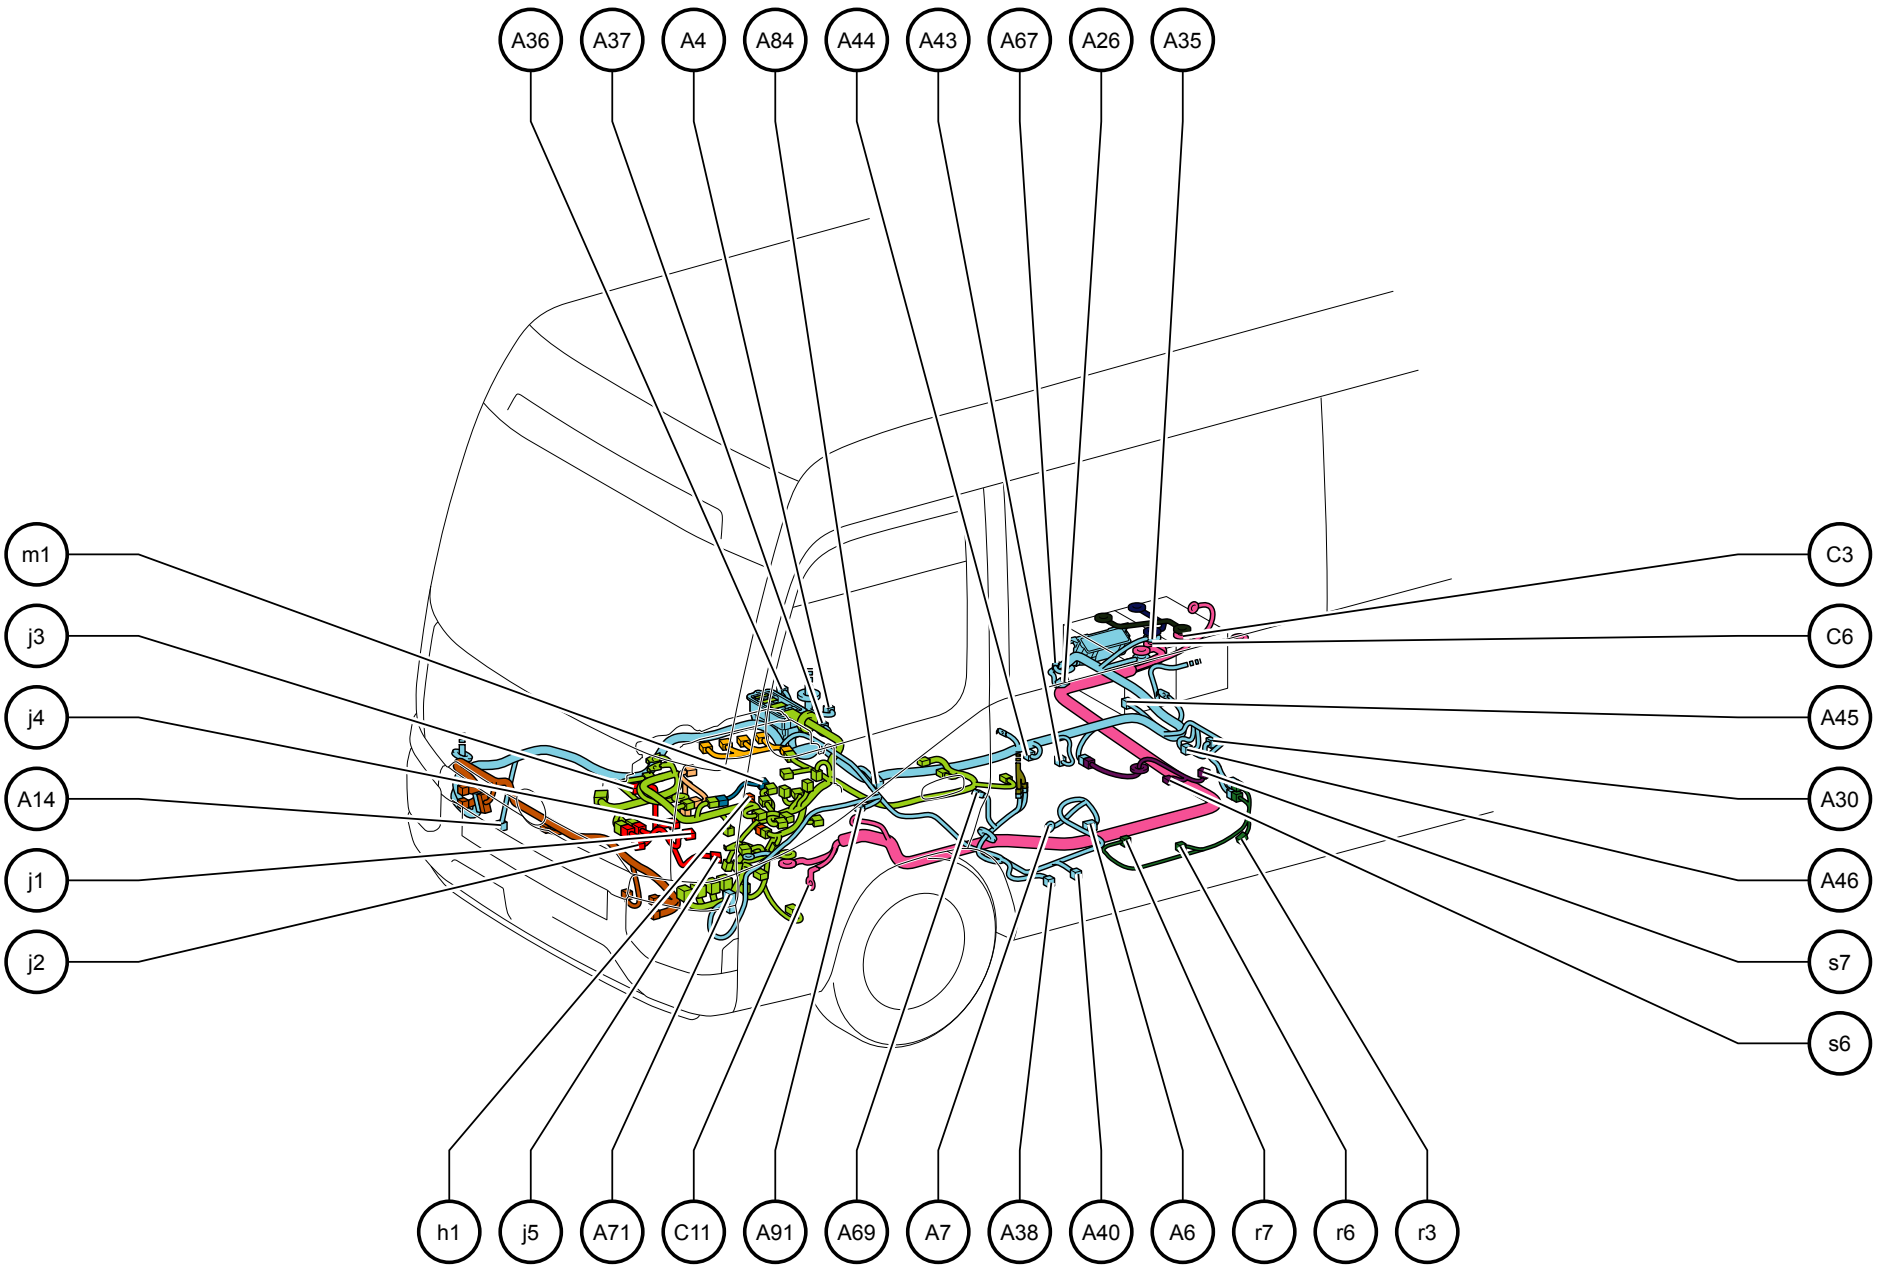

A36
A37
A4
A84
A44
A43
A67
A26
A35
m1
j3
j4
A14
j1
j2
C3
C6
A45
A30
A46
s7
s6
h1
j5
A71
C11
A91
A69
A7
A38
A40
A6
r7
r6
r3

A 4 Exhaust Brake Solenoid with Bracket Assembly
A 6 Vacuum Warning Switch Assembly
A 7 Vacuum Warning Switch Assembly
A 14 Door Control Switch Assembly
A 26 Step Light Assembly
A 30 Level Warning Switch
A 35 Battery
A 36 Side Turn Signal Light Assembly RH
A 37 Side Marker & Reflector Light Assembly
A 38 Side Turn Signal Light Assembly LH
A 40 Side Marker & Reflector Light Assembly
A 43 Differential Pressure Sensor Assembly
A 44 No. 2 Exhaust Gas Temperature Sensor
A 45 No. 4 Exhaust Gas Temperature Sensor
A 46 Vacuum Sensor Assembly
A 67 Automatic Door Buzzer (Wireless Door Lock Buzzer)
A 69 Front Seat Outer Belt Assembly LH
A 71 Skid Control ECU Assembly
A 84 No. 7 Junction Connector
A 91 No. 3 CAN Junction Connector

C 3 Battery
C 6 Battery
C 11 Starter Assembly

h 1 Solenoid (SLT) Valve

j 1 Engine Oil Pressure Switch Assembly
j 2 Generator Assembly
j 3 Air Conditioning Compressor Relay
j 4 Turbocharger Sub-Assembly
j 5 Turbocharger Sub-Assembly

m 1 Fuel Pressure Sensor

r 3 Condenser Blower Motor Assembly
r 6 Condenser Blower Motor Assembly
r 7 No. 1 Pressure Switch

s 6 Rear Heater Blower Resistor
s 7 Blower Motor with Fan Sub-Assembly


A 4
Gray




A 6
Gray




A 7




A 14
Gray

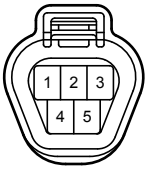


A 26
White




A 30
Gray

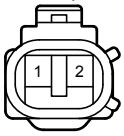


A 35




A 36
Gray

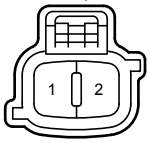


A 37
Gray

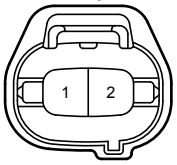


A 38
Gray

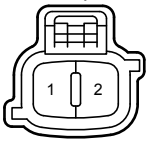

A 40
Gray

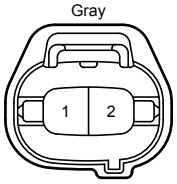

A 43
Black

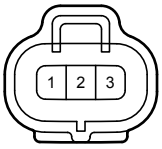


A 44
Dark Gray




A 45
Dark Gray




A 46
Black

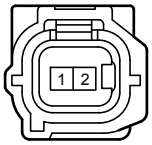


A 67
Gray

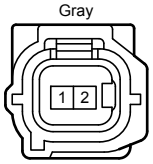


A 69
Black




A 71
Black

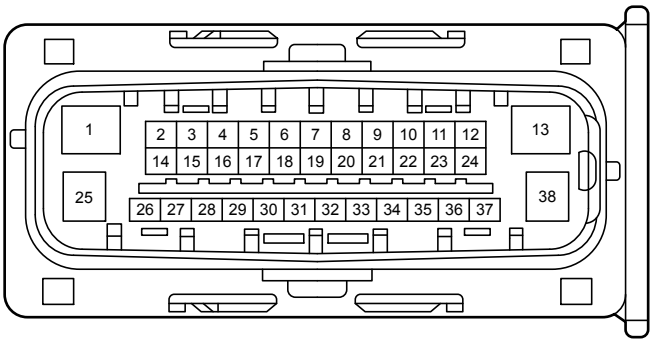


A 84
Gray

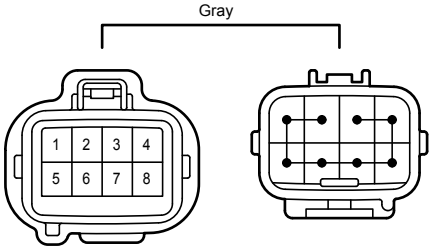


A 91
Dark Gray

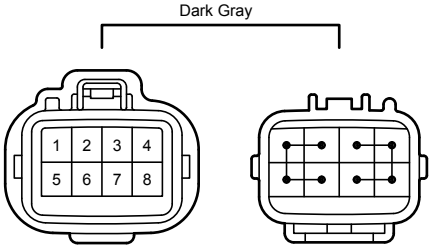


C 3




C 6



C 11




h 1
Black



j 1
Black




j 2
Black

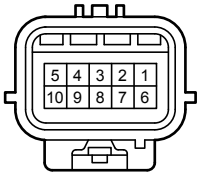


j 3
Gray




j 4
Black

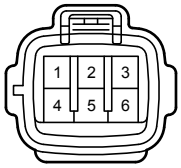


j 5
Dark Gray

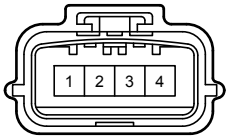


m 1
Gray

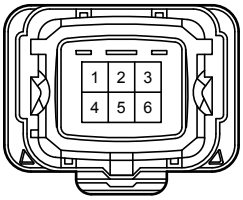


r 3
Black

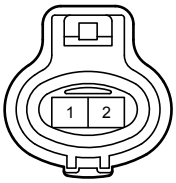


r 6
Black

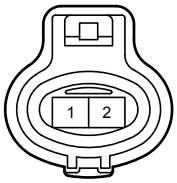

r 7
Black

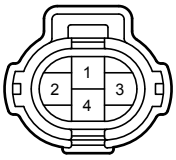

s 6
Black

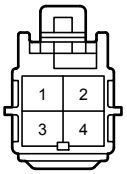

s 7
White

