
(Cont. next page)

Engine Stop System (1BZ–FPE)

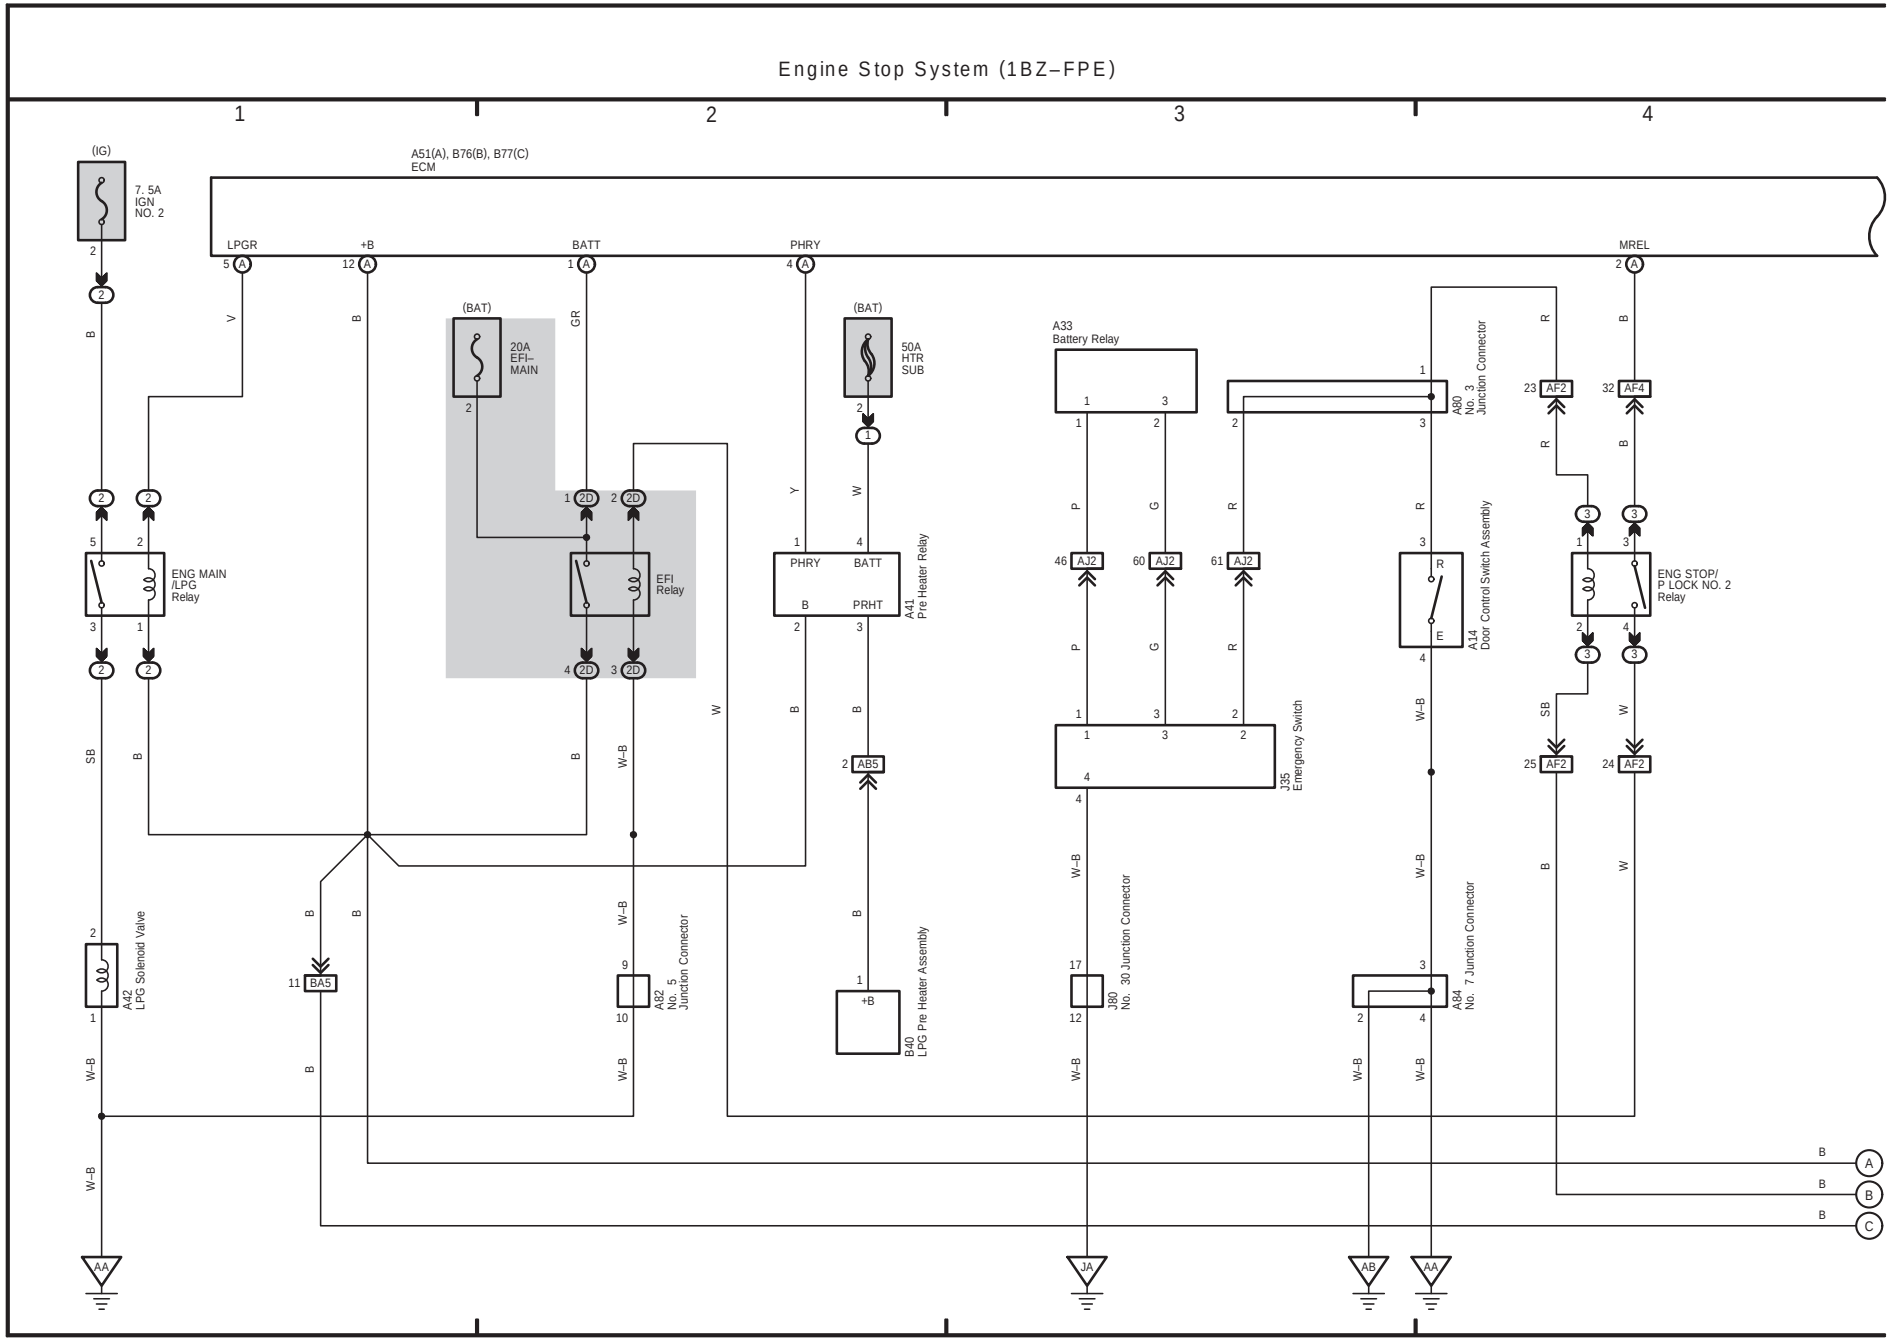


(Cont. next page)

Ignition (1BZ–FPE)


Engine Control (1BZ–FPE)

5 6 7 8

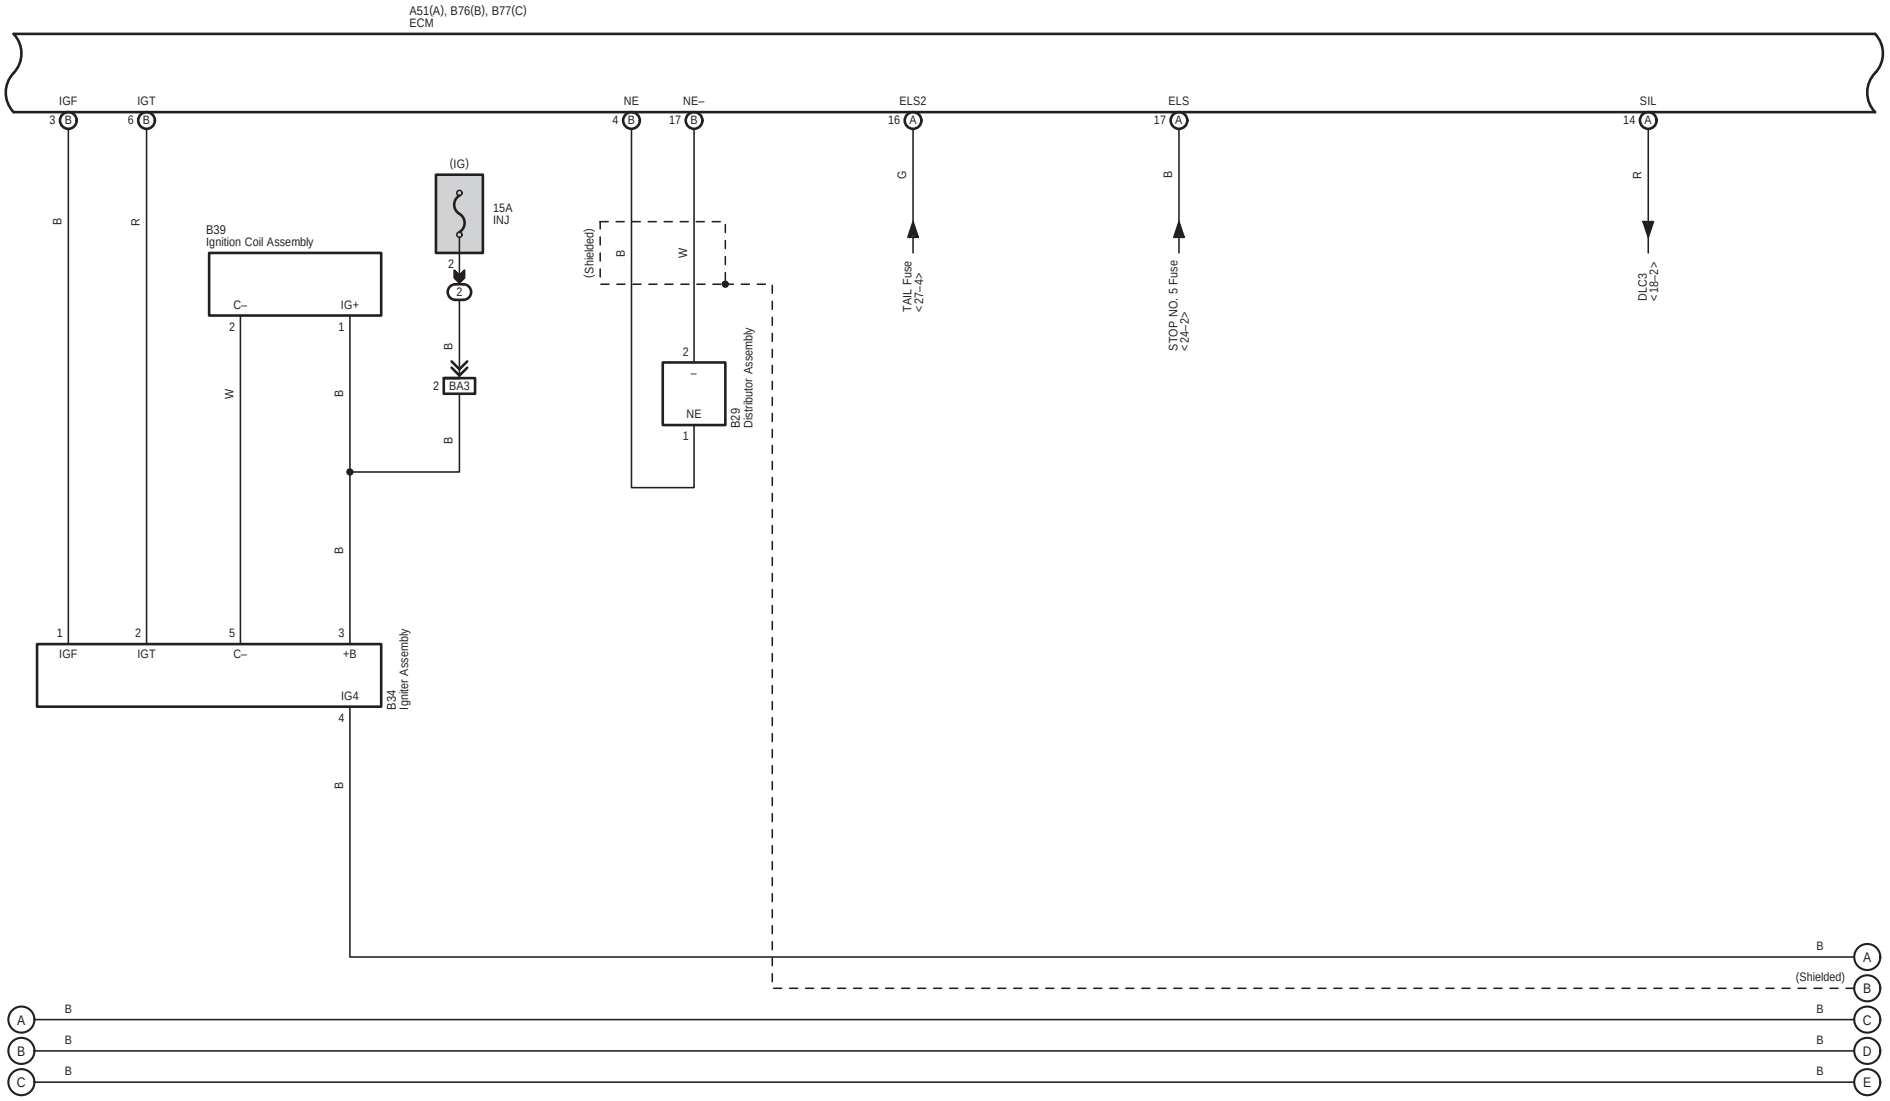


(Cont. next page)

Engine Control (1BZ–FPE)

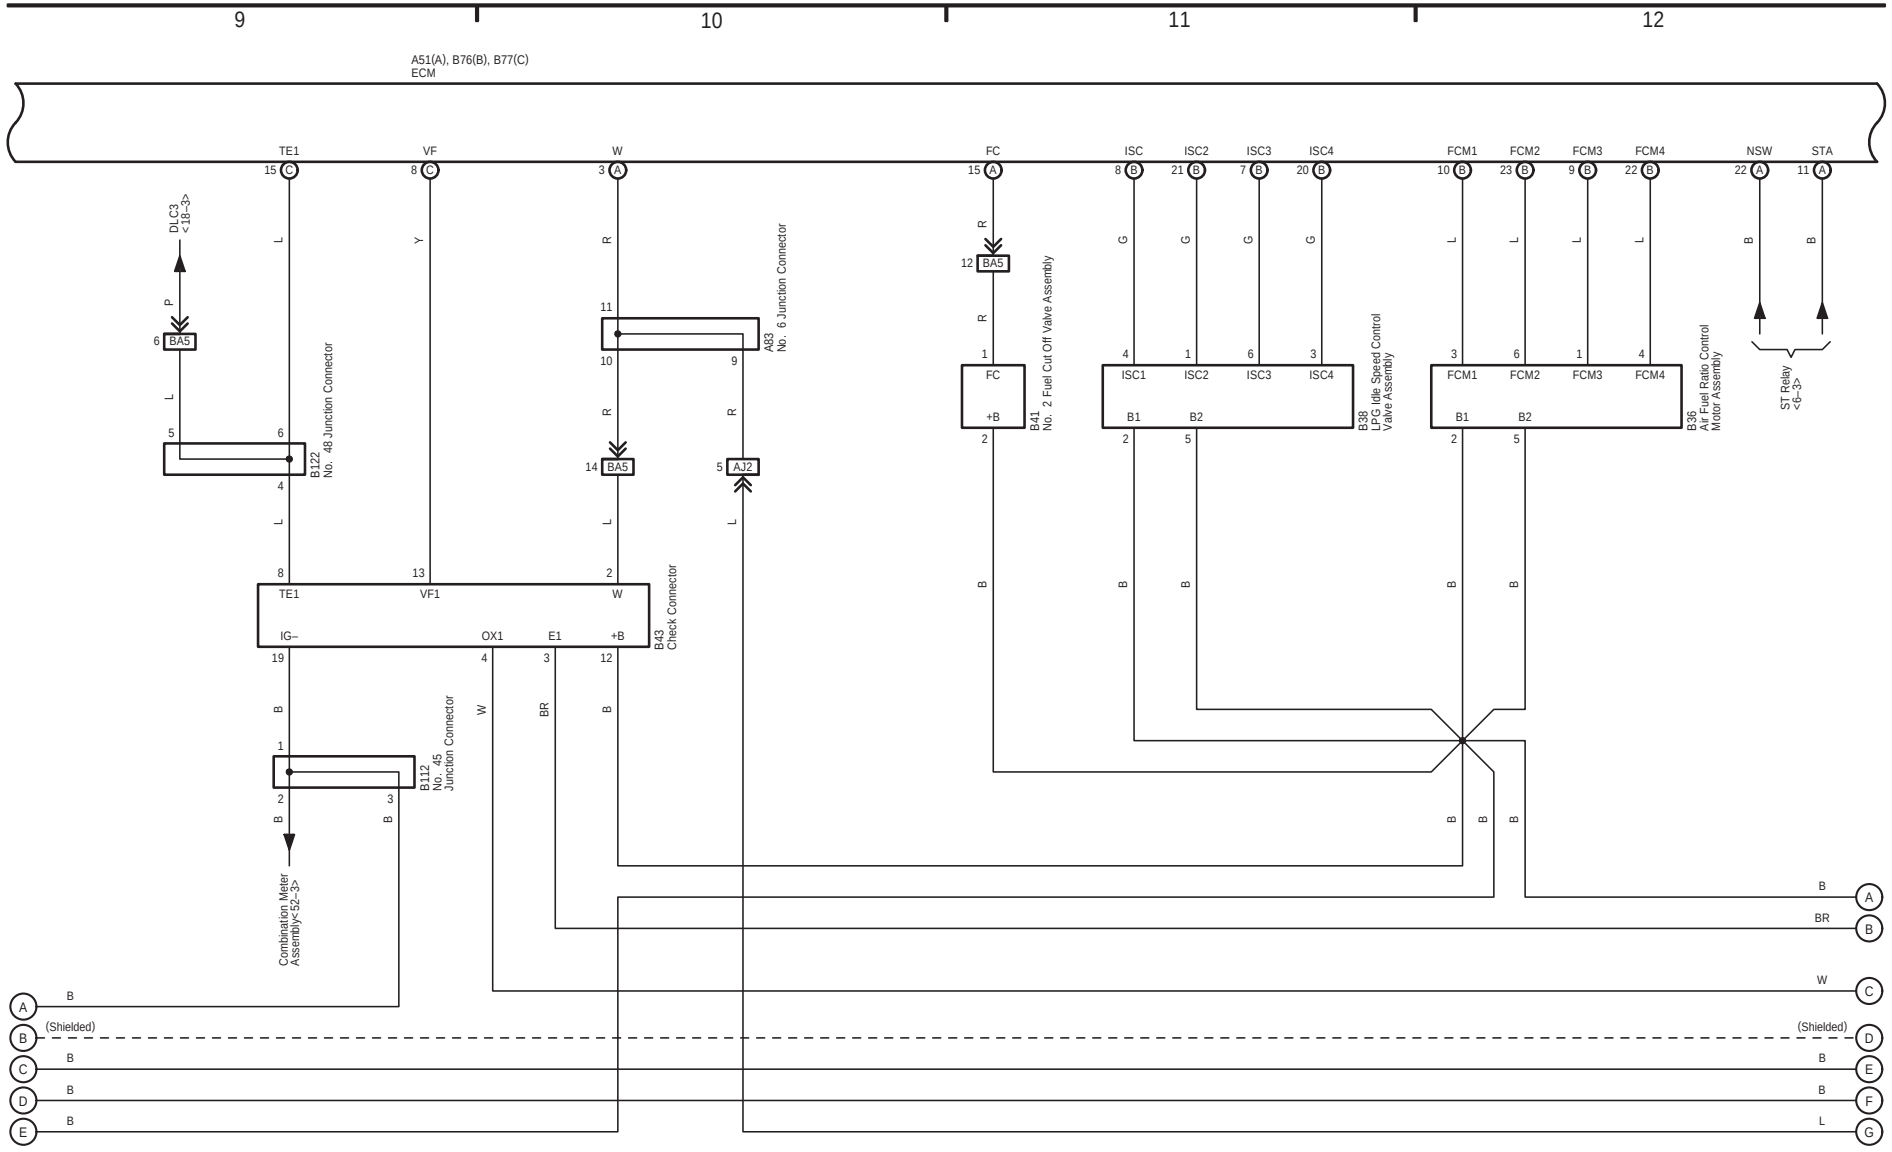

(Cont. next page)


Engine Control (1BZ–FPE)

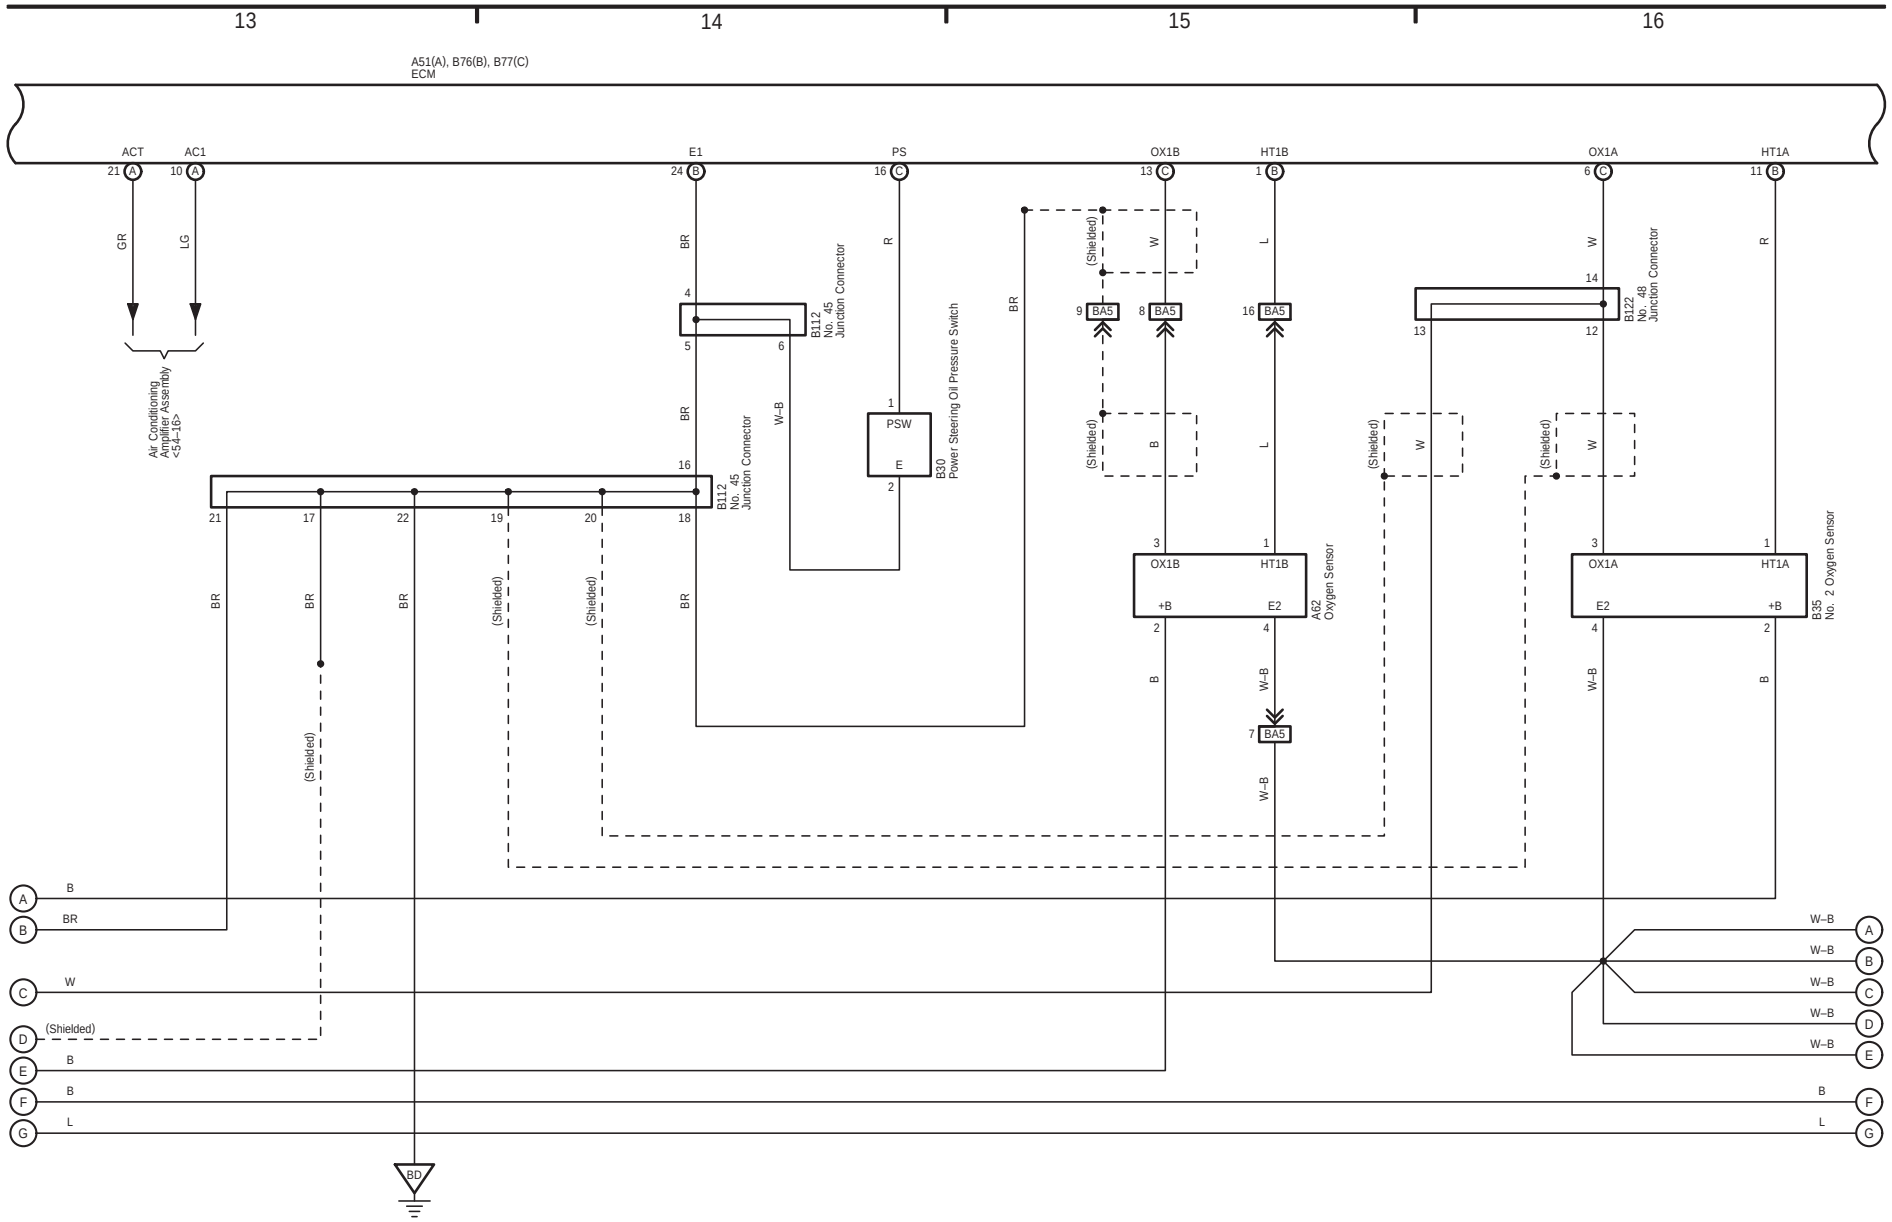


COASTER (EM0479E)

H

(Cont. next page)

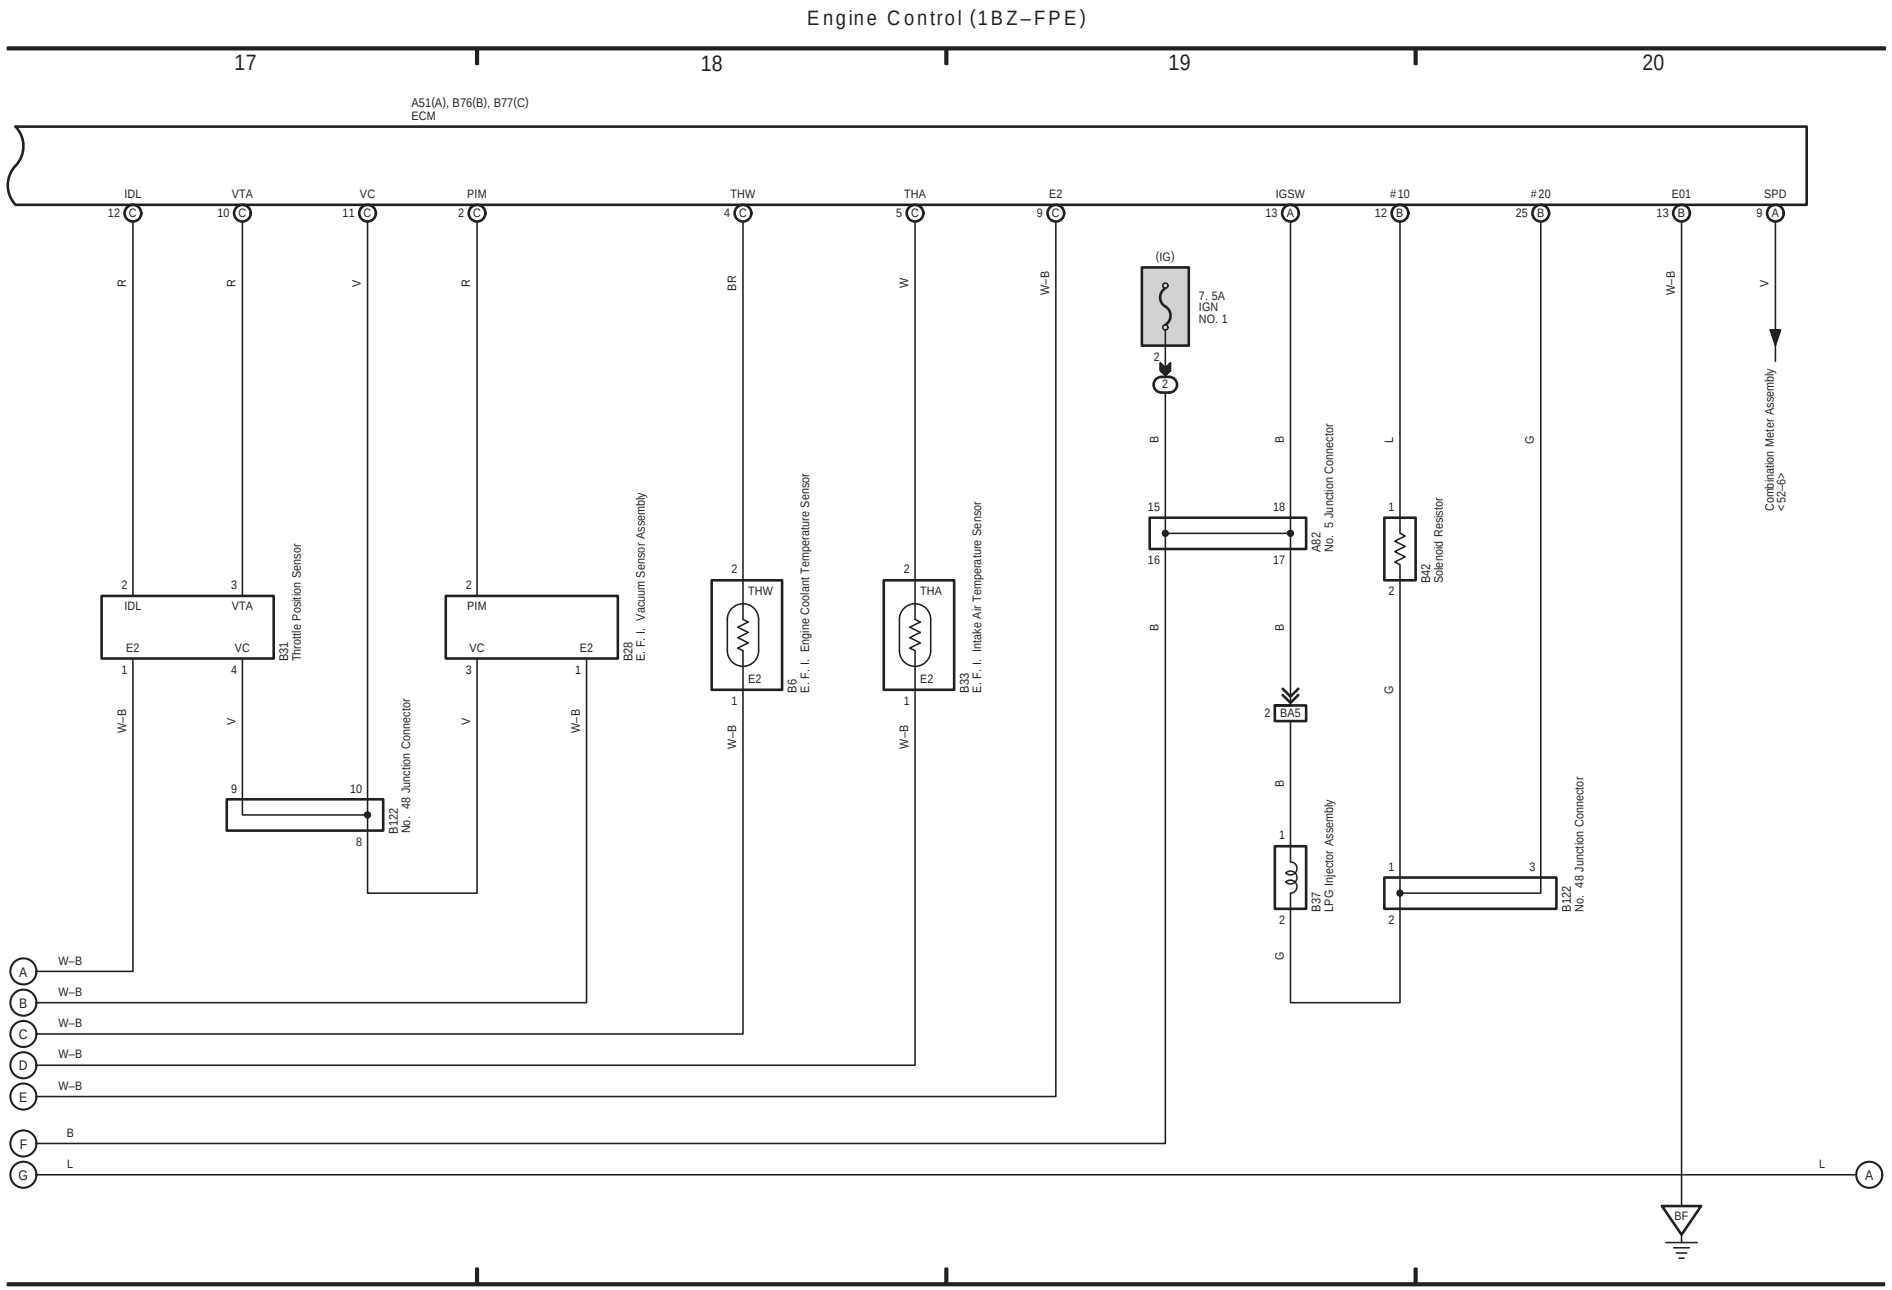

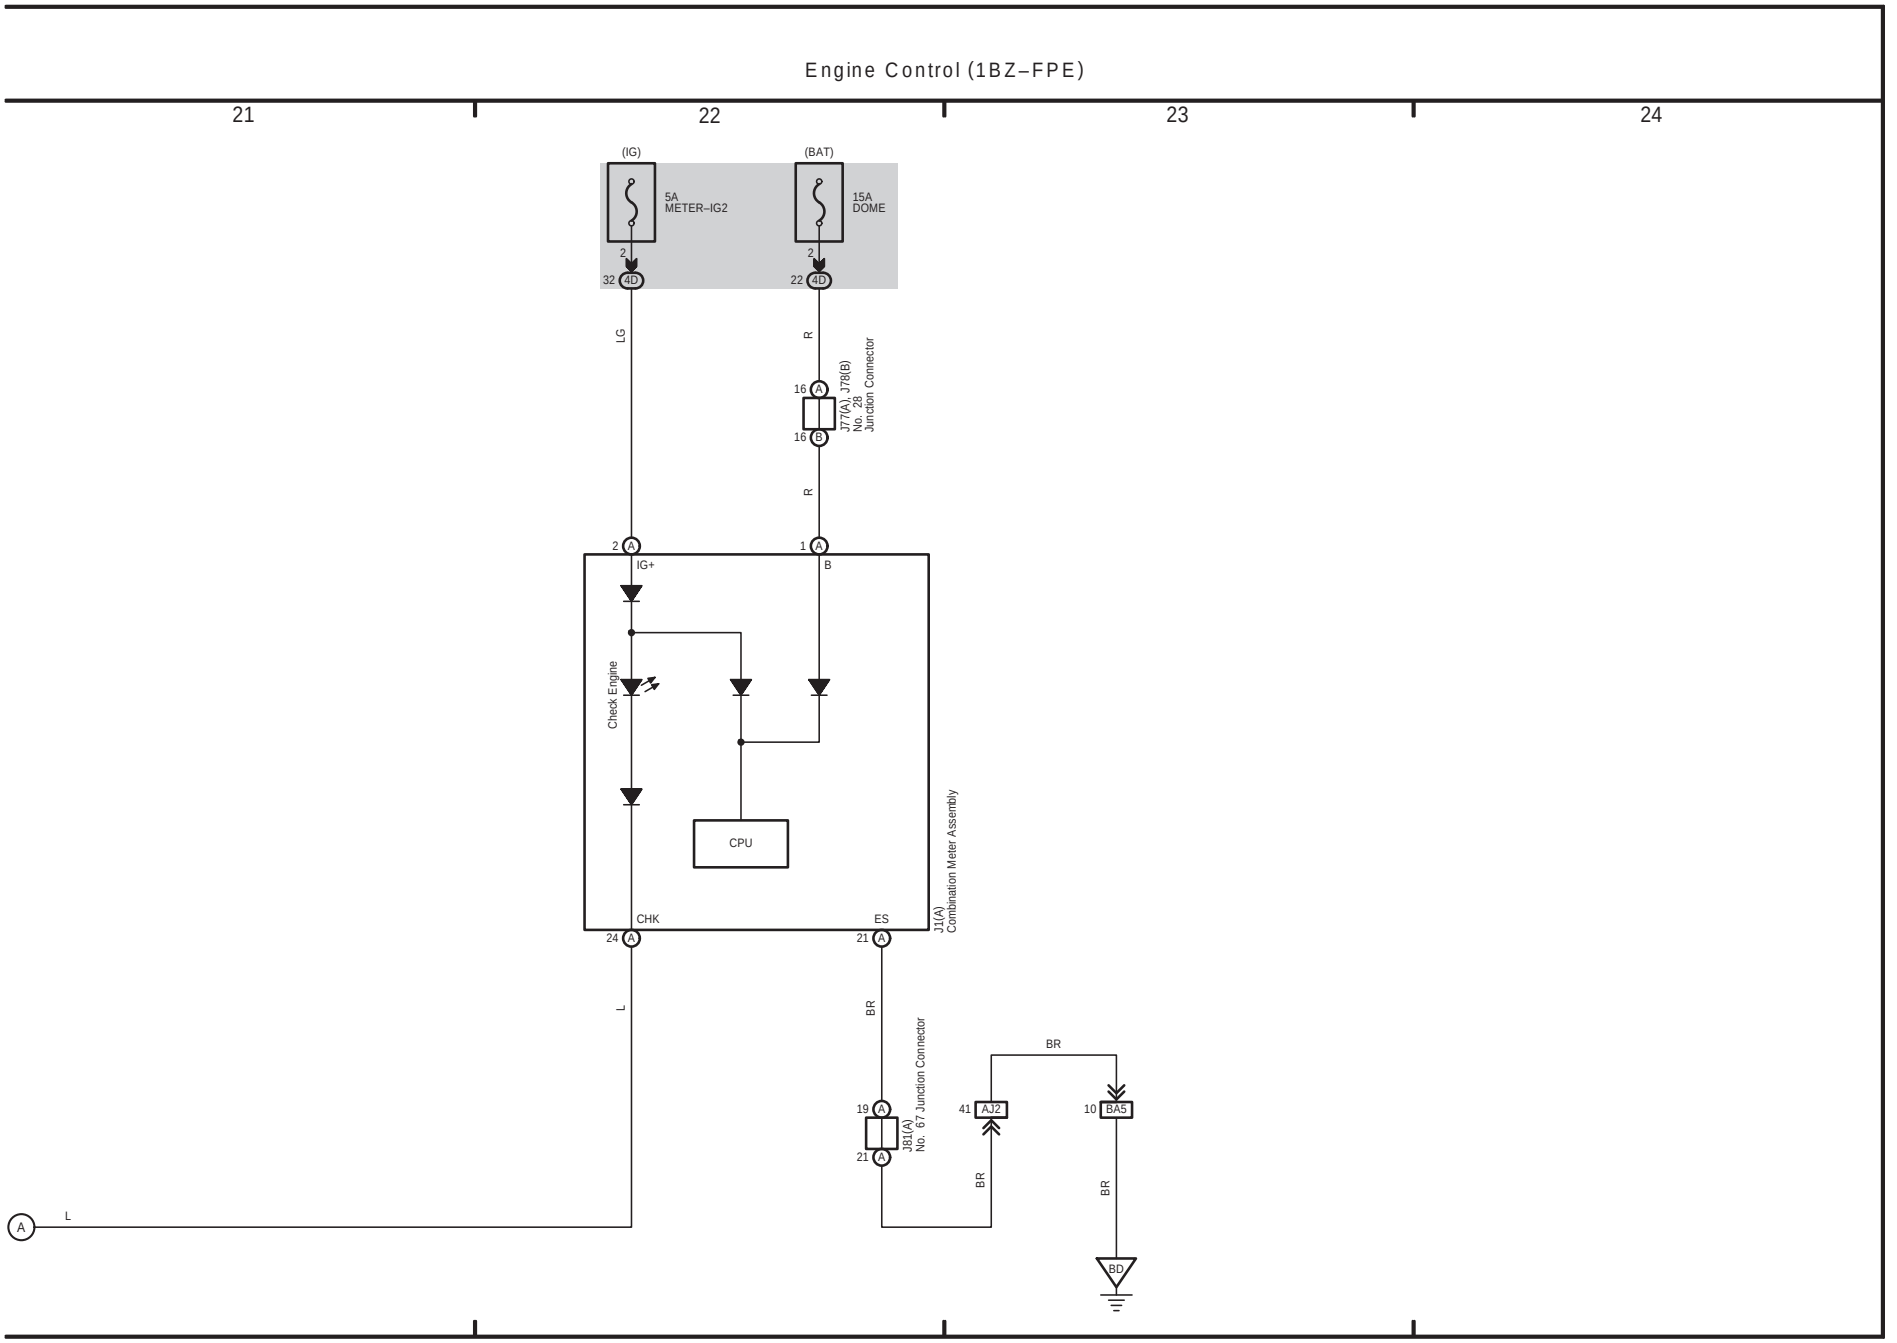
Engine Control (1BZ–FPE)
21
22
23
24
(IG)
(BAT)
5A
METER–IG2
15A
DOME
2
32 4D
2
22 4D
LG
R
16 A
16 B
J77(A), J78(B)
No. 28
Junction Connector
R
2 A
1 A
IG+
B
Check Engine
CPU
CHK
ES
24 A
21 A
J1(A)
Combination Meter Assembly
L
BR
BR
19 A
21 A
J81(A)
No. 67 Junction Connector
41 AJ2
10 BA5
BR
BR
BD
A
L