
Fuse Block No. 1 NEAR THE BATTERY (See Page 22)



Fuse Block No. 2 NEAR THE BATTERY (See Page 22)

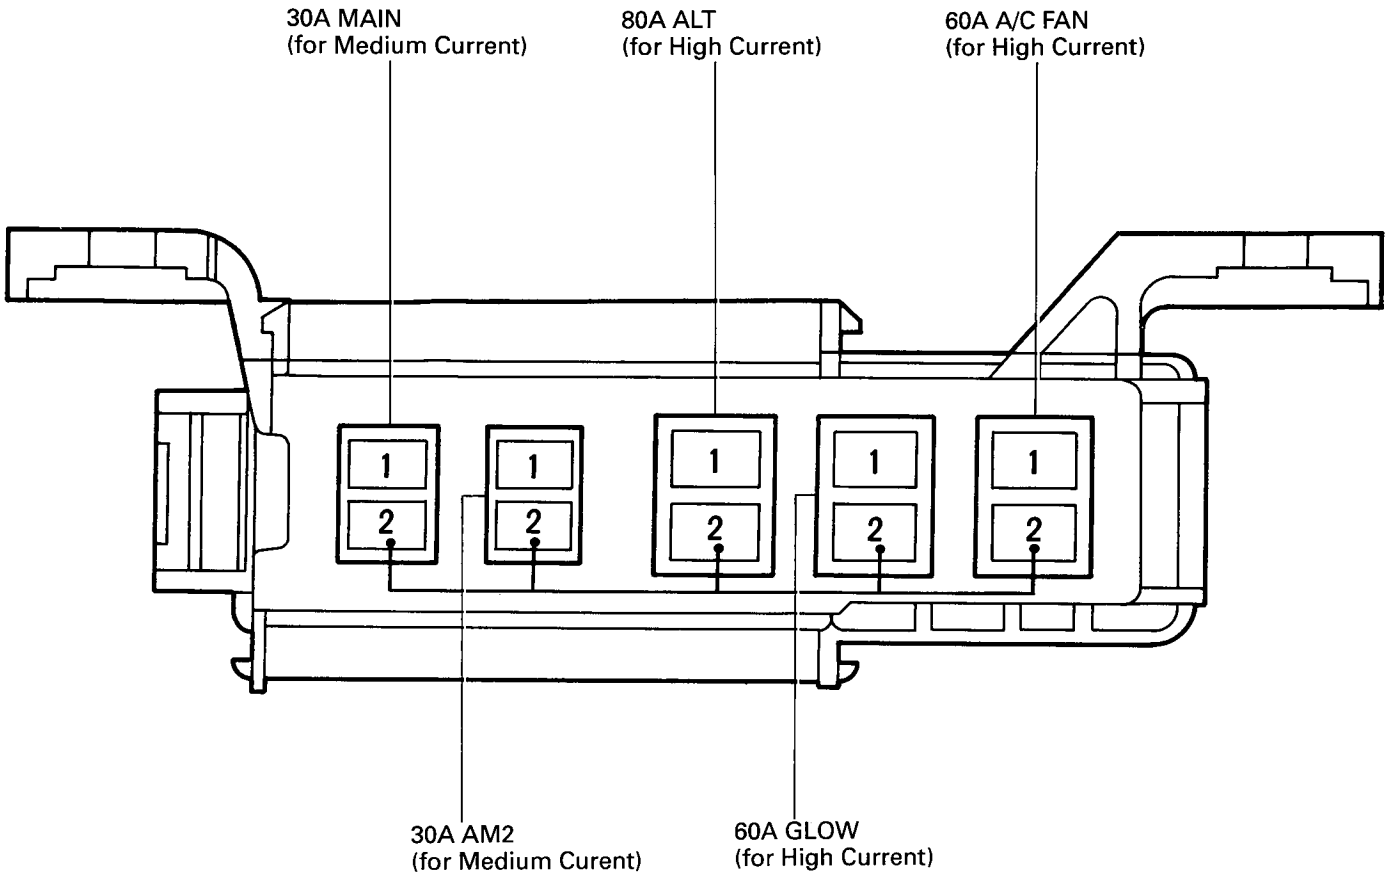