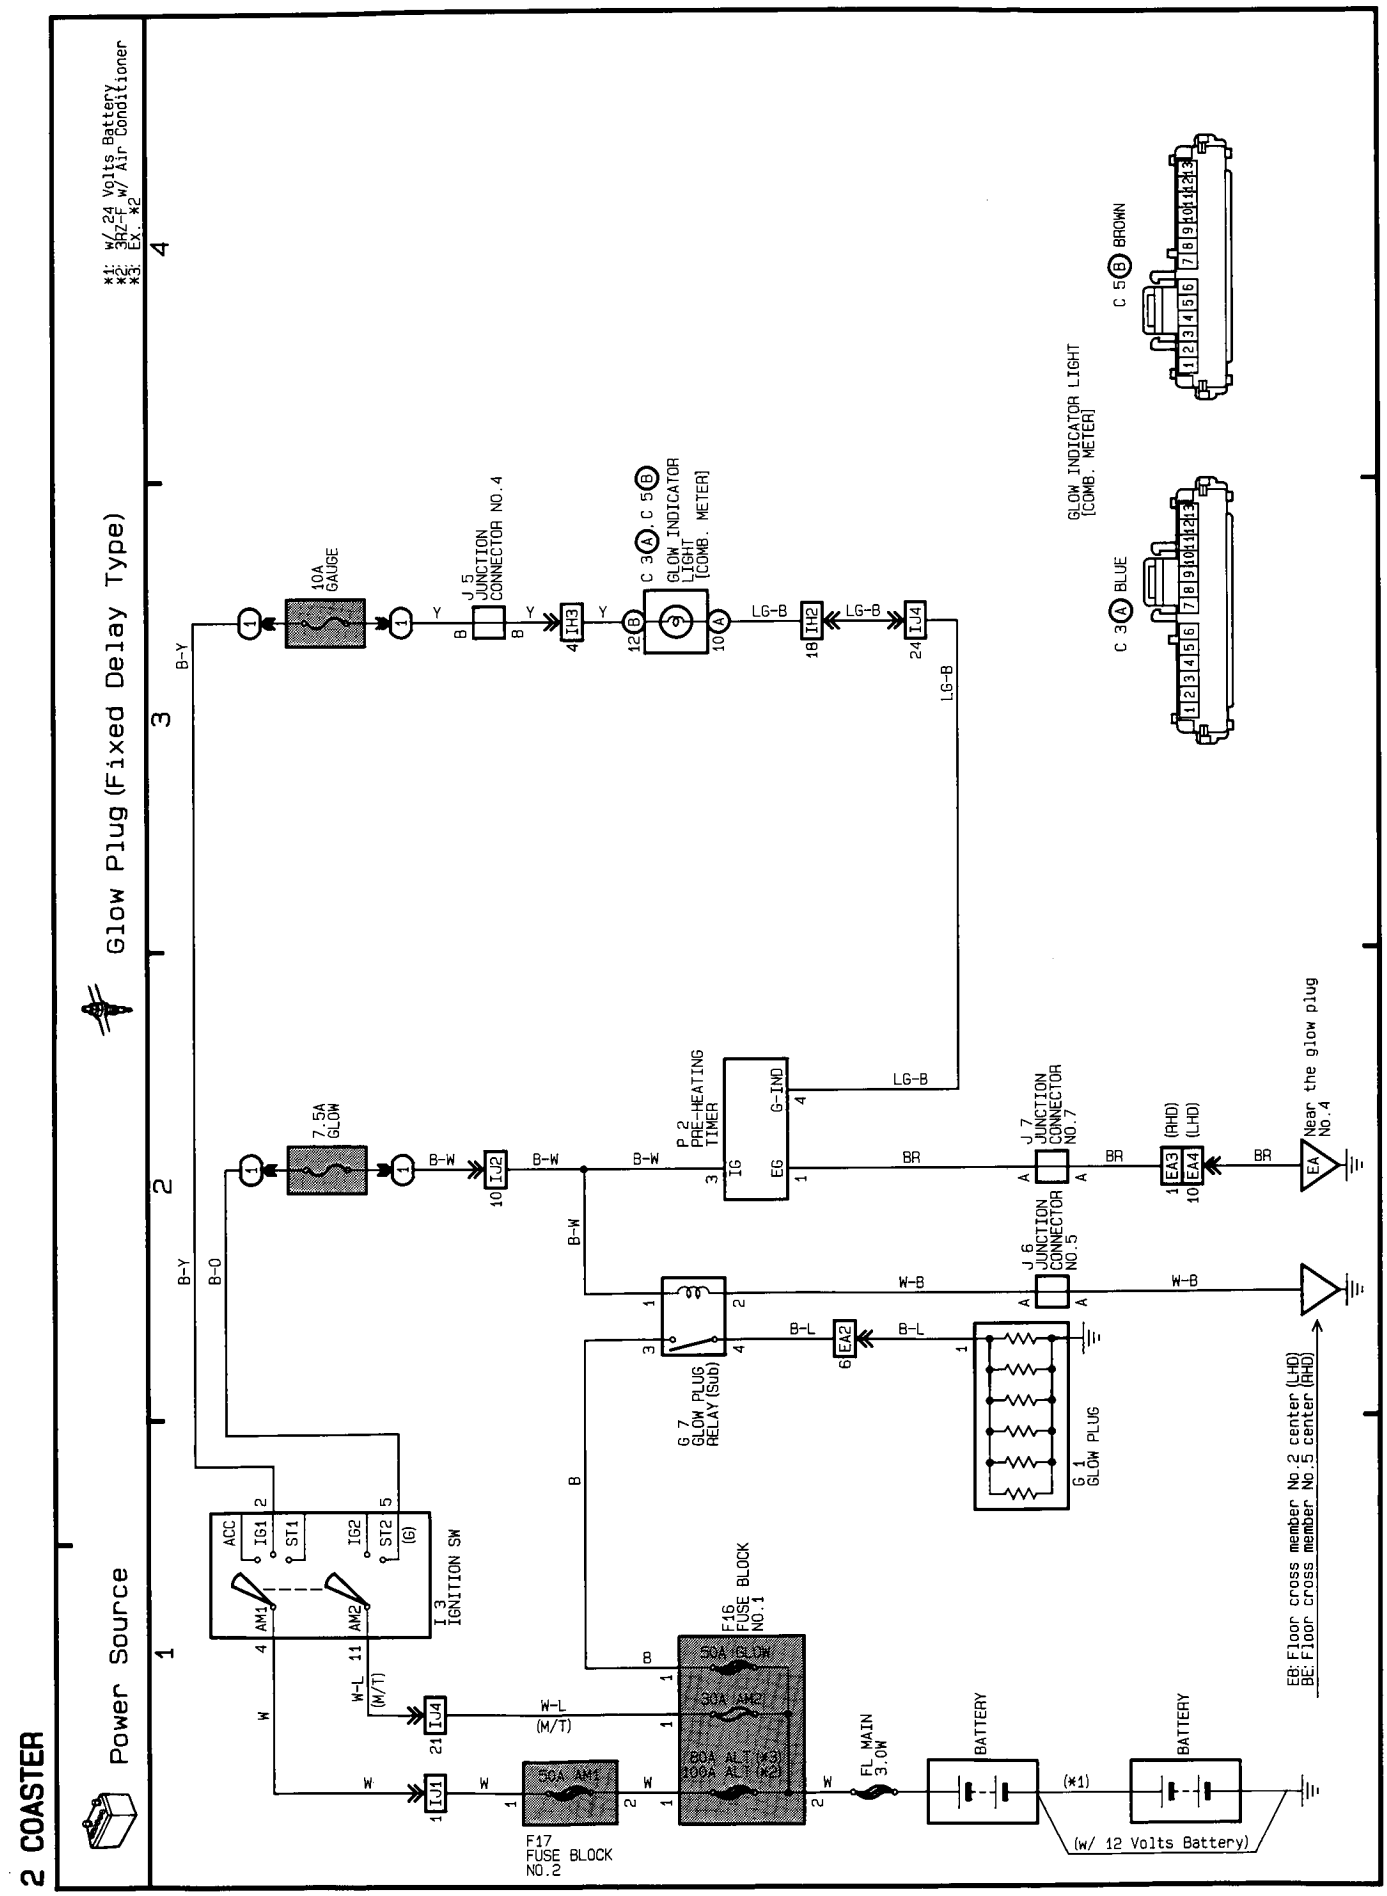

2 COASTER
Power Source
Glow Plug (Fixed Delay Type)
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ Air Conditioner
*3: Ex. *2
10A GAUGE
J 5 JUNCTION CONNECTOR NO.4
C 3 (A), C 5 (B) GLOW INDICATOR LIGHT [COMB. METER]
GLOW INDICATOR LIGHT [COMB. METER]
C 5 (B) BROWN
C 3 (A) BLUE
7.5A GLOW
P 2 PRE-HEATING TIMER
J 7 JUNCTION CONNECTOR NO.7
(RHD) (LHD)
Near the glow plug No.4
J 6 JUNCTION CONNECTOR NO.5
G 7 GLOW PLUG RELAY (Sub)
G 1 GLOW PLUG
I 3 IGNITION SW
ACC IG1 ST1 IG2 ST2 (G)
AM1 AM2
F16 FUSE BLOCK NO.1
50A GLOW
30A AM2
60A ALT (*3)
100A ALT (*2)
50A AM1
F17 FUSE BLOCK NO.2
FL MAIN 3.0W
BATTERY
BATTERY
(*1)
(w/ 12 Volts Battery)
EB: Floor cross member No.2 center (LHD)
BE: Floor cross member No.5 center (RHD)