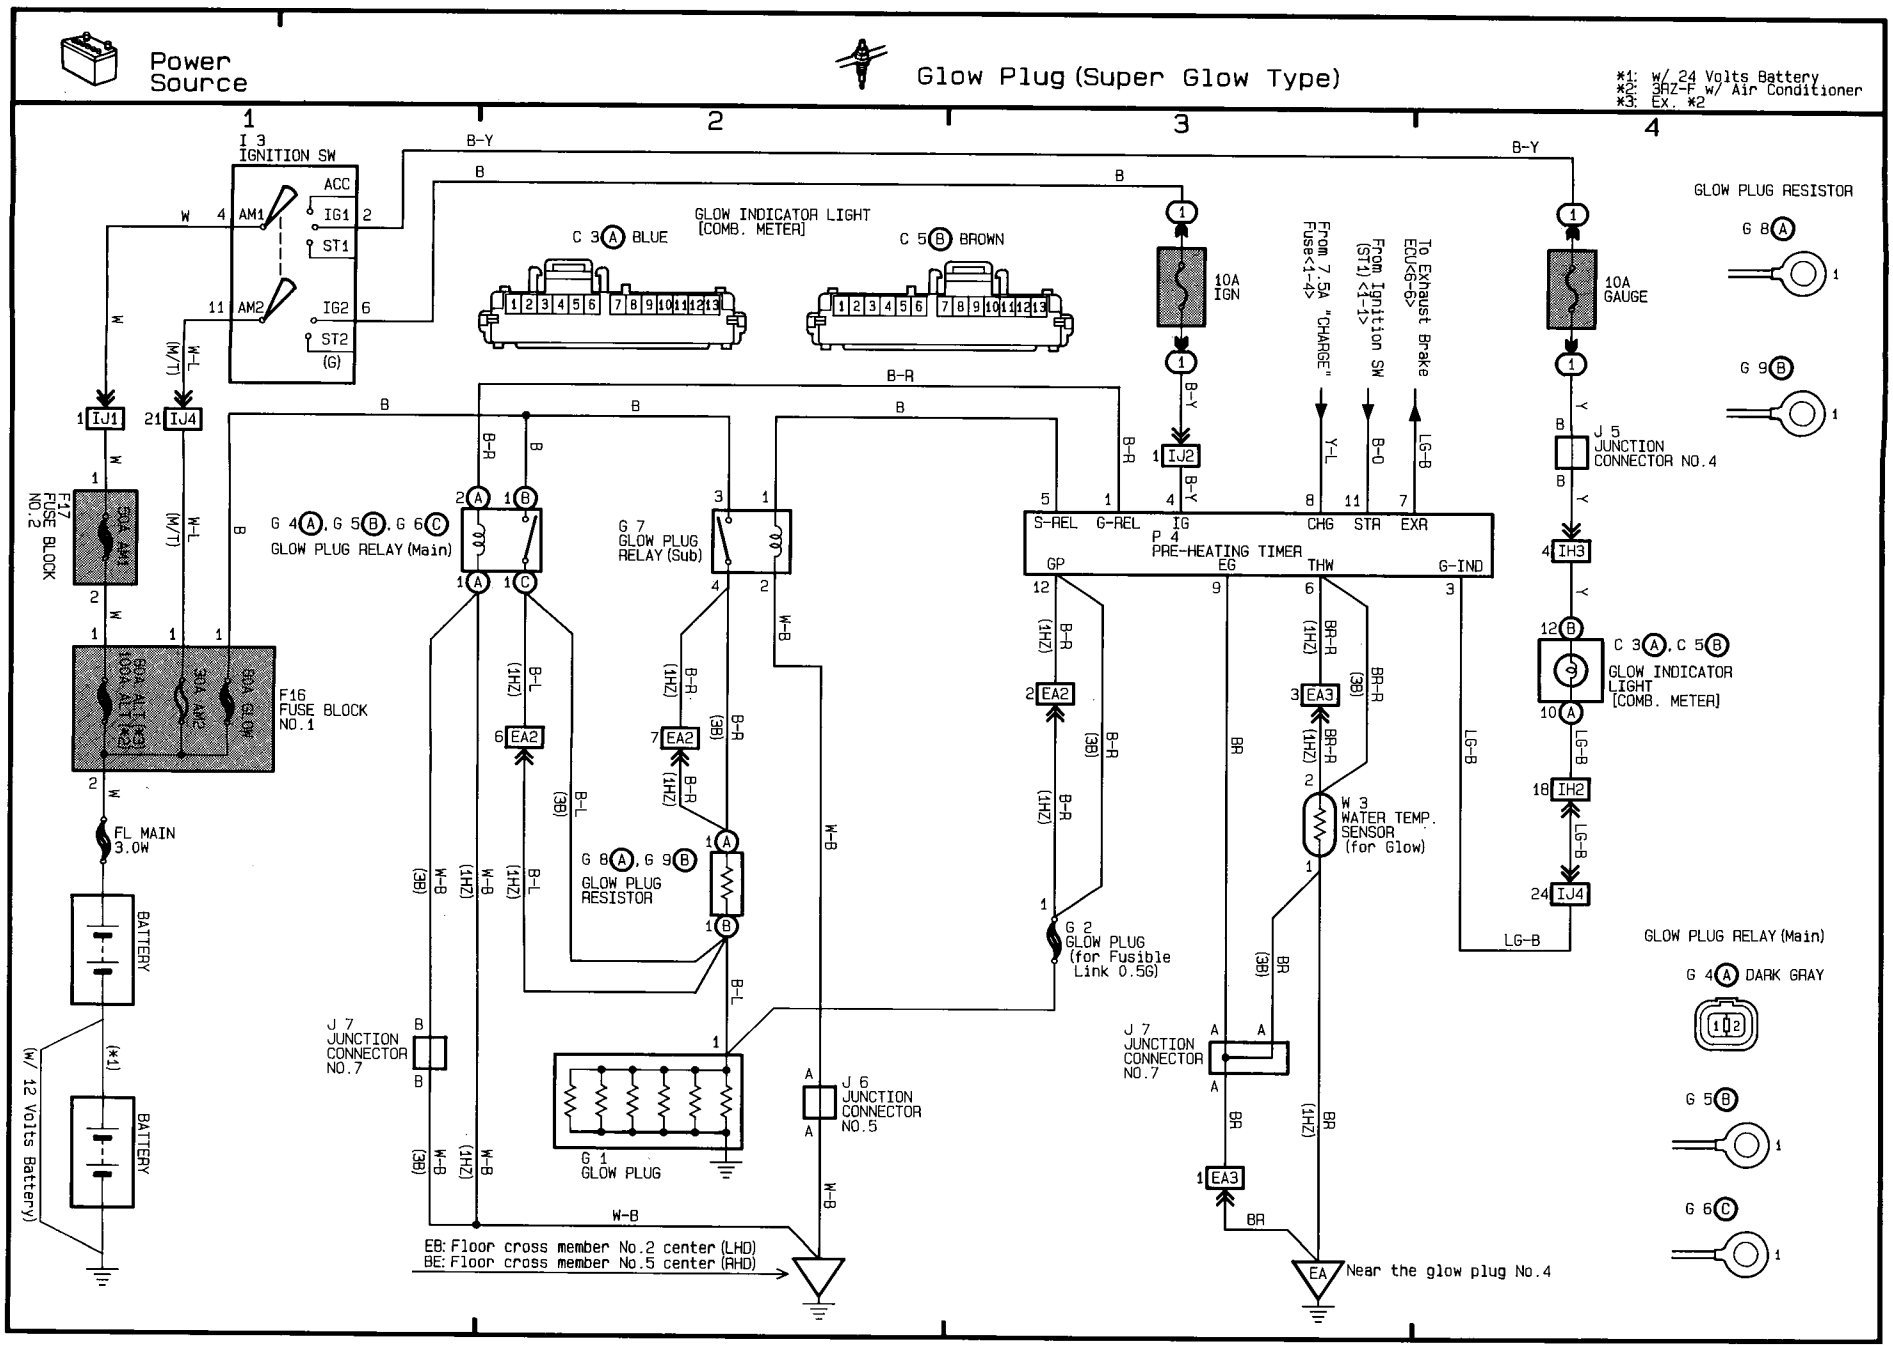

Power Source
Glow Plug (Super Glow Type)
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ Air Conditioner Ex. *2
*3: Ex. *2
I 3 IGNITION SW
ACC
IG1
ST1
IG2
ST2
(G)
AM1
AM2
GLOW INDICATOR LIGHT [COMB. METER]
C 3 (A) BLUE
C 5 (B) BROWN
10A IGN
10A GAUGE
From 7.5A "CHARGE" Fuse<1-4>
From Ignition SW (ST1) <1-1>
To Exhaust Brake ECU<6-6>
GLOW PLUG RESISTOR
G 8 (A)
G 9 (B)
J 5 JUNCTION CONNECTOR NO.4
C 3 (A), C 5 (B) GLOW INDICATOR LIGHT [COMB. METER]
IJ1
IJ2
IJ4
IH3
IH2
F17 FUSE BLOCK NO.2
50A AM1
F16 FUSE BLOCK NO.1
60A ALT (3B)
100A ALT (2)
30A AM2
60A GLOW
FL MAIN 3.0W
BATTERY
(*1)
(w/ 12 Volts Battery)
G 4 (A), G 5 (B), G 6 (C) GLOW PLUG RELAY (Main)
G 7 GLOW PLUG RELAY (Sub)
P 4 PRE-HEATING TIMER
S-REL
G-REL
IG
CHG
STA
EXA
GP
EG
THW
G-IND
EA2
EA3
G 8 (A), G 9 (B) GLOW PLUG RESISTOR
W 3 WATER TEMP. SENSOR (for Glow)
G 2 GLOW PLUG (for Fusible Link 0.5G)
G 1 GLOW PLUG
J 7 JUNCTION CONNECTOR NO.7
J 6 JUNCTION CONNECTOR NO.5
GLOW PLUG RELAY (Main)
G 4 (A) DARK GRAY
G 5 (B)
G 6 (C)
EB: Floor cross member No.2 center (LHD)
BE: Floor cross member No.5 center (RHD)
EA Near the glow plug No.4