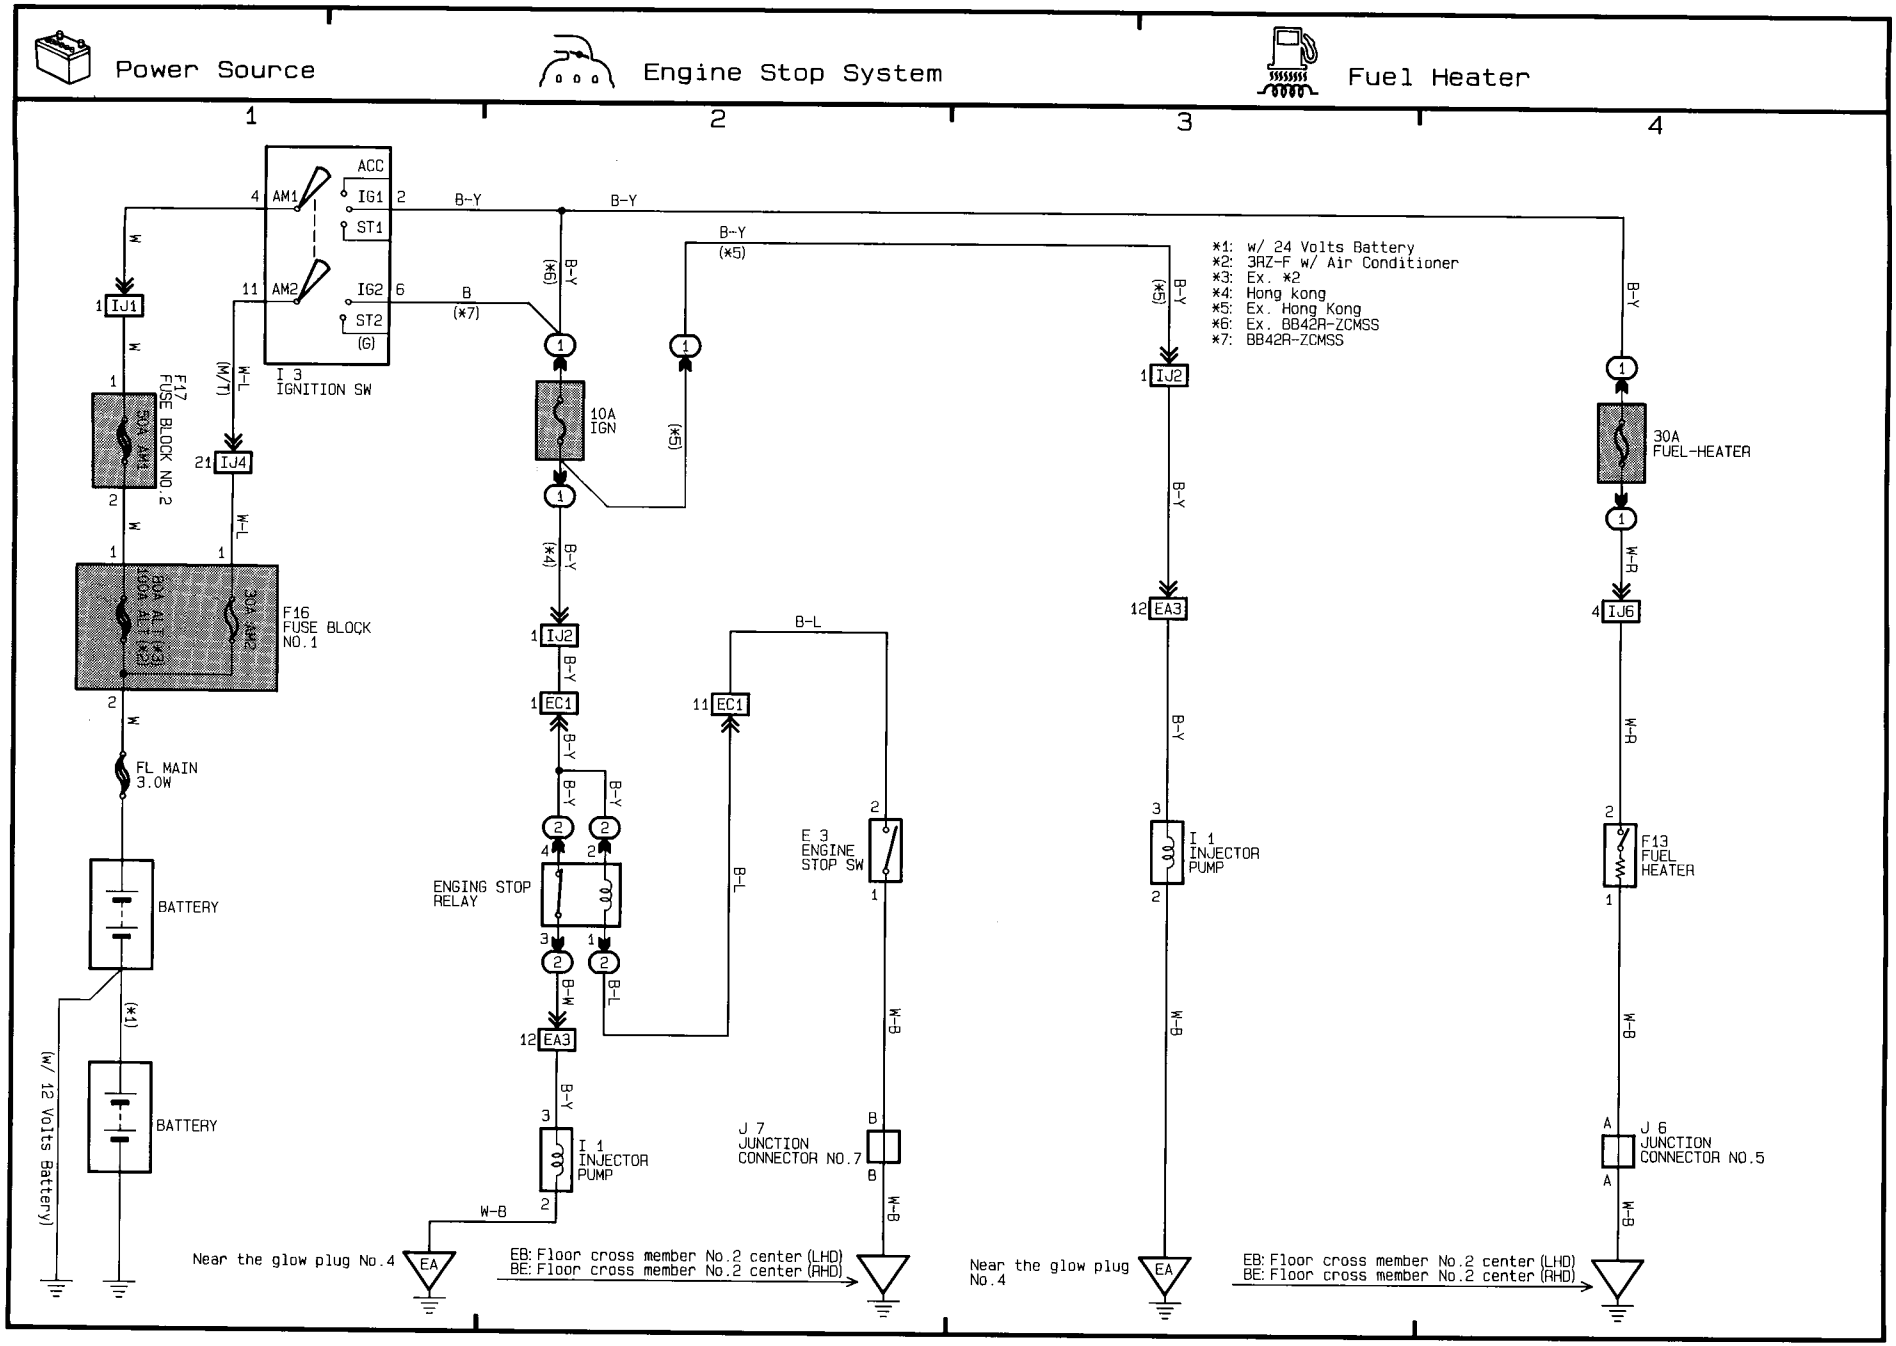

Power Source
Engine Stop System
Fuel Heater
1
2
3
4
ACC
IG1
ST1
IG2
ST2
(G)
AM1
AM2
I 3
IGNITION SW
B-Y
B
(*7)
(*6)
(*5)
(*4)
(*3)
10A
IGN
1IJ1
21IJ4
F17
FUSE BLOCK NO.2
50A AM1
F16
FUSE BLOCK
NO.1
20A ALT (*3)
150A ALT (*2)
30A AM2
FL MAIN
3.0W
BATTERY
(*1)
(w/ 12 Volts Battery)
ENGING STOP
RELAY
1IJ2
1EC1
11EC1
12EA3
E 3
ENGINE
STOP SW
I 1
INJECTOR
PUMP
J 7
JUNCTION
CONNECTOR NO.7
W-B
B-L
Near the glow plug No.4
EA
EB: Floor cross member No.2 center (LHD)
BE: Floor cross member No.2 center (RHD)
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ Air Conditioner
*3: Ex. *2
*4: Hong kong
*5: Ex. Hong Kong
*6: Ex. BB42R-ZCMSS
*7: BB42R-ZCMSS
30A
FUEL-HEATER
4IJ6
W-R
F13
FUEL
HEATER
J 6
JUNCTION
CONNECTOR NO.5