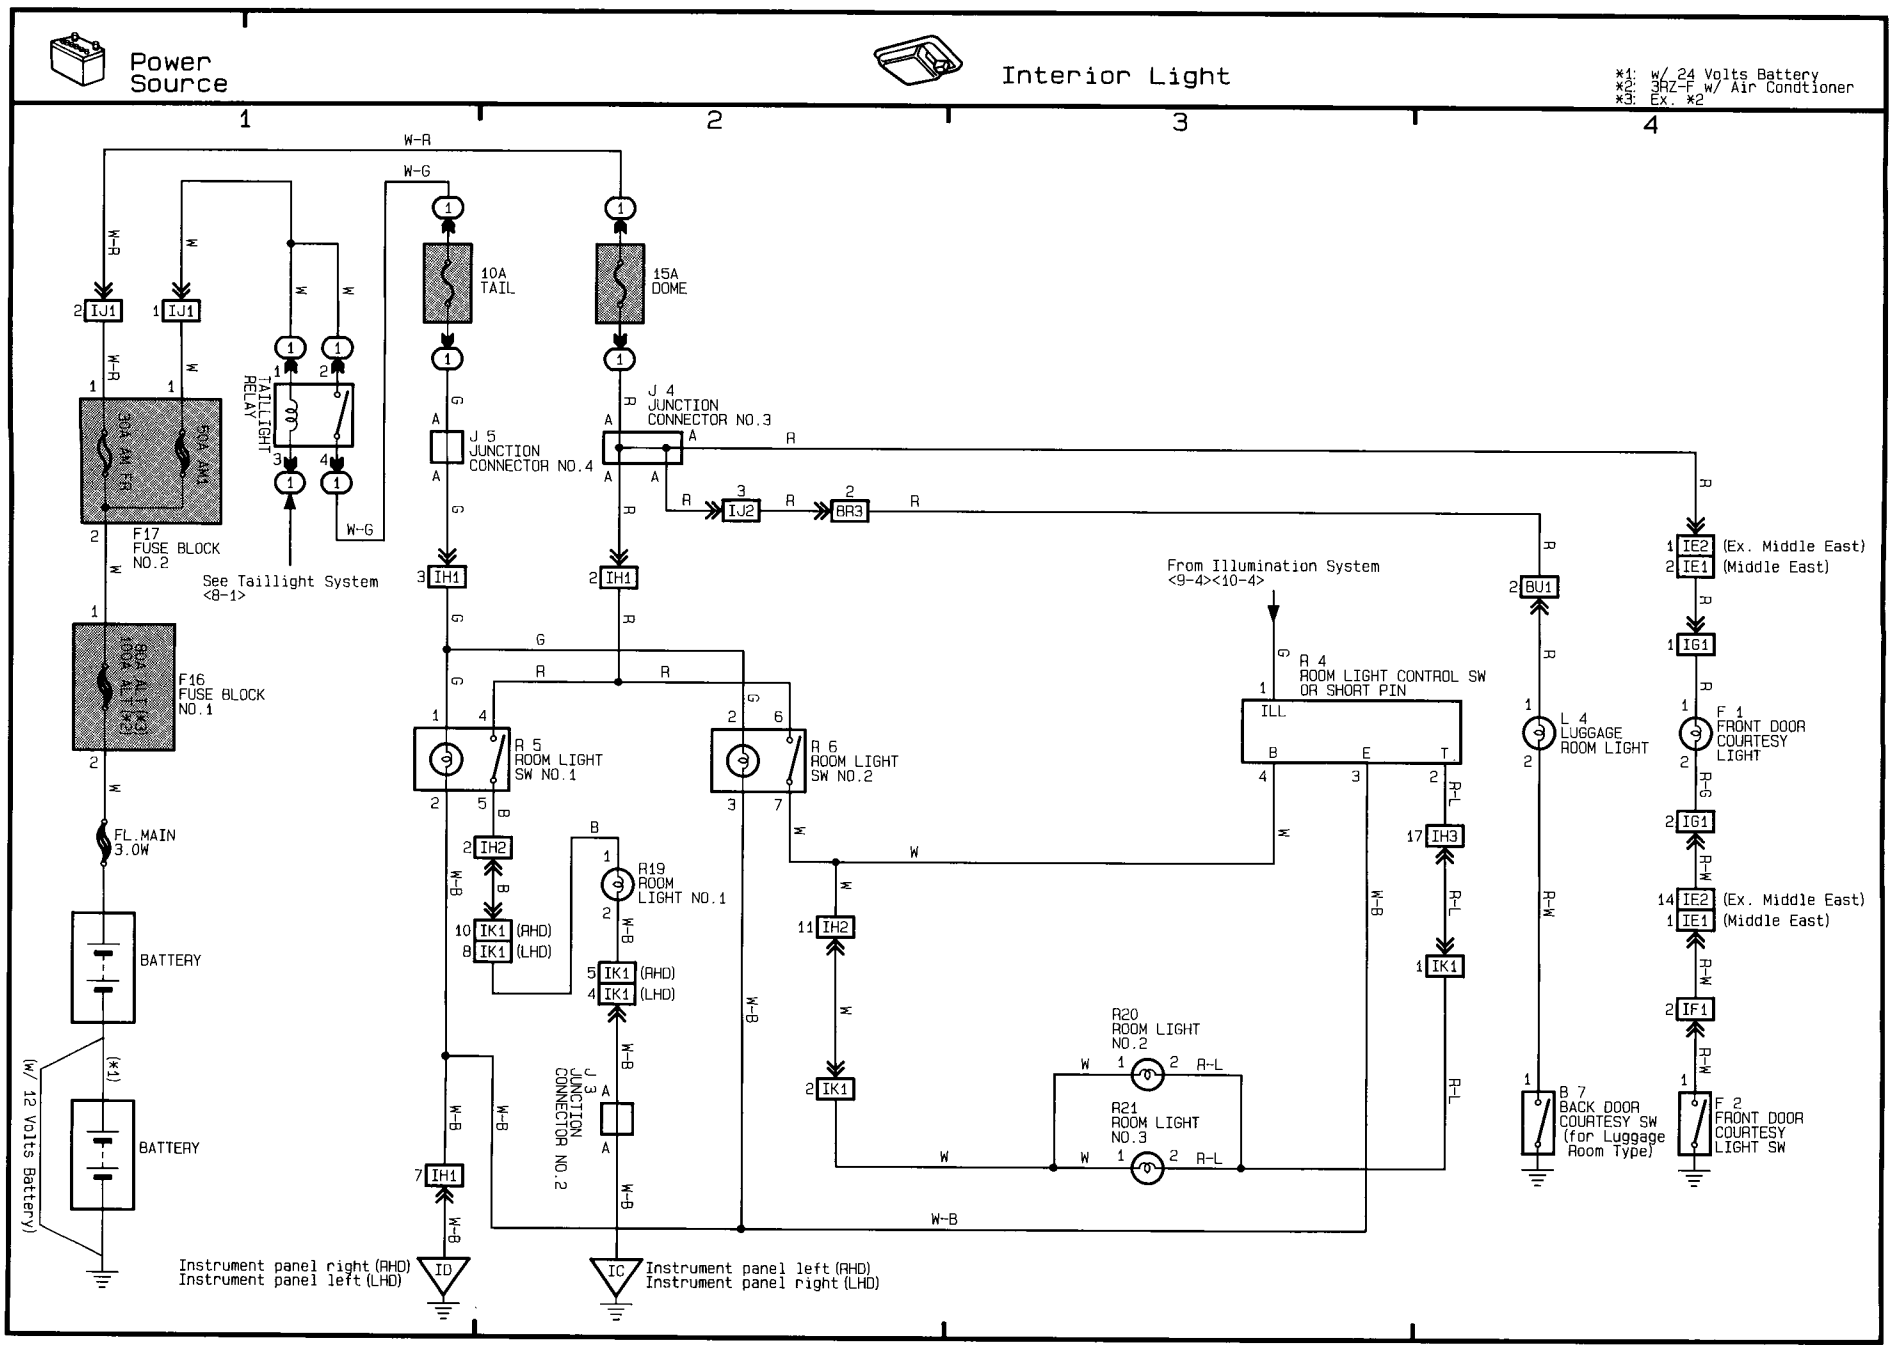

Power Source
Interior Light
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ Air Condtioner
*3: Ex. *2
1
2
3
4
W-R
W-G
10A TAIL
15A DOME
J 4 JUNCTION CONNECTOR NO.3
J 5 JUNCTION CONNECTOR NO.4
TAILLIGHT RELAY
30A AM1
F17 FUSE BLOCK NO.2
See Taillight System <8-1>
F16 FUSE BLOCK NO.1
FL MAIN 3.0W
BATTERY
(*1)
(w/ 12 Volts Battery)
From Illumination System <9-4><10-4>
R 4 ROOM LIGHT CONTROL SW OR SHORT PIN
ILL
R 5 ROOM LIGHT SW NO.1
R 6 ROOM LIGHT SW NO.2
R19 ROOM LIGHT NO.1
R20 ROOM LIGHT NO.2
R21 ROOM LIGHT NO.3
J 3 JUNCTION CONNECTOR NO.2
L 4 LUGGAGE ROOM LIGHT
B 7 BACK DOOR COURTESY SW (for Luggage Room Type)
F 1 FRONT DOOR COURTESY LIGHT
F 2 FRONT DOOR COURTESY LIGHT SW
(Ex. Middle East)
(Middle East)
Instrument panel right (RHD)
Instrument panel left (LHD)
Instrument panel left (RHD)
Instrument panel right (LHD)