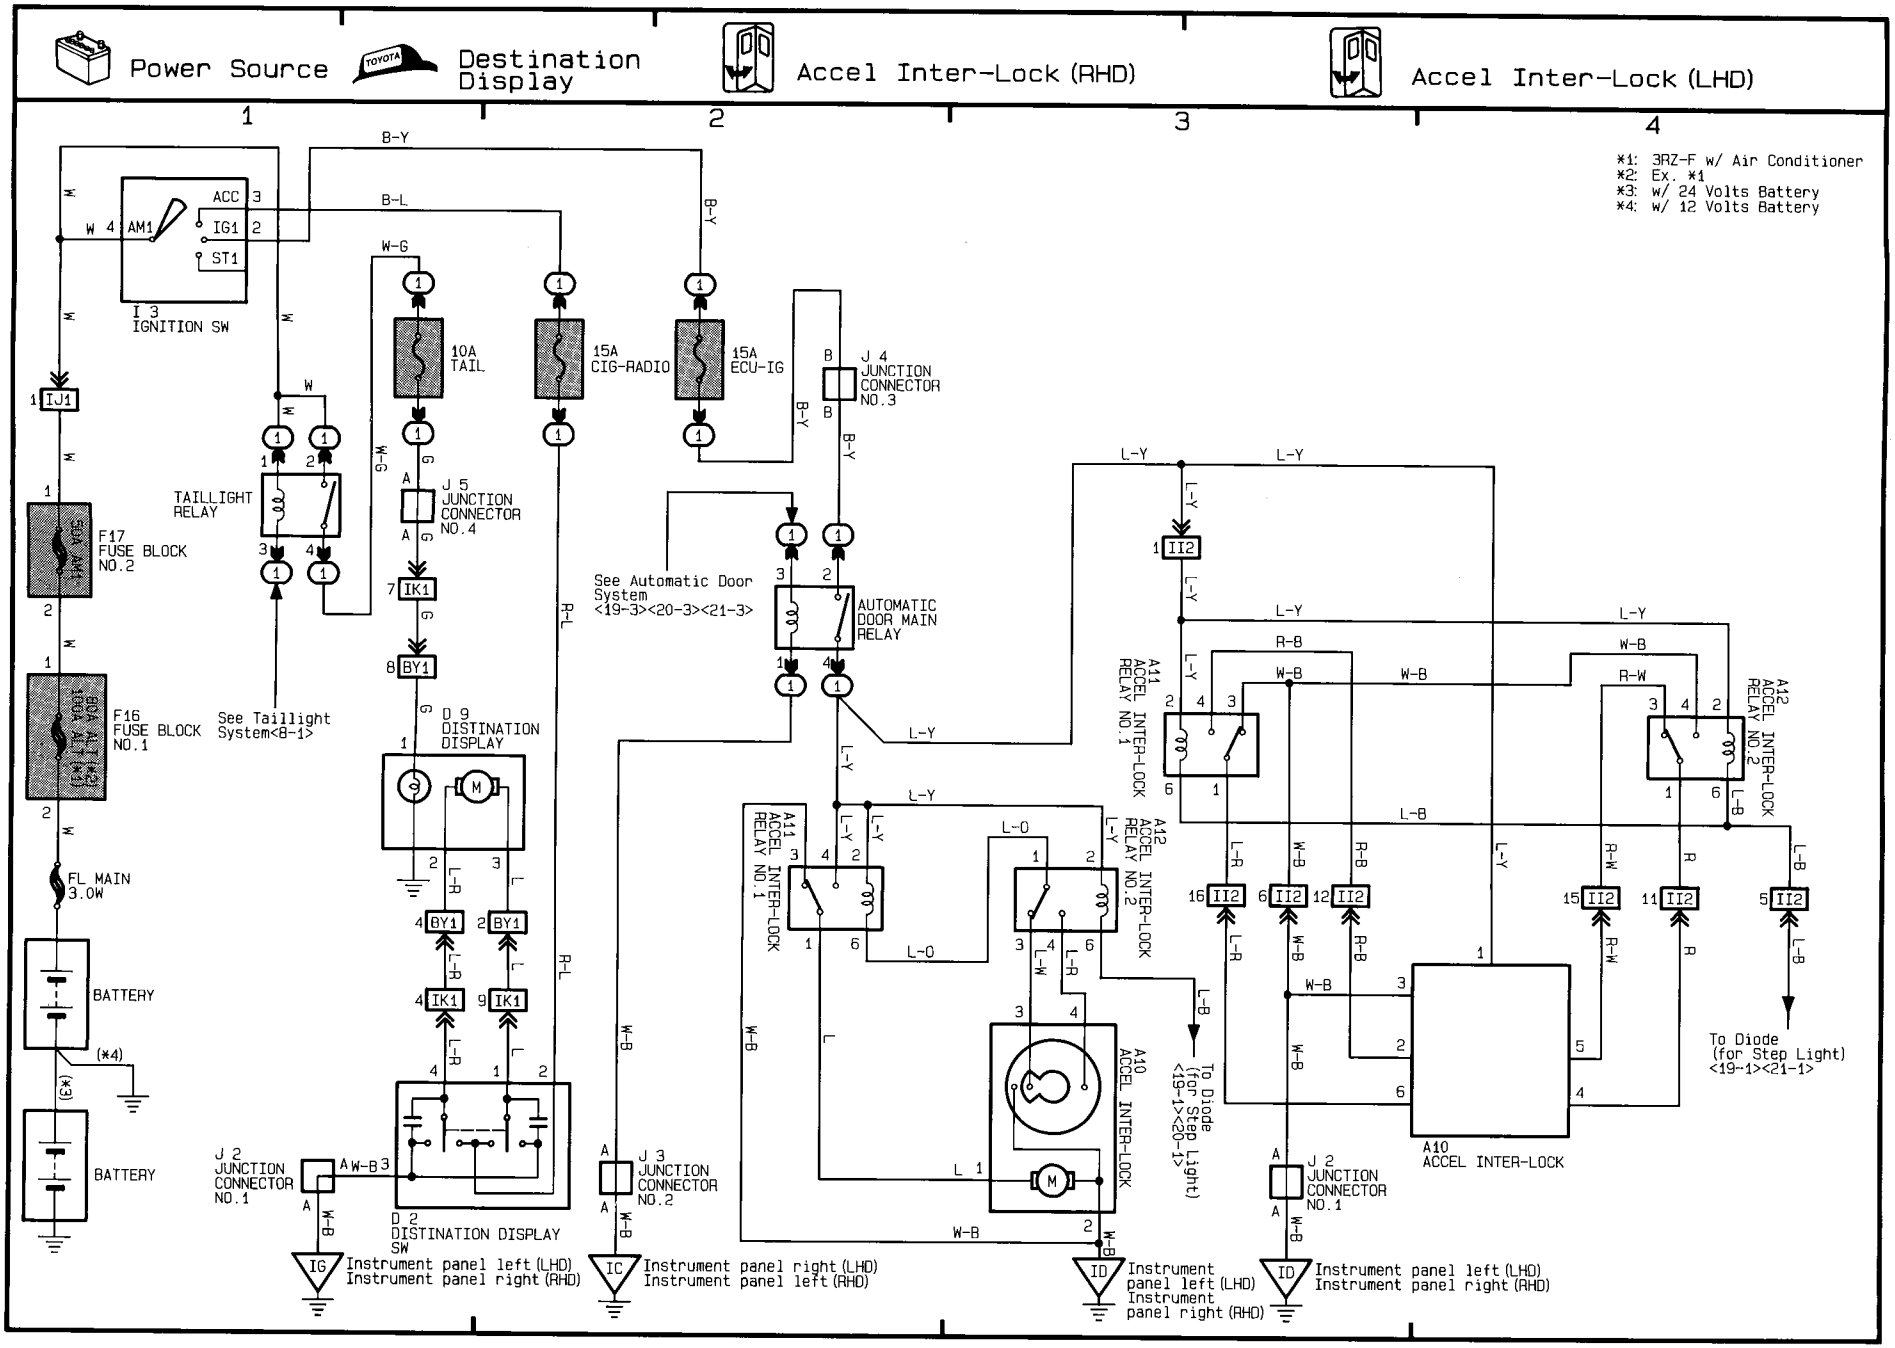

Power Source
Destination Display
Accel Inter-Lock (RHD)
Accel Inter-Lock (LHD)
1
2
3
4
*1: 3RZ-F w/ Air Conditioner
*2: Ex. *1
*3: w/ 24 Volts Battery
*4: w/ 12 Volts Battery
I 3 IGNITION SW
ACC
IG1
ST1
AM1
10A TAIL
15A CIG-RADIO
15A ECU-IG
J 4 JUNCTION CONNECTOR NO.3
J 5 JUNCTION CONNECTOR NO.4
TAILLIGHT RELAY
See Taillight System<8-1>
See Automatic Door System <19-3><20-3><21-3>
AUTOMATIC DOOR MAIN RELAY
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
FL MAIN 3.0W
BATTERY
D 9 DISTINATION DISPLAY
D 2 DISTINATION DISPLAY SW
J 2 JUNCTION CONNECTOR NO.1
J 3 JUNCTION CONNECTOR NO.2
A11 ACCEL INTER-LOCK RELAY NO.1
A12 ACCEL INTER-LOCK RELAY NO.2
A10 ACCEL INTER-LOCK
To Diode (for Step Light) <19-1><21-1>
To Diode (for Step Light) <19-1><20-1>
IG Instrument panel left (LHD) Instrument panel right (RHD)
IC Instrument panel right (LHD) Instrument panel left (RHD)
ID Instrument panel left (LHD) Instrument panel right (RHD)
ID Instrument panel left (LHD) Instrument panel right (RHD)