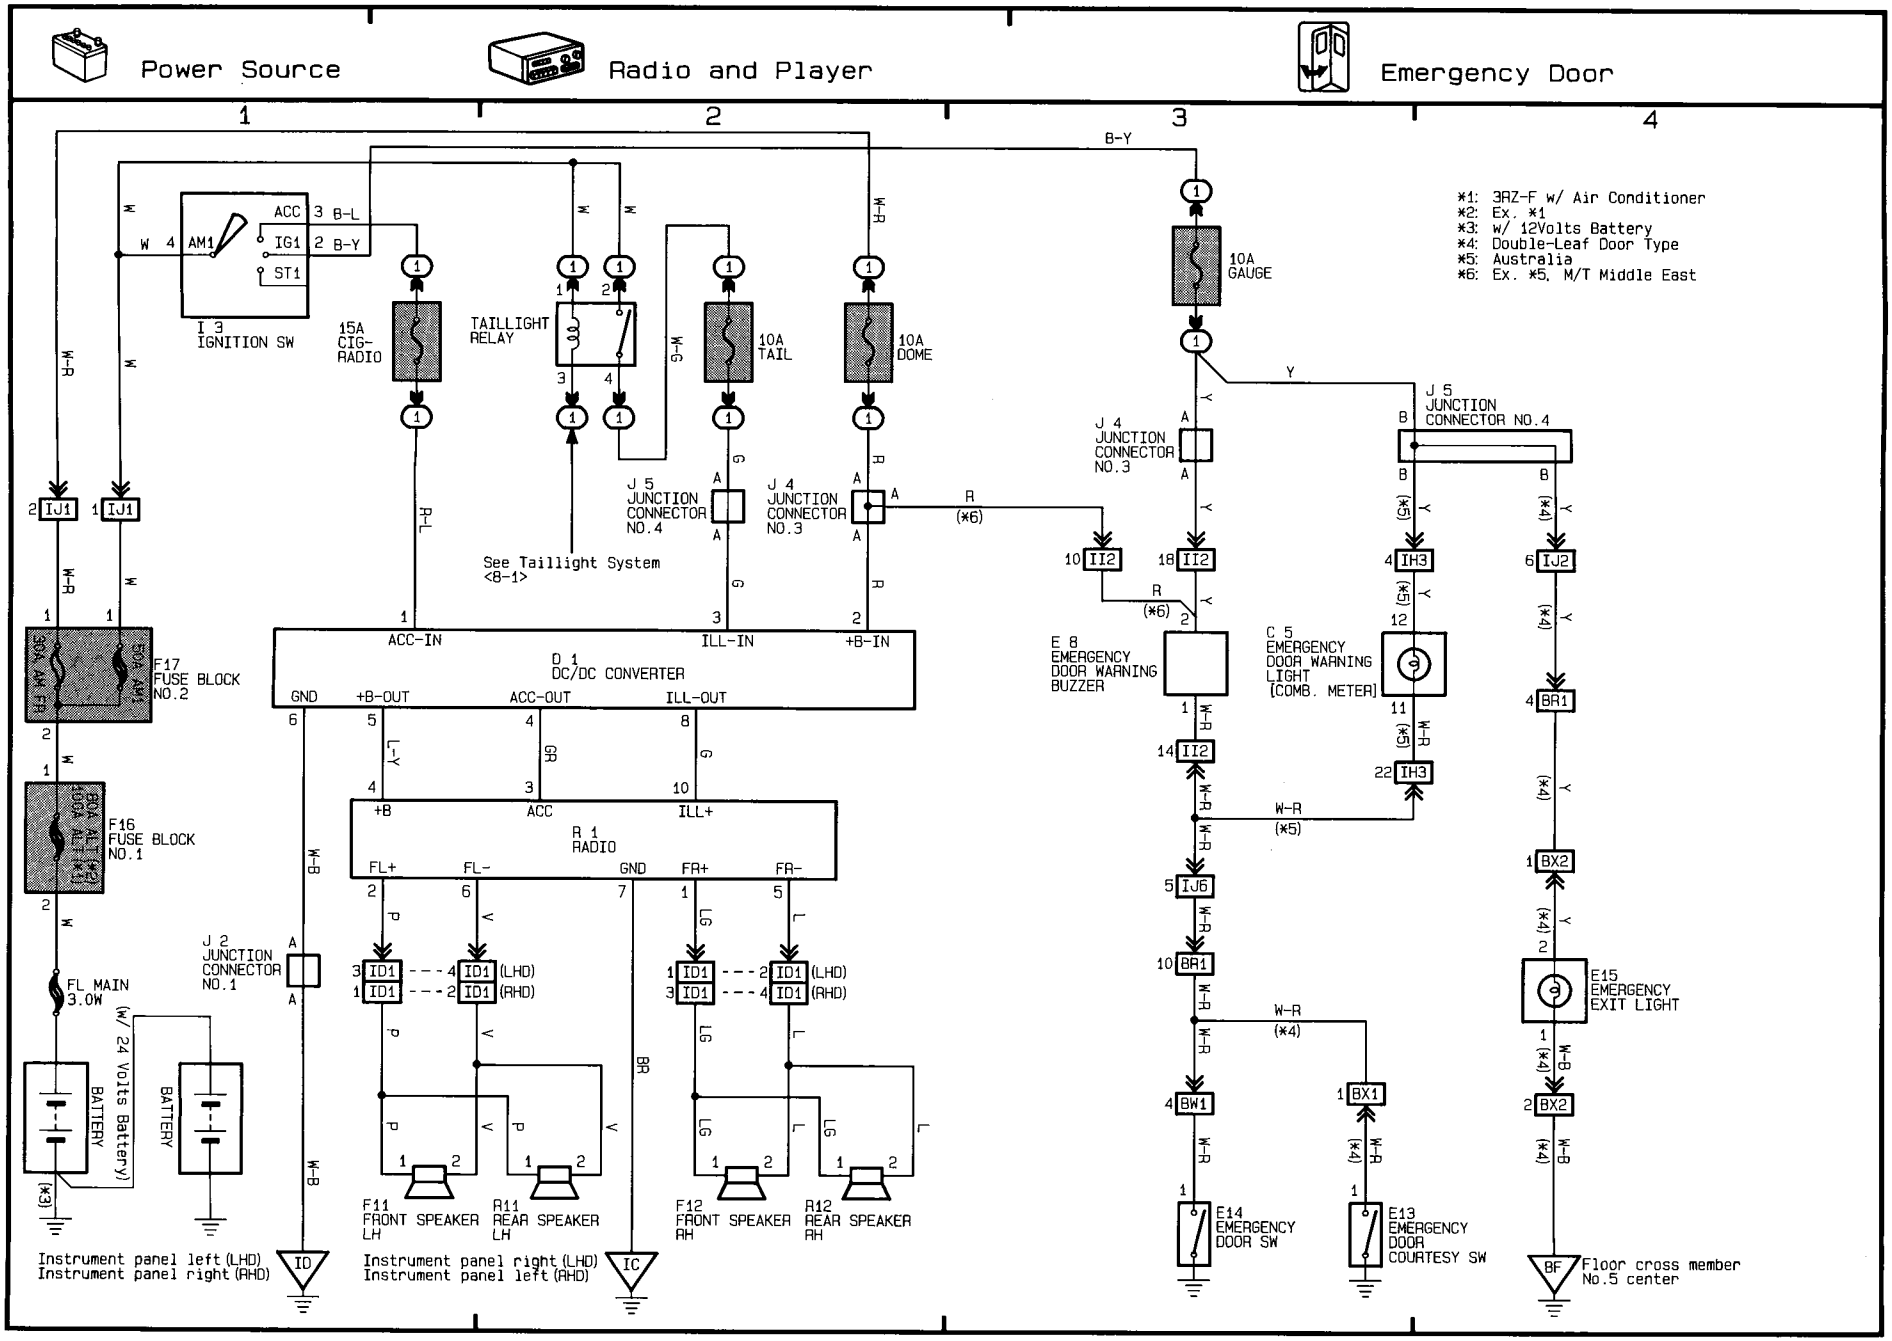

Power Source
Radio and Player
Emergency Door
1
2
3
4
*1: 3RZ-F w/ Air Conditioner
*2: Ex. *1
*3: w/ 12Volts Battery
*4: Double-Leaf Door Type
*5: Australia
*6: Ex. *5, M/T Middle East
I 3 IGNITION SW
ACC
IG1
ST1
AM1
15A CIG-RADIO
TAILLIGHT RELAY
10A TAIL
10A DOME
10A GAUGE
See Taillight System <B-1>
J 5 JUNCTION CONNECTOR NO.4
J 4 JUNCTION CONNECTOR NO.3
J 2 JUNCTION CONNECTOR NO.1
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
FL MAIN 3.0W
BATTERY
(w/ 24 Volts Battery)
D 1 DC/DC CONVERTER
ACC-IN
ILL-IN
+B-IN
GND
+B-OUT
ACC-OUT
ILL-OUT
R 1 RADIO
FL+
FL-
GND
FR+
FR-
F11 FRONT SPEAKER LH
R11 REAR SPEAKER LH
F12 FRONT SPEAKER RH
R12 REAR SPEAKER RH
E 8 EMERGENCY DOOR WARNING BUZZER
C 5 EMERGENCY DOOR WARNING LIGHT [COMB. METER]
E14 EMERGENCY DOOR SW
E13 EMERGENCY DOOR COURTESY SW
E15 EMERGENCY EXIT LIGHT
Instrument panel left (LHD)
Instrument panel right (RHD)
Instrument panel right (LHD)
Instrument panel left (RHD)
Floor cross member No.5 center