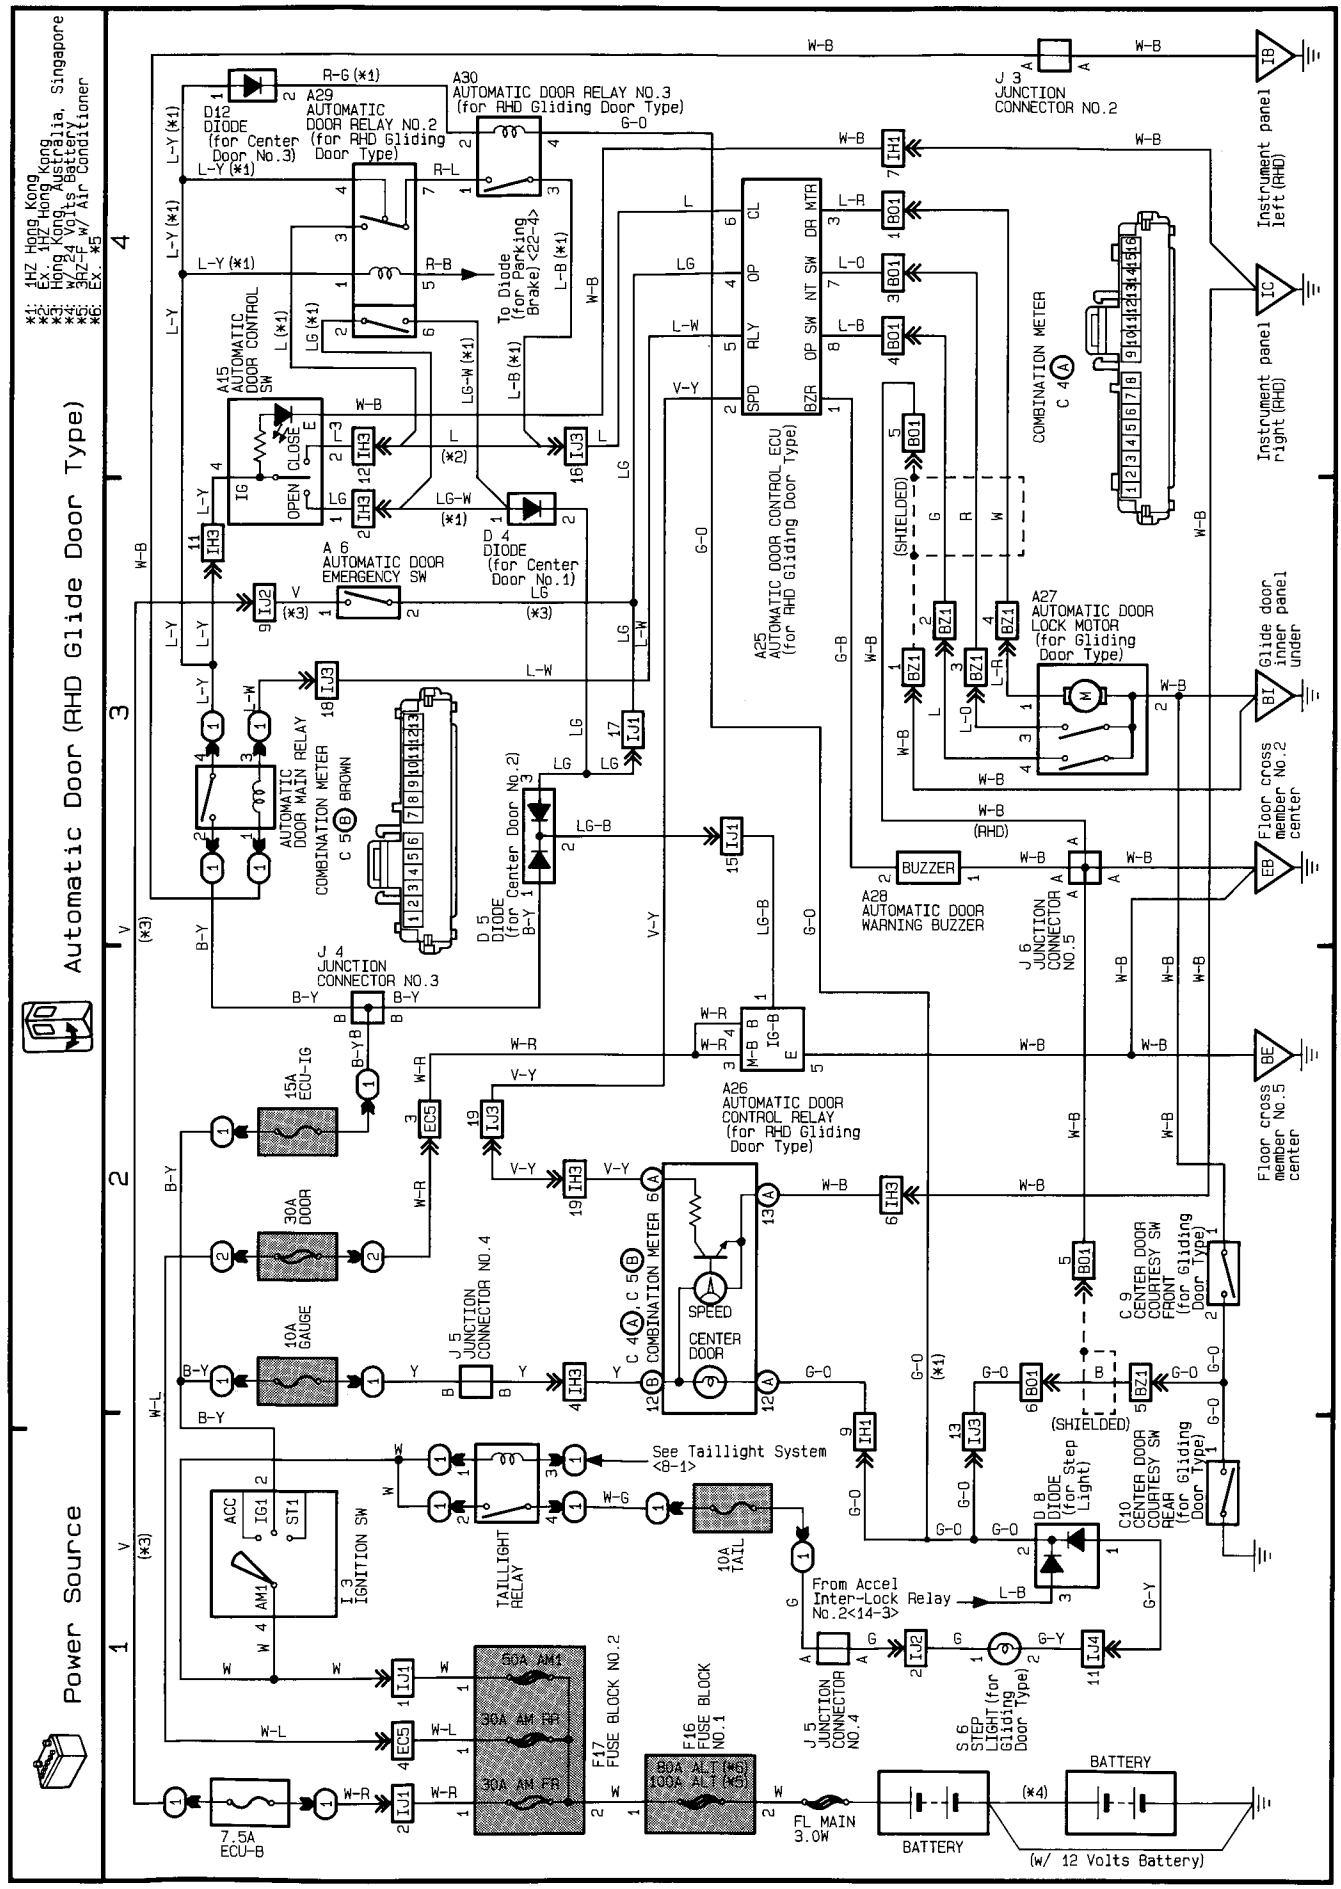

20 COACTER
Power Source
Automatic Door (RHD Glide Door Type)
*1: 1HZ Hong Kong
*2: 1HZ Hong Kong, Australia, Singapore
*3: Hong Kong, Australia, 24 Volts Battery
*4: 3HZ-F w/ Air Conditioner
*5: Ex. *5
*6: Ex. *5
D12 DIODE (for Center Door No.3)
A29 AUTOMATIC DOOR RELAY NO.2 (for RHD Gliding Door Type)
A30 AUTOMATIC DOOR RELAY NO.3 (for RHD Gliding Door Type)
J 3 JUNCTION CONNECTOR NO.2
Instrument panel left (RHD)
Instrument panel right (RHD)
To Diode (for Parking Brake) <22-4>
A15 AUTOMATIC DOOR CONTROL SW
A 6 AUTOMATIC DOOR EMERGENCY SW
D 4 DIODE (for Center Door No.1)
A25 AUTOMATIC DOOR CONTROL ECU (for RHD Gliding Door Type)
COMBINATION METER C 4
A27 AUTOMATIC DOOR LOCK MOTOR (for Gliding Door Type)
Glide door inner panel under
AUTOMATIC DOOR MAIN RELAY
COMBINATION METER C 5
D 5 DIODE (for Center Door No.2)
Floor cross member No.2 center
BUZZER
A28 AUTOMATIC DOOR WARNING BUZZER
J 6 JUNCTION CONNECTOR NO.5
J 4 JUNCTION CONNECTOR NO.3
A26 AUTOMATIC DOOR CONTROL RELAY (for RHD Gliding Door Type)
Floor cross member No.5 center
15A ECU-IG
30A DOOR
10A GAUGE
J 5 JUNCTION CONNECTOR NO.4
SPEED
CENTER DOOR
C 9 CENTER DOOR COURTESY SW FRONT (for Gliding Door Type)
See Taillight System <8-1>
TAILLIGHT RELAY
10A TAIL
D 8 DIODE (for Step Light)
C10 CENTER DOOR COURTESY SW REAR (for Gliding Door Type)
I 3 IGNITION SW
ACC
IG1
ST1
AM1
From Accel Inter-Lock Relay No.2<14-3>
S 6 STEP LIGHT (for Gliding Door Type)
50A AM1
30A AM RR
30A AM FR
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
60A ALT (*6)
100A ALT (*6)
FL MAIN 3.0W
7.5A ECU-B
BATTERY
(w/ 12 Volts Battery)
(SHIELDED)