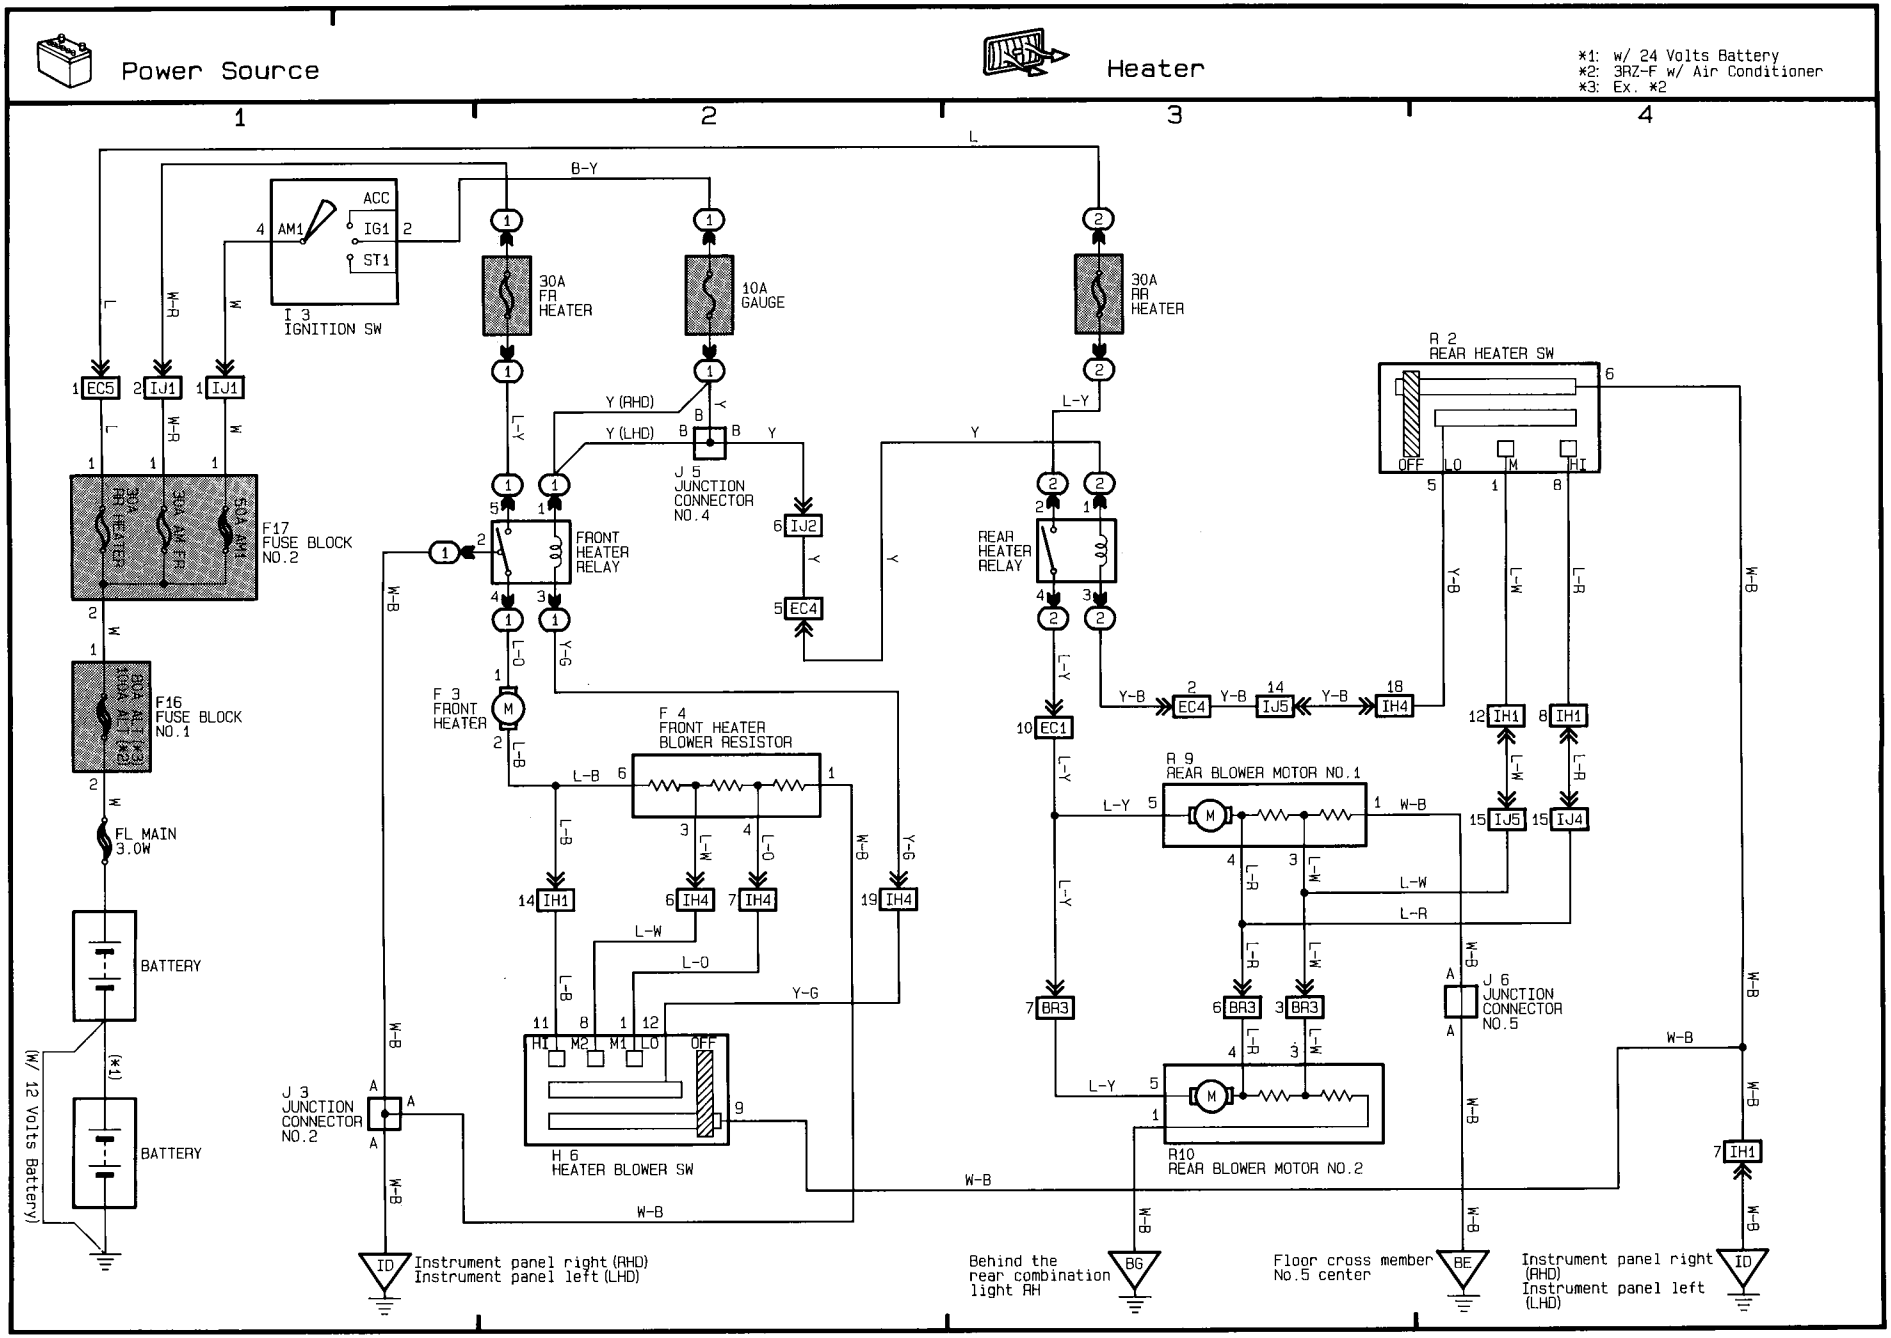

Power Source
Heater
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ Air Conditioner
*3: Ex. *2
1
2
3
4
I 3
IGNITION SW
ACC
IG1
ST1
AM1
30A
FR
HEATER
10A
GAUGE
30A
RR
HEATER
R 2
REAR HEATER SW
OFF
LO
M
HI
F17
FUSE BLOCK
NO.2
50A AM1
40A AM FR
30A RR HEATER
F16
FUSE BLOCK
NO.1
80A ALT
100A ALT (*2)
FL MAIN
3.0W
BATTERY
(*1)
(W/ 12 Volts Battery)
FRONT
HEATER
RELAY
REAR
HEATER
RELAY
J 5
JUNCTION
CONNECTOR
NO.4
F 3
FRONT
HEATER
F 4
FRONT HEATER
BLOWER RESISTOR
H 6
HEATER BLOWER SW
HI
M2
M1
LO
OFF
R 9
REAR BLOWER MOTOR NO.1
R10
REAR BLOWER MOTOR NO.2
J 6
JUNCTION
CONNECTOR
NO.5
J 3
JUNCTION
CONNECTOR
NO.2
Y (RHD)
Y (LHD)
Instrument panel right (RHD)
Instrument panel left (LHD)
Behind the
rear combination
light RH
Floor cross member
No.5 center
Instrument panel right
(RHD)
Instrument panel left
(LHD)