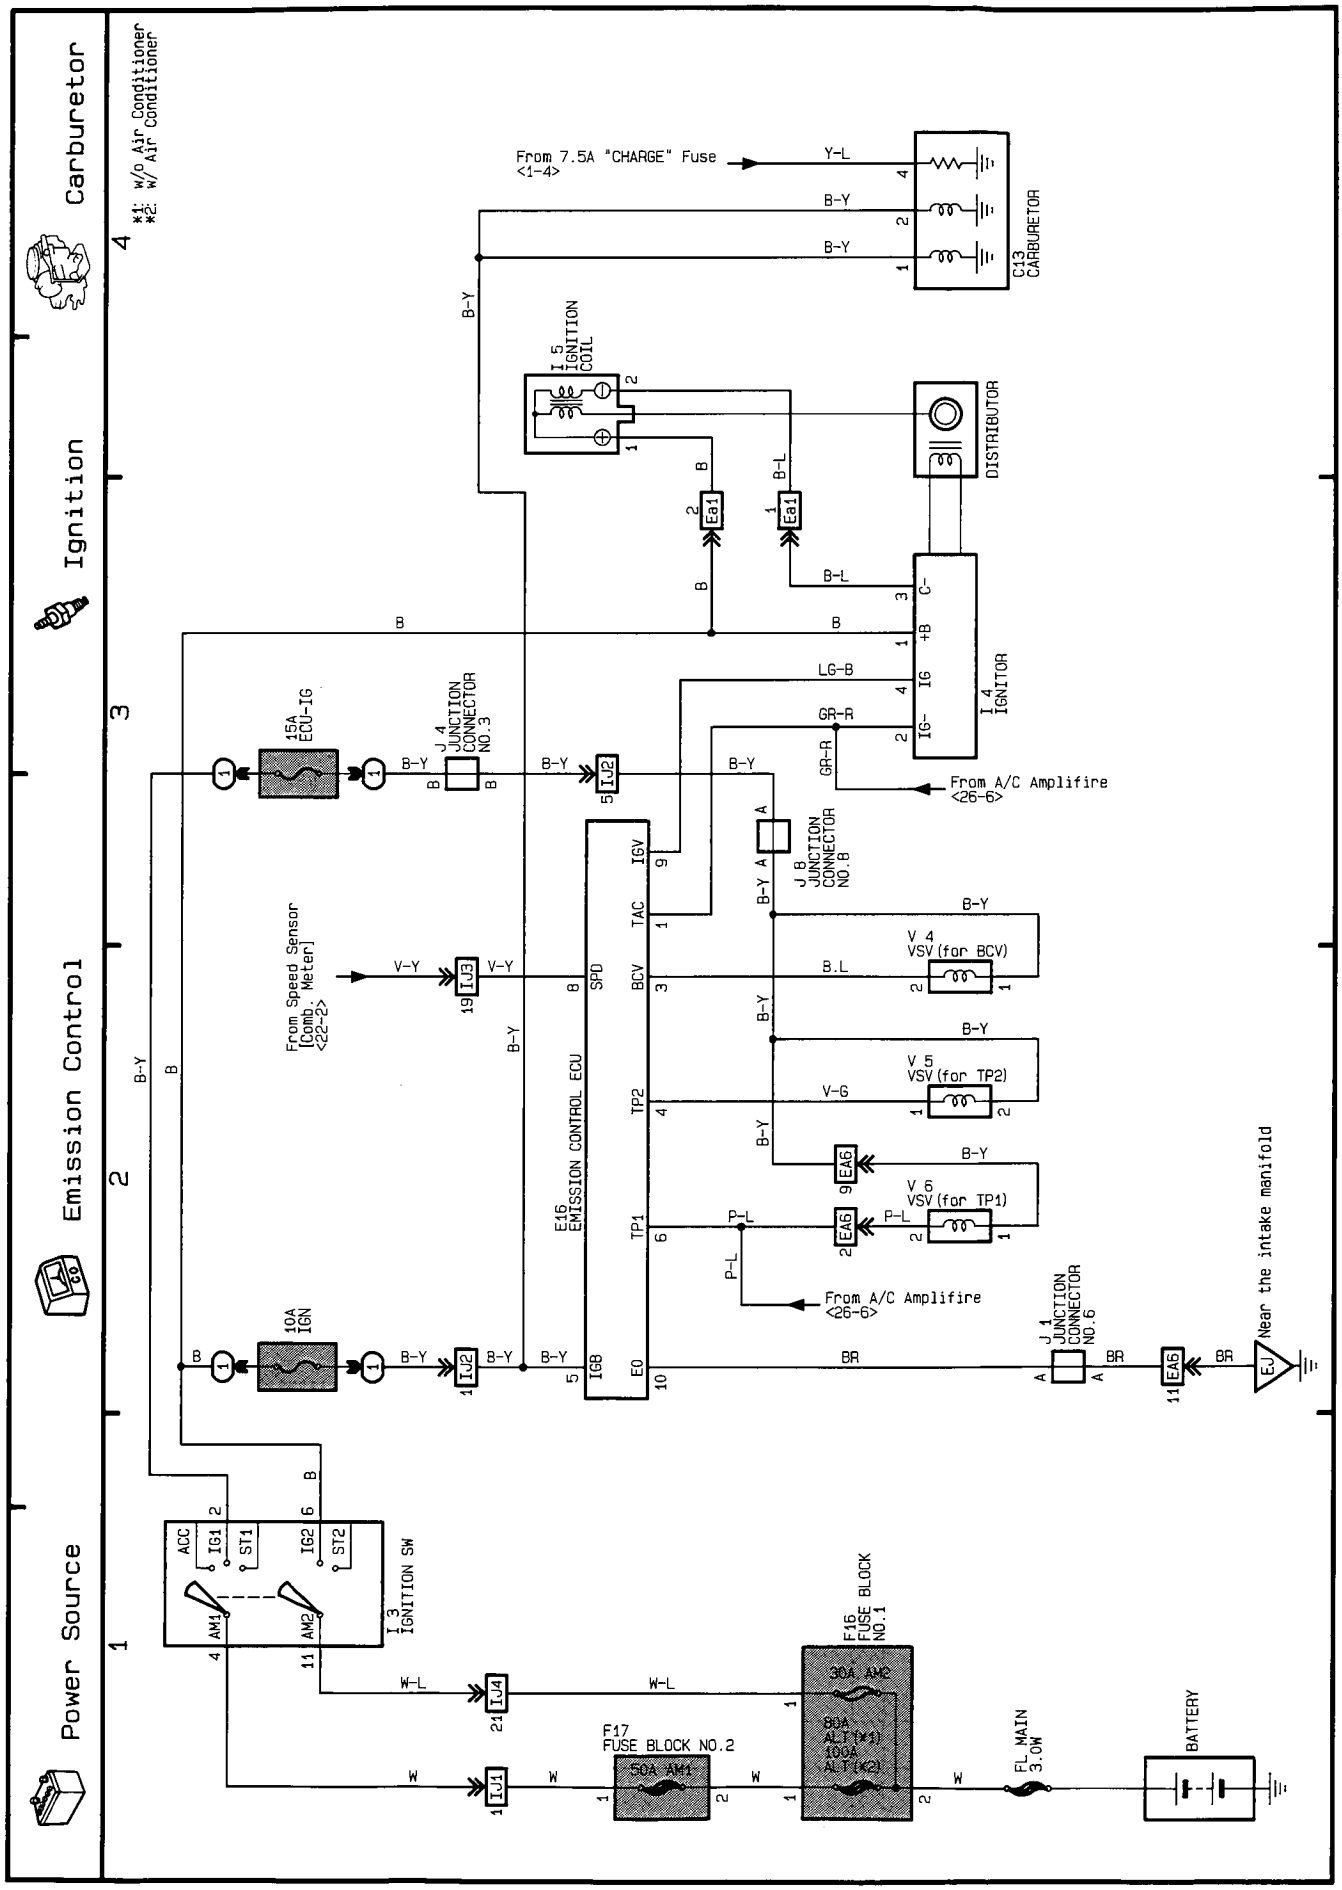

Power Source
Emission Control
Ignition
Carburetor
*1: w/o Air Conditioner
*2: w/ Air Conditioner
From 7.5A "CHARGE" Fuse <1-4>
C13 CARBURETOR
I 5 IGNITION COIL
DISTRIBUTOR
I 4 IGNITOR
15A ECU-IG
J 4 JUNCTION CONNECTOR NO.3
From A/C Amplifire <26-6>
J 8 JUNCTION CONNECTOR NO.8
From Speed Sensor [Comb Meter] <22-2>
V 4 VSV (for BCV)
V 5 VSV (for TP2)
V 6 VSV (for TP1)
E16 EMISSION CONTROL ECU
10A IGN
J 1 JUNCTION CONNECTOR NO.6
Near the intake manifold
I 3 IGNITION SW
F16 FUSE BLOCK NO.1
F17 FUSE BLOCK NO.2
FL MAIN 3.0W
BATTERY