
Fuse Block No. 1 Near The Battery (See Page 20)



Fuse Block No. 2 Near The Battery (See Page 20)

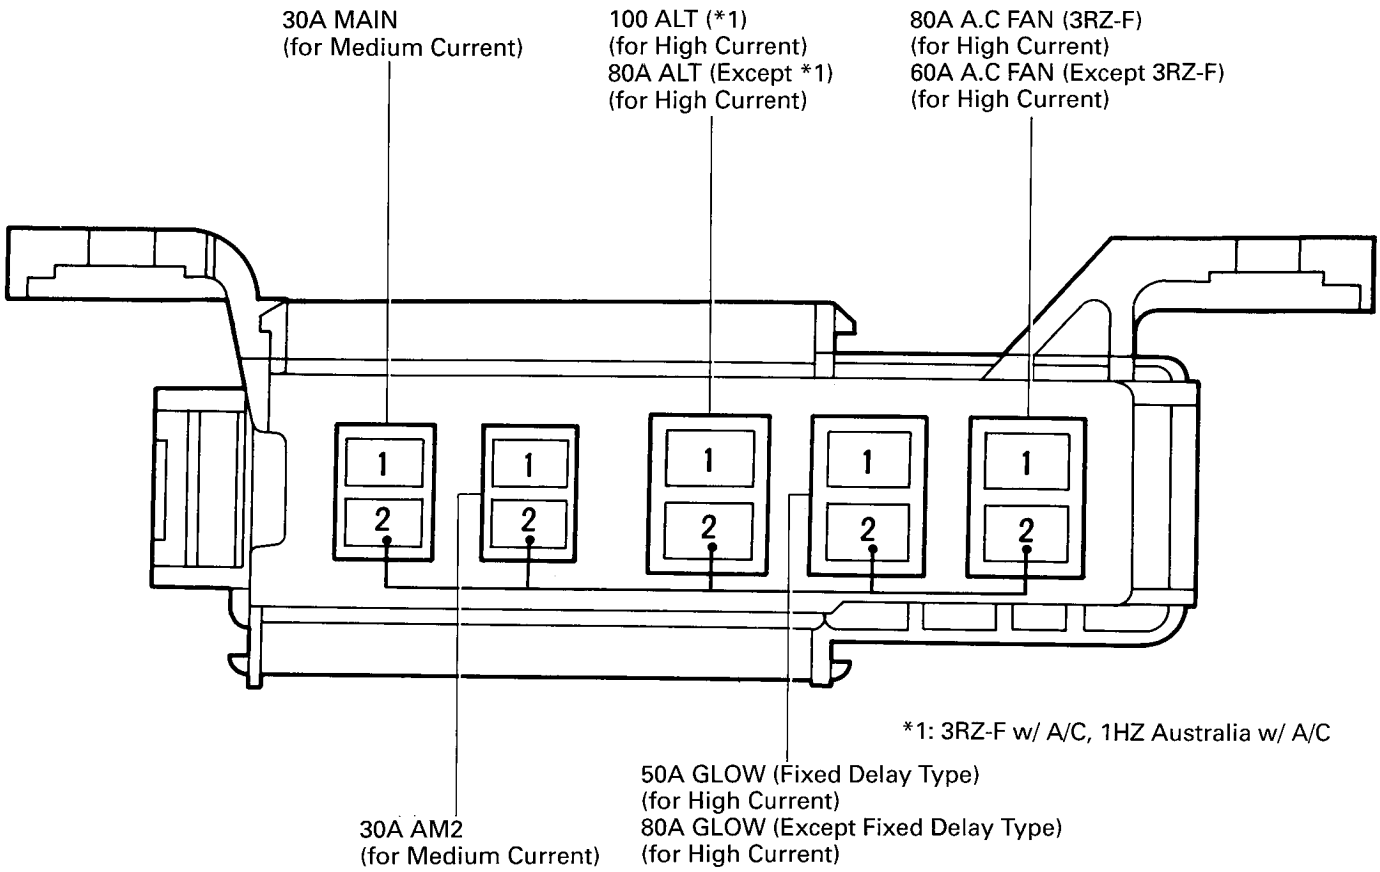