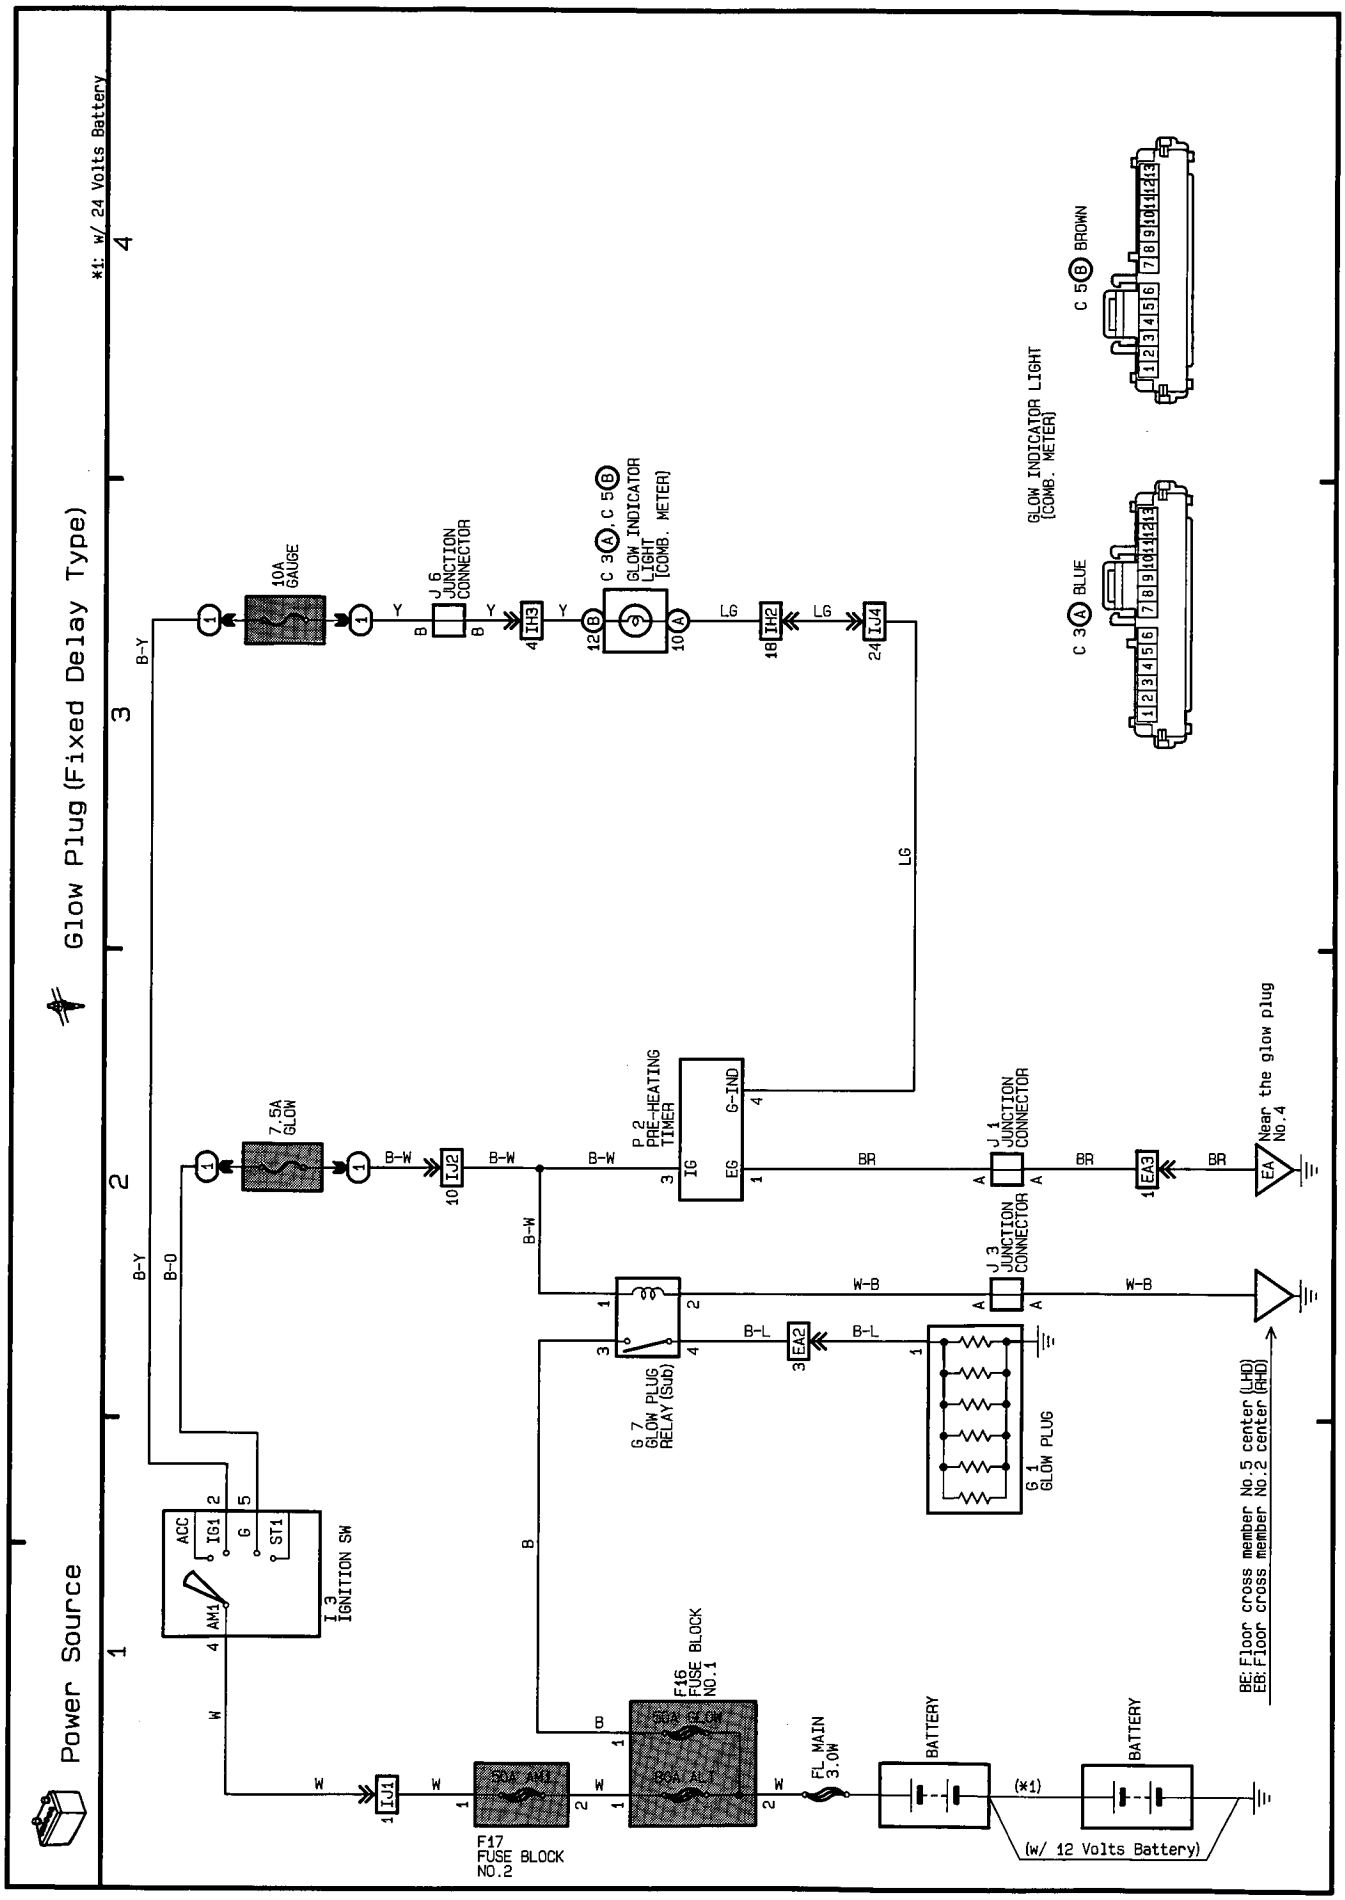

2 COASTER
Power Source
Glow Plug (Fixed Delay Type)
*1: w/ 24 Volts Battery
1
2
3
4
10A GAUGE
J 6 JUNCTION CONNECTOR
C 3 (A), C 5 (B) GLOW INDICATOR LIGHT [COMB. METER]
7.5A GLOW
P 2 PRE-HEATING TIMER
J 1 JUNCTION CONNECTOR
J 3 JUNCTION CONNECTOR
Near the glow plug No.4
I 3 IGNITION SW
G 7 GLOW PLUG RELAY (Sub)
G 1 GLOW PLUG
F16 FUSE BLOCK NO.1
F17 FUSE BLOCK NO.2
50A GLOW
50A ALT
50A AM1
FL MAIN 3.0W
BATTERY
(*1)
(w/ 12 Volts Battery)
GLOW INDICATOR LIGHT [COMB. METER]
C 5 (B) BROWN
C 3 (A) BLUE
BE: Floor cross member No.5 center (LHD)
EB: Floor cross member No.2 center (RHD)