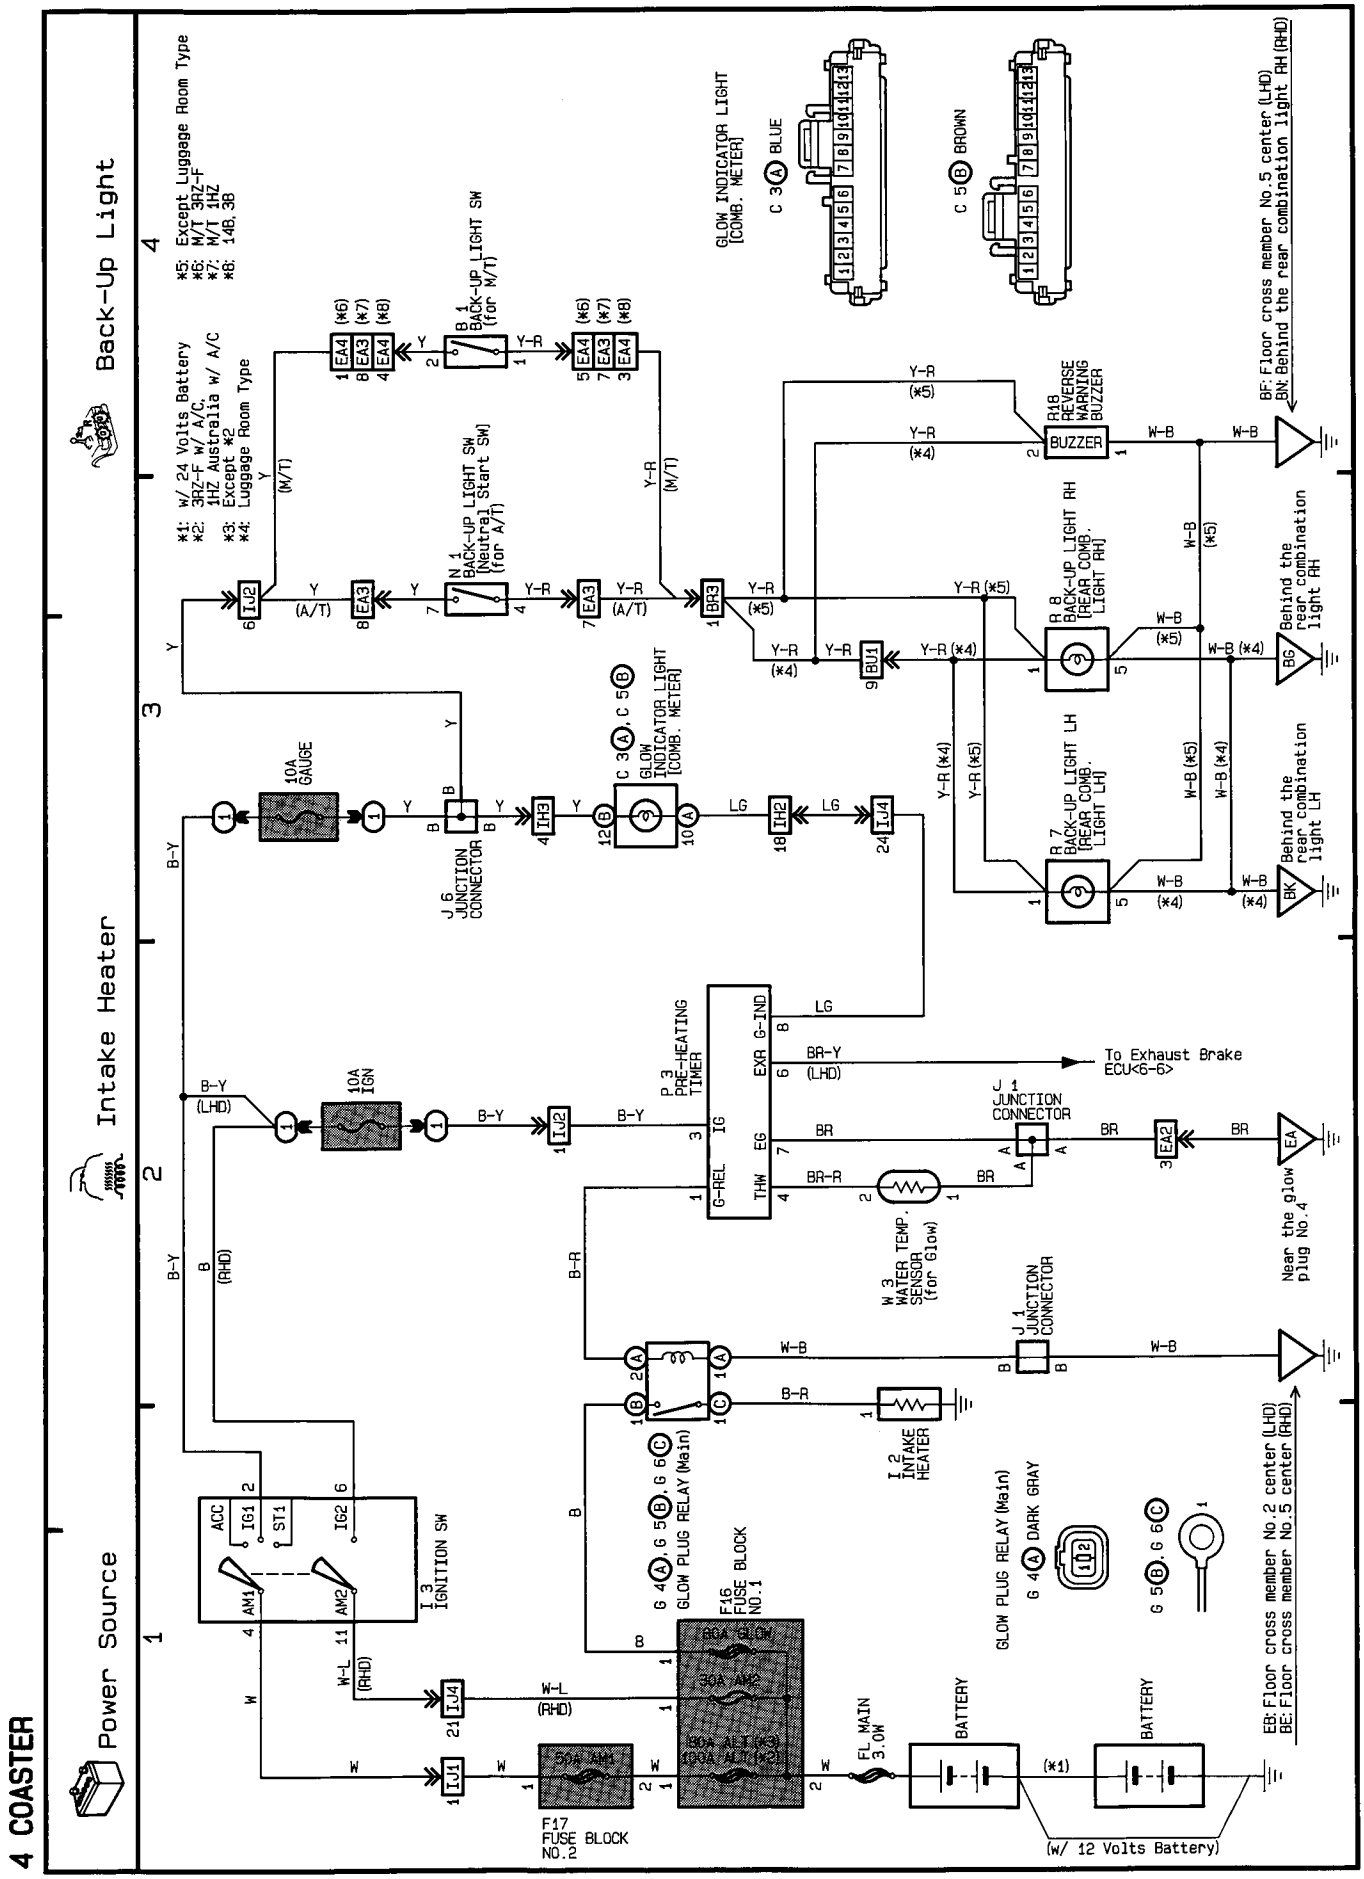

4 COASTER
Power Source
Intake Heater
Back-Up Light
*1: w/ 24 Volts Battery
3RZ-F w/ A/C,
1HZ Australia w/ A/C
*2:
*3: Except *2
*4: Luggage Room Type
*5: Except Luggage Room Type
*6: M/T 3RZ-F
*7: M/T 1HZ
*8: 14B,3B
GLOW INDICATOR LIGHT [COMB. METER]
C 3 (A) BLUE
C 5 (B) BROWN
B 1 BACK-UP LIGHT SW (for M/T)
N 1 BACK-UP LIGHT SW (Neutral Start SW) (for A/T)
R18 REVERSE WARNING BUZZER
BUZZER
R 8 BACK-UP LIGHT RH [REAR COMB. LIGHT RH]
R 7 BACK-UP LIGHT LH [REAR COMB. LIGHT LH]
Behind the rear combination light RH
Behind the rear combination light LH
BF: Floor cross member No.5 center (LHD)
BN: Behind the rear combination light RH (RHD)
10A GAUGE
10A IGN
J 6 JUNCTION CONNECTOR
P 3 PRE-HEATING TIMER
To Exhaust Brake ECU<6-6>
J 1 JUNCTION CONNECTOR
W 3 WATER TEMP. SENSOR (for Glow)
Near the glow plug No.4
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
G 4 (A), G 5 (B), G 6 (C) GLOW PLUG RELAY (Main)
F16 FUSE BLOCK NO.1
60A GLOW
30A AM2
50A ALT (#3)
(30A ALT (#2))
50A AM1
F17 FUSE BLOCK NO.2
I 2 INTAKE HEATER
GLOW PLUG RELAY (Main)
G 4 (A) DARK GRAY
G 5 (B), G 6 (C)
FL MAIN 3.0W
BATTERY
BATTERY
(*1)
(w/ 12 Volts Battery)
EB: Floor cross member No.2 center (LHD)
BE: Floor cross member No.5 center (RHD)