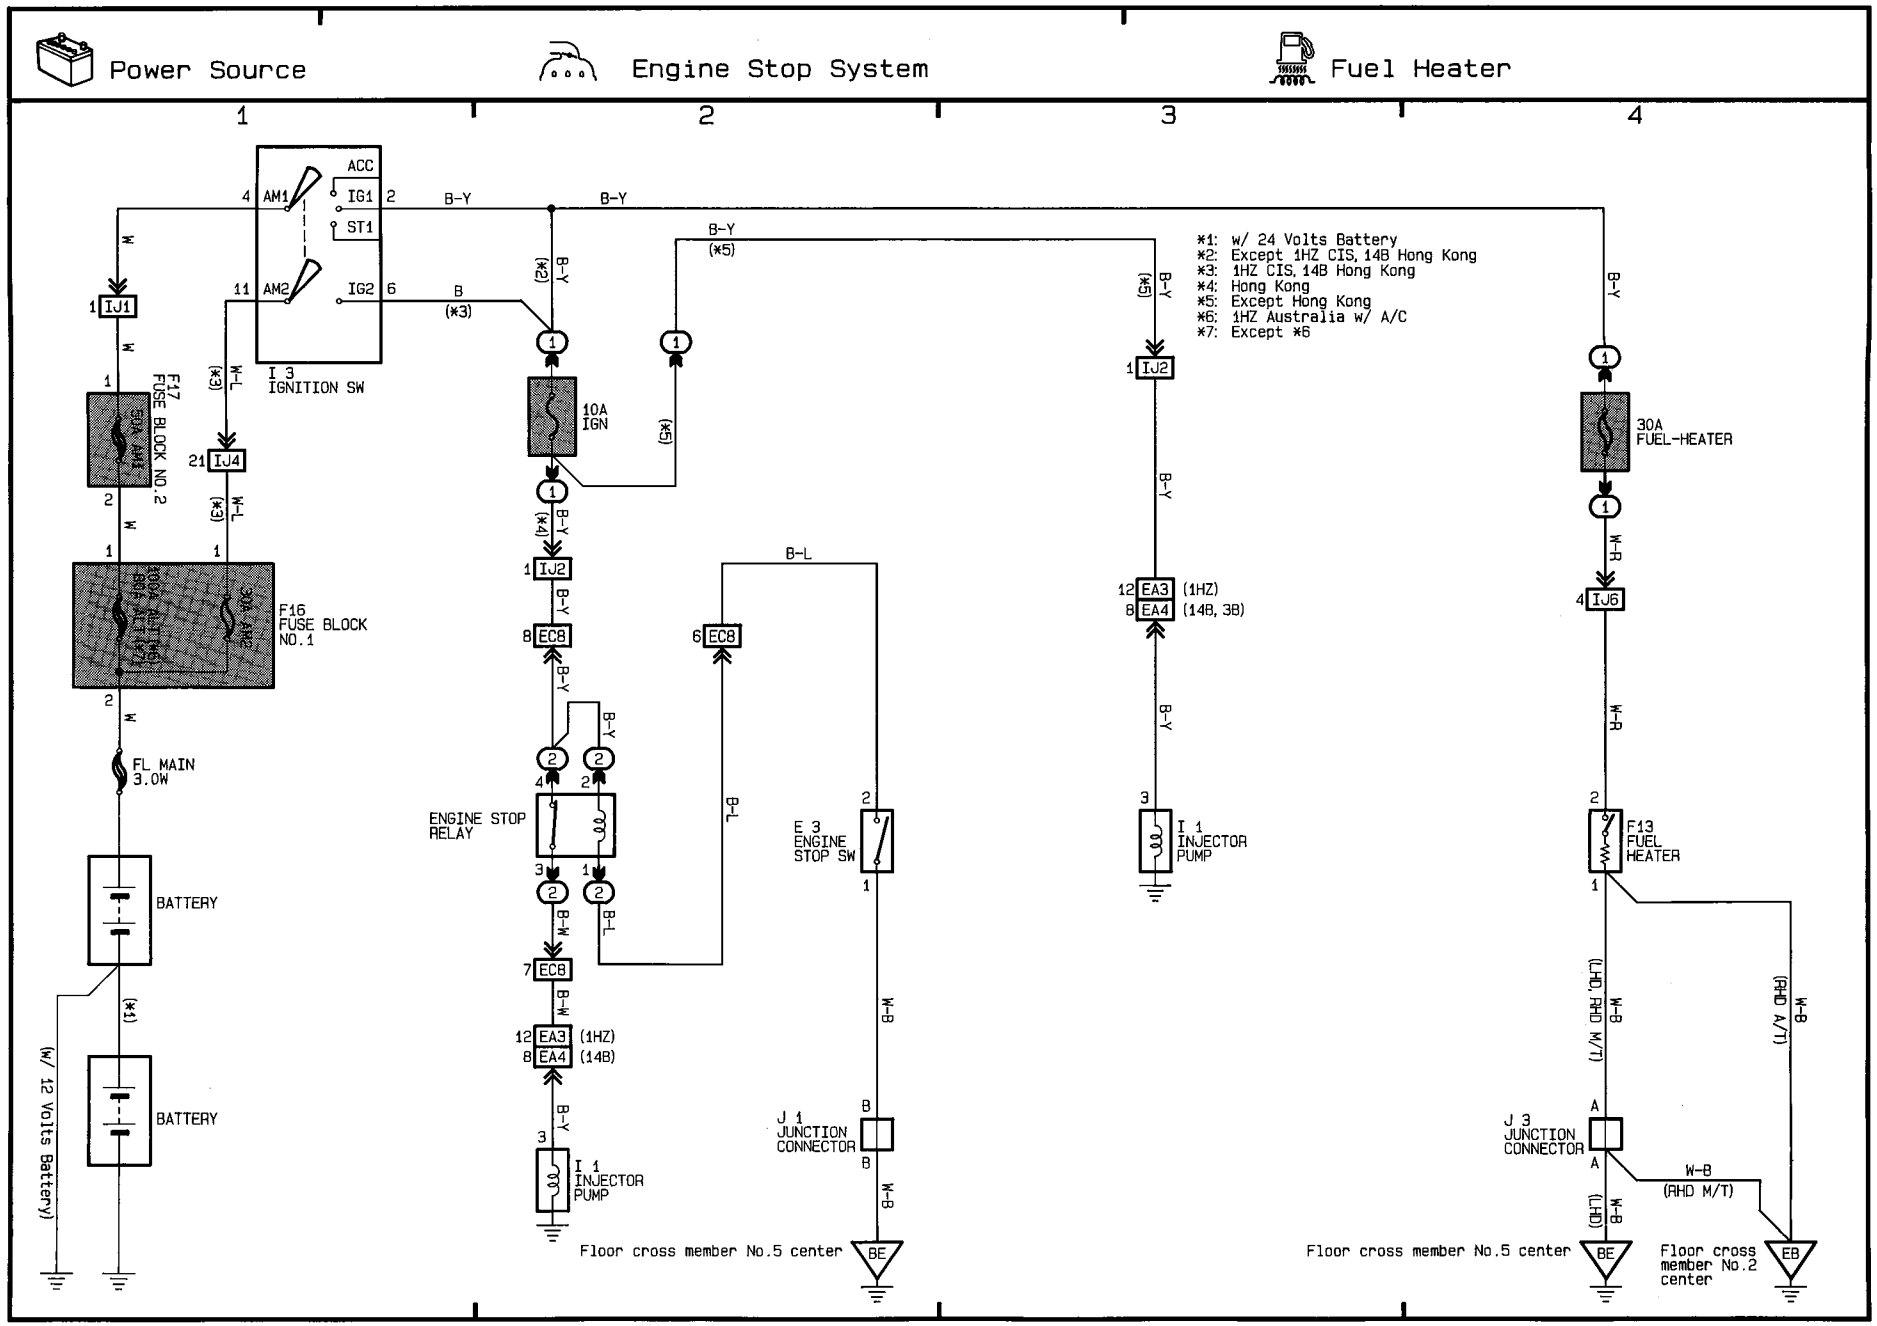

Power Source
Engine Stop System
Fuel Heater
1
2
3
4
ACC
AM1
IG1
ST1
AM2
IG2
I 3
IGNITION SW
IJ1
IJ4
F17
FUSE BLOCK NO.2
50A AM1
30A AM2
F16
FUSE BLOCK
NO.1
100A ALT
80A ALT
FL MAIN
3.0W
BATTERY
BATTERY
(W/ 12 Volts Battery)
10A
IGN
IJ2
EC8
ENGINE STOP
RELAY
E 3
ENGINE
STOP SW
J 1
JUNCTION
CONNECTOR
I 1
INJECTOR
PUMP
EA3
EA4
(1HZ)
(14B)
Floor cross member No.5 center
BE
*1: w/ 24 Volts Battery
*2: Except 1HZ CIS, 14B Hong Kong
*3: 1HZ CIS, 14B Hong Kong
*4: Hong Kong
*5: Except Hong Kong
*6: 1HZ Australia w/ A/C
*7: Except *6
30A
FUEL-HEATER
IJ6
F13
FUEL
HEATER
J 3
JUNCTION
CONNECTOR
(LHD, RHD M/T)
(RHD A/T)
(LHD)
(RHD M/T)
Floor cross
member No.2
center
EB