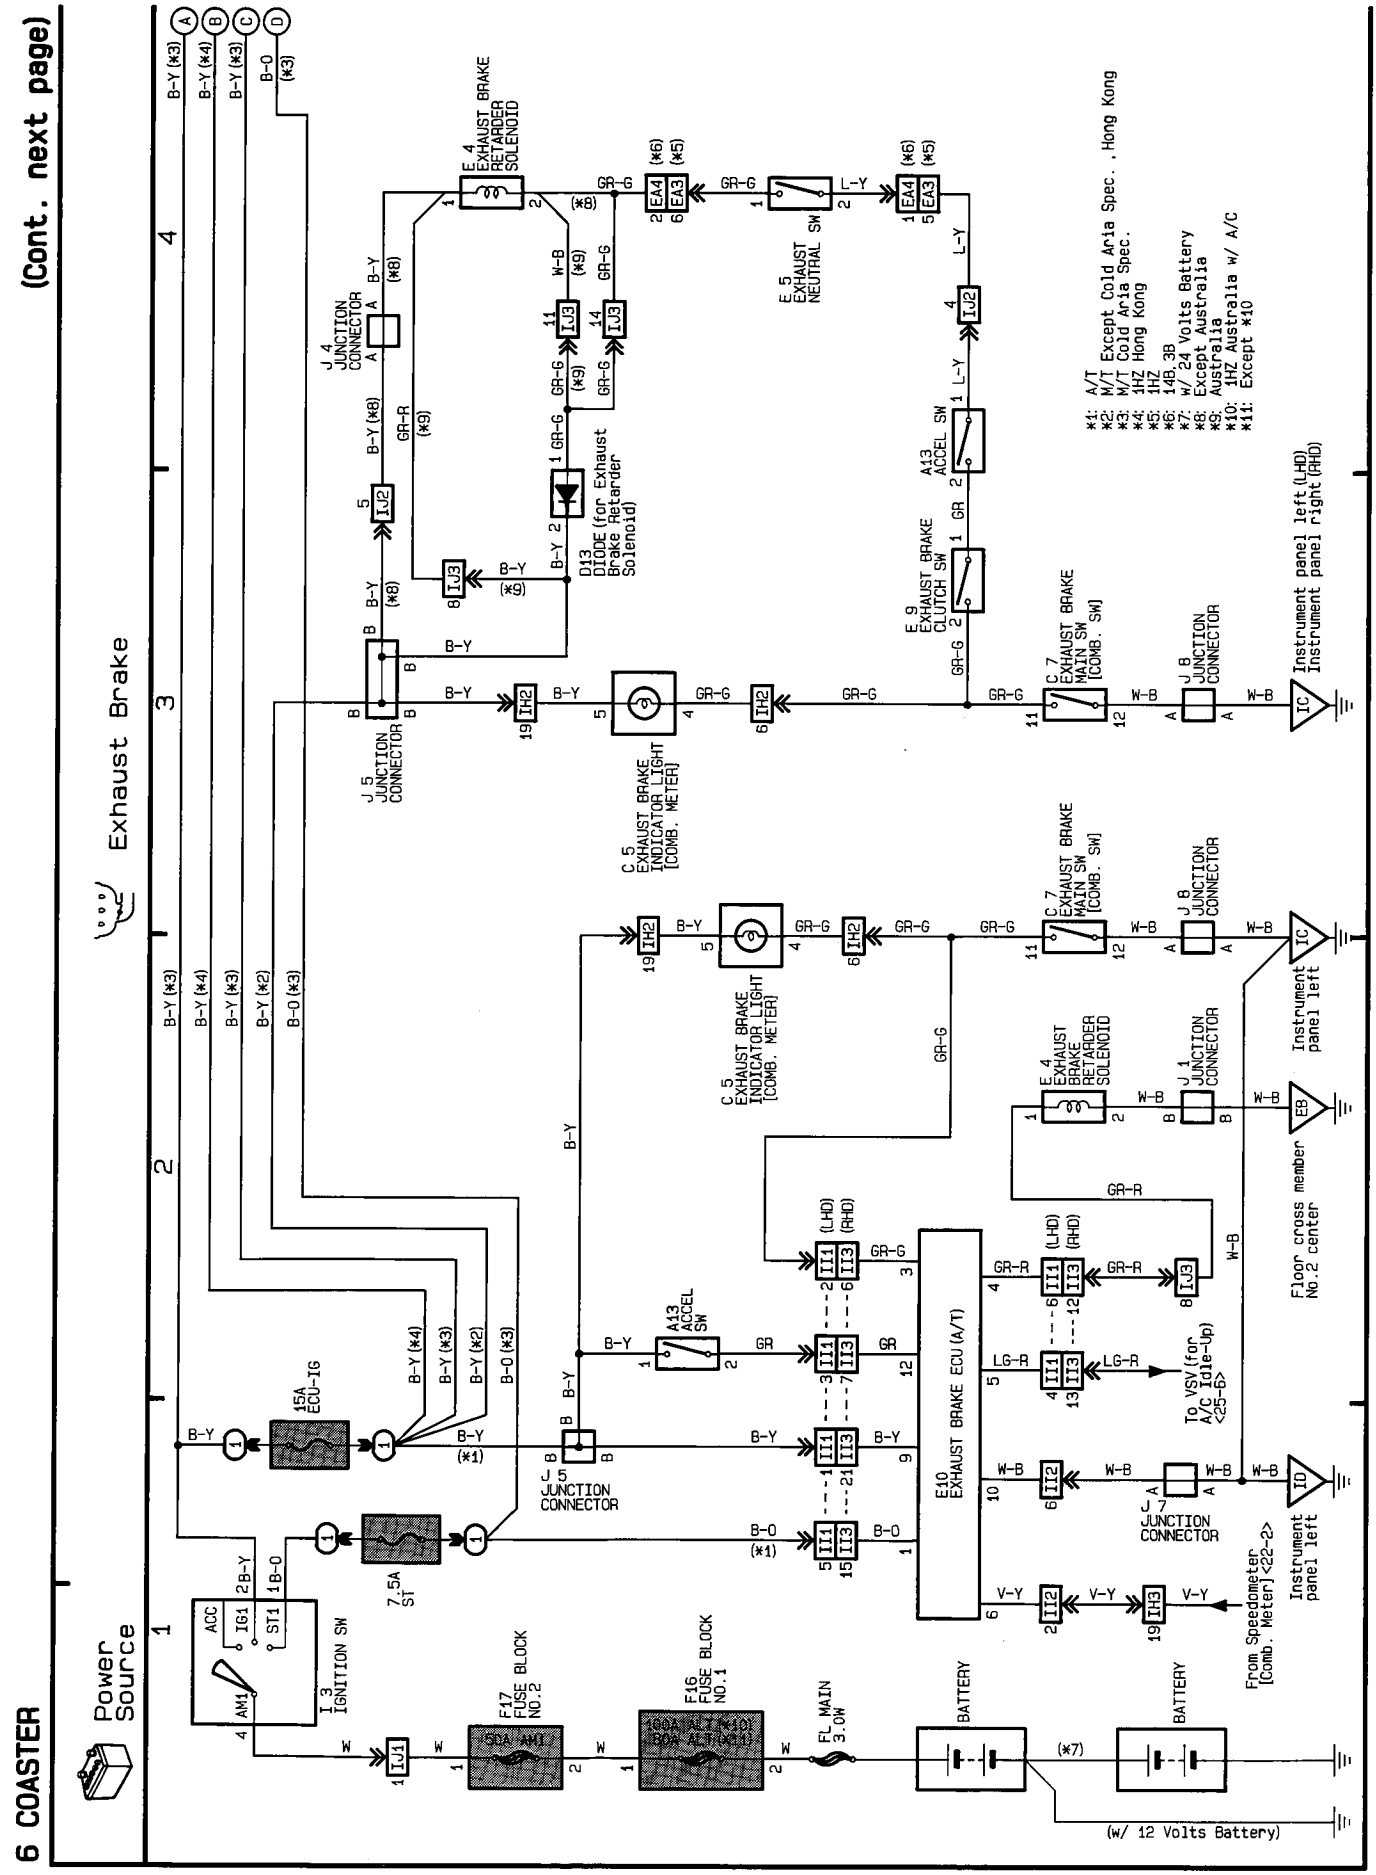
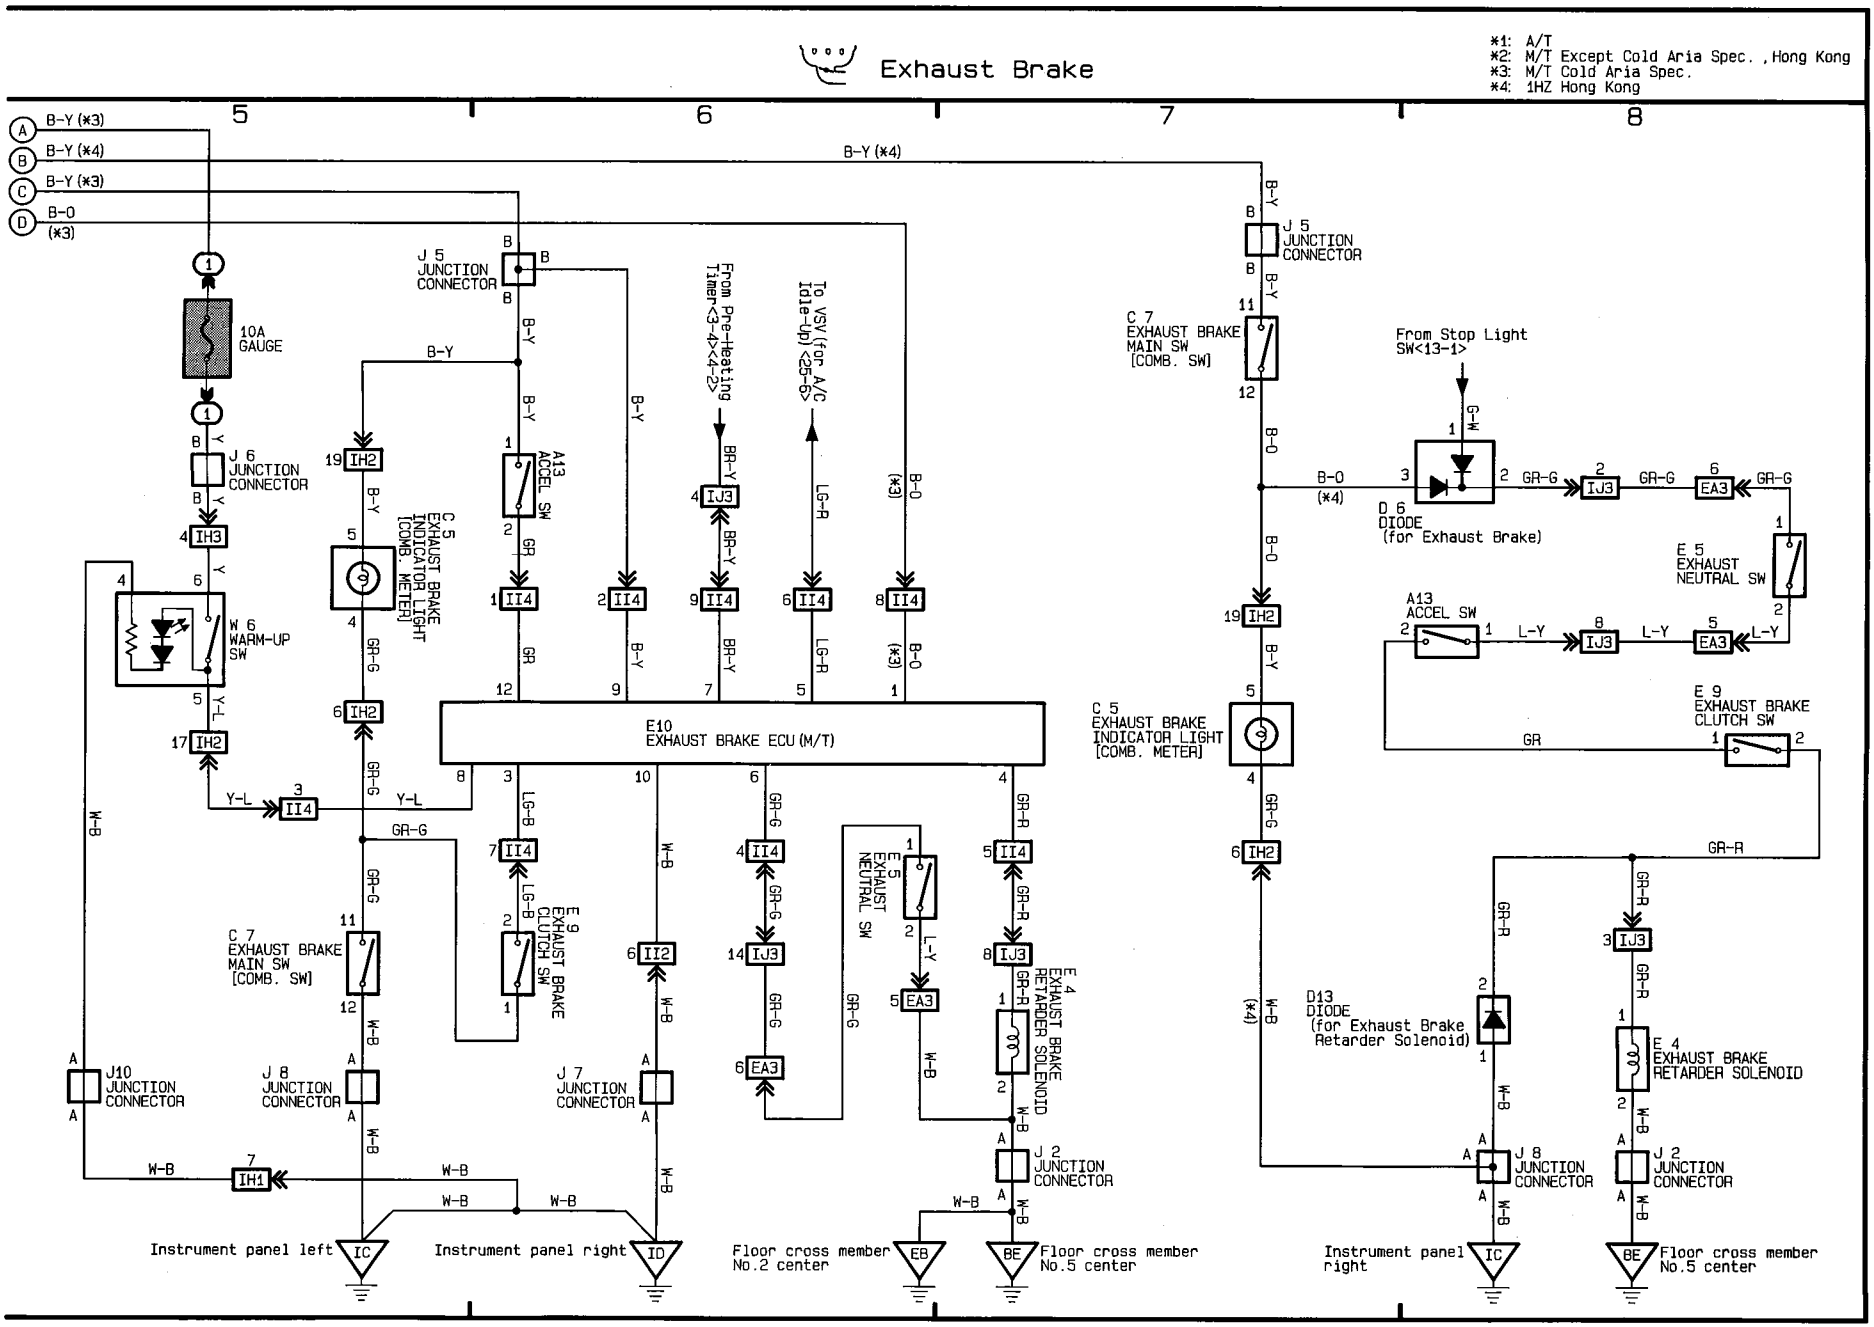

6 COASTER
(Cont. next page)
Power Source
Exhaust Brake
I 3 IGNITION SW
15A ECU-IG
7.5A ST
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
FL MAIN 3.0W
BATTERY
(*7)
(w/ 12 Volts Battery)
E10 EXHAUST BRAKE ECU (A/T)
E 4 EXHAUST BRAKE RETARDER SOLENOID
E 5 EXHAUST NEUTRAL SW
D13 DIODE (for Exhaust Brake Retarder Solenoid)
A13 ACCEL SW
E 9 EXHAUST BRAKE CLUTCH SW
C 5 EXHAUST BRAKE INDICATOR LIGHT [COMB. METER]
C 7 EXHAUST BRAKE MAIN SW [COMB. SW]
J 1 JUNCTION CONNECTOR
J 4 JUNCTION CONNECTOR
J 5 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
To VSV (for A/C Idle-Up) <2S-G>
From Speedometer [Comb. Meter] <2Z-2>
Instrument panel left
Instrument panel left (LHD)
Instrument panel right (RHD)
Floor cross member No.2 center
*1: A/T
*2: M/T Except Cold Aria Spec. , Hong Kong
*3: M/T Cold Aria Spec.
*4: 1HZ Hong Kong
*5: 1HZ
*6: 14B, 3B
*7: w/ 24 Volts Battery
Except Australia
*8: Australia
*10: 1HZ Australia w/ A/C
*11: Except *10


Exhaust Brake
*1: A/T
*2: M/T Except Cold Aria Spec. , Hong Kong
*3: M/T Cold Aria Spec.
*4: 1HZ Hong Kong
5
6
7
8
B-Y (*3)
B-Y (*4)
B-Y (*4)
B-O (*3)
10A GAUGE
J 6 JUNCTION CONNECTOR
W 6 WARM-UP SW
C 5 EXHAUST BRAKE INDICATOR LIGHT [COMB. METER]
A13 ACCEL SW
J 5 JUNCTION CONNECTOR
From Pre-Heating Timer<3-4><4-2>
To VSV (for A/C Idle-Up) <25-6>
E10 EXHAUST BRAKE ECU (M/T)
C 7 EXHAUST BRAKE MAIN SW [COMB. SW]
E 9 EXHAUST BRAKE CLUTCH SW
E 5 EXHAUST NEUTRAL SW
E 4 EXHAUST BRAKE RETARDER SOLENOID
J10 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 2 JUNCTION CONNECTOR
From Stop Light SW<13-1>
D 6 DIODE (for Exhaust Brake)
D13 DIODE (for Exhaust Brake Retarder Solenoid)
Instrument panel left
Instrument panel right
Floor cross member No.2 center
Floor cross member No.5 center
Instrument panel right
Floor cross member No.5 center