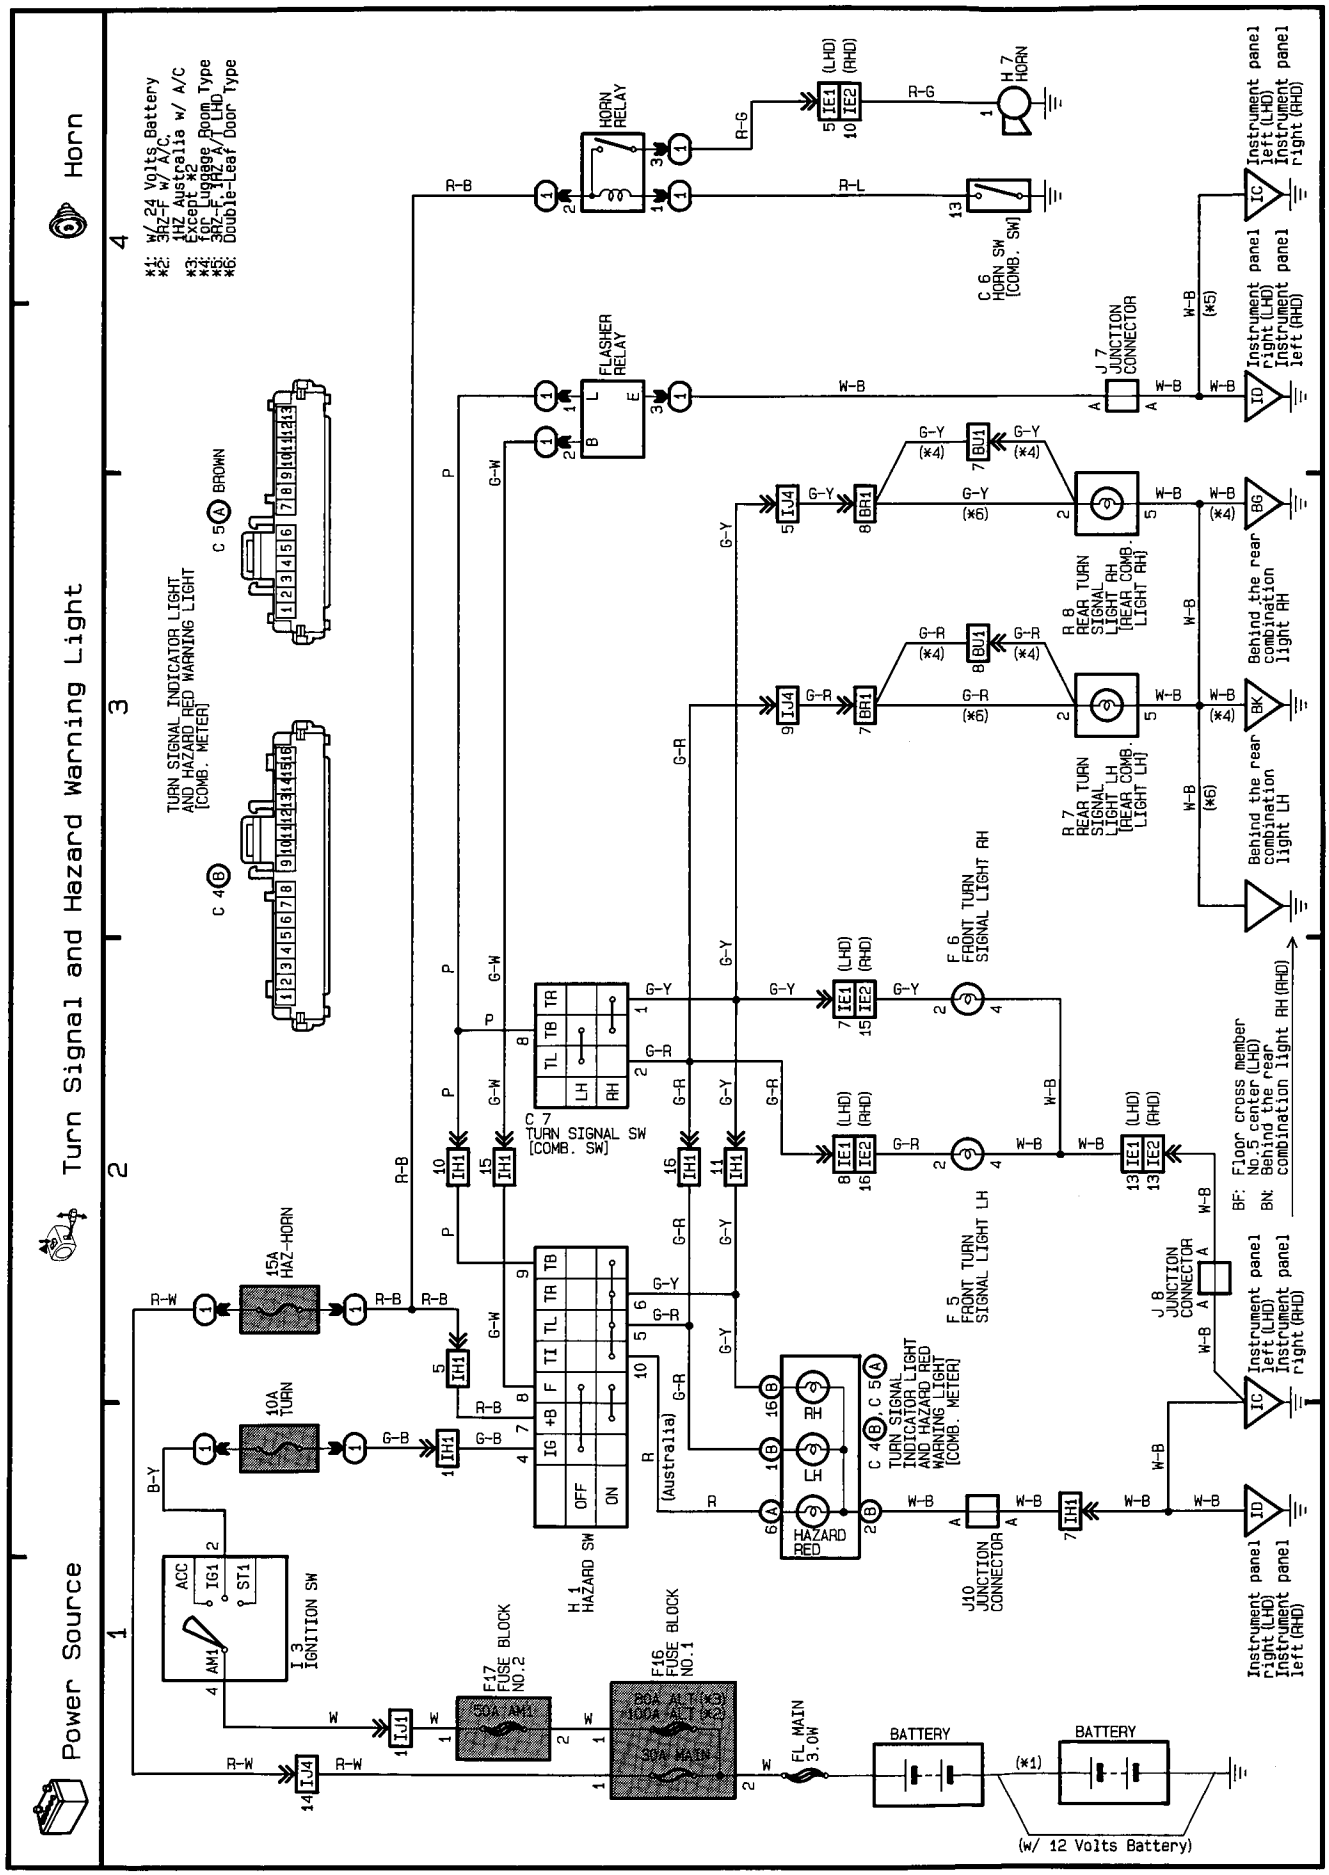

11 COASTER
Power Source
Turn Signal and Hazard Warning Light
Horn
1
2
3
4
*1: W/ 24 Volts Battery
*2: 3RZ-F w/ A/C, 1HZ Australia w/ A/C Except *2
*3: 1GR Luggage Room Type
*4: 3RZ, 1HZ A/T LHD Type
*5: Double-Leaf Door Type
*6:
BATTERY
(*1)
(w/ 12 Volts Battery)
FL MAIN 3.0W
F16 FUSE BLOCK NO.1
80A ALT (3C)
100A ALT (2C)
30A MAIN
F17 FUSE BLOCK NO.2
50A AM1
I 3 IGNITION SW
ACC
IG1
ST1
AM1
H 1 HAZARD SW
OFF
ON
15A HAZ-HORN
10A TURN
C 7 TURN SIGNAL SW [COMB. SW]
HAZARD RELAY
FLASHER RELAY
HORN RELAY
H 7 HORN
C 6 HORN SW [COMB. SW]
TURN SIGNAL INDICATOR LIGHT AND HAZARD RED WARNING LIGHT [COMB. METER]
C 4 (B), C 5 (A)
HAZARD RED
(Australia)
F 5 FRONT TURN SIGNAL LIGHT LH
F 6 FRONT TURN SIGNAL LIGHT RH
R 7 REAR TURN SIGNAL LIGHT LH [REAR COMB. LIGHT LH]
R 8 REAR TURN SIGNAL LIGHT RH [REAR COMB. LIGHT RH]
Behind the rear combination light LH
Behind the rear combination light RH
BF: Floor cross member No.5 center (LHD)
BN: Behind the rear combination light RH (RHD)
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J10 JUNCTION CONNECTOR
Instrument panel left (LHD) Instrument panel right (RHD)
Instrument panel right (LHD) Instrument panel left (RHD)
TURN SIGNAL INDICATOR LIGHT AND HAZARD RED WARNING LIGHT [COMB. METER]
C 5 (A) BROWN
C 4 (B)