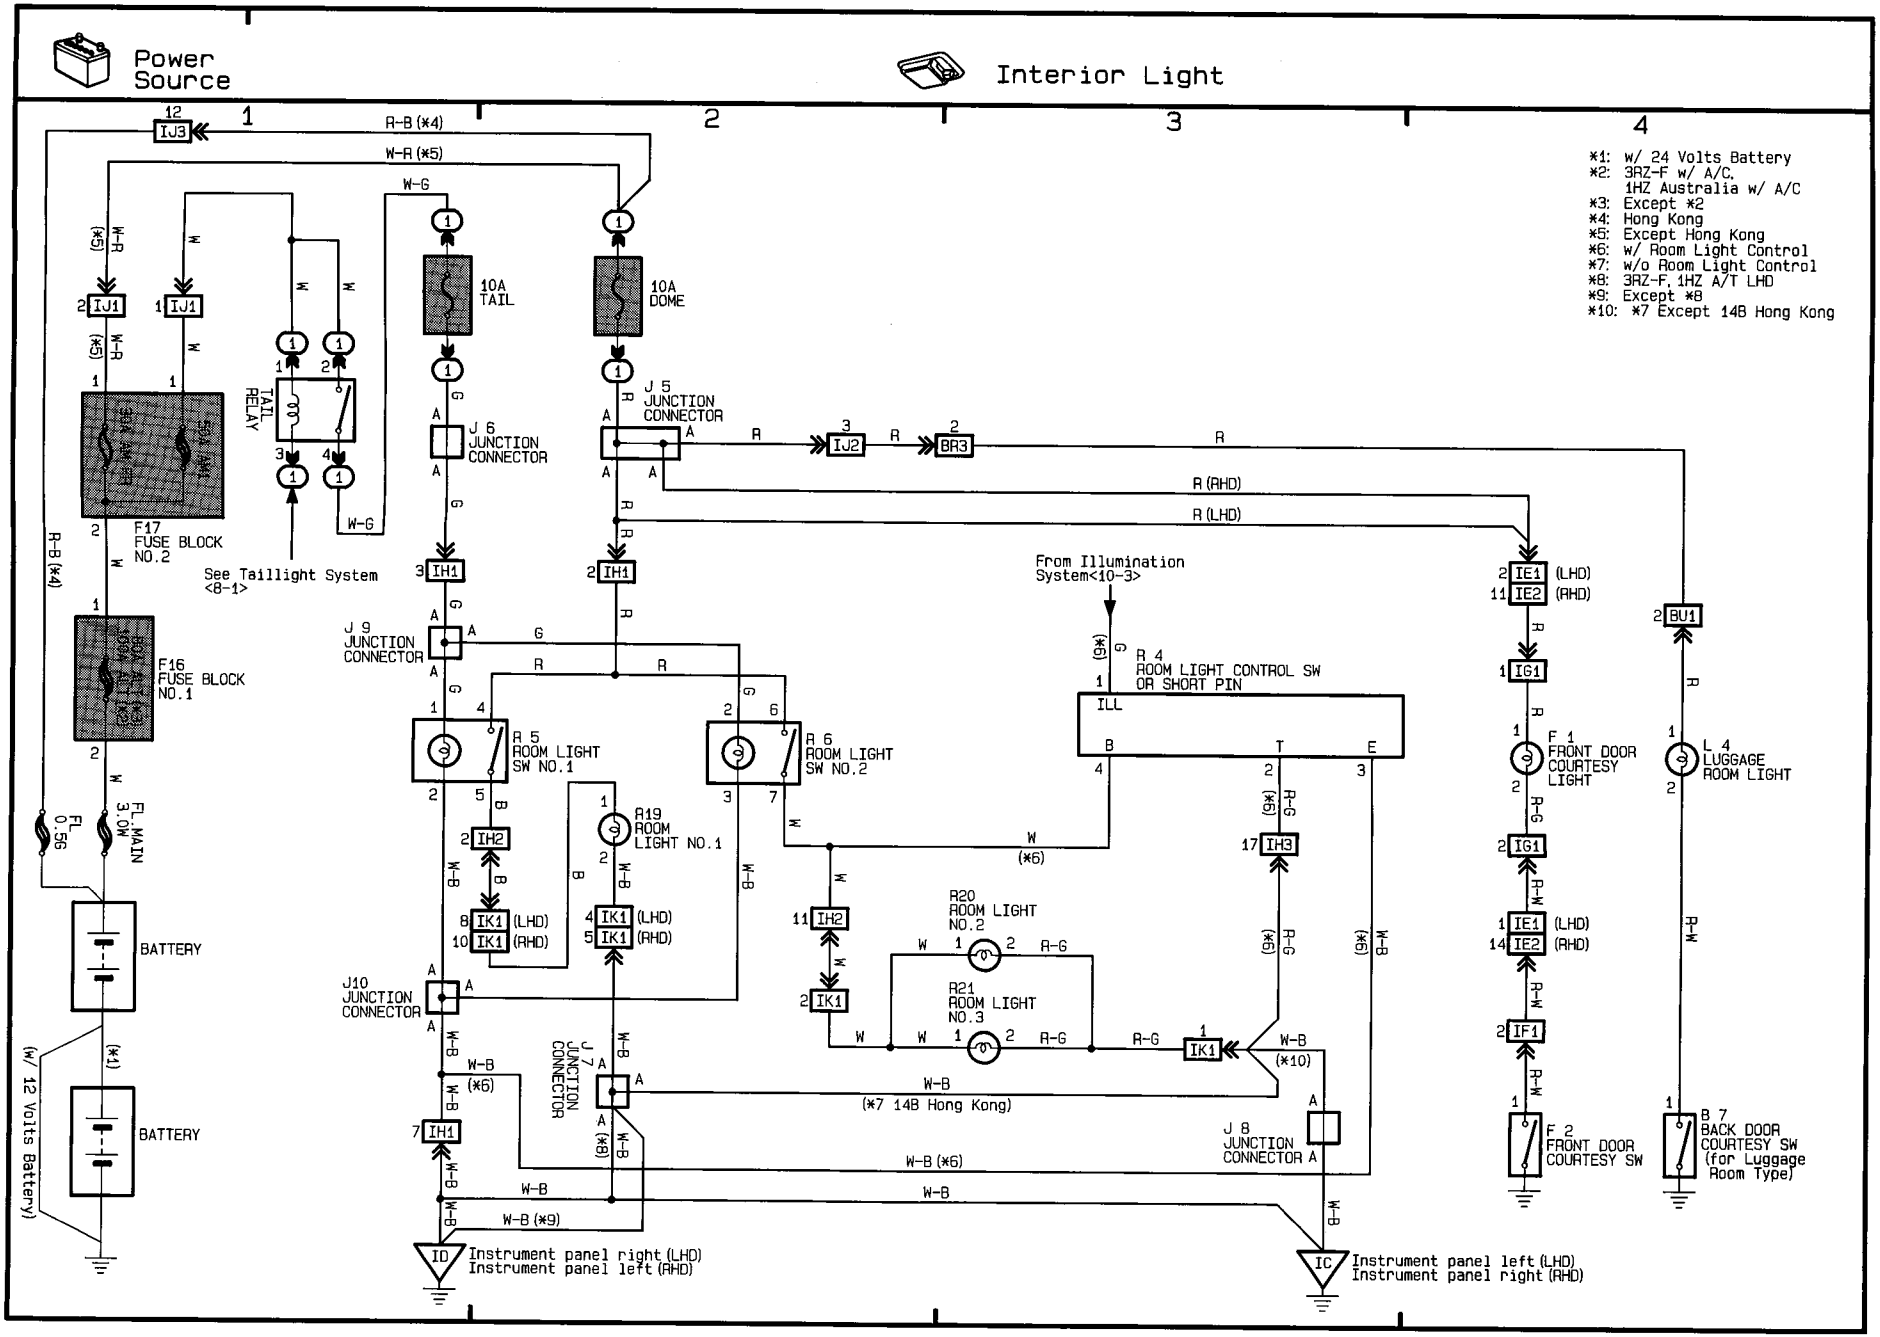

Power Source
Interior Light
1
2
3
4
*1: w/ 24 Volts Battery
*2: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*3: Except *2
*4: Hong Kong
*5: Except Hong Kong
*6: w/ Room Light Control
*7: w/o Room Light Control
*8: 3RZ-F, 1HZ A/T LHD
*9: Except *8
*10: *7 Except 14B Hong Kong
10A TAIL
10A DOME
TAIL RELAY
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
See Taillight System <8-1>
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 9 JUNCTION CONNECTOR
J10 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR A
R 5 ROOM LIGHT SW NO.1
R 6 ROOM LIGHT SW NO.2
R 4 ROOM LIGHT CONTROL SW OR SHORT PIN
R19 ROOM LIGHT NO.1
R20 ROOM LIGHT NO.2
R21 ROOM LIGHT NO.3
From Illumination System<10-3>
F 1 FRONT DOOR COURTESY LIGHT
F 2 FRONT DOOR COURTESY SW
L 4 LUGGAGE ROOM LIGHT
B 7 BACK DOOR COURTESY SW (for Luggage Room Type)
BATTERY
BATTERY
(w/ 12 Volts Battery)
Instrument panel right (LHD)
Instrument panel left (RHD)
Instrument panel left (LHD)
Instrument panel right (RHD)